

JVC

KW-M560BT

MONITOR WITH RECEIVER Quick Start Guide

ALICILI MONİTÖR Hızlı Başlangıç Kılavuzu

జమానితోర్పేమగేర్ రంబాయుణ

కుమీఓరెండానబర్వర్డ

JVCKENWOOD Corporation


- Updated information (the latest Instruction Manual, system updates, new functions, etc.) is available from
- Güncellenmiş bilgilere (en son Kullanım Kılavuzu, sistem güncellemeleri, yeni işlevler vb.) şu adresten ulaşabilirsiniz
- คุณสามารถดูข้อมูลที่มีการปรับปรุง (คู่มือการใช้งานล่าสุด การอัปเดตระบบ พังก์ชันใหม่ ๆ ฯลฯ) ได้ที่
<https://www.jvc.net/cs/car/>



Model name indication position
See **Removing the trim plate (P.25)**
Model adı gösterim konumu
Bkz. **Trim plakasını söküme (S.51)**

ตำแหน่งที่ระบุชื่อรุ่น
คุชชั่นบลక్ గ్రాఫిచ్స్ గ్రాఫిచ్స్ గ్రాఫిచ్స్ గ్రాఫిచ్స్ (గామ్స్ 177)

Trim plate
Düzeltme plakası
ແຄ່ນດັບແຕ່ງ

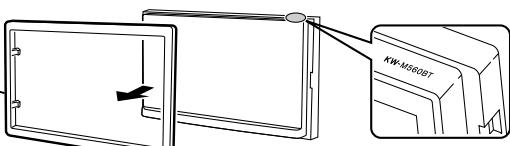

Bluetooth®

Made for
iPhone

Works with
Apple CarPlay

android
auto

Important Notice on Software

■ Software License on This Product

The software embedded in this product comprises a number of independent software components, each of which is copyrighted by JVCKENWOOD Corporation or by a third party.

This product uses software components that are based on an End-User License Agreement (hereinafter called "EULA") stipulated by JVCKENWOOD Corporation and by third parties.

The EULA dictates the availability of the source codes of free-software components as a prerequisite to distributing them in executable form under the terms of the GNU General Public License or the Lesser General Public License (hereinafter called "GPL/LGPL"). To get information about the software components that are subject to the terms of the GPL/LGPL, please visit the following Website:

Website URL
<https://www3.jvckenwood.com/english/download/gpl/>

Queries concerning the contents of the source code or the like will not be accepted.

Please note that software components based on a EULA that is not subject to the terms of the GPL/LGPL or those that have been developed or created by JVCKENWOOD Corporation will be excluded from the scope of source code disclosure.

Because licenses to use software components distributed under the GPL/LGPL are offered to the customers for free of charge, no warranty is granted to the customers, whether explicitly or implicitly, to the extent of the applicable laws.

Unless otherwise stipulated by the applicable laws or agreed upon in writing, the copyright holders or those who are entitled to modify and redistribute the software components are not held responsible for any and all damages resulting from their use or from inability to use them. For more information about the terms of use of the software components, required items of compliance and so on, please refer to the GPL/LGPL.

Customers wishing themselves to use a software component that is subject to the GPL/LGPL embedded in this product are encouraged to read the terms of the corresponding license before use. Because each individual license is prescribed by a third party other than JVCKENWOOD Corporation, the original (English) of the license is presented.

EULA

■ Software License Agreement

JVCKENWOOD Corporation (hereinafter called "Licensor") holds either the copyright to the embedded software or the right to sublicense it. This agreement establishes the conditions under which the customer uses this "Licensed Software."

The customer shall agree to the terms of this license agreement before proceeding to use Licensed Software.

This agreement is deemed to have taken effect when the customer (hereinafter called "User") has used a product implementation of Licensed Software.

The Licensed Software may contain software Licensor has been licensed to use by third parties directly or indirectly. Some third parties may have terms of use prescribed for their customers, apart from this Software License Agreement. This agreement does not apply to such software. Be sure to consult "Important Notice on Software" as presented separately.

Article 1 (General)

Licensor grants to User a non-exclusive, non-assignable right of use Licensed Software within the country where the User purchases the Product (hereinafter the "Country") (except for the exception provided for in Paragraph 1, Article 3).

Article 2 (Right of Use)

1. The right of use granted under this agreement is the right to use Licensed Software in this product.
2. User may not duplicate, copy, modify, add to, translate or otherwise alter, or loan licensed Software and the associated literature in whole or in part.
3. Use of Licensed Software is limited to a private extent, and Licensed Software may not be distributed, licensed or sublicensed for any purposes whatsoever, including commercial use.
4. User shall use Licensed Software as per the instruction manual or instructions given in the help file and may not use or duplicate data in violations of the regulations of the Copyright Law or other governing laws by using Licensed Software in whole or in part.

Article 3 (Terms of License)

1. In assigning this product, User may not retain the original copy of the embedded Licensed Software (including associated literature, updates and upgrades) and any duplicates and associated literature with regard to the license to use Licensed Software. User may transfer Licensed Software only to the condition of binding the assignee to abide by the terms of this Software License Agreement.
2. User may not reverse-engineer, disassemble, decompile or otherwise analyze the source code of Licensed Software.

Article 4 (Rights to Licensed Software)

All rights to Licensed Software and the associated literature, including copyrights, shall reside with Licensor or the original right holder who has granted the Right of Use and right to sublicense to Licensor (hereinafter referred to as "Original Right Holder"), and User does not have any rights other than Right of Use granted hereunder with regard to Licensed Software and the associated literature.

Article 5 (Exemption Granted to Licensor)

1. Licensor and Original Right Holder do not assume any responsibility for damages caused to User or third parties resulting from the exercise by User of the license granted hereunder, unless otherwise provided by any law to the contrary.
2. Licensor does not warrant Licensed Software to be merchantable, compatible and fit for specific purposes.

Article 6 (Responsibility for Third Parties)

If disputes over the infringement of third parties' intellectual property rights, such as copyrights and patent rights, arise out of the use of Licensed Software by User, User shall resolve these disputes at User's own expenses while keep Licensor and Original Right Holder harmless.

Article 7 (Secrecy Obligation)

User shall keep confidential Licensed Software provided hereunder, information contained in the associated literature or the like and those provisions of this agreement not yet in public knowledge and may not disclose or leak these to third parties without prior written consent from Licensor.

Article 8 (Cancellation of the Agreement)

Licensor reserves the right to cancel this agreement forthwith and claim compensation from User for the damages caused by such cancellation when User:

- (1) Breaches any of the provisions of this agreement, or
- (2) Has received a petition for seizure, provisional seizure, provisional disposition or any other kind of compulsory execution.

Article 9 (Destruction of Licensed Software)

If this agreement is terminated under the provision of the foregoing paragraph, User shall destroy Licensed Software, along with all associated literature and its duplicates, within two (2) weeks from the date of termination.

Article 10 (Copyright Protection)

1. Copyrights and all other intellectual property rights relating to Licensed Software shall reside with Licensor and Original Right Holder and in no circumstances with User.
2. User shall abide by the laws relating to copyrights and intellectual property rights in using Licensed Software.

Article 11 (Export Control)

1. Licensed Software and the associated literature or the like may not be exported to places outside the Country (including transmission outside the Country over the Internet or the like).
2. User agrees that Licensed Software is subject to export controls imposed by the Country and the United States of America.
3. User agrees to comply with all the international and domestic laws that apply to this software (U.S. Export Administration Regulations and regulations established by the U.S., the Country and their governmental agencies regarding usage by end users and export destinations).

Article 12 (Miscellaneous)

1. Even if this agreement is invalidated in part by law, all other provisions shall remain in effect.
2. Licensor and User shall consult each other in good faith to resolve any matters not provided for in this agreement or questions arising from the interpretation of this agreement.
3. Licensor and User agree that this agreement is governed by the law of Japan and that all disputes involving claims and obligations that may arise out of this agreement will be settled by arbitration at the Tokyo District Court as the court of first instance.

Contents

Before Use	4
About the Quick start guide.....	4
How to read this manual.....	4
Precautions.....	5
Basic Operations	6
Functions of the Buttons on the Front Panel.....	6
Turning on the Unit	6
Getting Started	7
Adjusting the volume.....	8
Touch screen operations.....	8
HOME screen descriptions.....	9
Source selection screen descriptions.....	9
Source control screen descriptions	11
FUNCTION screen	12
List screen	12
USB	13
Connecting a USB device.....	13
USB Basic Operation.....	13
Tuner	14
Tuner Basic Operation.....	14
Memory Operation	15
Bluetooth Control.....	16
Register from the Bluetooth device.....	16
Using Hands-Free Unit.....	17
Controlling Audio.....	20
Connection/Installation	22
Before Installation	22
Installing the unit	24
Appendix	28
Specifications.....	28
About this Unit	28


Before Use

About the Quick start guide

This Quick Start Guide describes basic functions of this unit.

For detailed operations and information, refer to the INSTRUCTION MANUAL on the following website:

<<https://www.jvc.net/cs/car/>>

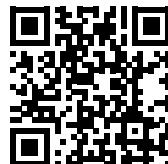

The Instruction manual is subject to change for modification of specifications and so forth.

Be sure to download the latest edition of the Instruction manual for reference.

How to read this manual

- The screens and panels shown in this manual are examples used to provide clear explanations of the operations.
For this reason, they may be different from the actual screens or panels used, or some display patterns may be different.
- **Indication language:** English indications are used for the purpose of explanation. You can select the indication language from the **SETUP** menu. See Instruction Manual.

Precautions

▲ WARNINGS

■ To prevent injury or fire, take the following precautions:

- To prevent a short circuit, never put or leave any metallic objects (such as coins or metal tools) inside the unit.
- Do not watch or fix your eyes on the unit's display when you are driving for any extended period.
- If you experience problems during installation, consult your JVC dealer.

■ Precautions on using this unit

- When you purchase optional accessories, check with your JVC dealer to make sure that they work with your model and in your area.
- You can select language to display menus, audio file tags, etc. See Instruction Manual.
- The Radio Data System or Radio Broadcast Data System feature won't work where the service is not supported by any broadcasting station.

■ Protecting the monitor

- To protect the monitor from damage, do not operate the monitor using a ball point pen or similar tool with the sharp tip.

■ Cleaning the unit

- If the faceplate of this unit is stained, wipe it with a dry soft cloth such as a silicon cloth. If the faceplate is stained badly, wipe the stain off with a cloth moistened with neutral cleaner, then wipe it again with a clean soft dry cloth.

NOTE

- Applying spray cleaner directly to the unit may affect its mechanical parts. Wiping the faceplate with a hard cloth or using a volatile liquid such as thinner or alcohol may scratch the surface or erase screened print.


■ How To Reset Your Unit

- If the unit or the connected unit fails to operate properly, reset the unit. 1 Press the <Reset> button. The unit returns to factory settings.



Basic Operations

Functions of the Buttons on the Front Panel

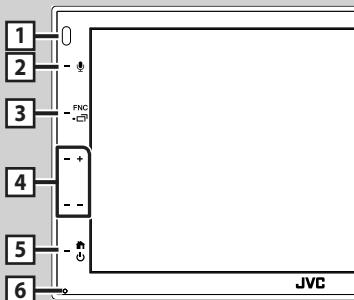

NOTE


- The panels shown in this guide are examples used to provide clear explanations of the operations. For this reason, they may be different from the actual panels.

	Name	Motion
1	Remote Sensor	<ul style="list-style-type: none"> Receives the remote control signal.
2		<ul style="list-style-type: none"> Displays the Voice Recognition screen.
3	FNC /	<ul style="list-style-type: none"> Displays the FUNCTION screen. Pressing for 1 second displays the APP (Apple CarPlay/ Android Auto) screen.
4	+, - (Volume)	<ul style="list-style-type: none"> Adjusts volume. The volume will go up until 15 when you keep pressing +.
5	/	<ul style="list-style-type: none"> Displays the HOME screen (P.9). Pressing for 1 second turns the power off. When the power off, turns the power on.
6	Reset	<ul style="list-style-type: none"> If the unit or the connected unit fails to operate properly, the unit returns to initial settings when this button is pressed.

Turning on the Unit

The method of turning on is different depending on the model.

- 1 Press the button.

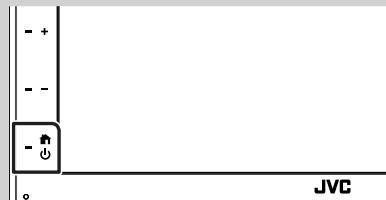

► The unit is turned on.

● To turn off the unit:

- 1 Press the button for 1 second.

NOTE

- If it is your first time turning the unit on after installation, it will be necessary to perform Initial setup (P.7).

Getting Started

Initial setup

Perform this setup when you use this unit first time.

1 Set each item as follows.



■ Language

Select the language used for the control screen and setting items. Default is "British English(en)".

- ① Touch **Language**.
- ② Touch **Language Select**.
- ③ Select the desired language.
- ④ Touch **⬅**.

■ Clock

Adjusts clock.

For detailed operation, see **Calendar/clock settings (P.7)**.

■ Display

Set the image on the screen.

- ① Touch **Display**.
- ② Touch **Background**.
- ③ Select the image.
- ④ Touch **⬅**.

For detailed operation, see Instruction Manual.

■ Camera

Set the parameters for the camera.

- ① Touch **Camera**.
- ② Set each item and touch **⬅**.

For detailed operation, see Instruction Manual.

■ DEMO

Set the demonstration mode. Default is "ON".

- ① Touch **DEMO** and set **ON** or **OFF**.

2 Touch Finish.



NOTE


- These settings can be set from the SETUP menu.

Calendar/clock settings

1 Press the **FNC** button.

► FUNCTION screen appears.

2 Touch **FUNCTION**.

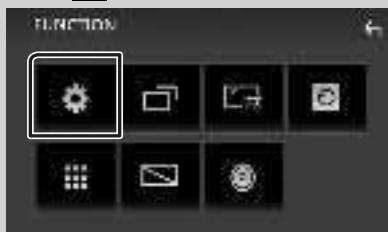

► SETUP Menu screen appears.

3 Touch User Interface.



► User Interface screen appears.

4 Touch Clock Adjust.



5 Adjust the date, then adjust the time.



6 Touch Set.

NOTE

- Deactivate **RDS CT** before adjusting the clock.
See Instruction Manual.

Adjusting the volume

To adjust the volume (0 to 40),

Press + to increase, and press - to decrease.
Holding + increases the volume continuously
to level 15.




Touch screen operations

To perform operations on the screen, you need to touch, touch and hold, flick or swipe to select an item, display setting menu screen or to change the page, etc.


● Touch

Touch the screen gently to select an item on the screen.

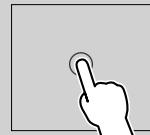

● Touch and hold


Touch the screen and keep your finger in place until the display changes or a message is displayed.

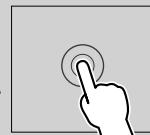

● Flick

Slide your finger quickly to the left or right on the screen to change the page.

You can scroll the list screen by flicking the screen up/down.

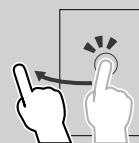

● Swipe


Slide your finger up or down on the screen to scroll the screen.



Gesture Touch Control:


You can also control playback by moving your finger on the touch panel as follows (for some sources, the gesture control is not available).

- Sliding the finger towards up/down:
- Functions same as pressing / (Media) in the USB Control screen.
- For the Tuner, tuner preset broadcast stations are switched.
- Sliding the finger towards left/right: Functions same as pressing / .
- Moving your finger clockwise or counter-clockwise: increases/decreases the volume.

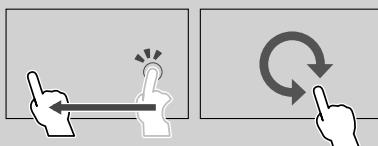

HOME screen descriptions

Most functions can be performed from the HOME screen.

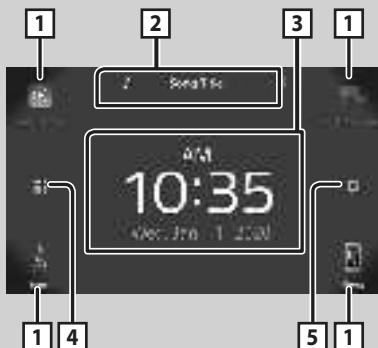

- | | |
|------------|---|
| [1] | • Short-cut playback source icons. (P.10) |
| [2] | • Current source information.
• Touch to display the control screen of current source. |
| [3] | • Widget |
| [4] | • Displays the source selection screen. (P.10) |
| [5] | • Displays the SETUP Menu screen. |

Display the HOME screen


- 1 Press the button.



► HOME screen appears.

Source selection screen descriptions

You can display all playback sources and options on the source selection screen.

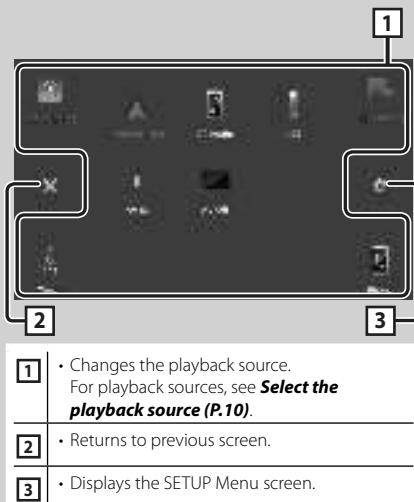

- | | |
|------------|--|
| [1] | • Changes the playback source.
For playback sources, see Select the playback source (P.10) . |
| [2] | • Returns to previous screen. |
| [3] | • Displays the SETUP Menu screen. |

Select the playback source

1 Touch on the HOME screen.


From the screen, you can select the following sources and functions.

	<ul style="list-style-type: none">Switches to the Apple CarPlay screen from the connected iPhone.
	<ul style="list-style-type: none">Switches to the USB Mirroring screen from the connected Android smartphone. It is necessary to connect Android smartphone with "Mirroring OA for JVC" application installed and to set Mode to Mirroring for Android™.
	<ul style="list-style-type: none">Switches to the Radio broadcast. (P.14)
	<ul style="list-style-type: none">Displays the Hands Free screen. (P.17) When neither Apple CarPlay, Android Auto, nor a Bluetooth Hands-Free phone is connected, displays "Disconnected" message in the TEL screen. When connecting as Apple CarPlay or Android Auto, it works as a phone provided in Apple CarPlay or Android Auto.
	<ul style="list-style-type: none">Switches to the Android Auto screen from the connected Android smartphone. It is necessary to connect Android smartphone compatible with Android Auto and to set Mode to Android Auto.
	<ul style="list-style-type: none">Plays a Bluetooth audio player.
	<ul style="list-style-type: none">Plays files on a USB device. (P.13)
	<ul style="list-style-type: none">Switches to an external component connected to the AV-IN input terminal.
	<ul style="list-style-type: none">Turns off the AV source. (P.10)

To turn off the AV source

1 Touch on the HOME screen.

2 Touch **AV Off**.

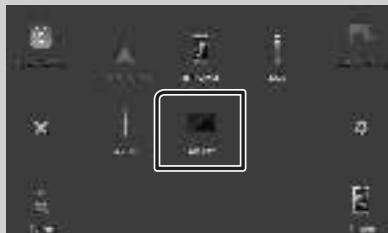

Source control screen descriptions

There are some functions which can be operated from most screens.

Indicators



Sub menu



1 TEL /

Connected Bluetooth device information.

2 All sources icon

Displays all sources.

3 Secondary screen

- : The Secondary screen changes every time you touch it. You can also change the Secondary screen by flicking left or right on the screen.
- Indicators: Displays the current source condition and so on.
 - **MUTE**: The mute function is active.
 - **LOUD**: The loudness control function is on.
- Sub menu
 - : Operation when the icon is touched:
The first touch darkens the screen, the second touch darkens the screen further, and the third touch restores the screen to its original brightness.
 - : Displays the Graphic Equalizer screen.
(P.21)
 - : Displays the APP (Apple CarPlay/ Android Auto) screen.

4

Touch to display the Hands Free screen.

(P.17)

When connecting as Apple CarPlay or Android Auto, it works as a phone provided in Apple CarPlay or Android Auto.

FUNCTION screen

- 1 Press the FNC button.



► FUNCTION screen appears.

- 2 Touch to display the FUNCTION screen.



The contents of the menu are as follows.

	• Displays the SETUP Menu screen.
	• Displays the APP (Apple CarPlay/Android Auto) screen.
	• Displays the Screen Adjust screen.
	• Displays the view camera.
	• Displays the source selection screen. (P.10)
	• Turns the display off. (P.12)
	• Displays the Audio screen. (P.20)
	• Close the FUNCTION screen.

Turn off the screen

- 1 Select on the FUNCTION screen.



To turn on the screen

- 1 Touch the display.

List screen

There are some common function keys in the list screens of most sources.



Displays list type selection window.



Displays music/movie file list.



Scrolls the displayed text.



Keys with various functions are displayed here.

- : Plays all tracks in the folder containing the current track.
- : Moves to the upper hierarchy.
- / : Displays the top or bottom page.



You can change the page to display more items by pressing / .

/ : Displays the top or bottom page.



Returns to previous screen.


NOTE

- Buttons which cannot be activated from the list screen are not displayed.

USB

Connecting a USB device

- 1** Connect the USB device with the USB cable. (P.26)

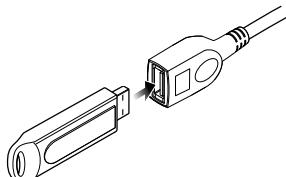

- 2** Press the button.

- 3** Touch .

- 4** Touch **USB**. (P.10)

Disconnect the USB device

- 1** Press the button.

- 2** Touch .

- 3** Touch a source other than **USB**.

- 4** Detach the USB device.

Usable USB device

You can use a mass-storage-class USB device on this unit.

The word "USB device" appearing in this manual indicates a flash memory device.

USB Basic Operation

Most functions can be controlled from the source control screen and playback screen.

Control screen



/

- : Repeats the current track/folder. Each time you touch the key, repeat mode switches in the following sequence; File repeat (, Folder repeat (, Repeat all (
- : Randomly plays all tracks in current folder. Each time you touch the key, random mode switches in the following sequence; File random (, Random off (

Track information

Displays the information of the current file.

Operation keys

- : Searches track/file. For details on search operation, see Instruction Manual.
- : Searches the previous/next track/file.
Touch and hold to fast forward or fast backward.
- : Plays or pauses.
- : Touch to mute or not to mute.

Tuner

Tuner Basic Operation

Most functions can be controlled from the source control screen.

To enter Tuner source, touch **Tuner** icon in the source selection screen. (P.10)

Control screen



Open the drawer



① Information display

Displays the information of the current station:
Frequency

Touching **⑤** allows you to switch between Content A and Content B.

- Content A: PS name, Radio Text, PTY Genre
- Content B: Radio Text plus, Title Artist

Preset#: Preset number

② Seek mode

Switches the seek mode in the following sequence; **AUTO1**, **AUTO2**, **MANUAL**.

- AUTO1**: Tunes in a station with good reception automatically.
- AUTO2**: Tunes in stations in memory one after another.
- MANUAL**: Switches to the next frequency manually.

③ Operation keys

- ◀▶▶**: Tunes in a station. The method of frequency switching can be changed (see 2 in table).
- [Speaker icon]**: Touch to mute or not to mute.

④ Preset list

- Touch on the right side of the screen to display the Preset list. Touch again to close the list.
- Recalls the memorized station.
- When touched for 2 seconds, stores the current receiving station in memory.

⑤ Function panel

Touch on the left side of the screen to display the function panel. Touch again to close the panel.

- TI** (FM only): Sets the traffic information mode on. For details, see Instruction Manual.
- SETUP** (FM only): Displays the Tuner SETUP screen. For details, see Instruction Manual.
- AME**: Presets stations automatically. For details, see Instruction Manual.
- PTY** (FM only): Searches a program by setting program type. For details, see Instruction Manual.
- MONO** (FM only): Select the Monaural reception.
- LOS** (FM only): Turns the Local Seek function on or off.

⑥ FM AM

Switches the band.

⑦ Indicator Items

- ST**: A stereo broadcast is being received.
- MONO**: The forced monaural function is on.
- AF**: The AF search function is on.
- LOS**: The Local Seek function is on.
- RDS**: Indicates the state of the Radio Data System station when the AF function is on.
White: Radio Data System is being received.
Orange: Radio Data System is not being received.

- **TI:** Indicates the reception state of traffic information.
White: TP is being received.
Orange: TP is not being received.

Memory Operation

■ Auto memory

You can store stations with good reception in memory automatically.

1 Touch desired band key.



**2 Touch [] on the left side of the screen.
Touch AME.**



► A confirmation screen appears.

3 Touch Yes.

► Auto memory starts.

■ Manual memory

You can store the current receiving station in memory.

1 Select a station you wish to store in memory.

2 Touch FM# (#: 1-24) or AM# (#: 1-12) in which you want to store the station for 2 seconds.

Bluetooth Control

■ About the cell-phone and Bluetooth audio player

This unit conforms to the following Bluetooth specifications:

Version

Bluetooth Ver. 4.1

Profile

Cell-phone:

HFP (Hands Free Profile)

SPP (Serial Port Profile)

PBAP (Phonebook Access Profile)

Audio player:

A2DP (Advanced Audio Distribution Profile)

AVRCP (Audio/Video Remote Control Profile)

Sound codec

SBC, AAC

NOTE

- The units supporting the Bluetooth function have been certified for conformity with the Bluetooth Standard following the procedure prescribed by Bluetooth SIG.
- However, it may be impossible for such units to communicate with your cell-phone depending on its type.

Register from the Bluetooth device

It is necessary to register the Bluetooth audio player or cell-phone to this unit before using the Bluetooth function.

1 Turn on the Bluetooth function on your smartphone/cell-phone.

2 Search the unit ("KW-M***") from your smartphone/cell-phone.**

3 Operate your smartphone/cell-phone according to the displayed messages.

■ Confirm the request on the smartphone/cell-phone.



■ If a PIN code is required, enter the PIN code ("0000").

4 Press the FNC button.

► FUNCTION screen appears.

5 Touch .



► SETUP Menu screen appears.

6 Touch Bluetooth .




► Bluetooth SETUP screen appears.

- 7** Touch **Select Device** in the Bluetooth SETUP screen.



- 8** Touch **[Device Name]** you want to connect.

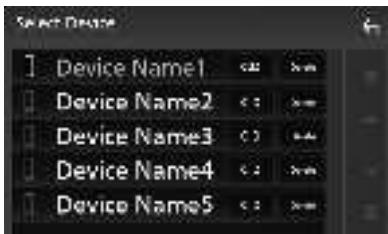


NOTE

- If the icon is lighted, it means that the unit will use that device.

To delete the registered Bluetooth device

- 1** Touch **[Device Name]**.

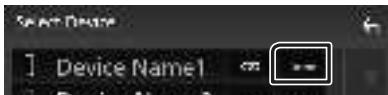

► Confirmation message appears.

- 2** Touch **Yes**.

Using Hands-Free Unit

You can use telephone function by connecting the Bluetooth telephone to this unit.

NOTE

- While Apple CarPlay or Android Auto is being connected, Bluetooth Hands-Free function cannot be used. Only Apple CarPlay or Android Auto Hands-Free function can be used.


■ Make a call

- 1** Touch **Phone/**.



► Hands Free screen appears.

- 2** Select a dialing method.

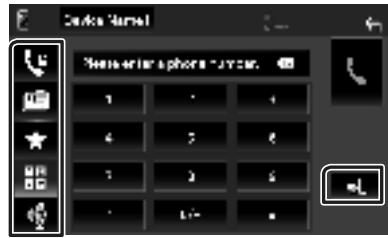

- Call using call records
- Call using the phonebook
- Call using the preset number
- Call by entering a phone number
- Voice Recognition
- Bluetooth SETUP

● Bluetooth SETUP

- 1) Touch *****.

Bluetooth SETUP screen appears.

NOTE

- The status icons such as battery and antenna displayed may differ from those displayed on the cell-phone.
- Setting the cell-phone in the private mode can disable the hands-free function.

Bluetooth Control

Call using call records

- 1 Touch .
- 2 Select the phone number from the list.



Call by entering a phone number

- 1 Touch .
- 2 Enter a phone number with number keys.



- 3 Touch .


Call using the preset number

- 1 Touch .
- 2 Touch the Name or phone number.



Call using the phonebook

- 1 Touch .
- 2 Select the person you want to call from the list.

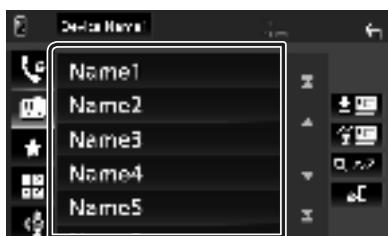

- 3 Select the phone number from the list.



NOTE

- If no Phonebook has been downloaded, touching **Download Phonebook Now** will start downloading the Phonebook.

■ Receive a call

- 1 Touch  to answer a phone call or  to reject an incoming call.




NOTE

- While monitoring the view camera, this screen does not appear even if a call comes in. To display this screen, return the shift knob of car to the driver position.

To end call

- 1 While talking, touch .

■ Operations during a call

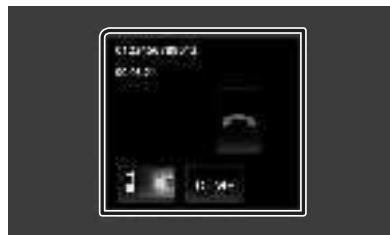

● Adjust the receiver volume

Press the – or + button.



● Output the dial tone

Touch **DTMF** to display the tone input screen. You can send tones by touching desired keys on the screen.

● Switching the speaking voice output

Touching  /  each time switches the speaking voice output between cell-phone and speaker.


● Call-waiting

When you receive a call while talking on another call, you can answer the newly received call by touching . The current call is on hold. Each time you touch , the caller will change. When you touch , the current call will end and switch to the call in hold.

Controlling Audio

You can adjust the various settings such as audio balance or subwoofer level.

- 1 Press the FNC button.**
► FUNCTION screen appears.
- 2 Touch .**

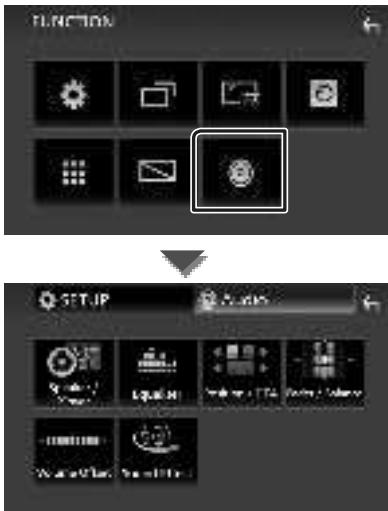


Controlling General Audio

- 1 Press the FNC button.**
► FUNCTION screen appears.
- 2 Touch .**
► Audio screen appears.
- 3 Touch Fader / Balance.**



- 4 Set each item as follows.**

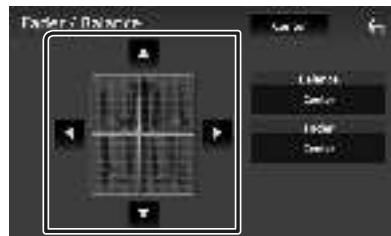

Fader / Balance

Adjust the volume balance around the touched area.

- ◀ and ▶ adjust the right and left volume balance.
- ▲ and ▼ adjust the front and rear volume balance.

Center

Clear the adjustment.

■ Equalizer Control

You can adjust equalizer by selecting the optimized setting for each category.

1 Press the FNC button.

► FUNCTION screen appears.

2 Touch .

► Audio screen appears.

3 Touch Equalizer.



4 Touch the screen and set the Graphic Equalizer as desired.



■ ALL SRC

Apply the adjusted equalizer to all sources.
Touch **ALL SRC** and then touch **OK** on the confirmation screen.

■ Gain level (dotted frame area)

Adjust the gain level by touching the each frequency bar.

You can select frequency bar and adjust its level by **▲**, **▼**.

■ Preset Select

Displays the screen to recall the preset equalizer curve.

■ Initialize

The current EQ curve returns to flat.

■ Memory

Saves the adjusted equalizer curve from "User1" to "User3".

■ Bass EXT (Bass Extend Settings)

When turned on, the frequency lower than 62.5 Hz is set to the same gain level as 62.5 Hz.

■ SW Level

Adjusts the subwoofer volume.

Connection/Installation

Before Installation

Before installation of this unit, please note the following precautions.

⚠️ WARNINGS

- If you connect the ignition wire (red) and the battery wire (yellow) to the car chassis (ground), you may cause a short circuit, that in turn may start a fire. Always connect those wires to the power source running through the fuse box.
- Do not cut out the fuse from the ignition wire (red) and the battery wire (yellow). The power supply must be connected to the wires via the fuse.

⚠️ CAUTION


- Install this unit in the console of your vehicle. Do not touch the metal part of this unit during and shortly after the use of the unit. Metal part such as the heat sink and enclosure become hot.

NOTE

- Mounting and wiring this product requires skills and experience. For best safety, leave the mounting and wiring work to professionals.
- Make sure to ground the unit to a negative 12V DC power supply.
- Do not install the unit in a spot exposed to direct sunlight or excessive heat or humidity. Also avoid places with too much dust or the possibility of water splashing.
- Do not use your own screws. Use only the screws provided. If you use the wrong screws, you could damage the unit.
- If the power is not turned ON ("There is an error in the speaker wiring. Please check the connections." is displayed), the speaker wire may have a short-circuit or touched the chassis of the vehicle and the protection function may have been activated. Therefore, the speaker wire should be checked.
- If your car's ignition does not have an ACC position, connect the ignition wires to a power source that can be turned on and off with the ignition key. If you connect the ignition wire



to a power source with a constant voltage supply, such as with battery wires, the battery may be drained.

- If the console has a lid, make sure to install the unit so that the front panel will not hit the lid when closing and opening.
- If the fuse blows, first make sure the wires aren't touching to cause a short circuit, then replace the old fuse with one with the same rating.
- Insulate unconnected wires with vinyl tape or other similar material. To prevent a short circuit, do not remove the caps on the ends of the unconnected wires or the terminals.
- Connect the speaker wires correctly to the terminals to which they correspond. The unit may be damaged or fail to work if you share the \ominus wires or ground them to any metal part in the car.
- When only two speakers are being connected to the system, connect the connectors either to both the front output terminals or to both the rear output terminals (do not mix front and rear). For example, if you connect the \oplus connector of the left speaker to a front output terminal, do not connect the \ominus connector to a rear output terminal.
- After the unit is installed, check whether the brake lamps, blinkers, wipers, etc. on the car are working properly.
- Do not press hard on the panel surface when installing the unit to the vehicle. Otherwise scars, damage, or failure may result.
- Reception may drop if there are metal objects near the Bluetooth antenna.

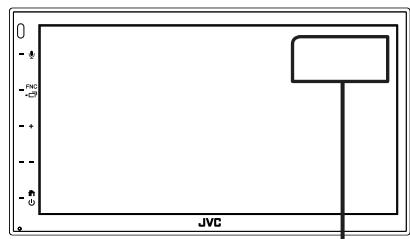

Bluetooth antenna unit

■ Supplied accessories for installation

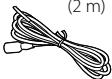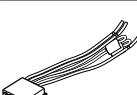	 x1
 x1	 x1
 (M5 × 6 mm) x6	 (M5 × 8 mm) x6
 x1	 x1

■ Installation procedure


- 1) To prevent a short circuit, remove the key from the ignition and disconnect the \ominus terminal of the battery.
- 2) Make the proper input and output wire connections for each unit.
- 3) Connect the wire on the wiring harness.
- 4) Take Connector B (accessory ⑧) on the wiring harness and connect it to the speaker connector in your vehicle.
- 5) Take Connector A (accessory ⑦) on the wiring harness and connect it to the external power connector on your vehicle.
- 6) Connect the wiring harness connector to the unit.
- 7) Install the unit in your car.
- 8) Reconnect the \ominus terminal of the battery.
- 9) Press the reset button.

Installing the unit

NOTE


- Make sure that the unit is installed securely in place. If the unit is unstable, it may malfunction (eg, the sound may skip).

■ Japanese cars

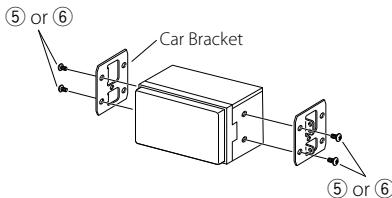


■ Trim plate

- 1) Attach accessory ② to the unit.

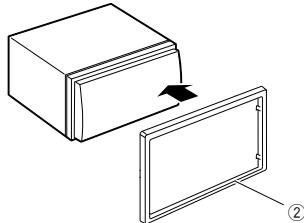

■ Microphone unit


- 1) Check the installation position of the microphone (accessory ①).
- 2) Clean the installation surface.
- 3) Remove the separator of the microphone (accessory ①), and stick the microphone to the place shown below.
- 4) Wire the microphone cable up to the unit with it secured at several positions using tape or other desired method.
- 5) Adjust the direction of the microphone (accessory ①) to the driver.

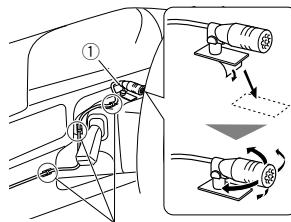

Fix a cable with a commercial item of tape.


NOTE

- Swap the clips if necessary.

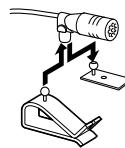


Removing the trim plate

- 1) Use the extraction key (accessory ④) to lever out the four tabs (two on the left part, two on the right part).

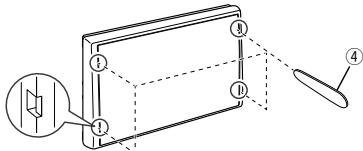


- 2) Pull the trim plate forward.

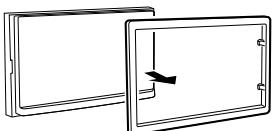


■ Connecting wires to terminals

Light Blue/Yellow (Steering remote control wire)

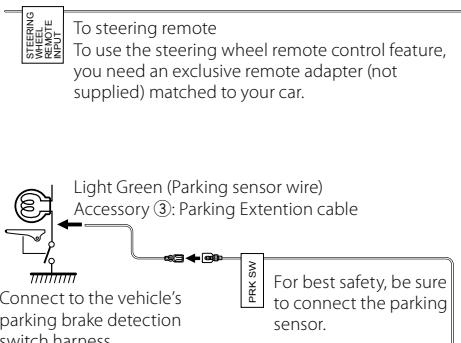


Connect to vehicle's steering remote harness.
Contact your JVC dealer for details.

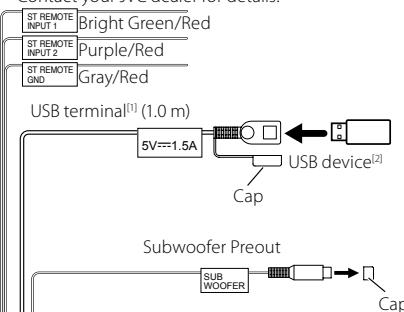

Purple/White (Reverse sensor wire)

Connect to vehicle's reverse lamp harness when using the optional rear view camera.

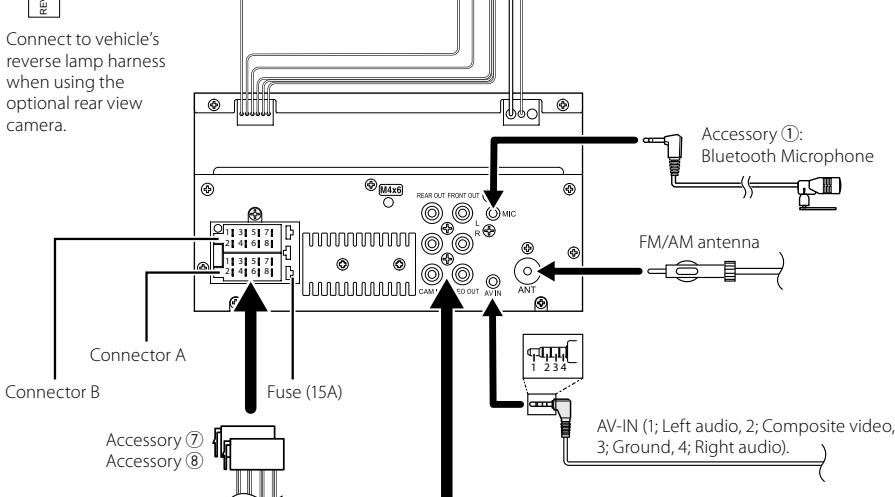

Rear Audio Preout (Left; White, Right; Red)

Front Audio Preout (Left; White, Right; Red)

Visual Output (Yellow)



Rear view camera input (Yellow)

[1] USB maximum power supply current :

DC 5 V --- 1.5 A

[2] Sold separately

■ Connecting an iPhone/Android

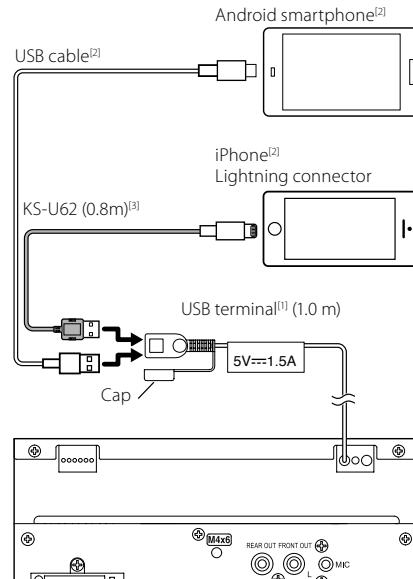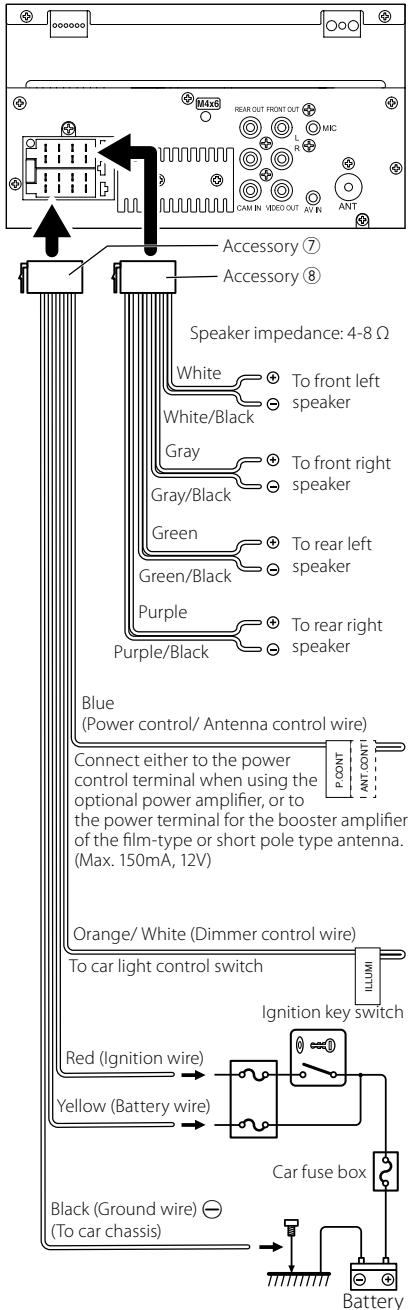

^[1] iPhone maximum power supply current : DC 5 V = 1.5 A

^[2] Sold separately

^[3] Optional accessory

Appendix

Specifications

■ Bluetooth section

- Frequency : 2.402 – 2.480 GHz
RF Output Power (E.I.R.P.) : +8 dBm (Avg.), Power Class 1

■ General

- Operating Voltage : 12V DC Car Battery
Speaker Impedance : 4 – 8 Ω

Specifications subject to change without notice.

About this Unit

■ Copyrights

- The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by JVCKENWOOD Corporation is under license. Other trademarks and trade names are those of their respective owners.
- Windows Media is a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.
- This product is protected by certain intellectual property rights of Microsoft. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft.
- Use of the Made for Apple badge means that an accessory has been designed to connect specifically to the Apple product(s) identified in the badge, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with an Apple product may affect wireless performance.
- Apple, iPhone and Lightning are trademarks of Apple Inc., registered in the U.S. and other countries.
- Apple, Siri, Apple CarPlay and Apple CarPlay logo are trademarks of Apple Inc., registered in the U.S. and other countries.
- App Store is a service mark of Apple Inc., registered in the U.S. and other countries.
- IOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.
- Google, Android, Google Play and Android Auto are trademarks of Google LLC.
- To use Android Auto on your car display, you'll need an Android Auto compatible vehicle or aftermarket stereo, an Android phone running Android 5.0 or higher, and the Android Auto app.
- Linux® is the registered trademark of Linus Torvalds in the U.S. and other countries.
- THIS PRODUCT IS LICENSED UNDER THE AVC PATENT PORTFOLIO LICENSE FOR THE PERSONAL USE OF A CONSUMER OR OTHER USES IN WHICH IT DOES NOT RECEIVE REMUNERATION TO (i)ENCODE VIDEO IN COMPLIANCE WITH THE AVC STANDARD ("AVC VIDEO") AND/OR (ii)DECODE AVC VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL ACTIVITY AND/ OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE AVC VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION MAY BE OBTAINED FROM MPEG LA, LLC. SEE [HTTP://WWW.MPEGLA.COM](http://WWW.MPEGLA.COM)
- THIS PRODUCT IS LICENSED UNDER THE MPEG-4 VISUAL PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER FOR

(i) ENCODING VIDEO IN COMPLIANCE WITH THE MPEG-4 VISUAL STANDARD ("MPEG-4 VIDEO") AND/ OR (ii) DECODING MPEG-4 VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NON-COMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED BY MPEG LA TO PROVIDE MPEG-4 VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION INCLUDING THAT RELATING TO PROMOTIONAL, INTERNAL AND COMMERCIAL USES AND LICENSING MAY BE OBTAINED FROM MPEG LA, LLC. SEE [HTTP://WWW.MPEGLA.COM](http://WWW.MPEGLA.COM).

• THIS PRODUCT IS LICENSED UNDER THE VC-1 PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER TO (i) ENCODE VIDEO IN COMPLIANCE WITH THE VC-1 STANDARD ("VC-1 VIDEO") AND/OR (ii) DECODE VC-1 VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NON-COMMERCIAL ACTIVITY AND/ OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE VC-1 VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION MAY BE OBTAINED FROM MPEG LA, LLC. SEE [HTTP://WWW.MPEGLA.COM](http://WWW.MPEGLA.COM)

- libFLAC

Copyright (C) 2000,2001,2002,2003,2004,2005,2006,2007,2008,2009 Josh Coalson

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- Neither the name of the Xiph.org Foundation nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE FOUNDATION OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

- libvorbis

Copyright (c) 2002-2008 Xiph.org Foundation
Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- Neither the name of the Xiph.org Foundation nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE FOUNDATION OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

- libogg

Copyright (c) 2002, Xiph.org Foundation Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- Neither the name of the Xiph.org Foundation nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE FOUNDATION OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

İçindekiler

Kullanmadan Önce	30
Hızlı başlangıç kılavuzu hakkında.....	30
Kullanım kılavuzun okunması:.....	30
Önlemler.....	31
Temel İşlemler.....	32
Ön Panel Üzerindeki İşlev Düğmeleri.....	32
Birim açma.....	32
Başlarken.....	33
Ses düzeyinin ayarlanması.....	34
Dokunmatik ekranın çalışması	34
ANA SAYFA ekranı açıklamaları.....	35
Kaynak seçimi ekranı açıklamaları.....	35
Kaynak kumanda ekranı açıklamaları.....	37
İŞLEV ekranı.....	38
Liste ekranı.....	38
USB	39
USB cihaz bağlanması	39
USB Temel İşlem.....	39
Alicı	40
Tuner Temel İşlemi.....	40
Hafıza İşlemi.....	41
Bluetooth Kontrolü	42
Bluetooth cihazından kayıt olma.....	42
Eller Serbest Üniteyi Kullanma	43
Ses Kontrolü	46
Bağlantı/Kurulum	48
Kurulumdan Önce	48
Birimin kurulumu.....	50
Ek	54
Özellikler	54
Bu Birim hakkında	54


Kullanmadan Önce

Hızlı başlangıç kılavuzu hakkında

Bu Hızlı Başlangıç Kılavuzu, bu ünitenin temel işlevlerini açıklar.

Ayrıntılı işlemler ve bilgiler için aşağıdaki web sitesinde bulunan KULLANIM KILAUVUZU'na başvurun:

<<https://www.jvc.net/cs/car/>>

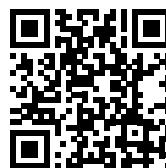

Kullanım kılavuzu, teknik özelliklerde değişiklik yapılması vb. için değişikliğe tabidir.

Başvuru için kullanım kılavuzunun en son sürümünü indirdiğinizden emin olun.

Kullanım kılavuzun okunması:

- Bu kılavuda gösterilen ekranlar ve paneller, operasyonların açık bir şekilde açıklanması için kullanılan örneklerdir.
- Bunu nedenle, kullanılan gerçek ekranlardan veya panellerden farklı olabilirler veya bazı ekran desenleri farklı olabilir.
- **Gösterge dili:** İngilizce göstergeler açıklama amaçlı kullanılmıştır. Gösterge dilini **SETUP** menüsünden seçebilirsiniz. Bkz. Kullanım Kılavuzu.

Önlemler

▲ UYARILAR

■ Yaralanmayı veya ateşi önlemek için aşağıdaki önlemleri alınız:

- Bir kısa devreyi önlemek için, birimin içine hiçbir zaman metal bir obje (madeni paralar ya da metal aletler gibi) koymayınız veya içinde bırakmayınız.
- Uzun süreli sürüşlerinizde birim ekranını izlemeyin veya gözlerinizi sabitlememeyin.
- Eğer kurulum sırasında problem yaşarsanız, JVC satıcısına danışın.

■ Bu birimin kullanımı ile ilgili önlemler

- İsteğe bağlı aksesuarlar satın aldığınızda, modelinizle ve bölgenizde çalışıklarından emin olmak için JVC yetkili satıcısına danışın.
- Menüleri, ses dosyası etiketlerini vb. görüntülemek için dil seçebilirsiniz. Bkz. Kullanım Kılavuzu.
- Radyo Veri Sistemi veya Radyo Yayın Veri Sistemi özelliği, servisin herhangi bir yayın istasyonu tarafından desteklenmediği durumlarda çalışmaz.

■ Monitörü koruma

- Monitörün hasar görmesini önlemek için, monitörü, bilyali bir kalem veya benzeri bir alet kullanarak keskin uçla çalıştmayın.

■ Birimi temizleme

- Üniteyi ön yüzü lekelenmişse silikon bez gibi kuru, yumuşak bir bezle silin. Ön yüz kötü bir şekilde lekelenmişse lekeleri nötr temizleyiciyle nemlendirilmiş bir bezle silin ve daha sonra temiz, yumuşak ve kuru bir bezle silin.

NOT

- Püskürtme temizleyicisini doğrudan üniteye uygulamak, mekanik parçalarını etkileyebilir. Ön yüzünü sert bir bezle silme veya tiner veya alkol gibi uçucu bir sıvı kullanarak temizleme yüzeyi çizebilir veya ekran baskısını silebilir.

■ Ünitezin Sıfırlanması


- Ünite veya bağlı ünite düzgün şekilde çalışmıyorsa, üniteyi sıfırlayın. 1 <Sıfırla> düğmesine basın. Ünite fabrika ayarlarına geri döner.



Sıfırlama düğmesi

Temel İşlemler

Ön Panel Üzerindeki İşlev Düğmeleri

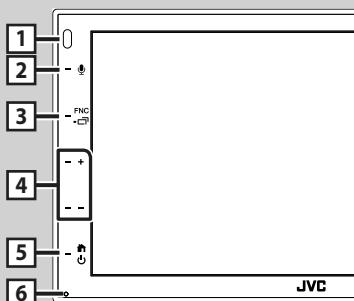

NOT

- Bu kılavuzda gösterilen paneller, işlemlerin açık bir şekilde açıklanması için kullanılan örneklerdir. Bu nedenle, gerçek panellerden farklı olabilirler.

Ad	Hareket
1	• Hareket <ul style="list-style-type: none"> Uzaktan Algılayıcı Uzaktan kumanda sinyalini alır.
2	<ul style="list-style-type: none"> Ses Tanıma ekranını görüntüüler.
3	<ul style="list-style-type: none"> İŞLEV ekranını görüntüler. 1 saniye boyunca basıldığında UYGULAMA (Apple CarPlay/ Android Auto) ekranını görüntüler.
4	<ul style="list-style-type: none"> + , - (Ses Düzeyi) Ses düzeyini ayarlar. + tuşuna basmaya devam ettiğinizde, ses düzeyi 15'e kadar yükselir.
5	<ul style="list-style-type: none"> ANA SAYFA ekranını görüntüler (S.35). 1 saniye basmak gücü kapatır. Güç kapalı olduğunda gücün açar.
6	<ul style="list-style-type: none"> Sıfırla Ünite veya bağlı ünite düzgün çalışmıyorsa, bu düğmeye basıldığında ünite başlangıç ayarlarına geri döner.

Birimini açma

Açma yöntemi modele göre değişir.

- düğmesine basın.



► Birim açılır.

- Birimi kapatmak için:**

- düğmesine 1 saniye boyunca basın.

NOT

- Kurulumdan sonra birimin ilk açılışı ise, ilk kurulumun gerçekleşmesi gerekecektir (**S.33**).

Başlarken

Başlangıç kurulumu

Birim ilk defa kullanırken bu kurulumu gerçekleştirebilir.

1 Her maddeyi aşağıdaki gibi ayarlayın.



■ Language

Kumanda ekranı ve ayar öğeleri için kullanılan dili seçin. Varsayılan "British English(en)" öğesidir.

- ① **Language**'e dokunun.
- ② **Language Select**'e dokunun.
- ③ İstediğiniz dili seçin.
- ④ öğesine dokunun.

■ Clock

Saatı ayarlar.

Detailed operation for this item, see **Takvim/saat ayarları (S.33)**.

■ Display

Ekrandaki görüntüyü ayarlayın.

- ① **Display**'e dokunun.
- ② **Background** öğesine dokunun.
- ③ Görüntüyü seçin.
- ④ dokunun.

Detailed operation for this item, see **Kullanım Kılavuzu**.

■ Camera

Kamera için parametreleri ayarlayın.

- ① **Camera**'ya dokunun.
- ② Öğeyi seçin ve öğesine dokunun. Detaylı işlem için, see **Kullanım Kılavuzu**.

■ DEMO

Gösterim modunu ayarlayın. Varsayılan "ON"dur.

- ① **DEMO** öğesine dokunun ve **ON** veya **OFF** olarak ayarlayın.

2 Finish'e dokunun.



NOT

- Bu ayarlar KURULUM menüsünden ayarlanabilir.

Takvim/saat ayarları

1 FNC düğmesine basın.

► İŞLEV ekranı görünür.

2 öğesine dokunun.




► KURULUM Menü ekranı görünür.

3 User Interface öğesine dokunun.



► Kullanıcı arayüzü ekranı görünür.

4 Clock Adjust öğesine dokunun.

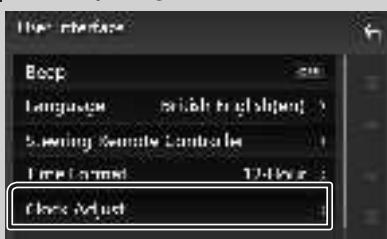

5 Tarihi ayarlayın, sonra zamanı ayarlayın.



6 Set öğesine dokunun.

NOT

- Saatyi ayarlamadan önce, **RDS CT** öğesini devre dışı bırakın. Bkz. Kullanım Kılavuzu.

Ses düzeyinin ayarlanması

Ses düzeyini ayarlamak için (0 ila 40), Artırmak için + öğesine basın ve azaltmak için - öğesine basın.

+ öğesini basılı tutmak ses seviyesini kesintisiz olarak seviye 15'e çıkarır.




Dokunmatik ekranın çalışması

Ekranda işlemler gerçekleştirmek için bir öğe seçmek, ayar menüsü ekranını görüntülemek veya sayfayı değiştirmek gibi işlemleri gerçekleştirmek üzere dokunmanız, dokunup basılı tutmanız, kaydırmanız veya çekmeniz gereklidir.


● Dokunun

Ekrandaki bir öğeyi seçmek için ekrana hafifçe dokunun.

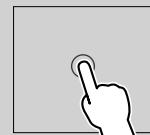

● Dokunup basılı tutun

Görüntü değişigene veya bir mesaj görüntülenenene kadar ekrana dokunun ve parmağınızı aynı yerde tutun.

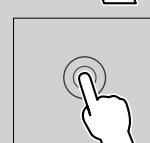


● Kaydırın

Sayfayı değiştirmek için parmağınızı ekranda hızlıca sola veya sağa kaydırın. Ekrani yukarı/ aşağı iterek liste ekranında dolasabilirsiniz.



● Çekin


Ekrani kaydirmak için parmağınızı ekranda yukarı veya aşağı kaydırın.

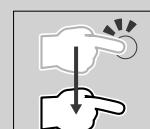

Dokunma Hareket Kontrolü:


Oynatmayı kontrol etmek için parmağınızı dokunmatik panelde aşağıdaki şekilde hareket ettirebilirsiniz (bazi kaynaklar için dokunmatik kontrol mevcut değildir).

- Parmağınızı yukarı/aşağı doğru kaydırma:
- USB Kontrol ekranında / (Medya) öğesine basma ile aynı işlevi görür.
- Tuner için, önceden ayarlanmış yayın istasyonları değiştirilir.
- Parmağınızı sola/sağda doğru kaydırma: / öğesine basma ile aynı işlevi görür.
- Parmağınızı saat yönüne veya saat yönünün tersine döndürme: sesi artırır/azaltır.

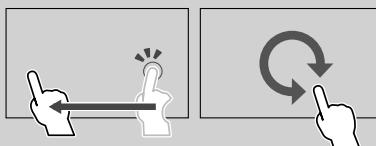

ANA SAYFA ekranı açıklamaları

Çoğu işlev ANA SAYFA ekranından gerçekleştirilebilir.

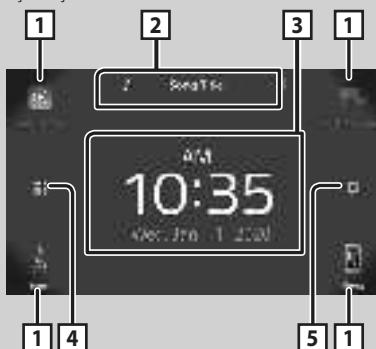

[1]	• Oynatma kaynağını kısayol simgeleri. (S.36)
[2]	• Geçerli kaynak bilgileri. • Geçerli kaynağın kumanda ekranını görüntülemek için dokunun.
[3]	• Arabirim öğesi
[4]	• Kaynak seçme ekranını görüntüler. (S.36)
[5]	• KURULUM Menü ekranını görüntüler.

HOME ekranını görüntüleme

- [1]** düğmesine basın.



► ANA SAYFA ekranı görünür.

Kaynak seçimi ekranı açıklamaları

Kaynak seçim ekranında tüm oynatma kaynakları ve seçenekleri görüntüleyebilirsiniz.



Oynatma kaynağını seçin

1 ANA SAYFA ekranında öğesine dokunun.


Ekrandan, aşağıdaki kaynakları ve işlevleri seçebilirsiniz.

	<ul style="list-style-type: none">Bağlı iPhone'dan Apple CarPlay ekranına geçer.
	<ul style="list-style-type: none">Bağlı Android akıllı telefondan USB Aynalama ekranına geçer. Android akıllı telefonu "Mirroring OA for JVC" uygulaması yükülü olarak bağlamak ve Mode öğesini Mirroring for Android™ olarak ayarlamak gereklidir.
	<ul style="list-style-type: none">Radyo yayınına geçer. (S.40)
	<ul style="list-style-type: none">Eller Serbest Ekranını görüntüler. (S.43) Ne Apple CarPlay, Android Auto ne de bir Bluetooth Hands-Free telefon bağlı değilken, TEL ekranında "Disconnected" mesajını görüntüler. Apple CarPlay veya Android Auto olarak bağlanırken, Apple CarPlay veya Android Auto'da sağlanan bir telefon olarak çalışır.
	<ul style="list-style-type: none">Bağlı Android akıllı telefondan Android Auto ekranına geçer. Android Auto ile uyumlu Android akıllı telefonu bağlamak ve Mode öğesini Android Auto olarak ayarlamak gereklidir.
	<ul style="list-style-type: none">Bir Bluetooth ses çaları oynatır.
	<ul style="list-style-type: none">Bir USB cihazındaki dosyaları oynatır. (S.39)
	<ul style="list-style-type: none">AV-IN giriş terminaline bağlı bir harici bilesene geçer.
	<ul style="list-style-type: none">AV kaynağını kapatır. (S.36)

AV kaynağını kapatmak için

1 ANA SAYFA ekranında öğesine dokunun.

2 AV Off öğesine dokunun.

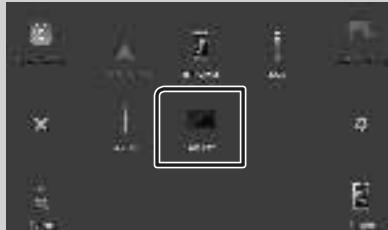

Kaynak kumanda ekranı açıklamaları

Çoğu ekranın çalıştırılabilen bazı işlevler vardır.

Göstergeler



Alt menü



1 TEL /

Bağlı Bluetooth cihaz bilgileri.

2 Bütün kaynaklar simgesi

Tüm kaynakları gösterir.

3 İkincil ekran

- : İkincil ekran her dokunduğunuzda değişir.** Ekranda sola veya sağa kaydırarak ikincil ekranı da değiştirebilirsiniz.
- Göstergeler: Geçerli kaynak durumunu görüntüler vs.
 - **MUTE**: Sessız işlevi aktifdir.
 - **LOUD**: Ses yüksekliği kontrolü işlevi açıktır.
- Alt menü
 - : Simgeye dokunduğunda yapılan işlem: ilk dokunma ekranı koyulaştırır, ikinci dokunma ekranı daha da koyulaştırır ve üçüncü dokunma ekranı orijinal parlaklığuna döndürür.
 - : Grafik Ekolayzer ekranını görüntüler. (**S.47**)
 - : UYGULAMA (Apple CarPlay/ Android Auto) ekranını görüntüler.

4

Eller Serbest ekranını görüntülemek için dokunun. (**S.43**)

Apple CarPlay veya Android Auto olarak bağlanırken, Apple CarPlay veya Android Auto'da sağlanan bir telefon olarak çalışır.

İŞLEV ekranı

- 1 FNC düğmesine basın.



► İŞLEV ekranı görünür.

- 2 İŞLEV ekranını görüntülemek için dokunun.



Menünün içerikleri aşağıdaki gibidir.

	• KURULUM Menü ekranını görüntüler.
	• UYGULAMA (Apple CarPlay/Android Auto) ekranını görüntüler.
	• Ecran Ayarlama ekranını görüntüler.
	• Görüşme kamerasını görüntüler.
	• Kaynak seçme ekranını görüntüler. (S.36)
	• Ekranı kapatır. (S.38)
	• Ses ekranını görüntüler. (S.46)
	• İŞLEV ekranını kapatın.

Ekrani kapatın

- 1 İŞLEV ekranında öğesini seçin.



● Ekrani açmak için

- 1 Ekrana dokunun.

Liste ekranı

Çoğu kaynağın liste ekranlarında bazı ortak işlev tuşları vardır.



Liste türü seçim penceresini görüntüler.



Müzik/film dosya listesini görüntüler.



Metin kaydırma

Görüntülenen metinleri kaydırır.



Çeşitli işlevlere sahip anahtarlar burada görüntülenir.

- : Geçerli parçayı içeren klasördeki tüm parçaları oynatır.
- / : Üst hiyerarşiye geçer.




NOT

- Liste ekranından etkinleştirilemeyen düğmeler görüntülenmez.

USB

USB cihaz bağlanması

- 1** USB cihazını USB kablosuyla bağlayın. (S.52)

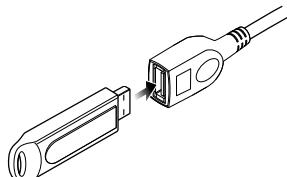

- 2** düğmesine basın.
3 ögesine dokunun.
4 **USB** ögesine dokunun. (S.36)

■ USB cihazının bağlantısını kesin

- 1** düğmesine basın.
2 ögesine dokunun.
3 **USB** dışında bir kaynağa dokunun.
4 **USB** cihazını çıkarın.

■ Kullanılabilir USB cihazı


Bu birim üzerinde bir yığın depolama sınıfı USB aygıtı kullanabiliyiniz.

Bu kılavuzda görünen "USB device" kelimesi bir flash bellek cihazını belirtir.

USB Temel İşlem

Çoğu işlev kaynak kumanda ekranı ve oynatma ekranından kontrol edilebilir.

Kumanda ekranı

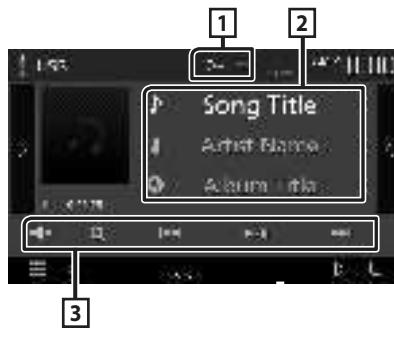

■ 1 /

- : Geçerli parçayı/klasörü tekrarlar. Tuşa her dokunuşta, tekrarlama modu şu sırayla değişir; Dosya tekrarı () , Klasör tekrarı () , Tümünü tekrarla ()
- : Geçerli klasördeki tüm parçaları rastgele oynatır. Tuşa her dokundugunuzda, rastgele mod şu sırayla devreye girer; Rastgele dosya () , Rastgele kapalı ()

■ 2 Parça bilgisi

Geçerli dosyanın bilgilerini görüntüler.

■ 3 Çalışma tuşları

- : Parça/dosya arar. Arama işlemi hakkındaki ayrıntılar için, bkz. Kullanım Kılavuzu.
- : Önceki/sonraki parçayı/dosyayı arar. Hızlı ileri sarmak veya geriye doğru hızlıca ilerlemek için dokunup basılı tutun.
- / : Çalar veya duraklatır.
- : Sesini kapatmak veya kapatmamak için dokunun.

Alici

Tuner Temel İşlemi

Çoğu işlev kaynak kumanda ekranından kontrol edilebilir.

Tuner kaynağına girmek için kaynak seçim ekranındaki **Tuner** simgesine dokunun.

(S.36)

Kumanda ekranı



Çekmeceyi açın



1 Bilgi ekranı

Geçerli istasyonun bilgilerini görüntüler: Frekans

öğesine dokunmak, İçerik A ile İçerik B arasında geçiş yapmanıza olanak tanır.

- A İçeriği: PS adı, Radyo Metni, PTY Türü
- B İçeriği: Radyo Metni artı, Sanatçı Başlığı

Preset#: Ön ayar numarası

2 Arama modu

Arama modunu şu sırada değiştirir; **AUTO1**,

AUTO2, MANUAL.

- **AUTO1**: Otomatik olarak iyi bir istasyona sahip bir istasyona girer.
- **AUTO2**: İstasyonları art arda buluyor.
- **MANUAL**: Sonraki freksansa manuel olarak geçilir.

3 Çalışma tuşları

- : Bir istasyon bulur. Frekans değiştirme yöntemi değiştirilebilir (tablo 2'ye bakınız).
- : Sesi kapatmak veya kapatmamak için dokunun.

4 Ön ayar listesi

- Ön Ayar listesini görüntülemek için, ekranın sağ tarafına dokunun. Listeyi kapatmak için tekrar dokunun.
- Hafızaya alınan istasyonu geri çağrıır.
- 2 saniye dokunulduğunda, mevcut alıcı istasyonu hafızaya kaydeder.

5 İşlev paneli

İşlev panelini görüntülemek için ekranın sol tarafına dokunun. Paneli kapatmak için tekrar dokunun.

- **TI** (Yalnızca FM): Trafik bilgileri modunu açık olarak ayarlar. Ayrintılar için, bkz. Kullanım Kılavuzu.
- **SETUP** (Yalnızca FM): Tuner KURULUM ekranını görüntüler. Ayrintılar için, bkz. Kullanım Kılavuzu.
- **AME** : İstasyonlarda otomatik olarak ön ayar yapar. Ayrintılar için, bkz. Kullanım Kılavuzu.
- **PTY** (Yalnızca FM): Program türünü belirleyerek bir programı arar. Ayrintılar için, bkz. Kullanım Kılavuzu.
- **MONO** (Yalnızca FM): Mono alımı seçin.
- **LOS** (Yalnızca FM): Local Seek işlevini açar veya kapatır.

6 FM AM

Grubu değiştirir.

7 Gösterge Öğeleri

- **ST**: Bir stereo yayın alınıyor.
- **MONO**: Zorlanmış mono işlevi açıktır.
- **AF**: AF arama işlevi açıktır.
- **LOS**: Yerel Arama fonksiyonu açıktır.
- **RDS**: AF işlevi açıkken Radyo Veri Sistemi istasyonunun durumunu gösterir.
Beyaz: Radyo Veri Sistemi alınmaktadır.
Turuncu: Radyo Veri Sistemi alınmıyor.

- **TI:** Trafik bilgisinin alındı durumunu gösterir.
Beyaz: TP alınıyor.
Turuncu: TP alınmıyor.

Hafıza İşlemleri

Oto hafıza

İyi bir kapsama alanına sahip istasyonları hafızaya otomatik olarak kaydedebilirsiniz.

1 İstediğiniz bant tuşuna dokunun.



2 Ekranın sol tarafında bulunan öğesine dokunun. AME öğesine dokunun.



➤ Bir onay ekranı görüntülenir.

3 Yes öğesine dokunun. ➤ Oto hafıza başlar.

Manuel hafıza

Mevcut alıcı istasyonu hafızasında saklayabilirsiniz.

- 1 Belleğe kaydetmek istediğiniz istasyonu seçin.**
- 2 2 saniye boyunca istasyonu kaydetmek istediğiniz **FM# (#: 1-24)** veya **AM# (#: 1-12)** öğesine dokunun.**

Bluetooth Kontrolü

■ Cep telefonu ve Bluetooth ses çalar hakkında

Bu ünite aşağıdaki Bluetooth özelliklerine uygundur:

Sürüm

Bluetooth Ver. 4.1

Profil

Cep telefonu:

HFP (Eller Serbest Profili)

SPP (Seri Port Profili)

PBAP (Telefon Rehberi Erişim Profili)

Ses çalar:

A2DP (Gelişmiş Ses Yayılımı Profili)

AVRCP (Ses/Video Uzaktan Kumanda Profili)

Ses kod çözücü

SBC, AAC

NOT

- Bluetooth işlevini destekleyen birimler, Bluetooth SIG tarafından öngörülen yordamı izleyerek Bluetooth Standardına uygunluk belgesine sahiptir.
- Bununla birlikte, bu tür ünitelerin türüne bağlı olarak cep telefonunuzla iletişim kurması imkansız olabilir.

Bluetooth cihazından kayıt olma

Bluetooth işlevi kullanılmadan önce Bluetooth ses çalar veya cep telefonunu bu üniteye kaydetmek gereklidir.

1 Akıllı telefonunuzdaki/cep telefonunuzdaki Bluetooth işlevini açın.

2 Akıllı telefonunuzdan/cep telefonunuzdan ("KW-M***") ünitesini arayın.**

3 Görüntülenen mesajlara göre akıllı telefonunuzu/cep telefonunuzu çalıştırın.

■ Akıllı telefondaki/cep telefonundaki isteği onaylayın.



■ Bir PIN kodu gerekiyorsa PIN kodunu girin ("0000").

4 FNC düğmesine basın.

➤ İŞLEV ekranı görünür.

5 dokunun.



➤ KURULUM Menü ekranı görünür.

6 Bluetooth öğesine dokunun.




➤ Bluetooth KURULUM ekranı görüntülenir.

- 7** Bluetooth KURULUM ekranında Select Device seçeneğine dokunun.




- 8** Bağlanmak istediğiniz öğesine dokunun.

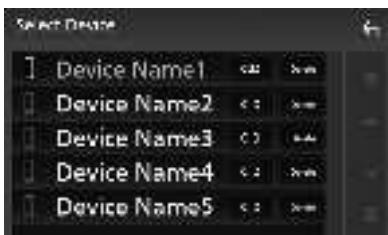**NOT**

- Simge yanarsa, ünite o cihazı kullanacak demektir.

Kayıtlı Bluetooth cihazını silmek için

- 1** dokunun.

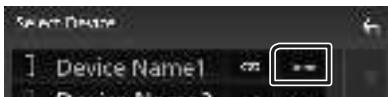

➤ Onay mesajı görüntülenir.

- 2** Yes öğesine dokunun.

Eller Serbest Ünitesini Kullanma

Telefon işlevini, Bluetooth telefonunu bu birime bağlayarak kullanabilirsiniz.

NOT

- Apple CarPlay veya Android Auto bağlanmaktadırken, Bluetooth Hands-Free işlevi kullanılamaz. Yalnızca Apple CarPlay veya Android Auto Hands-Free işlevi kullanılabilir.


■ Bir arama yapma

- 1** Phone/ öğesine dokunun.



➤ Eller Serbest ekranı görüntülenir.

- 2** Bir arama yöntemi seçin.

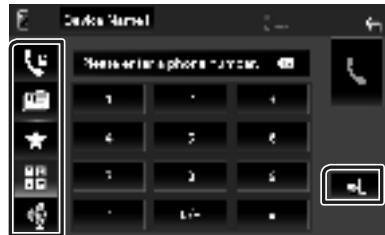

- : Arama kayıtlarını kullanarak arama
- : Telefon defterini kullanarak arama
- : Ön ayar numarasını kullanarak arama
- : Bir telefon numarası girerek arama
- : Ses Tanıma
- : Bluetooth KURULUMU

● Bluetooth KURULUMU

- 1) dokunun.

Bluetooth KURULUM ekranı görüntülenir.

NOT

- Görüntülenen pil ve anten gibi durum simgeleri, cep telefonunda gösterilenlerden farklı olabilir.
- Cep telefonunu özel modda ayarlamak, ahizesiz kullanım işlevini devre dışı bırakabilir.

Arama kayıtlarını kullanarak arama

- 1  dokunun.
- 2 Listeden telefon numarasını seçin.



Bir telefon numarası girerek arama

- 1  dokunun.
- 2 Sayı tuşlarıyla bir telefon numarası girin.



- 3  dokunun.


Ön ayar numarasını kullanarak arama

- 1  öğesine dokunun.
- 2 İsim veya telefon numarasına dokunun.




Telefon defterini kullanarak arama

- 1  öğesine dokunun.
- 2 Listeden aramak istediğiniz kişiyi seçin.

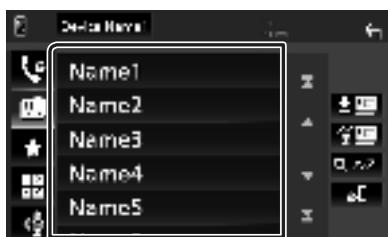

- 3 Listeden telefon numarasını seçin.

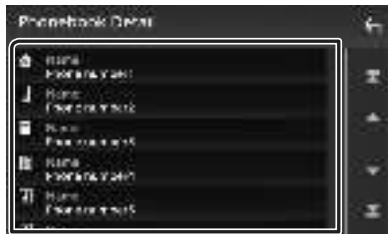

NOT

- Hiçbir Telefon Defteri indirilmediyse, **Download Phonebook Now** öğesine dokunmak Telefon Defteri'nin indirilmesini başlatır.

■ Arama alınması

- 1** Bir telefon aramasını cevaplamak için  ögesine veya gelen aramayı reddetmek için  ögesine dokunun.




NOT

- Görüşme kamerasını izlerken, bir arama gelir dahi olsa bu ekran görüntülenmez. Bu ekranı görüntülemek için, aracın vites topuzunu sürücü konumuna geri döndürün.

Aramayı sonlandırmak

- 1** Konuşurken  ögesine dokunun.

■ Bir arama sırasında işlemler

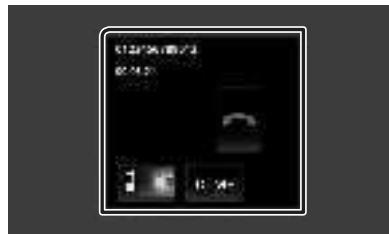

● Alıcı ses seviyesini ayarlayın

— veya + düğmesine basın.



● Çevir sesi çıkışı

Ton giriş ekrانını görüntülemek için **DTMF** seçeneğine dokunun.

Ekrandaki istediğiniz tuşlara dokunarak sesler gönderebilirsiniz.

● Konuşan ses çıkışını değiştirme

Her seferinde  /  seçenekine dokunmak konuşma ses çıktısını cep telefonu ve hoparlör arasında değiştirir.

● Görüşme beklemeye

Başa bir çağrıda konuşurken bir çağrı aldığınızda,  düğmesine dokunarak yeni gelen çağrıyı cevaplayabilirsiniz. Mevcut çağrı beklemeye.

 ögesine her dokundığınızda, arayan kişi değişecektir.

 seçeneğine dokundığınızda, geçerli çağrı sona erecek ve bekletilen çağrıya geçilecektir.


Ses Kontrolü

Ses dengesi ya da subwoofer seviyesi gibi çeşitli ayarları yapabilirsiniz.

1 FNC düğmesine basın.

► İŞLEV ekranı görünür.

2  ögesine dokunun.

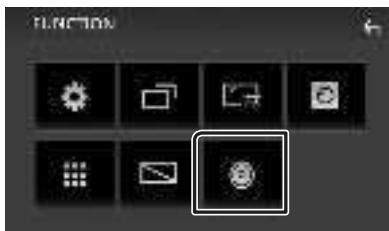

■ Genel Sesin Denetimi

1 FNC düğmesine basın.

► İŞLEV ekranı görünür.


2  ögesine dokunun.

► Ses ekranı görüntülenir.

3 Fader / Balance ögesine dokunun.



4 Her maddeyi aşağıdaki gibi ayarlayın.

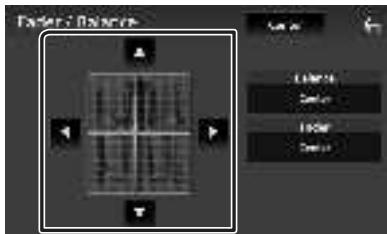

■ Fader / Balance

Dokunulan alanın etrafındaki ses seviyesini ayarlayın.

◀ ve ▶ sağ ve sol ses düzeyi dengesini ayarlar.

▲ ve ▼ ön ve arka ses düzeyi dengesini ayarlar.

■ Center

Ayarlama silin.

■ Ekolayzer Kontrolü

Ekolayzeri, her kategori için en iyileştirilmiş ayarı seçenek ayarlayabilirsiniz.

1 FNC düğmesine basın.

- İŞLEV ekranı görünür.


2 ögesine dokunun.

- Ses ekranı görüntülenir.

3 Equalizer ögesine dokunun.



4 Ekrana dokunun ve Grafik Ekolayzer'i istediğiniz gibi ayarlayın.

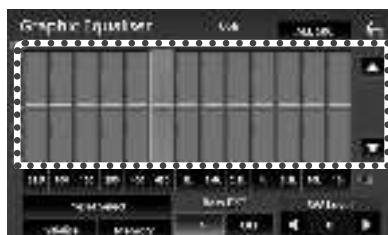

■ ALL SRC

Tüm kaynaklara ayarlanmış ekolayzer uygulayın. Onay ekranında **ALL SRC** ögesine ve ardından **OK** ögesine dokunun.

■ Artım seviyesi (noktalı çerçeve alanı)

Artım seviyesini, her frekans çubuğuna dokunarak ayarlayın.

Frekans çubuğuunu seçebilir ve seviyesini ▲, ▼ kadar ayarlayabilirsiniz.

■ Preset Select

Önceden ayarlanmış ekolayzer eğrisini çağırmak için ekranı görüntüler.

■ Initialize

Geçerli EQ eğrisi yataya döner.

■ Memory

Ayarlanan ekolayzer eğrisini "User1" ögesinden "User3" ögesine kaydeder.

■ Bass EXT (Bas Genişletme Ayarları)

Açıldığında, 62,5 Hz'den düşük frekans 62,5 Hz ile aynı artım seviyesine ayarlanır.

■ SW Level

Subwoofer ses seviyesini ayarlar.

Bağlantı/Kurulum

Kurulumdan Önce

Üniteyi kurmadan önce lütfen aşağıdaki önlemleri alın.

⚠️ UYARILAR

- Kontak kablosunu (kirmizi) ve akü kablosunu (sari) otomobilin şasisine (topraklama) bağlarsanız, kısa devreye sebep olabilirsiniz ve bu da yanına sebep olabilir. Bu kabloları güç kaynağına her zaman sigorta kutusu üzerinden bağlayın.
- Kontak kablosu (kirmizi) ile akü kablosu (sari) hattından sigortayı çıkarmayın. Güç kaynağı kablolarla sigorta üzerinden bağlanmalıdır.

⚠️ DİKKAT


- Bu üniteyi aracınızın konsoluna takın. Birimin kullanımı sırasında veya kısa bir süre sonra bu birimin metal parçasına dokunmayın. İsı alıcı ve muhafaza gibi metal parçalar isnır.

NOT

- Bu ürünün montajı ve kablo hattının çekilmesi beceri ve tecrübe gerektirir. En güvenli uygulama için, montaj ve kablo bağlantısı işini uzman kişilere yaptırın.
- Birimi negatif 12V DC güç kaynağına topraklılığınızdan emin olun.
- Üniteyi doğrudan güneş ışığına maruz kalacak bir yere, aşırı sıcak veya nemli ortamlara kurmayın. Fazla toz içeren veya su sıçrama ihtimali bulunan yerlerden de kaçın.
- Kendi vidalarınızı kullanmayın. Yalnızca ürünü birlitke verilen vidaları kullanın. Yanlış vidaları kullanmanız durumunda birime zarar verebilirisiniz.
- Güç açık değilse ("Hoparlör kablolamasında bir hata var. Lütfen bağlantıları kontrol edin." Mesajı görüntülenen), hoparlör kablosunun kısa devresi olabilir veya aracın şasisine dokunmuş ve koruma fonksiyonu devreye girmiş olabilir. Dolayısıyla, hoparlör kablosunun kontrol edilmesi gereklidir.
- Eğer otomobilinizin kontağı ACC konumuna sahip değilse, kontak anahtarıyla birlitke açılıp kapanabilmesi için kontak kablolarını güç kaynağına bağlayın. Kontak kablosunu, güç





kaynağına akü kabloları gibi sürekli elektrik çekercegi şekilde bağlarsanız, akü bitebilir.

- Konsolun bir kapağı varsa, üniteyi, kapatma ve açma sırasında ön panelin kapağı çarpmamasını sağlamaya dikkat edin.
- Sigorta patlarsa, önce kısa devreye neden olacak tellerin temas etmediğinden emin olun, daha sonra eski sigortayı aynı voltaja sahip sigortaya değiştirin.
- Bağlanmayan kabloları vinil bant veya benzer bir malzeme ile yalınır. Kısa devre olmasını önlemek için bağlanmamış kablo veya terminalllerin uçlarında bulunan kapakları çıkarmayın.
- Hoparlör kablolarını kendisine karşılık gelen doğru terminallere bağlayın. \ominus kablolarını birden fazla birimle paylaşır veya kabloları otomobilin içindeki metal kısımlarla topraklama yaptırsanız, birim zarar görebilir ve çalışmaya bilir.
- Sistemde yalnızca iki hoparlör bağlılığında, konektörleri hem ön çıkış terminalllerine hem de arka çıkış terminalllerine bağlayın (ön ve arka bölmeyi karıştırmayın). Örneğin, sol hoparlörün \oplus konektörünü ön çıkış terminaline bağlılığınızda, \ominus konektörünü arka çıkış terminaline bağlamayın.
- Ünite takıldıktan sonra, fren lambalarının, sinyallerin, sileceklerin, vb. düzgün bir şekilde çalışıp çalışmadığını kontrol edin.
- Üniteyi araca monte ederken panel yüzeyine sertçe bastırmayın. Aksi takdirde yara izi, hasar veya ariza meydana gelebilir.
- Bluetooth anten yakınında metal nesneler varsa alım alçalabilir.

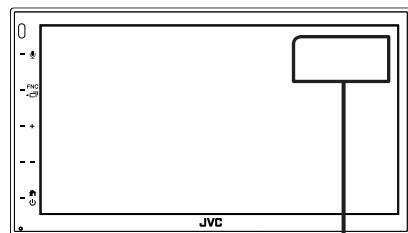

Bluetooth anten birimi

Kurulum için verilen aksesuarlar

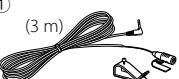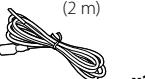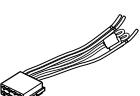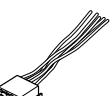 ① (3 m) x1	 ② x1
 ③ (2 m) x1	 ④ x1
 (M5 × 6 mm) x6	 (M5 × 8 mm) x6
 x1	 x1

Kurulum prosedürü


- 1) Kısa devreyi önlemek için, anahtarı kontaktan çıkarın ve akünün \ominus terminali bağlantısını çıkarın.
- 2) Her birim için doğru giriş ve çıkış kablosu bağlantıları yapın.
- 3) Kabloyu kablo demetine bağlayın.
- 4) Kablo demetindeki Konektör B'yi (aksesuar ⑧) alın ve aracınızdaki hoparlör konektörüne bağlayın.
- 5) Kablo demetindeki Konektör A'yi (aksesuar ⑦) alın ve aracınızdaki harici güç konektörüne bağlayın.
- 6) Kablolama seti konektörünü birime takın.
- 7) Üniteyi aracınıza monte edin.
- 8) \ominus akü kutup başını bağlayın.
- 9) Sıfırlama düğmesine basın.

Birimin kurulumu

NOT


- Ünenin yerine sağlam bir şekilde kurulduğundan emin olun. Eğer ünite sabit değilse, arızalı çalışabilir (örn, ses tekleyebilir).

■ Japon arabaları

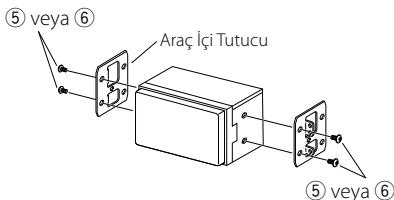


■ Düzeltme plakası

- Aksesuarı ② üniteye takın.

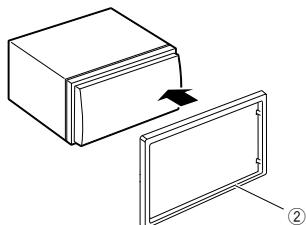

■ Mikrofon birimi

- Mikrofonun aksesuarı ①) kurulum konumunu kontrol edin.
- Montaj yüzeyini temizleyin.
- Mikrofon (aksesuar ①) ayırıcıyı çıkarın ve mikrofona aşağıda gösterilen yere yapıştırın.
- Mikrofon kablosunu, kaset veya başka istenen yöntemi kullanarak çeşitli konumlarda sabitlenmiş olarak birime bağlayın.
- Mikrofonun (aksesuar ①) yönünü sürücüye göre ayarlayın.

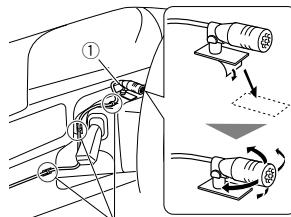

Ticari bir bant parçası olan bir kabloyu düzeltin.


NOT

- Gerekirse klipsleri değiştirin.




■ Trim plakasını sökme

- 1) Dört tırnağı (ikisi sol tarafta, ikisi sağ tarafta) kaldırırmak için, çıkışma anahtarlarını (aksesuar ④) kullanın.

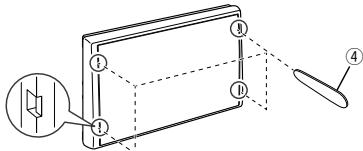


- 2) Düzeltme plakasını öne doğru çekin.

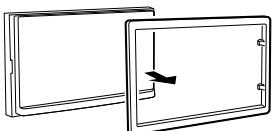

Kabloları terminallere bağlama

Açık Mavi/Sarı (Direksiyon uzaktan kumandası kablosu yönlendirme)


Direksiyon uzaktan kumandasına
Direksiyon uzaktan kumanda özelliğini kullanmak
için, arabanızla eşleşen özel bir uzaktan
bağdaştırıcıya (üründe verilmeyen) ihtiyacınız vardır.

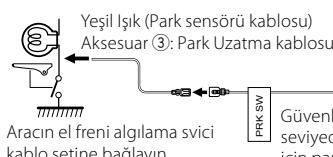

Aracın el freni algılama svici
kablo setine bağlayın.
Güvenliği en üst
seviyede tutmak
için park sensörünü
bağladığınızdan emin
olun.

Mor/Beyaz (Arka sensör
kablosu)

İsteğe bağlı arka görüş
kamerasını kullanırken
aracın ters kemerini
grubuna bağlayın.

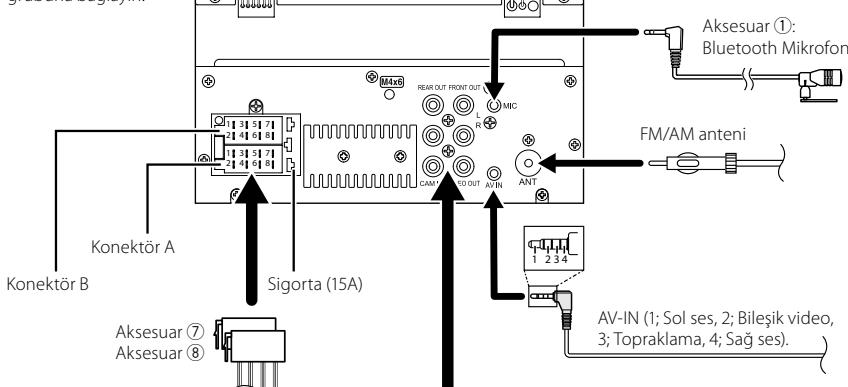

[1] USB maksimum güç kaynağı akımı :


DC 5 V \equiv 1,5 A

[2] Ayrı satılır

Aracın uzaktan kumanda setine bağlayın. Ayrintılar
için JVC satıcınızla iletişime geçin.

ST REMOTE INPUT 1	Parlak Yeşil/Kırmızı
ST REMOTE INPUT 2	Mor/Kırmızı
ST REMOTE GND	Gri/Kırmızı

USB terminali^[1] (1,0 m)

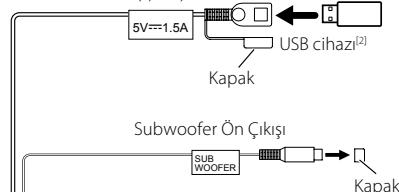

Subwoofer Ön Çıkışı

Kapak




Ara Ses Ön Çıkışı
(Sol; Beyaz, Sağ; Kırmızı)

Ön Ses Ön Çıkışı
(Sol; Beyaz, Sağ; Kırmızı)

Görsel Çıkışı (Sarı)

Arka görüş kamerası girişi (Sarı)

Bir iPhone/Android Bağlama

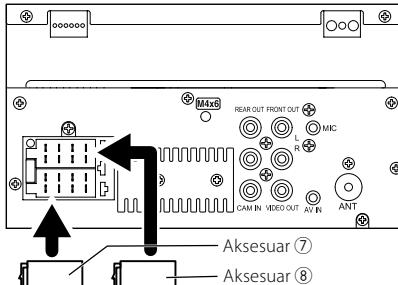

Mavi
(Güç kontrolü/ Anten kontrol kablosu)

İsteğe bağlı güç amplifikatörünü kullanırken ya güç kontrol terminaline ya da film tipi veya kısa kutuplu tip antenin sinyal güçlendirici amplifikatörünün güç terminaline bağlayın. (Maks. 150mA, 12V)

Turuncu/Beyaz (Karartıcı kontrol kablosu)

Araç lambası kumanda düğmesine



Kırmızı (Kontak kablosu)


Sarı (Akü kablosu)

Kontak anahtarı

Siyah (Topraklama kablosu) (Araç şasisine)



Pil

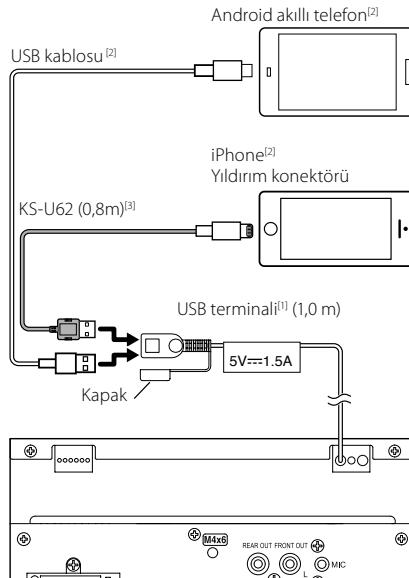

^[1] iPhone maksimum güç kaynağı akımı : DC 5 V --- 1,5 A

^[2] Ayri satılır

^[3] İsteğe bağlı aksesuar

Ek

Özellikler

■ Bluetooth bölümü

Frekans : 2,402 – 2,480 GHz

RF Çıkış Gücü (E.I.R.P) : +8 dBm (Ort.), Güç Sınıfı 1

■ Genel

Çalışma Voltajı : 12 V DC Araba Aküsü

Hoparlör empedansı : 4 – 8 Ω

**Özellikler, bildirimde bulunulmaksızın
değiştirilebilir.**

Bu Birim hakkında

■ Telif Hakları

- Bluetooth® markası ve logoları Bluetooth SIG, Inc.'e ait tescilli ticari markalarıdır ve bu markaların JVCKENWOOD Corporation tarafından herhangi bir şekilde kullanılması lisansı bağıldır. Diğer ticari markalar ve ticari adlar kendi sahiplerine aittir.
- Windows Media is a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.
- This product is protected by certain intellectual property rights of Microsoft. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft.
- Use of the Made for Apple badge means that an accessory has been designed to connect specifically to the Apple product(s) identified in the badge, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with an Apple product may affect wireless performance.
- Apple, iPhone and Lightning are trademarks of Apple Inc., registered in the U.S. and other countries.
- Apple, Siri, Apple CarPlay and Apple CarPlay logo are trademarks of Apple Inc., registered in the U.S. and other countries.
- App Store is a service mark of Apple Inc., registered in the U.S. and other countries.
- IOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.
- Google, Android, Google Play and Android Auto are trademarks of Google LLC.
- To use Android Auto on your car display, you'll need an Android Auto compatible vehicle or aftermarket stereo, an Android phone running Android 5.0 or higher, and the Android Auto app.
- Linux® is the registered trademark of Linus Torvalds in the U.S. and other countries.
- THIS PRODUCT IS LICENSED UNDER THE AVC PATENT PORTFOLIO LICENSE FOR THE PERSONAL USE OF A CONSUMER OR OTHER USES IN WHICH IT DOES NOT RECEIVE REMUNERATION TO (i)ENCODE VIDEO IN COMPLIANCE WITH THE AVC STANDARD ("AVC VIDEO") AND/OR (ii)DECODE AVC VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL ACTIVITY AND/ OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE AVC VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION MAY BE OBTAINED FROM MPEG LA, LLC. SEE [HTTP://WWW.MPEGLA.COM](http://WWW.MPEGLA.COM)
- THIS PRODUCT IS LICENSED UNDER THE MPEG-4 VISUAL PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER FOR

(i) ENCODING VIDEO IN COMPLIANCE WITH THE MPEG-4 VISUAL STANDARD ("MPEG-4 VIDEO") AND/ OR (ii) DECODING MPEG-4 VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NON-COMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED BY MPEG LA TO PROVIDE MPEG-4 VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION INCLUDING THAT RELATING TO PROMOTIONAL, INTERNAL AND COMMERCIAL USES AND LICENSING MAY BE OBTAINED FROM MPEG LA, LLC. SEE [HTTP://WWW.MPEGLA.COM](http://WWW.MPEGLA.COM).

• THIS PRODUCT IS LICENSED UNDER THE VC-1 PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER TO (i) ENCODE VIDEO IN COMPLIANCE WITH THE VC-1 STANDARD ("VC-1 VIDEO") AND/OR (ii) DECODE VC-1 VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NON-COMMERCIAL ACTIVITY AND/ OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE VC-1 VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION MAY BE OBTAINED FROM MPEG LA, LLC. SEE [HTTP://WWW.MPEGLA.COM](http://WWW.MPEGLA.COM)

- libFLAC

Copyright (C) 2000,2001,2002,2003,2004,2005,2006,2007,2008,2009 Josh Coalson

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- Neither the name of the Xiph.org Foundation nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE FOUNDATION OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

- libvorbis

Copyright (c) 2002-2008 Xiph.org Foundation
Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- Neither the name of the Xiph.org Foundation nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE FOUNDATION OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

- libogg

Copyright (c) 2002, Xiph.org Foundation Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- Neither the name of the Xiph.org Foundation nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE FOUNDATION OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

สารบัญ

ก่อการใช้งาน.....	56
เกี่ยวกับคู่มือเริ่มต้นใช้งานฉบับที่๑.....	56
วิธีการอ่านคู่มือเล่มนี้.....	56
ข้อควรระวัง.....	57
การใช้งานพื้นฐาน	58
ฟังชั่นของปุ่มต่างๆ ที่เพ่งด้านหน้า.....	58
การปิดเครื่อง	58
การรีเซ็ตใช้งาน.....	59
การปรับระดับเสียง.....	60
การใช้งานหน้าจอสัมผัส.....	60
ค่าอิฐนาฬิกา HOME (หน้าหลัก).....	61
ระบบอิทธิพลจากการเลือกแหล่งเสียงภายใน.....	61
ระบบอิทธิพลหน้าจอความถี่แหล่งเสียงภายใน.....	63
หน้าจอ FUNCTION	64
หน้างานของการ.....	64
USB.....	65
การเชื่อมต่ออุปกรณ์ USB	65
การใช้งานพื้นฐานสำหรับ USB	65
วิทยุ	66
การใช้งานพื้นฐานสำหรับวิทยุ	66
การใช้หน่วยความจำ	67
การควบคุม Bluetooth	68
ลงทะเบียนจากบลูทูธ.....	68
การใช้เครื่องเสียงที่มี.....	69
การควบคุมเสียง.....	72
การซื้อต่อ/การติดตั้ง.....	74
ก่อนการติดตั้ง	74
การติดตั้งเครื่อง	76
ภาคผนวก	80
ข้อมูลจำเพาะ	80
เกี่ยวกับเครื่องนี้	80

ก่อการใช้งาน

เกี่ยวกับคู่มือเริ่มต้นใช้งานฉบับย่อ

คู่มือเริ่มต้นใช้งานฉบับย่อนี้อธิบายฟังก์ชันพื้นฐานของเครื่องนี้ สำหรับการใช้งานและข้อมูลโดยละเอียด โปรดอุดมคุณภาพการใช้งานบนเว็บไซต์ดังไปนี้:

<<https://www.jvc.net/cs/car/>>



คู่มือการใช้งานอาจมีการเปลี่ยนแปลงเพื่อแก้ไขข้อมูลจำเพาะและอื่นๆ

อย่าลืมดาวน์โหลดคู่มือการใช้งานฉบับล่าสุดเพื่อข้อสงวนผล

วิธีการอ่านคู่มือเล่มนี้

- หน้าจอและแผงต่างๆ ที่แสดงไว้ในคู่มือฉบับนี้เป็นตัวอย่างที่ใช้ในการทำงานไม่ใช้เด่น
- คำหยาดคุณนี้ จึงอาจแตกต่างจากหน้าจอหรือแผงที่ใช้งานจริง หรือรูปแบบ การแสดงผลบางอย่างจะแตกต่างกัน
- ภายนอกการทดสอบ: ให้การอธิบายที่อธิบายการใช้งานคุณสามารถอ่านได้จากเมนู **SETUP** คู่มือการใช้งาน

ข้อควรระวัง

▲ คำเตือน

■ เพื่อป้องกันการบาดเจ็บหรือไฟไหม้ ให้ปฏิบัติตาม ข้อควรระวังดังไปนี้:

- เพื่อป้องกันกระแสไฟฟ้าลัดวงจร ห้ามถอดเครื่องเสียงออกที่เป็นไฟฟ้า ได้แก่ (ชั้น เครื่องขยาย หรือเครื่องเสียงที่เป็นไฟฟ้า) ไว้ด้านในเครื่อง
- ห้ามดูวีดีโอมpeg มีไฟส่องบนหน้าจอของเครื่องเมื่อคุณกำลังบันดาลเงิน ระยะทางความยาว
- หากคุณประสนบัญชาให้ฯ ในระหว่างการพัฒนา ให้บริโภคผู้รับชม ทางหน้าจอ JVC ของจุฬา

■ ข้อควรระวังในการใช้เครื่องรีโมท

- เมื่อคุณซื้ออุปกรณ์เครื่อง ให้ตรวจสอบข้อมูลที่แนบมาด้วย JVC ของคุณ เพื่อให้แน่ใจว่าอุปกรณ์นั้นถูกต้องตามมาตรฐานที่ได้ กันไว้ ของคุณและสามารถใช้งานในพื้นที่ของคุณได้
- คุณสามารถเลือกภาษาในการแสดงเมนู แท็บไฟฟ้า เช่น acula คุ คุณสามารถเลือกภาษา
- ระบบข้อมูลทางวิทยุ (Radio Data System) หรืออุปกรณ์ดิจิตอล ระบบ Radio Broadcast Data System จะไม่ทำงานเมื่อไม่มีสถานี กระจายสัญญาณรับสัญญาณดังกล่าว

■ การป้องกันหน้าจอ

- เพื่อป้องกันไม่ให้อาชญากรรม ห้ามปิดอัลตร้าฟาร์มาติกล้องหรือ เครื่องมือที่คล้ายคลึงกันที่มีป้ำาเสียง

■ การทำความสะอาดเครื่อง


- หากหน้าจอของเครื่องมีคราบ ให้เช็ดออกแล้วล้างด้วยน้ำ เช่น ผ้าเช็ดลิคอล หากหน้าจอของเครื่องมีคราบสกปรกมาก ให้เช็ดคราบออก ด้วยผ้าบีบหมาดที่ได้สารทำความสะอาดที่เป็นกลาง จากนั้นให้เช็ด อีกครั้งด้วยผ้ามุ่มเย็นและสะอาด

หมายเหตุ

- การใช้สารทำความสะอาดอีดี้ปีกิริ่ง ให้เช็ดออกแล้วล้างด้วยน้ำ เช่น ผ้าเช็ดลิคอล หากหน้าจอของเครื่องมีคราบสกปรกมาก ให้เช็ดคราบออก ด้วยผ้าบีบหมาดที่ได้สารทำความสะอาดที่เป็นกลาง จากนั้นให้เช็ด อีกครั้งด้วยผ้ามุ่มเย็นและสะอาด

■ วิธีเช็คเครื่องของคุณ


หากเครื่องหรือเครื่องใดๆ ที่อยู่ในต่อไม่สามารถทำงานได้อ่านดูดู ดัง ให้เช็คเครื่องที่ 1 กดปุ่ม <Reset> เครื่องจะกลับสู่การตั้ง ค่าทางโรงงาน

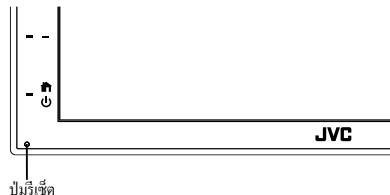

ปุ่มรีเซ็ต

การใช้งานพื้นฐาน

ฟังก์ชันของปุ่มด้านหน้า

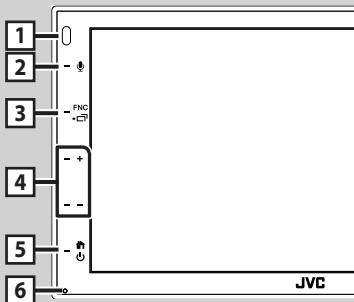

หมายเหตุ

- แผงด้านหน้าที่แสดงในส่วนนี้เป็นตัวอย่างที่ใช้ในรถยนต์ JVC ดังนั้น คำอธิบายนี้จึงอาจแตกต่างจากแผงที่ใช้งานจริง

การเปิดเครื่อง

วิธีการเปิดเครื่องจะแตกต่างกันไปในแต่ละรุ่น

1 กดปุ่ม



▶ เครื่องยุกปิด

● การปิดเครื่อง:

1 กดปุ่ม ตั้งไว้ 1 วินาที

หมายเหตุ

- หากต้องการปิดเครื่องโดยการติดตั้ง จำเป็นต้องดำเนินการตั้งค่าเบื้องต้น (หน้า 59)

	ชื่อ	รายละเอียด
1	ไมโครโฟน	<ul style="list-style-type: none"> การคั่นนินภัย รับเสียงภายนอก
2		<ul style="list-style-type: none"> แสดงหน้าจอการตั้งค่าเสียง
3	FNC / ☰	<ul style="list-style-type: none"> แสดงหน้าจอ FUNCTION ระบบแสดงหน้าจอ APP (Apple CarPlay/Android Auto) เมื่อตั้งค่าไว้ 1 วินาที
4	+ -	<ul style="list-style-type: none"> (เพลย์/หยุด) ปรับระดับเสียง เสียงจะดังจนถึงระดับ 15 เมื่อคุณกด + ถ้าไม่
5	/	<ul style="list-style-type: none"> Displays the HOME screen (หน้า 61). การตั้งค่าไว้ 1 วินาทีจะเป็นการปิดเครื่อง เมื่อปิดเครื่อง ให้ปิดใหม้อีกครั้ง
6	ตั้งค่า	<ul style="list-style-type: none"> หากเครื่องหรือเครื่องที่ซื้อมามีความสามารถทำงานได้อย่างถูกต้อง เครื่องจะกลับสู่การตั้งค่าเริ่มต้นเมื่อคุณปุ่มนี้

การเริ่มต้นใช้งาน

การตั้งค่าเริ่มต้น

การดำเนินการ เช่นนี้ให้กับมืออุปกรณ์ท่องเที่ยวนี้เป็นครั้งแรก

1 ตั้งค่าเบื้องต้นและการตั้งต่อไปนี้



■ Language

เลือกภาษาที่ใช้สำหรับหน้าจอความคุณหน้าจอและ การตั้งค่ารายการ ค่าเริ่มต้นคือ “British English(en)”

① แตะ **Language**

② แตะ **Language Select**

③ เลือกภาษาที่ต้องการ

④ แตะ **←**

■ Clock

ปรับนาฬิกา

สำหรับรายละเอียดในการใช้งานคุณค่า **ปฏิกิริยานาฬิกา (หน้าจอ)**

■ Display

ตั้งค่าภาพบนหน้าจอ

① แตะ **Display**

② แตะที่ **Background**

③ เลือกภาพ

④ แตะ **←**

คุณสามารถดูรายละเอียดการใช้งานได้ในส่วนของการใช้งาน

■ Camera

กำหนดค่าพารามิเตอร์สำหรับกล้อง

① แตะ **Camera**

② ตั้งค่าเดิมร่างการเดิม เช่น **←**

คุณจะสามารถใช้งานได้ในส่วนของการใช้งาน

■ DEMO

ตั้งค่าใหม่ตามค่าเดิม ค่าเริ่มต้นอยู่ที่ “ON”

① แตะที่ **DEMO** และตั้งค่าเป็น ON หรือ OFF

2 แตะ **Finish**



หมายเหตุ


- การตั้งค่าเหล่านี้สามารถกำหนดได้จากเมนู SETUP

ค่าปฏิกิริยานาฬิกา

1 กดปุ่ม **FNC**

▶ หน้าจอ FUNCTION จะปรากฏขึ้น

2 แตะที่ **⚙**

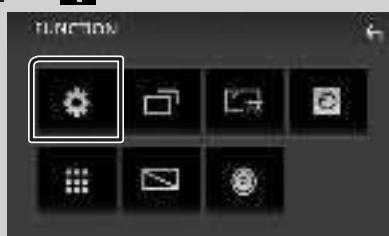

▶ หน้าจอเมนู SETUP (การตั้งค่า) จะปรากฏขึ้น

3 แดช User Interface



▶ หน้าจอ User Interface (ด้านเดียวต่อ กับผู้ใช้) จะปรากฏขึ้น

4 แดชที่ Clock Adjust



5 ปรับวันที่ จាតันที่ให้ปรับเวลา



6 แดช Set

หมายเหตุ

- ปั๊มใช้งาน **RDS CT** ก่อนที่จะปรับนาฬิกา คุณมีการใช้งาน

การปรับระดับเสียง

ปรับระดับเสียง (0 ถึง 40),

กด + เพื่อเพิ่ม และกด - เพื่อลด

กด + ค้างไว้เพื่อเพิ่มระดับเสียงต่อเนื่องไปจนถึงระดับ 15




การใช้งานหน้าจอสัมผัส

ดำเนินการจากหน้าจอโดยคุณจะต้องกดสัมผัส กดถ่าง คลัคหรือ การคลิ๊กเพื่อดึงรายการ แสดงหน้าจอเมนูค่าปรับตั้ง หรือเปลี่ยน หน้าเอกสารฯลฯ


● กดเลือก

กดเลือกหน้าจออย่างมีมือเท่านั้นเพื่อเลือก รายการบนหน้าจอ

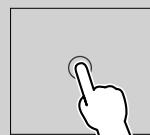


● กดถ่าง

กดที่หน้าจอถ่างไว้แล้วกวาดออกและผลจะ เป็นไปตามที่คุณต้องการ

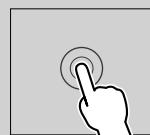


● คลัคหน้า

เลื่อนนิ้วไปทางซ้ายหรือขวาที่หน้าจอ อย่างรวดเร็วเพื่อเปลี่ยนหน้า คุณสามารถเลื่อนหน้าจอรายการได้ด้วย การคลัคหน้าจออีกหนึ่งครั้ง

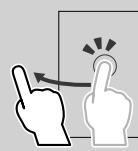

● คลิ๊กค้างไว้


เลื่อนนิ้วเข้ามายังหน้าจอเพื่อปล่อยการหน้าจอ

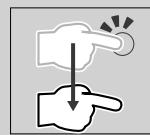

การควบคุมการสัมผัสด้วยท่าทาง:

คุณสามารถควบคุมการเล่นโดยคลื่อนไหวหัวของโน๊บบันแพลทฟอร์มที่ได้ดังนี้ (สำหรับแท็บล็อกสัญญาณบานหนึ่ง ใช้การสั่งงานด้วยการเคลื่อนไหวไม่ได้)

- การเลื่อนนิ่วหัวเข้า/ออก:
 - ปุ่มที่ชั้นหนึ่งมีกับการกด **[+]** / **[-]** (ต่อ) ในหน้าจอควบคุม USB
 - สำหรับเครื่องรับวิทยุ สถานีที่จะจราจรเดินทางวิทยุที่กำหนดไปไว้ล่วงหน้า (Tuner Preset) จะถูกยกเลิก
- การเลื่อนนิ่วหัวไปทางซ้าย/ทางขวา: ทำงานเหมือนกับการกด **[◀◀] / [▶▶]**
- การเลื่อนนิ่วหัวของคุณตามเข็มนาฬิกาหรือทางเข็มทิศ: เพิ่ม/ลดเสียง

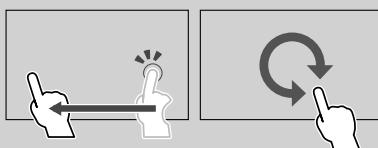

คำอธิบายหน้าจอ HOME (หน้าหลัก)

ฟังก์ชันต่างๆในใหญ่สามารถใช้งานได้จากหน้าจอ HOME (หน้าหลัก)



1	• ไอคอนการสั่งของแท็บล็อกการเล่น (หน้า 62)
2	• ข้อมูลแหล่งสัญญาณปัจจุบัน
3	• แสดงไฟแสดงหน้าจอควบคุมแหล่งสัญญาณปัจจุบัน
4	• วิดีโอ
5	• แสดงหน้าจอการเลือกแหล่งสัญญาณ (หน้า 62)

แสดงหน้าจอ HOME

1 กดปุ่ม



▶ หน้าจอ HOME (หน้าหลัก) จะปรากฏขึ้น

รายละเอียดหน้าจอการเลือกแหล่งสัญญาณ

คุณสามารถแสดงแหล่งสัญญาณการเลือกเล่นทั้งหมดและดูแลอีกด้วย จากการนี้สามารถเลือกแหล่งสัญญาณ



- | | |
|----------|--|
| 1 | • เมื่อเลือกแหล่งสัญญาณการเล่น สำหรับแหล่งการเล่นต่อไปครุ การเลือกแหล่งสัญญาณ กองทัพ (หน้า 62) |
| 2 | • ข้อมูลที่ไปยังหน้าจอค่อนหน้า |
| 3 | • แสดงหน้าจอมenuการตั้งค่า |

การเลือกแหล่งสัญญาณการเล่น

1 แตะ บนหน้าจอหลัก

จากหน้าจอ คุณสามารถเลือกแหล่งสัญญาณและฟังก์ชันต่างๆ ได้

	<ul style="list-style-type: none"> เปลี่ยนไปใช้หน้าจอ Apple CarPlay จาก iPhone ที่เชื่อมต่ออยู่
	<ul style="list-style-type: none"> เปลี่ยนไปใช้หน้าจอ USB Mirroring จากสมาร์ทโฟน Android ที่เชื่อมต่ออยู่ จำเป็นต้องเชื่อมต่อสมาร์ทโฟน Android ด้วยแอปพลิเคชัน "Mirroring OA for JVC" ที่ติดตั้งไว้และตั้งค่า Mode เป็น Mirroring for Android™
	<ul style="list-style-type: none"> สลับไปใช้งานระบบเสียงวิทยุ (หน้า 66)
	<ul style="list-style-type: none"> แสดงหน้าจอ Hands Free (แนะนำที่ 69) เมื่อไม่ได้เชื่อมต่อ Apple CarPlay, Android Auto หรือโทรศัพท์ Bluetooth Hands-Free จะบันทึกและคงข้อความ "Disconnected" ขึ้นมาบนหน้าจอ TEL ขณะที่อุปกรณ์ที่เชื่อมต่อเป็น Apple CarPlay หรือ Android Auto สามารถใช้เป็นโทรศัพท์ใน Apple CarPlay หรือ Android Auto
	<ul style="list-style-type: none"> เปลี่ยนไปใช้หน้าจอ Android Auto จากสมาร์ทโฟน Android ที่เชื่อมต่ออยู่ จำเป็นต้องเชื่อมต่อสมาร์ทโฟน Android ที่รองรับ Android Auto และตั้งค่า Mode เป็น Android Auto
	<ul style="list-style-type: none"> เล่นเครื่องเล่นเสียง Bluetooth
	<ul style="list-style-type: none"> เล่นไฟล์บนอุปกรณ์ USB (หน้า 65)
	<ul style="list-style-type: none"> เปลี่ยนเป็นองค์ประกอบขนาดนอกที่เชื่อมต่อกับหัวจอดิจิตอล AV-IN
	<ul style="list-style-type: none"> ปิดแหล่งสัญญาณ AV (หน้า 62)

หากต้องการปิดแหล่งสัญญาณ AV

1 แตะ บนหน้าจอหลัก

2 แตะที่ **AV Off**



รายละเอียดหน้าจอความคุณภาพหล่อสัญญาณ

มีไฟกระพริบบอกว่าต้องสามารถทำงานจากหน้าจอส่วนใหญ่

สัญลักษณ์เบื้องหน้า



เมนูอื่น



1 TEL / โทร

ข้อมูลอุปกรณ์ Bluetooth ที่เชื่อมต่อ

2 โอดิโอ

แสดงแหล่งสัญญาณทั้งหมด

3 หน้าจอที่สอง

- : หน้าจอที่สองจะเปลี่ยนทุกครั้งที่คุณแตะ นอกจากนี้คุณยังสามารถเก็บไว้หน้าจอ Secondary (ที่สอง) ได้โดยกดวนไว้ไปทางซ้ายหรือขวาที่หน้าจอ

• สัญลักษณ์เบื้องหน้า: แสดงสภาพแวดล้อมสัญญาณปัจจุบันและอื่นๆ

- **MUTE**: เปิดใช้ฟังก์ชันปิดเสียง

- **LOUD**: เปิดใช้ฟังก์ชันควบคุมความดัง

• เมนูอื่น

- : การทำงานเพิ่มเติมที่โอดิโอ:

การเคลื่อนไหวของที่นั่ง และการเปลี่ยนที่นั่ง การเคลื่อนไหวของที่นั่ง ของเด็กว่าเดิน และการเคลื่อนไหวที่สามารถทำให้หัวเราะของหน้า ออกเสียงร่าเริงเป็นปกติ

- : แสดงหน้าจอการตั้งค่าโอดิโอ (หน้า 73)

- : แสดงหน้าจอแอป (Apple CarPlay/Android Auto)

4 คุณภาพ

แดชเพื่อแสดงหน้าจอ Hands Free (แซนด์ฟรี) (หน้า 69)

ขณะเชื่อมต่อเป็น Apple CarPlay หรือ Android Auto สามารถใช้เป็นโทรศัพท์ใน Apple CarPlay หรือ Android Auto

หน้าจอ FUNCTION

1 กดปุ่ม FNC



▶ หน้าจอ FUNCTION จะปรากฏขึ้น

2 แตะเพื่อแสดงหน้าจอ FUNCTION



เนื้อหาของเมนูเป็นดังด้านในนี้

	• แสดงหน้าจอเมนูการตั้งค่า
	• แสดงหน้าจอแอป (Apple CarPlay/Android Auto)
	• แสดงหน้าจอการปรับหน้าจอ
	• แสดงหน้าจอมองกล้อง
	• แสดงหน้าจอการเลือกแหล่งสัญญาณ (หน้า 62)
	• ปิดจอแสดงผล (หน้า 64)
	• แสดงหน้าจอของเสียง (หน้า 72)
	• ปิดหน้าจอ FUNCTION

ปิดหน้าจอ

1 เลือก บนหน้าจอ FUNCTION



● หากต้องการปิดหน้าจอ

1 ให้แตะที่จอยแสดงผล

หน้าจอรายการ

มีปุ่มฟังก์ชันที่ไปที่หน้าจอรายชื่อของเกล่องสัญญาณส่วนในใหญ่



1

แสดงหน้าจางการเดือกดูรายการ

2

แสดงรายการไฟล์เพลง/ภาพชนคร

3 เลื่อนข้อความ

เลื่อนข้อความที่แสดง

4 หน้า

ปุ่มนี้ใช้ฟังก์ชันหลักหากจะแสดงตรงนี้

- : เลื่อนแทร็กทั้งหมดในไฟล์เดียวที่มีแทร็กปัจจุบัน
- : เลื่อนไปปัจจุบันขึ้นที่ถูกกว่า

5 เลื่อนหน้า

คุณสามารถเลื่อนหน้าที่จะแสดงรายการเพิ่มเติมได้โดยการกด

- : แสดงค้างบนหน้าหรือค้างล่างของหน้าเอกสาร

6 ย้อนกลับ

ย้อนกลับไปปัจจุบันก่อนหน้า


หมายเหตุ

- จะไม่แสดงปุ่มที่ไม่สามารถใช้งานได้จากหน้าจอรายการ

USB

การเชื่อมต่ออุปกรณ์ USB

1 เชื่อมต่ออุปกรณ์ USB ด้วยสาย USB (หน้า 78)

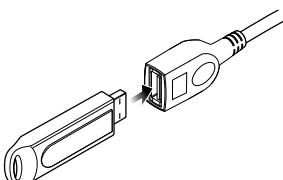

2 กดปุ่ม

3 แตะ

4 แตะ USB (หน้า 62)

หยุดการเชื่อมต่ออุปกรณ์ USB

1 กดปุ่ม

2 แตะ

3 แตะแหล่งสัญญาณอื่นนอกเหนือจาก USB

4 ลอกอุปกรณ์ USB ออก

อุปกรณ์ USB ที่สามารถใช้ได้

คุณสามารถใช้อุปกรณ์ที่มีคุณสมบัติที่เก็บข้อมูลขนาดใหญ่กับเครื่องนี้ได้

คำว่า "USB device" ที่ปรากฏขึ้นในสีม่วงนี้ หมายความถึงอุปกรณ์หน่วยความจำแฟลช

การใช้งานพื้นฐานสำหรับ USB

ฟังเพลงล่าวนิญญาสามารถควบคุมได้จากหน้าจอการควบคุมแหล่งสัญญาณและหน้าจอการเล่น

หน้าจอการควบคุม



1 /

- : เล่นแทร็คไฟล์เดียวบันช้า แต่ละครั้งที่คุณแตะปุ่มไฟล์เดียวจะเปลี่ยนไปตามลำดับต่อไปนี้; เล่นไฟล์ช้า () เล่นไฟล์เร็ว () เล่นช้าทึบ ()
- : เล่นแบบสูบๆบูกเบี้ยกในไฟล์เดียวปัจจุบัน แต่ละครั้งที่คุณแตะปุ่มไฟล์จะเปลี่ยนไปตามลำดับต่อไปนี้; สูบไฟล์ () ปิดการสูบ ()

2

แสดงข้อมูลของไฟล์ปัจจุบัน

3

ปุ่มใช้งาน

- : ทันทนาแทร็คไฟล์ คุณจะลดเสียงเดิมกับการคันทางไฟล์ที่อยู่มีการใช้งาน
- : ลับทางแทร็คไฟล์ ก่อนหน้าต่อไป แต่ถ้าที่ลับก่อนหน้าก็อกรอไปข้างหน้าก็อกรอไปข้างหลัง
- : เล่นหรือหยุดวัวครัว
- : แตะเพื่อปิดเสียงหรือเปิดเสียง

วิทยุ

การใช้งานพื้นฐานสำหรับวิทยุ


ฟังก์ชันส่วนใหญ่สามารถควบคุมได้จากหน้าจอควบคุมแหล่งสัญญาณ

หากต้องการเข้าสู่แหล่งสัญญาณวิทยุ ให้แตะที่ไอคอน **Tuner** ในหน้าจอการเลือกแหล่งสัญญาณ (ภาพที่ 62)

หน้าจอการควบคุม



เบอร์ลิสต์ชัก

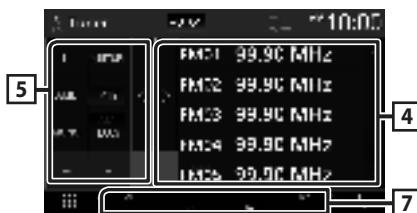

1 แสดงข้อมูล

แสดงข้อมูลของสถานีปัจจุบัน: ความถี่

การแตะที่ ช่วยให้คุณสามารถสลับระหว่างเนื้อหา ก และ เมื่อมา ฯ ได้

- เมื่อมา ก. ซึ่ง PS, ข้อความวิทยุ, ประเทก PTY
- เมื่อมา ฯ: ข้อความวิทยุที่มีเดิม ซึ่งคือเป็น

Preset#: หมายเลขอัตโนมัติที่ตั้งค่าไว้ล่วงหน้า

2 โหมดค้นหา

เปลี่ยนเป็นโหมดค้นหาตามลำดับต่อไปนี้: **AUTO1**, **AUTO2**, **MANUAL**

- **AUTO1**: ค้นหาสถานีที่มีสัญญาณรับค่าโดยอัตโนมัติ
- **AUTO2**: ค้นหาสถานีในหน่วยความจำที่คีลล์สถานี
- **MANUAL**: เปลี่ยนเป็นความถี่ค่าไปเป็นกำหนดเอง

3 ปุ่มใช้งาน

• : ค้นหาสถานี วิธีการเปลี่ยนความถี่สามารถเปลี่ยนแปลงได้ (คร 2 ในตาราง)

• : แตะเพื่อปิดเสียงหรือปิดเสียง

4 รายการบันทึกสำหรับหัวข้อ

• แตะที่ด้านขวาของหน้าจอเพื่อแสดงรายการบันทึกสำหรับหน้า แดชอิคิวร์รี่เพื่อวิเคราะห์

• เรียกเก็บสถานีที่บันทึกไว้

• เมื่อเดือน 2 วินาที จะเก็บสถานีที่กำลังรับคลื่นในปัจจุบันไว้ในหน่วยความถี่

5 แผงฟังก์ชัน

แตะที่ด้านซ้ายของหน้าจอเพื่อแสดงแผงฟังก์ชัน แดชอิคิวร์รี่เพื่อปิดแผงฟังก์ชัน

• **TI** (FM แท่นนั้น): กำหนดให้มคชื่อช่องรายการไว้ที่ปิด โปรดคุ้ยวะ ละเรื่องด้านในว่าอีกครั้ง

• **SETUP** (FM แท่นนั้น): แสดงหน้าจอ Tuner SETUP (การตั้งค่าวิทยุ) โปรดคุ้ยวะละเอียดในครั้นของการใช้งาน

• **AME**: ล็อกสถานีล่วงหน้าโดยอัตโนมัติ โปรดคุ้ยวะละเอียดในครั้นของการใช้งาน

• **PTY** (FM แท่นนั้น): ค้นหาไปร่วมกับรายการค่าประเภท โปรดคุ้ยวะละเอียดในครั้นของการใช้งาน

• **MONO** (FM แท่นนั้น): เลือกการรับสัญญาณ Monaural

• **LO.S** (FM แท่นนั้น): เปิดหรือปิดฟังก์ชันการค้นหาในท้องถิ่น (Local Seek)

6 FM AM

เปลี่ยนเข้ามาความถี่

7 รายการสัญญาณปัจจุบัน

• **ST**: ค่าล็อกเข้ามายังระบบเสียงแบบเดียว

• **MONO**: เปิดฟังก์ชัน Monoaural แบบบังคับใช้

• **AF**: เปิดฟังก์ชันห้าม AF

• **LOS**: เปิดฟังก์ชันการค้นหาในท้องถิ่น (Local Seek)

• **RDS**: ระบุสถานะของสถานีระบบข้อมูลทางวิทยุ (Radio Data System) เมื่อเปิดฟังก์ชัน AF

ตี湘: ค้างรับสัญญาณระบบข้อมูลทางวิทยุ (Radio Data System)

ตี湘: ไม่ได้ค้างรับสัญญาณระบบข้อมูลทางวิทยุ (Radio Data System)

• **TI**: ระบุสถานะการรับสัญญาณของข้อมูลทางวิทยุ

ตี湘: ค้างรับสัญญาณ TP

ตี湘: ไม่ได้ค้างรับสัญญาณ TP

การใช้หน่วยความจำ

หน่วยความจำแบบอัตโนมัติ

คุณสามารถบันทึกสถานีที่ทำการรับสัญญาณที่ดีไว้ในหน่วยความจำ โดยอัตโนมัติ

1 แนะนำการใช้งานความจำที่ต้องการ



2 แนะนำการใช้งานชุดของหน้าจอ และที่ AME



▶ หน้าจอการซื้นขั้นจะปรากฏขึ้น

3 แนะนำการใช้งาน

▶ หน่วยความจำอัตโนมัติเริ่มทำงาน

หน่วยความจำแบบกำหนดเอง

คุณสามารถเลือกสถานีที่คุณต้องการบันทึกไว้ในหน่วยความจำได้

1 เลือกสถานีที่คุณต้องการบันทึกไว้ในหน่วยความจำ

2 แตะที่ **FM#** (#: 1-24) หรือ **AM#** (#: 1-12) ที่คุณต้องการบันทึกสถานีค้างไว้ 2 วินาที

การควบคุม Bluetooth

█ เกี่ยวกับโทรศัพท์เคลื่อนที่และเครื่องเล่นเสียง Bluetooth

เกี่ยวกับโทรศัพท์เคลื่อนที่และเครื่องเล่นเสียง Bluetooth ดังต่อไปนี้:

เวอร์ชัน

Bluetooth เวอร์ชัน 4.1

โปรไฟล์

โทรศัพท์เคลื่อนที่:

HFP (Hands Free Profile หรือโปรไฟล์แบบแฮนด์ฟรี)

SPP (Serial Port Profile)

PBAP (Phonebook Access Profile)

เครื่องเล่นเสียง:

A2DP (Advanced Audio Distribution Profile)

AVRCP (โปรไฟล์การควบคุมเชิงวิศวกรรมไร้สาย)

รหัสเสียง

SBC, AAC

หมายเหตุ

- เครื่องที่รองรับ Bluetooth จะใช้วิธีการรับรองการท่า้งนสอดคล้องกับมาตรฐานของ Bluetooth ตามขั้นตอนที่ได้อธิบายไว้ด้วย Bluetooth SIG
- แต่ถ้าไม่สามารถ เครื่องตั้งค่าอาจต้องรีสตาร์ทโทรศัพท์ของคุณใหม่ ให้ลองซ่อนอยู่กับประเภทของเครื่อง

ลงทะเบียนจากอุปกรณ์ Bluetooth

เข้าเป็นต้องลงทะเบียนเครื่องเล่นเสียง Bluetooth หรือโทรศัพท์เคลื่อนที่ กับเครื่องเล่นที่จะใช้ฟังก์ชัน Bluetooth

1 เปิดฟังก์ชัน Bluetooth บนสมาร์ทโฟน/โทรศัพท์เคลื่อนที่ของคุณ

2 ค้นหาเครื่อง ("KW-M*****") จากสมาร์ทโฟน/โทรศัพท์เคลื่อนที่ของคุณ

3 ใช้สมาร์ทโฟน/โทรศัพท์เคลื่อนที่ของคุณตามขั้นตอนที่แสดงดังนี้

█ ขั้นตอนการรับรองบนสมาร์ทโฟน/โทรศัพท์เคลื่อนที่



█ หากจำเป็นต้องใช้รหัส PIN ให้ป้อนรหัส PIN ("0000")

4 กดปุ่ม **FNC**

► หน้าจอ FUNCTION จะปรากฏขึ้น

5 แตะ



► หน้าจอเมนู SETUP (การตั้งค่า) จะปรากฏขึ้น

6 แตะ **Bluetooth**



► หน้าจอ SETUP (การตั้งค่า) Bluetooth จะปรากฏขึ้น

**7 แตะ Select Device ในหน้าจอ Bluetooth SETUP
(การตั้งค่าบลูทูธ)**




8 แตะ C2 ที่คุณต้องการซื้อเมื่อ



วิธีอัปเกรด Bluetooth ที่ลงทะเบียนไว้

1 แตะ C2

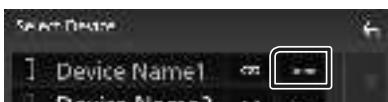

▶ ข้อความการอัปเกรดปรากฏขึ้น

2 แตะ Yes

การใช้ครื่องแฮนด์ฟรี

คุณสามารถใช้ฟังก์ชันโทรศัพท์ได้ด้วยการเชื่อมต่อโทรศัพท์ที่มี Bluetooth เข้ากับเครื่องนี้

หมายเหตุ

- ในขณะที่ Apple CarPlay หรือ Android Auto กำลังเชื่อมต่ออยู่ จะไม่สามารถใช้ฟังก์ชัน Bluetooth แฮนด์ฟรีได้ สามารถใช้ได้เฉพาะฟังก์ชัน Apple CarPlay หรือ Android Auto Hands-Free เท่านั้น


โทรศัพท์

1 แตะที่ Phone



▶ หน้าจอ Hands Free (แฮนด์ฟรี) จะปรากฏขึ้น

2 เลือกวิธีการโทรศัพท์

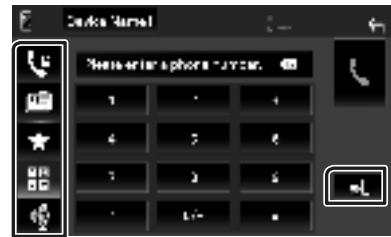

- โทรศัพท์ใช้บันทึกการโทร
- โทรศัพท์ค้นหาหมายเลขโทรศัพท์
- โทรศัพท์ค้นหาหมายเลขโทรศัพท์ที่ตั้งค่าไว้ล่วงหน้า
- โทรศัพท์ค้นหาหมายเลขโทรศัพท์ที่บันทึกไว้ล่วงหน้า
- การจดจำเสียง
- การตั้งค่า Bluetooth

การตั้งค่า Bluetooth

1) แตะ

หน้าจอ SETUP (การตั้งค่า) Bluetooth จะปรากฏขึ้น

หมายเหตุ

- ไอคอนแสดงสถานะ เช่น แบตเตอรี่และเส้าอากาศที่ปรากฏขึ้นอาจแตกต่างไปจากไอคอนที่แสดงในโทรศัพท์เคลื่อนที่
- การตั้งค่าโทรศัพท์เคลื่อนที่เป็นไปตามค่าที่ตั้งไว้ สามารถปิดได้ร่วมกับฟังก์ชันแฮนด์ฟรี (Hands-Free) ได้

การควบคุม Bluetooth

โทรศัพท์สามารถใช้บันทึกการโทร

- 1 แตะ

2 เลือกหมายเลขอุปกรณ์ที่ต้องการรายการ



โทรศัพท์ออกตัวยการป้อนหมายเลขอุปกรณ์ที่ต้องการ

- 1 แตะ

2 ป้อนหมายเลขอุปกรณ์ที่ต้องการโดยปุ่มหมายเลขอุปกรณ์



- 3 แตะ

โทรศัพท์ออกตัวยการใช้หมายเลขอุปกรณ์ที่ต้องการไว้แล้วทันที

- 1 แตะ


2 แตะชื่อรือห้องหมายเลขอุปกรณ์ที่ต้องการ




โทรศัพท์ออกตัวยการใช้สมุดโทรศัพท์

- 1 แตะ

2 เลือกผู้ที่คุณต้องการโทรศัพท์จากรายการ

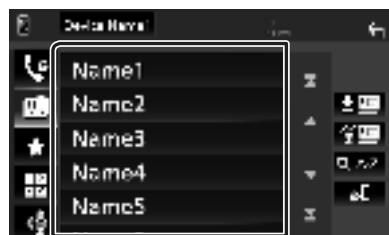

- 3 เลือกหมายเลขอุปกรณ์ที่ต้องการ

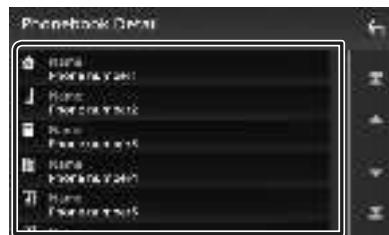

หมายเหตุ

- หากจังไม่ได้ดาวน์โหลดสมุดโทรศัพท์ การและที่ **Download Phonebook Now** จะเริ่มต้นการดาวน์โหลดสมุดโทรศัพท์

รับสาย

1 แต่ เพื่อรับสายหรือ เพื่อปิดเสียงสายเรียกเข้า



ໜ້າແຫ່ງ

- ในขั้นตอนที่ต้องตรวจสอบคุณลักษณะ หน้าจอจะไม่ปรากฏขึ้นหากมีสายเรียกเข้า หากต้องการแสดงหน้าจอันนี้ ให้ทันทีที่ร่องไปที่จุดหน่วยงานเดียว

၁၁၅

1 របៀបស្វាគម្មាន និងពេច



█ การใช้งานระหว่างการโทรศัพท์



- #### ● ปรับระดับเสียงของผู้รับ

กฤษ — หรือ +



- ### ● เอกท์พุตเสียงสัณฐานการโทร

แต่ **DTMF** เพื่อแสดงหน้าจอการป้อนข้อมูลเสียง
คอมสามารถส่งเสียงได้ด้วยการแตะปุ่มที่ต้องการบนหน้าจอ

- ## ● ภาระโล่ยนและที่พอดอดกษา

การแตะ  /  แต่ละครั้งจะเปลี่ยนเสียงที่ออกมากจากโทรศัพท์เป็นลำโพง

- ## ● การรับอสังหาริมทรัพย์

เมื่อคุณรับสายเรียกเข้าในหมายเลขที่กำลังคุยกับลูกค้าอื่นอยู่ คุณสามารถตอบ
สายใหม่ที่เรียกเข้ามามาด้วยการแตะ  พักสายการโทรศัพท์ในปัจจุบัน
แล้วคลิ๊กที่คุณจะแตะ  ฟังใจจะเปลี่ยนไป

เมื่อคุณจะ  จะเป็นการวางแผนปัจจุบันแล้วเปลี่ยนไปปั้งสายที่กำลังพักสายอยู่


การควบคุมเสียง

คุณสามารถปรับรับการตั้งค่าให้หลากหลาย เช่น สมดุลเสียงที่มีระดับเสียงขั้นไฟอร์

1 กดปุ่ม FNC

- ▶ หน้าจอ FUNCTION จะปรากฏขึ้น

2 แตะ

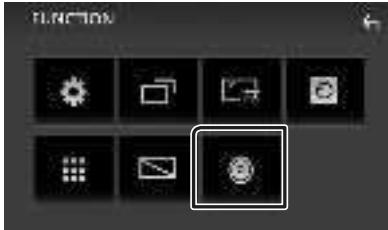

■ การควบคุมเสียงทั่วไป

1 กดปุ่ม FNC

- ▶ หน้าจอ FUNCTION จะปรากฏขึ้น

2 แตะ




- ▶ หน้าจอเสียงจะปรากฏขึ้น

3 แตะ Fader / Balance



4 ตั้งค่าต่อระดับการตั้งค่าไปนี้

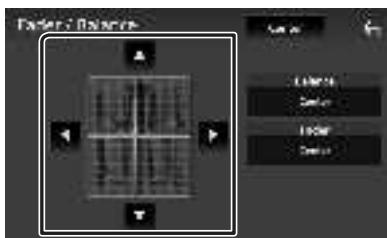

■ Fader / Balance

ปรับสมดุลเสียงรอบๆ บริเวณที่สัมผัส

◀ และ ▶ ปรับสมดุลเสียงซ้ายและขวา

▲ และ ▼ เพื่อปรับสมดุลเสียงคำพิงหน้าและหลัง

■ Center

สั่งการปรับแต่ง

■ การควบคุมอิเล็กทรอนิกส์

คุณสามารถอัปเดตอิเล็กทรอนิกส์ได้ด้วยการเลือกการตั้งค่าที่ปรับให้เหมาะสมที่สุดกับแต่ละหมวดหมู่

1 กดปุ่ม FNC

- ▶ หน้าจอ FUNCTION จะปรากฏขึ้น

2 แตะ

- ▶ หน้าจอเสียงจะปรากฏขึ้น

3 แตะ Equalizer



4 แตะหน้าจอแล้วจัดค่า Graphic Equalizer (กราฟิอกวอ.ai เซอร์) ตามต้องการ



■ ALL SRC

ใช้อิเล็กทรอนิกส์ที่รับ "ไมโครโฟน" แล้วตั้งค่าบันແກ່ງສัญญาณทั้งหมด ดัง **ALL SRC** แล้วแต่ OK ที่หน้าจอcheinขึ้น

■ เพิ่มเสียง (ปรับเวลกรอบบันทึก)

ปรับเพิ่มเพื่อช่วยในการแข่งที่แบบความที่แต่ละตอน

คุณสามารถเลือกแผนภูมิและปรับระดับด้วย ▲ , ▼

■ Preset Select

แสดงหน้าจอเพื่อเรียกคืนกราฟิอกวอ.ai เซอร์ที่ตั้งค่าไว้ล่วงหน้า

■ Initialize

กราฟ EQ จะอ่อนคลັນไปเป็นเส้นเรียบ

■ Memory

บันทึกกราฟิอกวอ.ai เซอร์ที่ปรับไว้แล้วตั้งแต่ "User1" ถึง "User3"

■ Bass EXT (การตั้งค่าการเพิ่มเสียงเบส)

เมื่อปิดเดียว ความถี่ที่ต่ำกว่า 62.5 เฮิรตซ์ จะถูกปรับเป็นระดับเกินเดียวกับ 62.5 เฮิรตซ์

■ SW Level

ปรับระดับเสียงชั้นวางไฟฟอร์

การเชื่อมต่อ/การติดตั้ง

ก่อหน่วยติดตั้ง

ก่อการศึกษาตั้งครื่องนี้ กระบวนการคิดถึงที่ควรจะมีอยู่ใน

คำเตือน

- หากคุณเข้ามือถือภาษาจีนระเบิด (เติ่ลเจด) กับภาษาเบนเดอร์ (เติ่ลเกล็อก) เช่นกันในร่องนัง (กรวยน้ำ) อาจทำให้เกิดการหลั่งของช่องที่ทำให้เกิดไฟไหม้ได้ ต้องล้างเข้าห้องเหล็กแล้วจึงจะใช้ไฟฟ้าผ่านก้อนอ่องไว้สักครู่ก็จะ
 - ห้ามตัดไฟฟ้าส่วนกลางจีนระเบิด (เติ่ลเจด) และสายแบนเดอร์ (เติ่ลเกล็อก) เนื่องจากไฟฟ้าต้องเข้าสู่ห้องที่อยู่ในบ้านไฟฟ้าที่ไม่มีวัสดุ

ข้อควรระวัง

- คิดตั้งหน่วยที่ไม่ค่อนไปทางหน่วยของท่าน
อย่างสืบสานต่อที่เป็นไปทางของตัวเรื่องในระหว่างการใช้งานและ
หลังจากที่ปั๊กเครื่องได้ในหน้านั้น สำหรับที่เป็นไปทาง เช่น สิทธิ์และ
โครงสร้างรัฐ

អំពីរាជ

- การติดตั้งและ检验สายไฟเพลคิดกับหัวที่ต้องอ้างถูกกับสายและประสาทการไฟ เพื่อความปลอดภัยที่ดีที่สุด ควรให้ช่างผู้ชำนาญ เป็นผู้ติดตั้งและเดินสายไฟ
 - ตรวจสอบไฟให้แน่ใจว่าติดตั้งครองกับแหล่งจ่ายไฟในระบบ 12 โวลต์
 - ห้ามติดตั้งเครื่องในหูดูที่คันແเสบแผล ความร้อนจัด หรือความชื้น โลหะร้อน เหล็กเลึงสามารถทำให้เกิดฟุ้นมากกินไปหรือโคน้ำสาดได้เจาะ
 - ห้ามใช้สกรูของตนเอง ใช้สกรูมาตรฐานที่หันให้หนา หากคุณใช้สกรูติดอยู่อาจทำให้เกิดร่องได้รับความเสียหาย
 - หากเกิดร่องไม่ ON (เปิด) อุํ ("There is an error in the speaker wiring. Please check the connections." จะประกายขึ้น) สายลำโพงอาจดังความจริงหรืออัมพาตถ้าไม่ได้ต่อ ทำให้ไฟฟ้าร้อนปืนอุ่นถูกฝีเขียว ควรตรวจสอบสายลำโพง
 - หากระบบจูดเชิงเบิดของรอบเดิมไม่ดำเนินเท่านั้น ACC ให้เชื่อมต่อสายจูดเชิงเบิดกับแหล่งจ่ายไฟที่สามารถเปิดปิดได้ให้กับแจ้งเตือนได้ หากคุณเชื่อมต่อสายจูดเชิงเบิดกับแหล่งจ่ายไฟที่ไม่สามารถจ่ายแรงดันไฟฟ้าที่ เช่น กับสายเบตเตอรี่ แม้แต่เรื่องห้องคลัง
 - หากคอมพิวเตอร์ไม่ติด ตรวจสอบไฟให้แน่ใจว่าได้ติดตั้งร่องแล้ว ต่อไปให้เปลี่ยนหนานหัวไฟในกระบอกไฟคือดูจะเป็นวิธีรีเซ็ตไฟ

- หากพิวส์สำข้า ก่อนอื่นตรวจสอบว่าสามารถไฟไม้ได้แล้วผู้ลักกันจนเป็นเหตุให้เกิดการลัดวงจร แล้วเปลี่ยนพิวส์เก่าด้วยพิวส์ใหม่ที่กำลังไฟเที่ยวอัน

- หุ้นสายไฟที่ไม่ได้เชื่อมต่อด้วยเทปไวนิลหรือวัสดุอื่นที่เกิดขึ้นกันนี้ เพื่อป้องกันไม่ให้เกิดไฟลัดวงจร อย่าลอกฝ่ากรอบที่ป้ายสัญลักษณ์ว่าห้ามต่อที่สำคัญได้ครั้งเดียว

- เชื่อมต่อสายค่าปิงกับข้อต่อที่ตอบสนองการทำงานให้ถูกต้อง เกี่ยวกับเวลาที่รับความเสียหายหรือทำงานผิดพลาดหากคุณใช้สายที่ \ominus หรือกราวน์น้ำหนึ่งส่วนโดยจะไม่รับอนุญาต


- เมื่อเชื่อมต่อค่าโงงสองตัวเข้ากับระบบ ให้เชื่อมต่อข้อว่าต่อทิ้งสอง

- ເບັກຂອງສະຄູນຢາພານທານາທວອງຮອງສະຄູນຢາພານດາວໂຫລດ
 (ທໍານີໃຊ້ດ້ານນໍາກຳດ້ານຫລັມປັນປຸງ) ດ້ວຍເຖິງເຫັນ ທາກຄຸມເຊື່ອນ
 ຕ້ອງຂ້າວ່ອ \oplus ໂອງລຳໄພງານຂ້າງເຫັນກັບຂ່ອງສະຄູນຢາພານດ້ານຫຼາ
 ມ້ານມີຂ້າວ່ອ \ominus ເຫັນກັບຂ່ອງສະຄູນຢາພານດ້ານຫລັດ

- หลังจากคิดตึ้งเครื่องแล้ว ให้ตรวจสอบว่าไฟเบรก ไฟกะพริบ ที่ปิดน้ำฝน ฯลฯ ในรถยนต์ทำงานอย่างเหมาะสม





- ขนาดติดตั้งเครื่องลงในรถ ห้ามใช้แรงกดพื้นผิวแห้งมากเกินไป เพราะอาจทำให้เกิดรอย เกิดความเสียหาย หรือทำให้ระบบ

- การรับสัญญาณจากคลองทางน้ำวัดดูโดยอาศัยกล้องส่องทางอากาศ

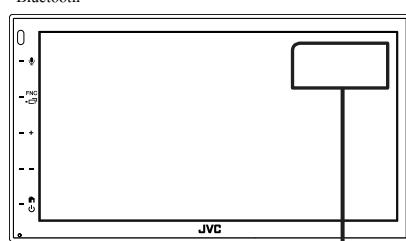

เครื่องสายอากาศ Bluetooth

■ อุปกรณ์เสริมที่ห้ามเพื่อติดตั้ง

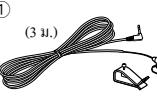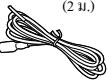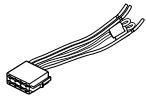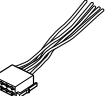	x1		x1
	x1		x1
	x6		x6
	x1		x1

■ ขั้นตอนการติดตั้ง

- 1) เพื่อป้องกันการลัดวงจร ให้ถอดคุณยาจากขาที่สตาร์ทเครื่อง เส้นสายเลิกการเชื่อมต่อเข้าช่อง \ominus ของแบตเตอรี่
- 2) ดูองเนิ่นๆว่า เชื่อมต่อสายรับสัญญาณและสายส่งสัญญาณของ แต่ละเครื่องอย่างถูกต้อง
- 3) เชื่อมต่อสายไฟบนชุดสายไฟ
- 4) ใช้เข็มต่อ B (อุปกรณ์เสริม ⑧) บนชุดสายไฟและเชื่อมต่อเข้า กับเข็มต่อไฟในร่องนําเข้าของคุณ
- 5) ใช้เข็มต่อ A (อุปกรณ์เสริม ⑦) บนชุดสายไฟและเชื่อมต่อเข้า กับเข็มต่อแหล่งจ่ายไฟภายในร่องนําเข้าของคุณ
- 6) เชื่อมต่อเข็มต่อชุดสายไฟกับตัวเครื่อง
- 7) ติดตั้งอุปกรณ์เอาไว้ในร่องของคุณ
- 8) เชื่อมต่อเข็มต่อ \ominus ของแบตเตอรี่ใหม้อีกครั้ง
- 9) ทดสอบเช็ค


การติดตั้งเครื่อง

หมายเหตุ

- ให้แน่ใจว่าติดตั้งเครื่องในตำแหน่งของป้องกัน ห้ามวางเครื่องในมั่นคง เครื่องอาจทำงานผิดปกติ (ขั้น อาจไม่มีเสียง)


■ ร้อยสายไฟปุ่ม

⑤ หรือ ⑥

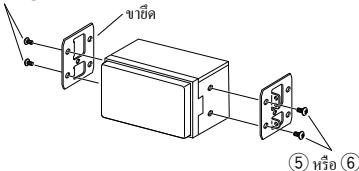


■ แผ่นตัดแต่ง

1) ติดตั้งอุปกรณ์เสริม ② เข้ากับตัวเครื่อง

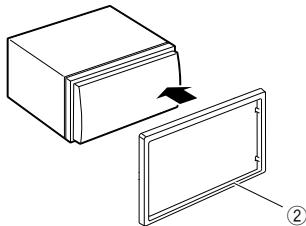

■ เครื่องไมโครไฟฟ์

- ตรวจสอบตำแหน่งการติดตั้งไมโครไฟฟ์ (อุปกรณ์เสริม ①)
- ทำความสะอาดพื้นผิวสำหรับติดตั้ง
- ดัดด้านเบกอฟจากไมโครไฟฟ์ (อุปกรณ์เสริม ①) และติดไมโครไฟฟ์ตามตำแหน่งที่แสดงไว้ด้านล่าง
- ต่อสายไมโครไฟฟ์เข้ากับเครื่องพื้นที่ทำการทำให้ปลอกหัวด้วยการใช้ท่อเปเปโซล่าไวหลาๆ ตำแหน่ง หรือด้วยวิธีอื่นตามที่ต้องการ
- ปรับทิศทางของไมโครไฟฟ์ (อุปกรณ์เสริม ①) ไปยังคนขับ

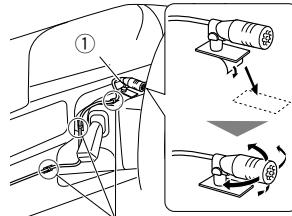

ติดตามเกณฑ์เดียวกับที่มีข้างที่ไว้


หมายเหตุ

- ล็อกคลิป หากจำเป็น




■ การอุดแผ่นตัดแต่ง

- ใช้กุญแจสกัด (อุปกรณ์เสริม ④) เพื่อเดี่ยอนแฉบสีอันออกมา (สองอันที่ด้านซ้าย, สองอันที่ด้านขวา)



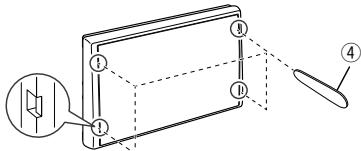


- ดึงแคนตัดแต่งไปข้างหน้า

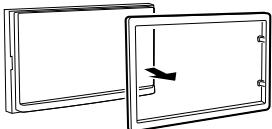

การต่อสายไฟกับขัวต่อ


สีฟ้า/สีเหลือง (สายไฟริมท่อคอนกรีตบนพวงมาลัย)

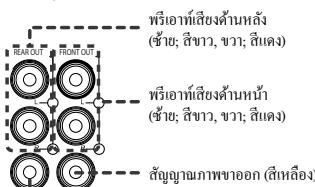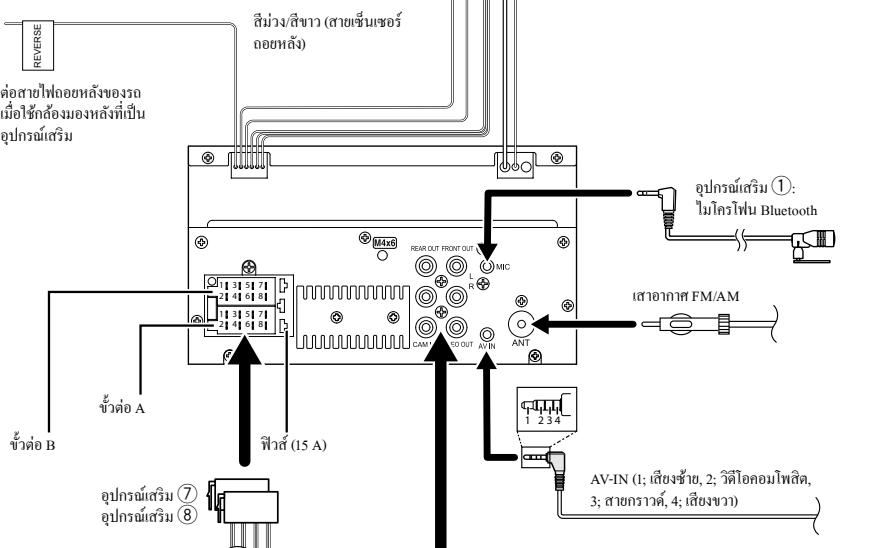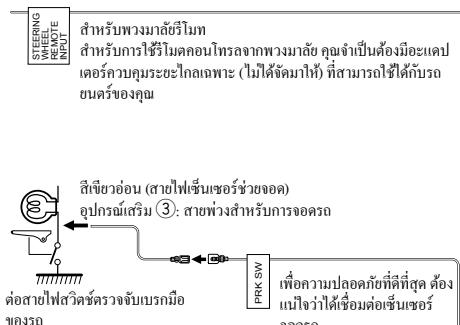


⁽¹⁾ กระแสไฟสูงสุดของหน่วยจ่ายไฟ USB: DC 5 V \leq 1.5 A

[2] นิจั่วหน้าที่หมายความต่อไปนี้

เชื่อมต่อกับการควบคุมพวงมาลัยรีโมทของyanpanahne ติดต่อขอรายละเอียดได้จากศูนย์แทนจำหน่าย JVC


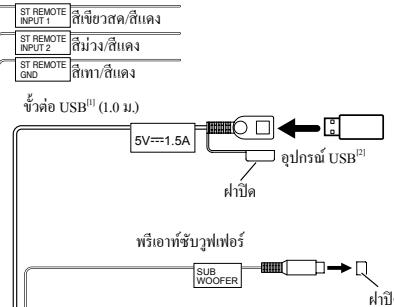


 การเชื่อมต่อกับ iPhone/Android

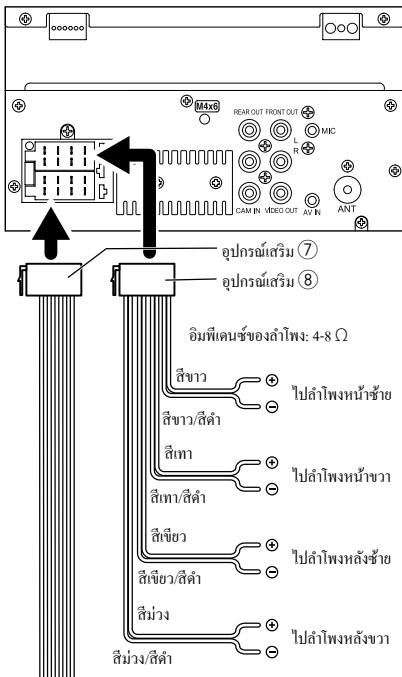

สีน้ำเงิน (สายความคุมพลังงาน/ สายความคุมเสาอากาศ)

เชื่อมต่อเข้ากับขั้วควบคุมพลังงานเมื่อใช้
แอลมิไฟเบอร์เสริม หรือใช้มือต่อเข้ากับ
ขั้วพลังงานสำหรับบุสเดอร์แอลมิไฟเบอร์
ของสายอากาศแบบไฟฟ้าหรือแบบสารสืบ
(กระแส 150 mA, 12 V)

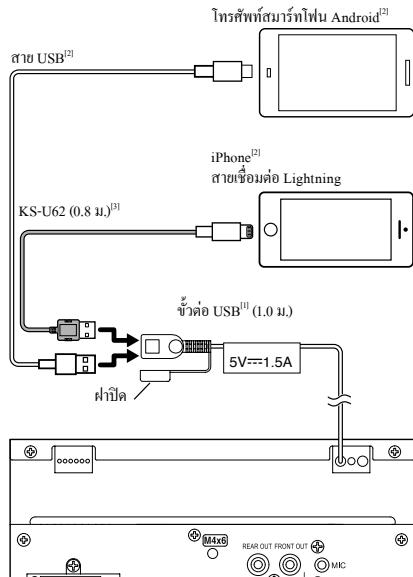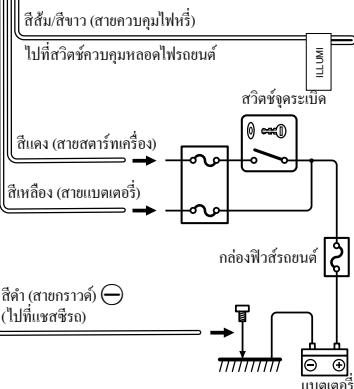

⁽¹⁾ กระแสไฟฟ้าสูงสุดของแหล่งจ่ายไฟ iPhone: DC 5 V 1.5 A

^[2] มีจำนวนน้ำแข็งมากต่างหาก

๓) อากรทั่วไป

ภาคผนวก

ข้อมูลจำเพาะ

■ ส่วน Bluetooth

ความถี่

: 2.402 – 2.480 กิกะ赫รดตซ์

กำลังในการส่งสัญญาณ RF (EIRP)

: +8 dBm (ฉลุย), กำลังขั้นระดับ 1

■ ทั่วไป

แรงดันไฟฟ้า

: แบตเตอรี่ร่องรอย 12 V DC

อัมพีเคนเซอร์ของลำโพง

: 4 – 8 Ω

ข้อมูลอ้างอิง หมายความว่าเป็นได้ก็ปีโนต้องแจ้งให้ทราบล่วงหน้า

เกี่ยวกับเครื่องนี้

■ สงวนลิขสิทธิ์

- โลโก้และเครื่องหมายค้าว่า Bluetooth® เป็นเครื่องหมายการค้าจดทะเบียนของบริษัท Bluetooth SIG, Inc. และการใช้เครื่องหมายดังกล่าวโดยบริษัท JVCKENWOOD Corporation อย่างใดก็ได้อาจอนุญาตให้ใน เครื่องหมายการค้าและชื่อทางการค้า อื่นๆ เป็นสิ่งของเจ้าของหรือของผู้ผลิต
- Windows Media is a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.
- This product is protected by certain intellectual property rights of Microsoft. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft.
- Use of the Made for Apple badge means that an accessory has been designed to connect specifically to the Apple product(s) identified in the badge, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with an Apple product may affect wireless performance.
- Apple, iPhone and Lightning are trademarks of Apple Inc., registered in the U.S. and other countries.
- Apple, Siri, Apple CarPlay and Apple CarPlay logo are trademarks of Apple Inc., registered in the U.S. and other countries.
- App Store is a service mark of Apple Inc., registered in the U.S. and other countries.
- IOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.
- Google, Android, Google Play and Android Auto are trademarks of Google LLC.
- To use Android Auto on your car display, you'll need an Android Auto compatible vehicle or aftermarket stereo, an Android phone running Android 5.0 or higher, and the Android Auto app.
- Linux® is the registered trademark of Linus Torvalds in the U.S. and other countries.
- THIS PRODUCT IS LICENSED UNDER THE AVC PATENT PORTFOLIO LICENSE FOR THE PERSONAL USE OF A CONSUMER OR OTHER USES IN WHICH IT DOES NOT RECEIVE REMUNERATION TO (i) ENCODE VIDEO IN COMPLIANCE WITH THE AVC STANDARD ("AVC VIDEO") AND/OR (ii) DECODE AVC VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE AVC VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION MAY BE OBTAINED FROM MPEG LA, L.L.C. SEE [HTTP://WWW.MPEGLA.COM](http://WWW.MPEGLA.COM)
- THIS PRODUCT IS LICENSED UNDER THE MPEG-4 VISUAL PATENT PORTFOLIO LICENSE FOR THE PERSONAL

AND NON-COMMERCIAL USE OF A CONSUMER FOR
 (i) ENCODING VIDEO IN COMPLIANCE WITH THE
 MPEG-4 VISUAL STANDARD ("MPEG-4 VIDEO") AND/
 OR (ii) DECODING MPEG-4 VIDEO THAT WAS ENCODED
 BY A CONSUMER ENGAGED IN A PERSONAL AND
 NON-COMMERCIAL ACTIVITY AND/OR WAS OBTAINED
 FROM A VIDEO PROVIDER LICENSED BY MPEG LA TO
 PROVIDE MPEG-4 VIDEO. NO LICENSE IS GRANTED OR
 SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL
 INFORMATION INCLUDING THAT RELATING TO
 PROMOTIONAL, INTERNAL AND COMMERCIAL USES
 AND LICENSING MAY BE OBTAINED FROM MPEG LA, LLC.
 SEE [HTTP://WWW.MPEGLA.COM](http://WWW.MPEGLA.COM).

- THIS PRODUCT IS LICENSED UNDER THE VC-1 PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER TO (i) ENCODE VIDEO IN COMPLIANCE WITH THE VC-1 STANDARD ("VC-1 VIDEO") AND/OR (ii) DECODE VC-1 VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NON-COMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE VC-1 VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION MAY BE OBTAINED FROM MPEG LA, LLC. SEE [HTTP://WWW.MPEGLA.COM](http://WWW.MPEGLA.COM)

- libFLAC

Copyright (C) 2000,2001,2002,2003,2004,2005,2006,2007 ,2008,2009 Josh Coalson

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- Neither the name of the Xiph.org Foundation nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND ONTRIBUTORS ``AS IS'' AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE FOUNDATION OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

- libvorbis

Copyright (c) 2002-2008 Xiph.org Foundation
 Redistribution and use in source and binary forms, with or without modification, are permitted provided that

the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- Neither the name of the Xiph.org Foundation nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORs ``AS IS'' AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE FOUNDATION OR CONTRIBUTORs BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

- libogg

Copyright (c) 2002, Xiph.org Foundation Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- Neither the name of the Xiph.org Foundation nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORs ``AS IS'' AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE FOUNDATION OR CONTRIBUTORs BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.



Declaration of Conformity with regard to the RE Directive 2014/53/EU

Declaration of Conformity with regard to the RoHS Directive 2011/65/EU

Manufacturer:

JVCKENWOOD Corporation
3-12, Moriyacho, Kanagawa-ku, Yokohama-shi,
Kanagawa 221-0022, JAPAN

EU Representative:

JVCKENWOOD Europe B.V.
Amsterdamseweg 37, 1422 AC UITHOORN, THE
NETHERLANDS

**2014/53/EU RE Direktifi ile Uyumluluk Beyanı
RoHS Direktifi 2011/65/EU için Uyum Beyanı**

Üretici:

JVCKENWOOD Corporation
3-12, Moriyacho, Kanagawa-ku, Yokohama-shi,
Kanagawa 221-0022, JAPONYA

AB Temsilcisi:

JVCKENWOOD Europe B.V.
Amsterdamseweg 37, 1422 AC UITHOORN,
HOLLANDA

English

Hereby, JVCKENWOOD declares that the radio equipment KW-M560BT
is in compliance with Directive 2014/53/EU. The full text of the EU
declaration of conformity is available at the following internet address:

Türkçe

Burada, JVCKENWOOD KW-M560BT radyo ekipmanının 2014/53/AB
Direktifine uygun olduğunu bildirir. AB uyumluluk deklarasyonunun
tam metni aşağıdaki internet adresine mevcuttur.

URL: <https://www.jvc.net/cs/car/eudoc/>

■ For Turkey

Bu ürün 28300 sayılı Resmi Gazete'de yayımlanan Atık Elektrikli ve
Elektronik Eşyaların Kontrolü Yönetmeliğe uygun olarak üretilmiştir.

**■ Eski Elektrik ve Elektronik Ekipmanlarının
İlmha Edilmesi Hakkında Bilgi (ayrı atık
toplama sistemlerini kullanan ülkeleri
için uygulanabilir)**



Sembollü (üzerinde çarpı işaretli olan çöp kutusu)
ürünler ev atıkları olarak atılamaz.


Eski elektrik ve elektronik ekipmanlar, bu ürünler
ve ürün atıklarını geri dönüştürebilecek bir tesiste
değerlendirilmelidir. Yaşadığınız bölgeye en yakın
geri dönüşüm tesisinin yerini öğrenmek için yerel
makamlara müracaat edin. Uygun geri dönüşüm ve atık
imha yöntemi sağlıyoruz ve çevremiz üzerindeki zararlı
etkileri önlerek kaynakların korunmasına da yardımcı
olacaktır.

■ מידע בדבר השלכה לאשפה של ציוד חשמלי
ואלקטרוני ישן וכן סוללות (רלונטי' למدينة
שמשתמשות במערכת איסוף אשפה מופדרת).

לא ניתן להשליך מוצריים וסוללות עם הסימון (פוך אשפה עם X
עליה) אשפה ביתית גלילית.

יש למחזר ציוד חשמלי ואלקטרוני ישן וכן סוללות במקום
המסוגל לטיפול בפרטם כآلלה ובטעמי הלוואי שלהם.
צור קשר עם הרשות המקומית לקליטת פטוטים אזהות מתוקן
המייחזר הקרוב אליכם. מיחזור והשלכה לאשפה נאותים יעדתו
לשמר משאבים ולמנוע השפעות שליליות על בריאותם ועל
הביבה.

שים לב: הסימון Pb שמתוחת לסימון עבור סוללות מצין
שהוטוללה מכילה עופרת.

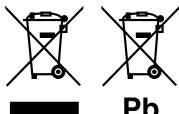

JVC