



AIRDOPES 141 ANC

AIRDOPES 141 ANC

Get ready to immerse yourself in musical bliss with your very own pair of boAt Airdopes 141 ANC. Please consider this manual as your guiding map towards the unparalleled shores of musical bliss. Knowledge of Bluetooth and device connectivity is essential for steering this boat and therefore we strongly recommend thorough reading of this manual; also, you may refer to the same at times whenever you face any sort of difficulty.



 
PACKAGE CONTENTS

- 1 1x Pair of TWS Earbuds
- 2 1x Charging Case
- 3 1x Type-C Charging Cable
- 4 1x User Manual
- 5 1x Warranty Card
- 6 1x Catalogue
- 7 2x Pairs of Additional Earmuffs
- 8 1x FAQ Card

OVERVIEW

1 CTC (Capacitive Touch Control) / Power Button

2 Reset Button

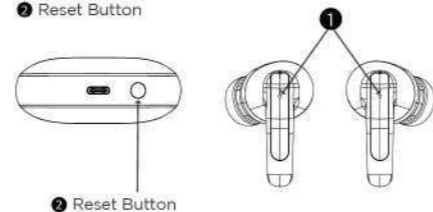

POWER ON (FIRST TIME USER):

Step 1: To switch the earbuds on (Smart Power On) simply open the lid of the charging case (when earbuds are inside). Our IWP™ (Insta Wake N' Pair) Technology enables the earbuds to power on automatically, get connected and enter into the connection mode

OR

Long touch the CTC (Capacitive Touch Control) on both earbuds for 3 seconds to manually power on the earbuds

Step 2: Both the earbuds will automatically pair with each other. The earbuds will enter into the Connection Mode indicated by blue and red LED flashes

CONNECTION MODE

Step 3: Turn on the Bluetooth functionality on your phone/media device and scan

Step 4: Search for 'Airdopes 141 ANC' and pair accordingly.

Congratulations! Your earbuds are now successfully connected via Bluetooth

Note :  
 • Pairing mode lasts for 5 minutes. If the pairing time is missed then you will need to reconnect the ear-buds and follow the above-mentioned procedure  
 • Airdopes 141 ANC remembers previously connected devices; once switched on and within optimum range, the ear-buds automatically reconnect to the previously connected devices.



SINGLE EARBUD USAGE

Step 1: Please note that both the earbuds can be used in mono mode. Use Smart Power On or Manual Power On for switching on the desired earbud

 
Step 2: The selected earbud will automatically enter the connection mode

Step 3: Turn on Bluetooth on your phone/media device and search for 'Airdopes 141 ANC' to connect

Note :  
 • To switch to Stereo mode, simply take out the other earbud from the case. It will automatically power on and pair with the previously selected earbud, hence enabling Stereo usage

QUICK GLANCE ON FUNCTIONALITIES

- 3 Seconds: Long touch both CTCs for 3 sec to manually power on
- 3 Seconds Right Earbud: Long touch the right CTC for 3 seconds to toggle between ANC OFF/ Ambient/ ANC ON modes
- 3 Seconds Left Earbud: Long touch the left CTC for 3 seconds to toggle between boAt Signature Sound/ Balanced Mode
- 5 Seconds: Long touch both CTCs for 5 sec to manually power off
- 10 Seconds: Long press the Reset Button on case for 10 sec to perform factory reset. Case & Earbud LED blinks 5 times to confirm reset

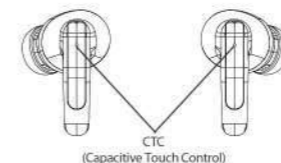


CHARGING THE EARBUDS

Step: Please insert the earbuds back inside the charging case in correct orientation,

Remaining Earbuds Battery	LED Indication
Low Battery	RED light blinks (3 times) when the Case lid gets opened
Min 30%-100%	BLUE light blinks (3 times) when the Case lid gets opened

 Note :  
 • Before using the ear-buds for the first time, it is recommended to fully charge the ear-buds. Also, please keep the lid of the charging case closed while charging.

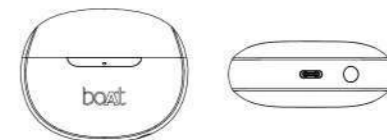

CHARGE THE CASE:

Step: To charge the case, plug one end of the provided cable into the case and connect the other end to a computer/ wall adapter/ powerbank, etc. While charging, the Case LED continuously blinks in white. When the case gets fully charged, solid white LED turns on to indicate a 100% battery level.

Case Remaining Battery	LED Indication
Less than 30%	White LED quickly blinks for 3sec when case lid gets opened/closed
30%-70%	White LED normally blinks (3 times) when the Case lid is opened/closed
More than 70%	White LED stays Solid ON for 3 seconds when the Case lid gets opened/closed

Case LED Indication about inserting earbud into the case - This is to indicate TWS is charging from the case (when lid gets closed) Earbuds charging status will be shown after Case charge status

- WHITE LED is Solid ON for 5 seconds
- WHITE LED is OFF when Earbuds are charged fully

BASIC FUNCTIONS

• Ambient Mode, ANC and Normal Modes: Long touch the right CTC for 3 seconds to switch among Ambient mode, ANC mode and Normal mode for music. Ambient mode is for transparency towards the audible surroundings. By virtue of ANC mode you can cancel out the external noise and let yourself fully immerse in your playlists.

Note: The default mode is ANC OFF(Normal Mode).

- Answer: Single tap the CTC on either earbud to answer incoming calls
- Hang Up / Reject Calls: Double tap the CTC on either earbud to end / reject calls
- Play/Pause Music: Single tap CTC on either earbud to play or pause a track
- Next Track: When playing music, double tap the right CTC to skip to the next song
- Previous Track: When playing music, double tap the left CTC to return to the previous song
- Dual EQs: Long touch the left CTC for 3 seconds to switch between boAt Signature Sound or Balanced Modes. Default mode is boAt Signature Sound.

BEAST™ MODE

Triple tap the left CTC to switch to Low Latency mode, also known as the BEAST™ Mode. Once switched on, it gets notified via a sound prompt. Triple tap the left CTC once again, to turn it off and return to Music Mode.

Made for the Gamers - By Gamers, BEAST™ Mode reduces the latency significantly and improves the overall gaming experience.

ENX™ TECH

Our ENX™ tech algorithm cancels out the background noise so that you can be heard crystal clear via voice calls. One need not activate ENX™ as the mics are equipped with the same and activated by default.

Deliver your voice without interruptions anywhere - traffic, railway stations, airports, work space; literally anywhere!

SMART POWER OFF

- Step 1: After usage, remove both the earbuds from your ears
- Step 2: Place the earbuds back into the charging case in correct orientation and close the lid
- Step 3: The earbuds will automatically switch off (and enter into charging mode)

MANUAL POWER OFF

- Step 1: Long touch both CTCs for 5 seconds to manually power off the earbuds
- Step 2: Once the earbuds get turned off, place them back inside the case and close the lid

FACTORY RESET

Perform the Factory Reset in case you face any difficulty while operating your Airdopes 141 ANC

\*NOTE: Before performing reset, clear "Airdopes 141 ANC" from pairing device history by forgetting device

Step 1: Place the earbuds inside the case.

Step 2: While the earbuds are inside the case, Keep the case open & long press the Reset Button for 10 seconds.

After successful factory reset:

- White LED blinks quickly 5 times on the Charging Case
- Red LED blinks quickly 5 times on the Earbuds

Step 3: Close the lid and then re-open it again after a few seconds.

Step 4: Perform a fresh connection attempt and enjoy!

Congratulations! Your Airdopes 141 ANC has been Reset.



TROUBLESHOOTING

Potential Problem	Solution
If one earbud is not working	Perform the Factory Reset
If earbuds are not in connection /scan mode	Perform the Factory Reset
If earbuds disconnect during phone call	Charge the earbuds or perform the Factory Reset
If there are other exceptions in usage	Place the earbuds back into the charging case and try using them again or perform the Factory Reset
If the Touch Controls don't seem to respond	After long usage, residual stains and perspiration can affect the touch control area, please use a clean cloth to wipe softly
If the Left & Right Earbuds are unpaired to each other due to any anomaly	Perform the Factory Reset. Double touch both left & right CTC simultaneously.

Charging norms & Precautionary Guidelines: -

- 1) Charger/Brick/Adapter : 5V 2A
- 2) Cable/Wire : Standard Cable (35 strands @0.10mm diameter/ strand)

Any other accessory can be paired up with the product as long as the specifications are as per above norms.

SPECIFICATIONS

Headphone Type	ANC TWS Earbuds
Bluetooth Version	V5.3
Water Resistance	IPX5
IWP™ Technology	Yes
ANC	FF ANC (Up to 32dB)
ENX™ Equipped Microphones	4
Latency with BEAST™ Mode	50ms
Music Playtime	Up to 6H per charge, Up to 36H additional Case playtime (Non-ANC mode) Up to 5H per charge, Up to 30H additional Case playtime (ANC mode) at 60% vol
Standby	80H
Charging Technology	ASAP™ Charge
Transmission Range	10m
Driver Size	10mm*2
Codec Support	SBC and AAC
Frequency	20Hz-20kHz
Battery	400mAh (Case) 35mAh*2 (Earbuds)
Charging Time	1.5H
Charging Interface	Type C

WARNING

- Please follow the instructions to operate
- Please don't use the earbuds in extreme temperatures
- Please don't use the product near water
- Please keep the product away from heat sources, as the heat may damage it
- Don't jam the ports such as charger port, LED port, etc.
- It is recommended to utilize the product below the maximum volume in order to protect hearing and extend the ear-buds' service life

