

ASTROAI USER MANUAL

TRUE RMS DIGITAL MULTIMETER

Thank you for purchasing the True RMS 6000 Count Digital Multimeter from AstroAI. The AstroAI True RMS Digital Multimeter is designed to be safely and accurately used by professionals in a commercial setting or weekend DYer's that need a little more utility from their standard digital multimeter. This manual provides all safety information, operation instruction, specifications, and maintenance for the meter. The instrument performs AC/DC Voltage, AC/DC Current, Resistance, Audible Continuity, Diode, hFE, Frequency, Capacitance, and Temperature Testing. Thank you again for choosing AstroAI, if you have any questions or concerns regarding your product, please contact us at [**support@astroai.com**](mailto:support@astroai.com).


 

 








NOTE: Fully read and understand this manual before using this Digital Multimeter.

WARNING: To avoid possible electric shock or personal injury, and to avoid possible damage to the Meter or to the equipment being tested, adhere to the following rules:

- Before using the Meter, inspect the exterior casing. Do not use the Meter if it is damaged or if all or part of the exterior casing is removed. Look for cracks or missing plastic. Pay special attention to the insulation around the connectors.
- Inspect the test leads for damaged insulation or exposed metal. Check the test leads for continuity.
- Do not apply more than the rated voltage, as marked on the Meter, between the terminals or between any terminal and grounding.
- The manual rotary switch should be placed in the correct position before measurement and should NOT be moved during measurement to prevent damage to the Meter.
- When the Meter is working at an effective voltage over 60V in DC or 30V rms in AC, special care should be taken because there is a danger of electric shock.
- Use the proper terminals, function, and range for your measurements.
- Do not use or store the Meter in a high-temperature environment, do not expose to high levels of humidity, or near strong magnetic fields. The performance of the Meter may deteriorate after dampening.
- When using the test leads, keep your fingers behind the finger guards.
- Disconnect circuit power and discharge all high-voltage capacitors before testing resistance, continuity, diodes or hFE.
- Replace the battery as soon as the battery indicator appears. With a low battery, the Meter might produce false readings that can lead to electric shock and personal injury.
- Remove the connection between the testing leads and the circuit being tested, and turn the Meter power off before opening the Meter case.
- When servicing the Meter, use only the same model number or identical electrical specifications replacement parts.
- The internal circuit of the Meter shall not be altered at will to avoid damage of the Meter and any accident.

- Clean using a soft cloth and mild detergent for the surface of the Meter. Do not use abrasive materials or solvents to prevent the surface of the Meter from corrosion and damage.
- Turn the Meter off when not in use and take out the battery when it is not going to be used for an extended period of time. Regularly check the battery as it may leak when it has not been used for some time. Replace the battery as soon as leaking appears. A leaking battery will damage the Meter.

ELECTRICAL SYMBOLS

| | | | |
|---|-----------------------------|---|----------------------------------|
|  | AC (Alternating Current) |  | Low Battery |
|  | DC (Direct Current) |  | Diode |
|  | AC and DC |  | Fuse |
|  | Earth Ground |  | Continuity Test |
|  | Double Insulated |  | Warning |
| AUTO | Auto Range |  | Dangerous Voltage may be present |
|  | Complies with EU directives | | |

SPECIFICATIONS

| | |
|------------------------|--------------------|
| Digital Display | 5 ¾ , 5999 |
| Sampling Speed | 2 times per second |
| LCD Size | 64 x 42mm |
| Range Selection | Auto or Manual |
| Polarity Indication | Yes |
| Overload Indication | Yes |
| Low Battery Indication | Yes |


| | |
|-----------------------|----------------------------------|
| Operating Environment | 32°F~104°F (0°C~40°C); <80% RH |
| Storage Temperature | 14°F~122°F (-10°C~50°C); <85% RH |
| Power | 1 x 9V 6F22 Battery Included |
| Dimensions | 190x90x35mm |
| Weight | Approx 357g |

| | |
|-----------------------|-----|
| Temperature Test | Yes |
| Transistor Test | Yes |
| Diode Test | Yes |
| Continuity Test | Yes |
| External Current Test | Yes |
| Capacitance | Yes |
| Frequency | Yes |

| | |
|--------------------|--|
| Safety/Compliances | EN 61010-1 CAT III 600V, CATII 1000V |
| DC Voltage | 600mV6 ±(0.8%+5), V/60V/600V ±(0.8%+3), 1000V ±(1%+5) |
| AC Voltage | 600mV ±(1.2%+8); 6V/60V/600V ±(1.2%+6); 750V ±(1.2%+8) |
| Temperature | -40°C~1370°C; -40°F~2000°F (1-5%+4 depending on temp) |
| DC Current | 600μA/6000μA/60mA/600mA ±(0.8%+5); 6A/10A ±(1.5%+3) |
| Transistor hFE | PNP & NPN (I _b ≈2μA; V _{ce} ≈1V) |
| Resistance | 600Ω/6KΩ/60KΩ/600KΩ/6MΩ ±(1.5%+3); 60MΩ ±(1.5%+5) |
| Capacitance | 60nF/600nF/6μF/60μF/600μF/60mF |
| Frequency | 0~60MHz ±(1%+5) |





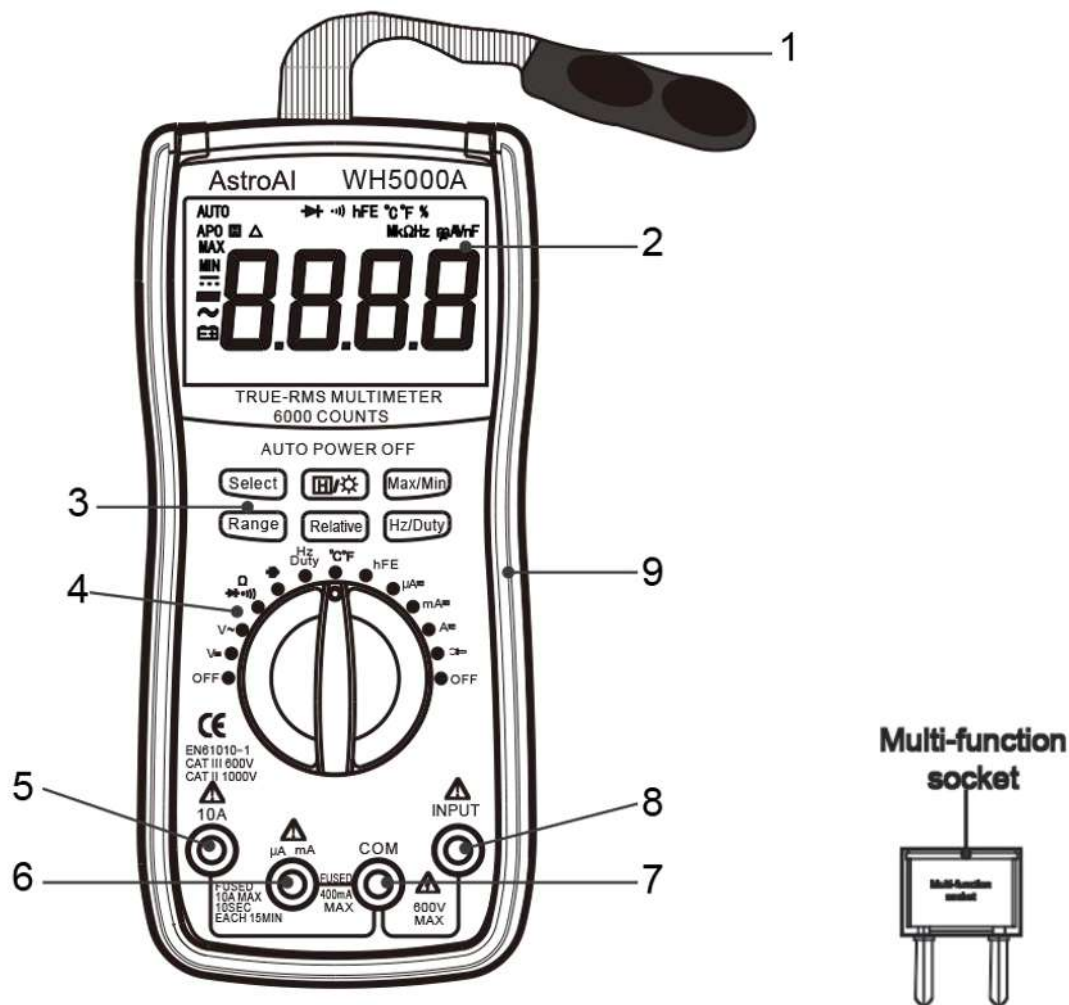

Accuracy is guaranteed for 1 year when stored at 73°F ±9°F

MULTIMETER DIAGRAM



1. Magnetic Hanger
2. LCD Screen
3. Function Buttons
4. Rotary Function Switch
5. 10A Terminal
6. $\mu\text{A}/\text{mA}$ Terminal
7. COM Terminal
8. INPUT Terminal
9. Silicone Sleeve
10. Multi-Function Socket

LCD SCREEN DIAGRAM

| | |
|---|----------------------------------|
| % | Duty Cycle |
| °F | Fahrenheit Temperature |
| °C | Celsius Temperature |
| hFE | Transistor hFE |
| •))) | Continuity Test |
| ➔ | Diode Test |
|  | External Current Test (Clamp) |
| AUTO | Autorange Mode |
| APO | Automatic Power-Off |
|  | Data Hold |
| MAX | Maximum Reading |
| MIN | Minimum Reading |
|  | DC |
| ~ | AC |
|  | Negative Reading |
|  | Low Battery, Replace Immediately |
|  | Relative Mode |

GETTING TO KNOW YOUR DEVICE

Select Button

When using the rotary switch to select a multimeter function, use the Select Button to further select the function. This applies only to multifunction settings like the temperature and test functions.



Button

Hold and backlight function button. When taking a measurement, press this button to hold the data for easier recording. Press the button again to remove the hold function.

Press and hold this button to turn on the backlight on the LCD screen.

Max/Min Button

When taking a measurement, press this button once to enter “Max Mode”. In this mode, the multimeter will capture the highest reading it records. Press this button again to enter “Min Mode” which will capture the lowest reading it records.

Press and hold this button to exit the Max/Min Modes.

Range Button

AC/DC Voltage, AC Current, and Resistance can all be measured in both Auto and Manual ranging. The multimeter will come set to Auto, but if you desire to select the range manually, press the Range Button repeatedly to find the desired range. Beware of selecting a range too low, as it will Overload the device and the multimeter will not give a reading.

Press and hold the Range Button to return back to Auto Ranging.

Relative Button

When taking measurements, you can utilize the Relative Button to get more accurate readings by removing the resistance of the test leads, for example. To activate this function, simply press the Relative Button. A small triangle (delta symbol) will appear on the display and the reading should change to zero.

Press the Relative Button again to exit relative mode.

Hz/Duty Button

When using the Hz/Duty Cycle function on the multimeter, quickly switch between functions by pressing this button. You can also switch to measuring Hz while measuring other functions, like Voltage, for example, by pressing this button during measurement.

Clamp Meter Attachment (Not Included)

Use a clamp meter attachment to measure currents, use the COM terminal for the black lead from the clamp meter and the Input terminal for the red lead from the clamp meter.

Multi-Function Socket (Included)

Use the multi-function socket to measure both Capacitors and Transistors. Be sure to correctly insert the multi-function socket into the COM and INPUT. the negative terminal on the multi-function socket on the left side and the positive on the right side.

DETAILED SPECIFICATIONS

Accuracy is guarantied for 1 year 23°C±5°C less than 80%RH

DC Voltage (Auto ranging)

| Range | Resolution | Accuracy |
|-------|------------|--|
| 600mV | 0.1mV | $\pm(0.8\% \text{ of rdg} + 5\text{dgts})$ |
| 6V | 1mV | $\pm(0.8\% \text{ of rdg} + 3\text{dgts})$ |
| 60V | 10mV | |
| 600V | 100mV | |
| 1000V | 1V | $\pm(1.0\% \text{ of rdg} + 5\text{dgts})$ |

Input Impedance: 10M Ω

Overload Protection: 600V DC/AC RMS

Max. Input voltage: 600V DC

Measure DCV 1000V under CATII

AC Voltage (Auto ranging)

| Range | Resolution | Accuracy |
|-------|------------|--|
| 600mV | 0.1mV | $\pm(1.2\% \text{ of rdg} + 8\text{dgts})$ |
| 6V | 1mV | $\pm(1.2\% \text{ of rdg} + 6\text{dgts})$ |
| 60V | 10mV | |
| 600V | 100mV | |
| 750V | 1V | $\pm(1.2\% \text{ of rdg} + 8\text{dgts})$ |

Input Impedance: 10M Ω

Frequency Range: 40Hz ~ 400Hz

Overload Protection: 600V DC/AC rms

Measure AC V 750V under CATII CAT III

Max. Input voltage: 600V AC RMS CATIII

Temperature

| Range | Resolution | Accuracy |
|--------------|------------|-----------------------|
| -40~1370°C | 1°C | -40°C~150°C:±(1% + 4) |
| -40°F~302°F | 1°F | ±(5% + 4) |
| 302°F~2000°F | | ±(2.5% + 3) |

Overload Protection: F0.4A/600V Fuse

DC Current

| Range | Resolution | Accuracy |
|--------|------------|------------------------|
| 600μA | 0.1μA | ±(0.8% of rdg + 5dgts) |
| 6000μA | 1μA | |
| 60mA | 10μA | |
| 600mA | 100μA | |
| 6A | 1mA | ±(1.5% of rdg + 3dgts) |
| 10A | 10mA | |

Overload Protection:

- “mA” Jack: F0.4A/600V fuse
- “10A” Jack: F10A/600V fuse

Max.Input Current:

- “mA” jack: 600mA
- “10A” jack: 10A

(For measurements >5A: Duration <10 seconds, interval >15 minutes)

Voltage Drop:

- 600μA, 60mA: 60mV,
- 6000μA, 600mA and 10A ranges: 600mV

Transistor hFE Test (Connect Adapter)

| Range | hFE | Test Current | Test Voltage |
|-----------|--------|----------------------|---------------------|
| PNP & NPN | 0~1000 | $I_b \approx 2\mu A$ | $V_{ce} \approx 1V$ |

AC Current

| Range | Resolution | Accuracy |
|--------------|-------------|---|
| 600 μA | 0.1 μA | $\pm(1.5\% \text{ of rdg} + 8\text{dgts})$ |
| 6000 μA | 1 μA | |
| 60mA | 10 μA | |
| 600mA | 100 μA | |
| 10A | 100mA | $\pm(2.0\% \text{ of rdg} + 10\text{dgts})$ |

Overload Protection:

- “mA” jack: F0.4A/600V fuse
- “10A” jack: F10A/600V fuse Max.

Input Current:

- “mA” jack: 400mA
- “10A” jack: 10A

(For measurements>5A: duration<10 seconds, interval >15 minutes)

Voltage Drop:

- 600 μA , 60mA ranges: 60mV
- 6000 μA , 600mA and 10A ranges: 600mV

Frequency Range: 40Hz ~ 400Hz

Resistance (Auto Ranging)

| Range | Resolution | Accuracy |
|-------|------------|-----------------------|
| 600Ω | 0.1Ω | ±(1.5% of rdg + 3dgt) |
| 6KΩ | 1Ω | |
| 60KΩ | 10Ω | |
| 600KΩ | 100Ω | |
| 6MΩ | 1KΩ | |
| 60MΩ | 10KΩ | ±(1.5% of rdg + 5dgt) |


 
Open Circuit Voltage: about 0.25V

Overload Protection: 250V DC/AC RMS

600A AC current through a clamp (DT3303 optional)

| | | |
|------|---------|------------|
| 600A | 1mV/10A | ±(2.5%+10) |
| 200A | 1mV/1A | |

Diode and Continuity

| Range | Introduction | Remark |
|---|--|----------------------------------|
|  | The approximate forward voltage drop will be displayed | Open circuit voltage: about 1.5V |
|  | The built-in buzzer will sound if the resistance is less than about 30Ω. | Open circuit voltage: about 0.5V |

Overload Protection: 250V DC/AC rms

For continuity test: When the resistance is between 30Ω and 70Ω, the buzzer may sound or may not sound. When the resistance is more than 70Ω, the buzzer will not sound

Capacitance

| Range | Resolution | Accuracy |
|-------|------------|---|
| 60nF | 10pF | $\pm(8\% \text{ of rdg} + 5\text{dgt})$ |
| 600nF | 100pF | |
| 6uF | 1nF | |
| 60uF | 10nF | |
| 600uF | 100nF | |
| 20uF | 10uF | |

Overload Protection: F0.4A/600V fuse

Open circuit voltage: about 0.5V

Frequency (Auto Ranging)

| Range | Accuracy |
|---------|------------------|
| 0~60MHz | $\pm(1.0\% + 5)$ |

Overload Protection: 250V DC/AC RMS

OPERATING INSTRUCTIONS

Voltage Measurement

1. Connect the black test lead to the "COM" jack and the red test lead to the "INPUT " jack.
2. Set the function switch to $V\sim$ or $V\overline{\sim}$ range. Choose either Auto or Manual range using the "Range" Button.
3. In manual range, if the voltage magnitude to be measured is unknown beforehand, select the highest range.
4. Connect the test leads to the source or load to be measured.
5. Read LCD display. The polarity of the red lead connection will be indicated when making a DC measurement.

Note:


- a. When measuring small ranges, the multimeter's display will sometimes show an unstable result if the test leads are not connected to the load being measured. This is normal and will not affect measurements.

- b. In manual range, when the multimeter shows “OL” or Over Range, you must select a higher range in order to get results.
- c. To avoid damage to the meter, do not measure voltage exceeding 600V DC or 600V AC CATIII.

Current Measurement

1. Connect the black test lead to the “COM” jack. If the current to be measured is less than 600mA, connect the red test lead to the “mA” jack. If the current is between 600mA and 10A, connect the red test lead to the “10A” jack instead.
2. Set the function switch to necessary range (μ A, mA, or A). If the current magnitude to be measured is not known beforehand, set the function switch to the highest range and then reduce it range by range until a satisfactory resolution is obtained.
3. Select DC current measurement or AC current measurement with the “Select” Button.
 - a. There is no option to change between manual and automatic ranges for current measurements.
4. Connect the test leads to the source or load to be measured.
5. Read LCD display. The polarity of the red test lead will be indicated.


 
Resistance Measurement

1. Connect the black test lead to the “COM” jack and the red test lead to the “INPUT ” jack.
2. Set the function switch to “ ” range.
3. Select either Auto or Manual range with the “Range” button. In manual range, if the Resistance magnitude to be measured is not known beforehand, select the highest range.
4. Connect the test leads to the source or load to be measured.
5. Read LCD display. The polarity of the red test lead will be indicated.



Note:

- a. For resistance measurements $>1\text{M}\Omega$, the meter may take a few seconds to stabilize reading. This is normal for high-resistance measurement.
- b. When the input is not connected, i.e. at open circuit, the symbol “OL” will be displayed as an over range indicator.
- c. Before measuring in-circuit resistance, be sure that the circuit under test has all power removed and all capacitors are fully discharged.

Continuity Test

1. Connect the black test lead to the “COM” jack and the red test lead to the “INPUT ” jack.
2. Set the function switch to “ ” range.
3. Press the “Select” Button to select continuity measurement mode, and the symbol “ ” will appear on the display.
4. Connect the test leads across the load to be measured.
5. If the circuit resistance is lower than about 30Ω , the built-in buzzer will sound.

Diode Test

1. Connect the black test lead to the "COM" jack and the red test lead to the "INPUT" jack.
2. Set the function switch to " " range.
3. Press the "Select" Button to select continuity measurement mode, and the symbol " " will appear on the display.
4. Connect the red test lead to the anode of the diode to be tested and the black test lead to the cathode.
5. The meter will show the approximate forward voltage of the diode. If the connections are reversed, "OL" will be shown on the display.
 - a. In this case, simply switch the test leads from the anode to the cathode and vice versa.

 
Transistor Test


1. Set the function switch to "hFE" range.
2. Connect the multi-function socket to the "COM" and "INPUT" Jacks. The negative side of the socket must meet COM and the positive to INPUT. It is very important not to reverse these by mistake.
3. Identify whether the transistor is NPN or PNP type and locate Emitter, Base and Collector lead. Insert the leads of the transistor to be tested into the proper holes of the transistor test socket of the adapter.
4. Read the LCD display for the approximate hFE value.

Temperature Measurement

1. Set the function switch to "°C/°F" range.
2. Use the Select Button to choose either Celsius or Fahrenheit.
3. Insert the negative (black) plug of the K-type thermocouple to the COM Jack and the positive (red) plug to the INPUT Jack.
4. Carefully touch the end of the thermocouple to the object being measured.
5. Wait for the temperature reading to settle, then record the result from the LCD display.

Capacitance Measurement

1. Set the function switch to " " range.
2. Connect the multi-function socket to the "COM" and "INPUT" Jacks. The negative side of the socket must meet COM and the positive to INPUT. It is very important not to reverse these by mistake.
3. Place the capacitor into the multifunction-socket with the positive end in the positive (INPUT) side of the multifunction-socket and the negative end of the capacitor in the negative (COM) terminal of the multifunction-socket.
4. The results will be displayed on the LCD display.
5. If your Capacitor's legs are too short to be used with the multifunction-socket, use the test leads:
 - a. Connect the black test lead to the "COM" jack and the red test lead to the "INPUT" jack.

- b. Set the function switch to “” range.
- c. Connect the test leads to the capacitor to be measured. Be sure to be aware of the polarity of the connection.

Note:

- a. When the capacitance under measure is more than 600uF, it needs at least 10 seconds to make readings stable.


Frequency Measurement

1. Set the function switch to the “Hz Duty” position.
2. Connect the black test lead to the “COM” jack and the red test lead to the “INPUT ” jack.
3. Connect the leads to what is being measured, then get the results on the LCD screen.

Note:

- a. Do not apply more than 250V RMS to the input.

Current Measurement (with Clamp attachment)

1. To measure current with a clamp, use either a clamp specifically made for DC current or AC current.
2. Connect the negative output lead of the clamp to the COM Jack and the positive output lead to the INPUT Jack.
3. Set the function switch to “” range.
4. Clamp the circuit to be measured with the clamp.
5. The results will be displayed on the LCD display.


Note:

- a. Each time a measurement is taken, make sure that only one cable is clamped and is in the center of the clamp jaws.
- b. The clamp can only test for up to 600A, do not test circuits higher than 600A.
- c. Do not touch the circuit with hand or skin.
- d. The multimeter assumes a clamp has a sensitivity of 1A/1mV. The indicated value is the same as the measured value for clamps with 1A/1mV.
 - i. If you use a clamp whose sensitivity does not equal 1mV/1A, multiply the present reading by a factor which is determined by the used clamp, the result is the measured value. To determine the factor, please refer to the instructions of the clamp which you use.

Auto Power Off

The meter will power off after approximately 15 minutes of inactivity. To turn it on again, turn the rotary function switch, or press the “Select” or “Range” button for more than 2 seconds.

Battery Replacement

If the “” symbol appears on the display, the battery should be replaced immediately. Remove the rubber sleeve and the screws on the back of the multimeter to replace the battery.

Replace with NEDA 1604, 6F22, or equivalent 9V battery. Disconnect the test leads before opening the back of the multimeter.

Fuse Replacement

Fuses will rarely need replacement and are normally only blown due to operator error. To replace the fuses, open the battery cover by removing the rubber sleeve as well as the screws on the back of the multimeter. Disconnect the test leads before opening the back of the multimeter.

Replace the damaged fuse with a new one with the same ratings. This meter uses two fuses:

Fuse1: 400mA, 600V, FAST, Min. Interrupt Rating 20000A, Ø10X38mm

Fuse 2: 10A, 600V, FAST, Min. Interrupt Rating 20000A, Ø10X38mm

ACCESSORIES

1 x Owners Manual

1 x Pair of Test Leads

1 x K-Type Thermocouple

1 x Multi-Function Socket

DISPOSAL OF THIS ARTICLE

If you at some point intend to dispose of this article, please keep in mind that many of its components consist of valuable materials, which can be recycled. Please do not discard it in the garbage bin, but check with your local authorities for recycling facilities in your area.

1 Year Warranty Limited Warranty From AstroAI

Each AstroAI Digital Multimeter will be free from defects in material and workmanship. This warranty does not cover fuses, disposable batteries and damage from neglect, misuse, contamination, alteration, accident, or abnormal conditions of operation or handling, including overvoltage failures caused by use outside the Multimeter's specified rating, or normal wear and tear of mechanical components. This warranty covers the original purchaser only and is not transferable.

If this product is defective, please contact AstroAI Customer Support at support@astroai.com.