

Bushnell®

TRAIL CAMERAS



CELLUCORE 20 TRAIL CAMERA INSTRUCTION MANUAL

CELLUCORE 20 MODEL # 119904A (AT&T) / 119904V (VERIZON)



WELCOME

Welcome to your Bushnell Trail Camera! This manual has all the instructions you need to set up your camera and your account, plus quick answers to your questions.

If your camera does not seem to be functioning properly or if you are having image quality issues, please check the Troubleshooting Tips section.


If your problem continues after trying the solutions in Troubleshooting Tips, please call Bushnell Customer Service at (800) 423-3537. In Canada, call (800) 361-5702.

Note: This Bushnell trail camera model is not designed or intended for operation or sale outside of the United States.

TABLE OF CONTENTS

Camera Overview	4
Camera Status Indicator Guide	6
Quick Start Guide	6
Settings Menu	9
Mounting & Positioning	11
Using An External Power Source	14
Frequently Asked Questions	14
Technical Specifications	16
Two-Year Limited Warranty	17


CAMERA OVERVIEW

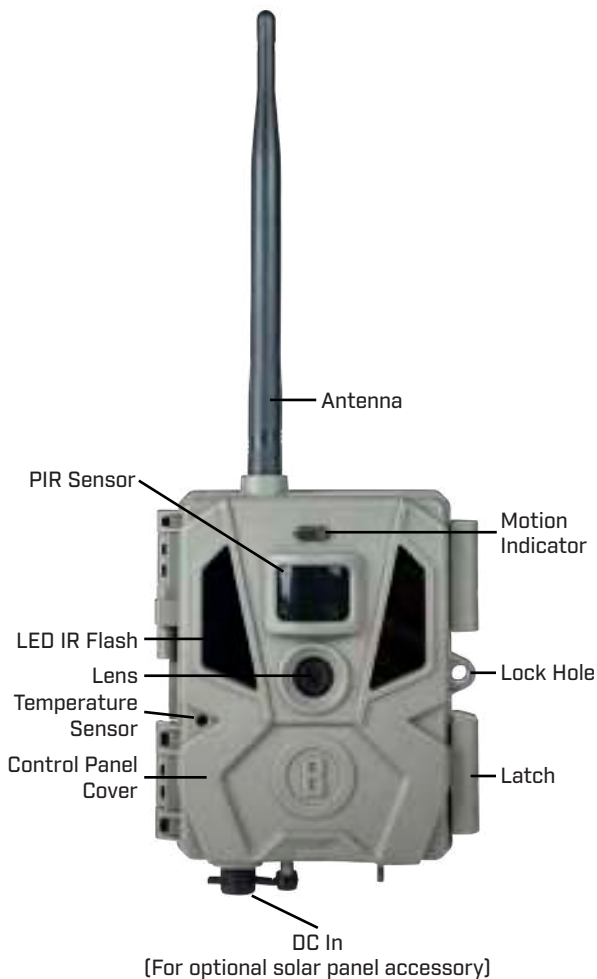

CAMERA STATUS INDICATOR GUIDE

Camera Status Indicator Lights

Look here to identify what a green, yellow, or red light means for your camera status, battery life, and cellular signal.

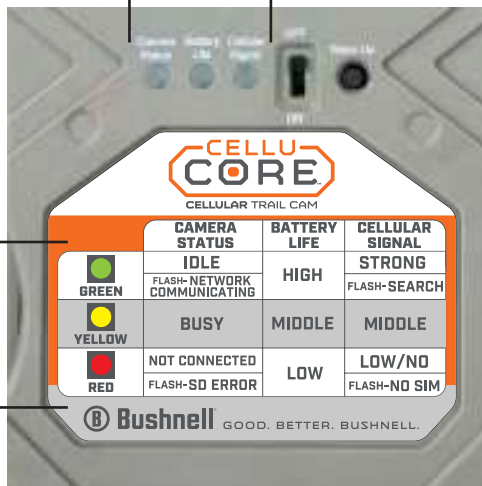

QUICK START GUIDE




1. Download the free Bushnell Trail Camera app on your smartphone from the App Store (iPhone®) or Google Play® (Android®).



2. Open the app, then sign in or create a new account.



3. Log in and click the Camera icon at the bottom of the screen, then click “+” to add a new camera. Scan the QR code on the label inside your camera again or manually enter its serial # to associate this camera with your account.

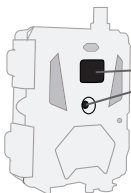

4. Remove the protective plastic covers from the camera lens, and PIR sensor.



5. Install 12 AA batteries (Energizer® lithium batteries are recommended. Alkaline batteries may be used but battery life will be shorter. Rechargeable batteries are not recommended). Be sure to position the batteries for correct polarity (+/-) when installing.




6. Install a new SD card, up to 32GB. High speed cards (class 6 or higher) are recommended if you plan to record video clips.



7. At the location where you will place the camera, move the power switch to the On position. The camera's default settings were chosen for typical usage as

a scouting camera for hunters: photo mode at 2MP resolution, with a 10 second interval between photos, and “Medium” LED flash power output. These settings may be easily changed to suit your individual preferences or application (for example, if you would rather capture videos, or photos at a different resolution, spaced further apart), using the app on your smartphone or home computer.

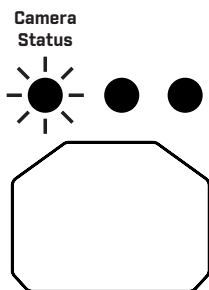

(see pg. 6 for camera status indicator guide)

8. Prior to closing the camera, ensure the camera has acquired cellular signal by checking the camera status indicator lights and guide. Lower signal strength can cause interruptions in service and shorten battery life. Mount the camera using the provided tree strap or 1/4"-20 mounting socket. A leveling arm to adjust the camera's angle is provided near the lower rear of the camera.

Your wireless camera is now ready to use. You can now utilize the mobile application or management website to review images, change camera settings, monitor battery life and other functions of the camera.

Android® and Google Play® are registered trademarks of Google Inc. iPhone® is a registered trademark of Apple, Inc.

SETTINGS MENU *[Check your app for these settings]*

IMG. TYPE - Selects type of image files that are stored/transmitted [note: see “Hybrid” under Video submenu].

PHOTO - Still images will be captured by the camera at settings made in the PHOTO menu.

VIDEO - Video clips will be captured at settings made in the VIDEO menu. NOTE: your full HD video files will be stored on the SD card, but they cannot be transmitted wirelessly due to the file size/cell carrier bandwidth.

HYBRID- Captures a single image followed by a video clip.

IMAGE SIZE - Selects resolution [in megapixels] for still photos. Higher resolution provides more pixels for increased detail, but creates larger files that take up more of the SD card capacity [fills up faster]. Available settings are: 2, 8 and 20 [megapixels]. 2 is the default setting, which will deliver excellent detail while still keeping the file size per image reasonable for most users.

CAPTURE NUMBER - Selects the number of photos captured per trigger event, with settings from 1 to 5 [default is 1 photo per trigger].

VIDEO SIZE - Selects resolution for video clips. Choice of 1280x720 [720p], or 960x544 [544p].

VIDEO LENGTH - Selects duration of each video clip captured per trigger. The default setting is 5S (five seconds per video). From the 10 SEC setting up, length settings are in 5 second increments. Maximum video length is 20 Seconds.

CAMERA NAME - Allows you to enter up to 12 characters

of your choice to identify this camera. Especially useful for multi-camera setups. This will be imprinted on each photo. Default name is "CORE CAM".

PIR DELAY - Selects the length of time that the camera will ignore additional triggers from the PIR after an animal is first detected and remains within the sensor's range. During this user set interval, the camera will not capture photos or videos. For example, if a second trigger event occurs 7 seconds after the first, but the delay time is set to 10 seconds, the second trigger will be ignored and a new image will not be captured until the 10 seconds has elapsed. Only the next trigger that occurs after 10 seconds will take a new photo/video, and so on. This prevents the card from filling up with too many redundant images. The default setting is 10 SEC (a ten second delay). From the 10 SEC setting up, delay settings are in 5 second increments. After scrolling past "59 SEC", settings go from "1 MIN" to "10 MIN" and then progress to 60 MIN at five-minute increments (15 MIN, 20MIN, etc.).

WORK MODE - Determines when the PIR (passive infrared) sensor will activate the camera and capture images.

DAY - 6:00 A.M. - 6:00 P.M.

NIGHT - 6:00 P.M. - 6:00 A.M.

24HRS - PIR Sensor triggers 24 hours a day.

Flash Mode:

SHORT RANGE - This is Medium LED output and fast shutter speed that is designed to capture good images of animals up close. This setting will provide the longest battery life but the shortest flash range.

FAST MOTION – This setting has maximum flash output and fast shutter speed. It will provide the sharpest images and medium flash range and battery life.

LONG RANGE – This setting has High LED output and Slow shutter speed and provides maximum flash range but the least battery life. You will also see more “motion blur” if the objects are moving quickly at night.

TIMESTAMP - The date and time will be set once the camera has connected to the server and will be imprinted on all images.

WIRELESS - Sets cellular signal transmission to ON (default) or OFF.

Transmit Frequency:

IMMEDIATELY - Images will be transmitted immediately after they are captured and saved to the SD card.

DAILY - All new images will be transmitted only once daily.

WEEKLY – All new images will be transmitted once per week. [This setting will give you the best battery life].

MOUNTING & POSITIONING

After you've set up the camera's settings to your preferences, you're ready start capturing images.


We recommend mounting the camera on a sturdy tree or post with a diameter of about 6 in. To get the optimal picture quality, the camera should be about 16-17 ft. away from the

place to be monitored, with the camera placed at a height of 3.5-5 ft. Also, keep in mind that you will get the best results at night when the subject is within the ideal flash range, no farther than 60' and no closer than 10' from the camera.


The height away from the ground for placing the device should vary with the animal size appropriately. In general, 3 to 6 feet is preferred. You can avoid potential false triggers due to temperature and motion disturbances in front of the camera by not aiming it at a heat source or nearby tree branches or brush (especially on windy days).

There are two ways to mount the camera:

- **Using the provided adjustable belt:** Push one end of the belt through the two slots on the back of the trail camera. Thread the end of the strap through the buckle. Fasten the belt securely around the tree trunk by pulling the end of the strap firmly so there is no slack left.

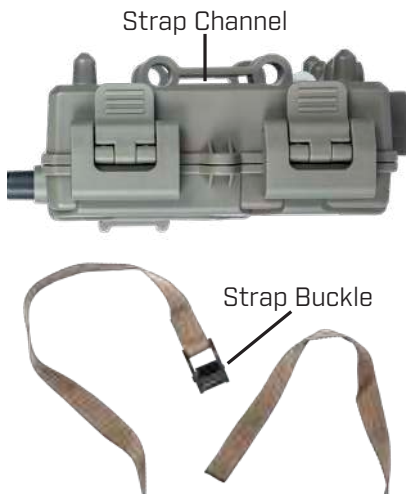

- **Using the tripod socket:** The camera is equipped with a socket at the back (below the strap brackets) to enable mounting on a tripod or other camera mounting accessories that have a standard 1/4"-20 thread.

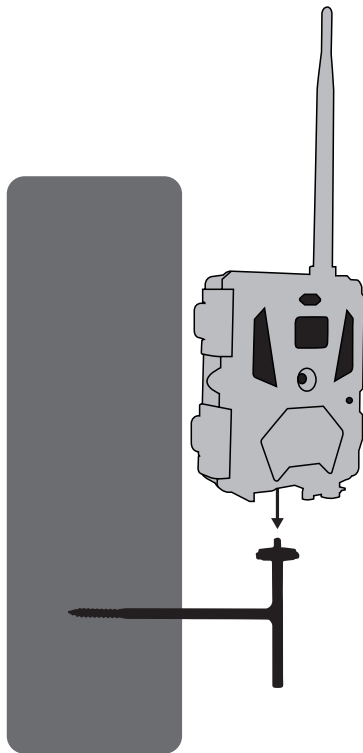

USING AN EXTERNAL POWER SOURCE

[Power accessory not included]

Connect the optional (119986C) Accessory Solar Panel (please visit www.bushnell.com for more information) to the “DC In” jack at the bottom of the camera (other external power supplies should not be used, as the camera and/or display may not function correctly). If the solar panel is connected and AA batteries are installed, the camera will be powered by the solar panel’s rechargeable lith-ion battery, as long as it provides adequate voltage (if not, the camera will switch to battery power). The solar panel’s battery will power the camera at night.

FREQUENTLY ASKED QUESTIONS

For quick help with more questions, call Customer Service at (800) 423-3537. In Canada, call (800) 361-5702.

DATA & DATA PLANS

Q: If I have multiple cameras do I need a data plan for each camera?

Yes, each camera must have an active data plan to transmit images.

Q: How do I cancel or suspend my data plan?

You can Cancel or Suspend your data plan through the wireless application in the “Camera” tab or through the management website.

PHOTOS

Q: Can I transmit photos to more than one cell phone number or email address?

Accounts are tied to a customer’s e-mail address. You can

have multiple devices logged into the same account but only one e-mail address per account. If you wish to share your photos with others you will need to share the account log in information with them.

Q: How do I delete photos on my account?

There are several ways to delete images. From the tile view screen you can hold down on the image and it will select the image (place a check next to it). Once it is selected you can click the Trash Can icon to delete it. You can also delete the image from the individual image view by clicking the Trash Can icon.

VIDEOS

Q: How do I access the videos from the camera?

If there is a video captured by the camera it will be saved to the SD card. To access the video you must retrieve it from the SD card and insert into a computer or SD reader where the video can be reviewed.

SD CARDS

Q: What size and brand SD card?

We recommend SanDisk Class 10 up to 32GB

BATTERIES

Q: What should I expect from my battery life?

Average battery life is about 6 months with the Celucore 20 on default setting and powered by lithium AA batteries. Battery life will be shorter if settings are set to take multiple photos per trigger, take photos/videos more frequently (short delay times), or LED flash output is increased.

ACCESSORIES

Q: Do you have a solar panel for my camera?

Yes, the 119986C solar panel is compatible with ALL Bushnell cellular trail cameras.

TECHNICAL SPECIFICATIONS

Lens: F = 2.3; FOV=47°; Auto IR-Cut-Remove (at night)

Picture Size (pixel count in 16:9 format): 2MP=1920x1080, 8MP=3840x2160, 20MP=5888x3312

Video Size: 1280x720P or 960x544 (544p) @ 15-30 fps

Video Length: Fixed length video time settings range from 5 to 20 seconds

PIR Sensitivity: 4 settings: Low/Normal/High/Auto

Response Time: 1 second (Photo), 2.5 second (Video). 2.5 second interval

Triggering Interval: 5 sec. - 60 min. programmable

Images per Trigger: 1—5 programmable

Power Supply: 12x AA batteries, lithium (recommended) or alkaline

Stand-by Current: < 200uA

Average Battery Life: Approx. 6 mos. at 20 images per day average (10 day, 10 night w/LEDs)

Operating Temperature: -10 - 50°C (Storage temperature: -20 - 60°C)

Operating Humidity: 5% - 90%

***⚠ WARNING:** This product can use Lithium based batteries. Lithium batteries can overheat and cause damage if physically abused. Do not use any batteries that are damaged or show signs of physical wear. Never use a mix of old and new batteries, or batteries with different brand names.*

TWO-YEAR LIMITED WARRANTY

Your Bushnell® product is warranted to be free of defects in materials and workmanship for two years after the date of purchase. In the event of a defect under this warranty, we will, at our option, repair or replace the product, provided that you return the product postage prepaid. This warranty does not cover damages caused by misuse, improper handling, installation, or maintenance provided by someone other than a Bushnell Authorized Service Department.

Any return made under this warranty must be accompanied by the items listed below:

- A check/money order in the amount of \$10.00 to cover the cost of postage and handling.
- Name, address and daytime phone # for product return.
- An explanation of the defect.
- Copy of your dated proof of purchase.
- Do not send in accessories (batteries, SD cards, strap), only the product for repair.

Product should be well packed in a sturdy outside shipping carton to prevent damage in transit, and shipped to the address listed below:

IN U.S.A. Send To:

Bushnell Outdoor Products
Attn: Repairs
9200 Cody
Overland Park, Kansas 66214

IN CANADA Send To:

Bushnell Outdoor Products
Attn.: Repairs
140 Great Gulf Drive, Unit # B
Vaughan, Ontario L4K 5W5

For products purchased outside the United States or Canada please contact your local dealer for applicable warranty information. In Europe you may also contact Bushnell at:

Bushnell Germany GmbH
European Service Centre
Mathias-Brüggen-Str. 80
D-50827 Köln
GERMANY
Tel: +49 221 995568-0
Fax: +49 221 995568-20

This warranty gives you specific legal rights.
You may have other rights which vary from country to country.
©2021 Bushnell Outdoor Products

Specifications and designs are subject to change without any notice or obligation on the part of the manufacturer.

FCC COMPLIANCE STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may

not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Shielded interface cable must be used with the equipment in order to comply with the limits for a digital device pursuant to Subpart B of Part 15 of FCC Rules. Specifications and designs are subject to change without any notice or obligation on the part of the manufacturer.

Contains FCC ID: XMR2020BG95M2 

Note: This Bushnell Wireless Camera is not designed or intended for operation or sale outside of North America.

This product features technology licensed from Zipit Wireless, Inc. ("Zipit"), that is copyrighted work of, and may be patented by, Zipit Wireless, Inc. Copyright 2003-2020 Zipit Wireless, Inc. All rights reserved. Access to the Zipit services may be bound by EULA and Privacy policies located at www.bushnell.com or www.zipitwireless.com/legal.

**FOR END USER LICENSE AGREEMENT AND TERMS/
CONDITIONS OF USE,
PLEASE VISIT WWW.WIRELESSTROPHYCAM.COM**

iPhone® is a registered trademark of Apple Inc.

Android™ and Google Earth are trademarks of Google Inc.

AT&T® is a registered trademark of AT&T Inc.

*Verizon™ and Verizon Wireless™ are trademarks of
Verizon Trademark Services, LLC*

DISPOSAL OF ELECTRIC AND ELECTRONIC EQUIPMENT

[Applicable in the EU and other European countries with separate collection systems]

This equipment contains electric and/or electronic parts and must therefore not be disposed of as normal household waste. Instead, it should be disposed at the respective collection points for recycling provided by the communities. For you, this is free of charge. If the equipment contains exchangeable (rechargeable) batteries, these too must be removed before and, if necessary, in turn be disposed of according to the relevant regulations (see also the respective comments in this unit's instructions). Further information about the subject is available at your community administration, your local waste collection company, or in the store where you purchased this equipment.



Bushnell®

TRAIL CAMERAS

For further questions or additional information please contact:

Bushnell Outdoor Products
9200 Cody, Overland Park, Kansas 66214

(800) 423-3537 | www.bushnell.com

©2021 Bushnell Outdoor Products