



MusiBaby

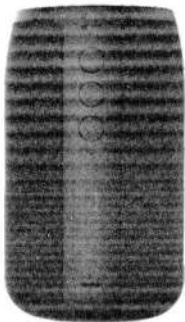

M68 Portable Speaker

1.Product Overview

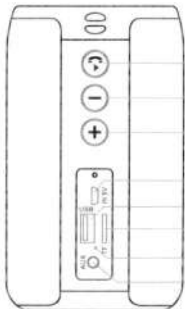

Long press: ON/OFF
Double click: Mode switch

Single Click: Volume -
Long press: Previous track

Single Click: Volume +
Long press: Next track

Charging Port

USB Port

TF Port

Indicator light

AUX Port

2. Power On/Power Off

Long press "  " for 3 seconds.

3. Product function introduction


Mode switching sequence:

Bluetooth → Insert TF Card

→ Audio Cable(AUX) →

USB → Radio

(When TF Card and AUX cable inserted together, the last inserted content will be defaulted to the playback mode.)

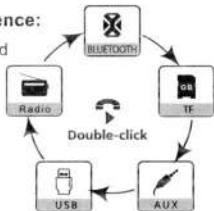

① Bluetooth Mode



Bluetooth connection:

Long press "  ", after hearing the warning tone music, search for the bluetooth device


" MusiBaby-M68" and click on the connection, then you can play music from your phone.

How to reconnect? 1. Your speakers will try to reconnect to the lost connection. 2. If the speaker does not attempt to reconnect, push the key to restart or manually reconnect via the phone's Bluetooth device menu.

When incoming call:

- Single click "": answer the phone;
- Long press "": reject to answer the call;

When playing music:

- Long press " ,  " button is switching the previous and next track;
- Single click " ,  " button is adjusting the volume;
- Single click " " button is Play / Pause;

②TF Card Mode

Turn on the device, and insert the TF Card, it will play music from TF card after hearing the warning tone "**Music Mode**".





③Aux Mode

Turn on the device and connect it with audio cable, it will switch to aux mode after hearing the warning tone " **Line in Mode** ".

④USB Mode

Turn on the device, You will hear the voice " **Music Mode** " when you insert the USB disk, then you can play the music from the USB disk.

⑤Audio Mode

- Double click "  " button, switch to audio mode after hearing the warning tone " **Radio Mode** ".
- Single click "  " button is searching channel automatically, after the search is completed, the first station searched will be played.
- Long press "  ,  " is adjusting the previous and the next broadcasting station;
- Single click "  ,  " button is adjusting the volume.
(Plug in the charging cable for better radio reception)

4. Product Specifications

Input voltage: 5V

SNR: $\geq 85\text{dB}$

Operating Voltage: 3.7V

Dimension: 74*74*123mm

Frequency response: 20Hz-20KHz

Speaker: 4 Ω 5W

Distortion: $< 1\%$

Weight: 350g

5. Charging

- When the battery is low, you will hear the tone "**Low Battery**", then please charge it.
- Plug the USB cable to the adaptor (or Computer's USB port) to charge the speaker, the red indicator light will be on when charging, the indicator light will be off when fully charged.
- Charging time may vary by different adapter, different USB charging port of computer.

6. How to make two speakers dual pairing ?

1. Make sure to turn off the Bluetooth function of your phone or Bluetooth device before turn on both of your speakers.
 2. Turn on two M68 speakers at the same time.
 3. Double-click the sound reduction button "-" on any one of speakers, then you will hear one prompt sound within 30~60 seconds. The blue light of one speaker is always on, while the blue light of another one is flashing. Both speakers connected successfully.
 4. Turn on the Bluetooth function of your phone or Bluetooth device, search the Bluetooth named "MusiBaby M68", click connect will be OK.
 5. After the first connection is successful and the subsequent connection will be automatic.
- (An important reminder: if your previous mobile phone was connected to any of the speakers separately, the speakers have a memory of the previous connection, it will affect the pairing. Therefore, you need to clear and forget the previous connection first.)

7. Notice

- Do not throw this product into fire or water.
- Do not modify, repair or disassemble the speaker.
- Do not make it contact with combustible materials directly.
- Do not submerge it in water.
- Before charging please check whether the charger model is suitable for this product.
- Do not use the Bluetooth function while charging.
- The device will automatically lose power when it's in standby, it's recommended to charge the speaker once a month.

Please keep your speaker and mobile phone within 10m working range.

Any wrong modification to the speaker may damage the speaker.
Improper replacement of batteries can lead to an explosion hazard.

