



User Manual

Thank you for purchasing this product. This is the Quick Start Guide, which provides you with instructions on the basic operations of the recorder. Please read it carefully before using this product.

1. Precautions

Charging

Do not use the Recorder or leave the recorder on the bed, under the pillow and other locations accessible to children during the charging process.

Document Completeness

Do not push the power switch to prevent the current recording document from being lost during the recording process.

Interferences

All device are possibly interfered, which may influence their functions. Please keep far from the interference sources when the Recorder works.

Backup


Digital voice recorder

Please keep backup documents in case that external errors or operation failure may lead the machine to lose its documents.

Transmission

Do not disconnect the Recorder from computer during data transmission process to prevent data loss.

2.Parts and Controls

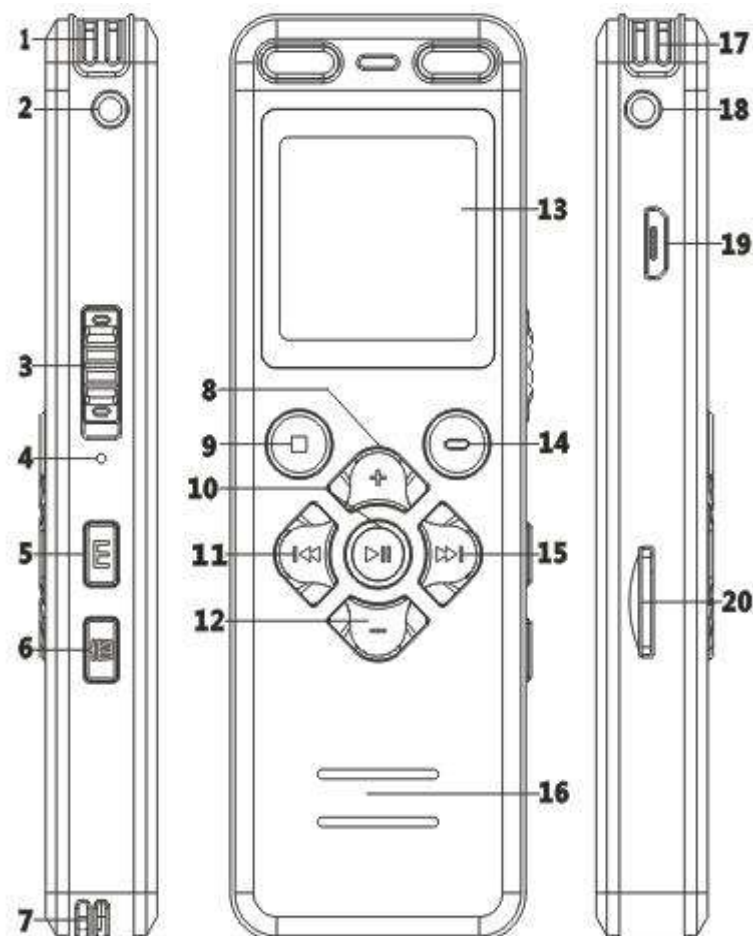

Digital voice recorder

- 1.Right channel sound hole
- 2.Headphone jack
- 3.Lock
- 4.Reset
- 5.Menu
- 6.Delete/A-B
- 7.Lanyard hole
- 8.Volume up button
- 9.Stop/Escape button/Save button
- 10.Pause/Play button
- 11.Rewind/Previous file button
- 12.Volume down button
- 13.Screen
- 14.Record
- 15.Fast forward/Next file button
- 16.Bellmouth orifice
- 17.Left channel sound hole
- 18.Line in jack
- 19.USB port
- 20.TF card socket

3.Charge

Digital voice recorder

Connect the recorder to your computer via the USB cable(Supplied).

Inset the micro USB end to the recorder, and the USB end to the USB port of a running computer.

When the recorder is charging, the screen will show electric quantity atop right.


The battery will be fully charged after about 3 hours and then can work 70 hours



4. Turn the Power On

① When the machine is in a dormant state, long press "▶||" boot.

② When the machine is asleep, press the "REC" key, turn on the machine and start recording.

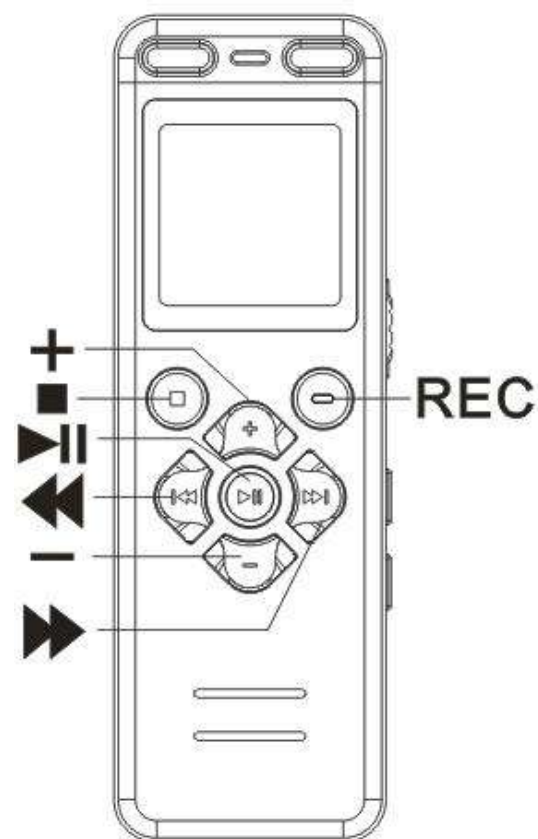

5. Turn the Power Off

When the machine is in shutdown, press "▶||" off.



❖ Hint

When the recorder is in the stop mode, and you leave the recorder without attempting. an operation for approximately 2 minute, the auto power off function will take effect.

6. Record

1. In the standby mode, press the "REC" machine to enter the recording state, press the "■" button to save the recording file, press "▶||", pause the recording, and then lock other key functions by "lock key".

2. In sleep, long press REC to boot and enter the recording state, short press "■" will save

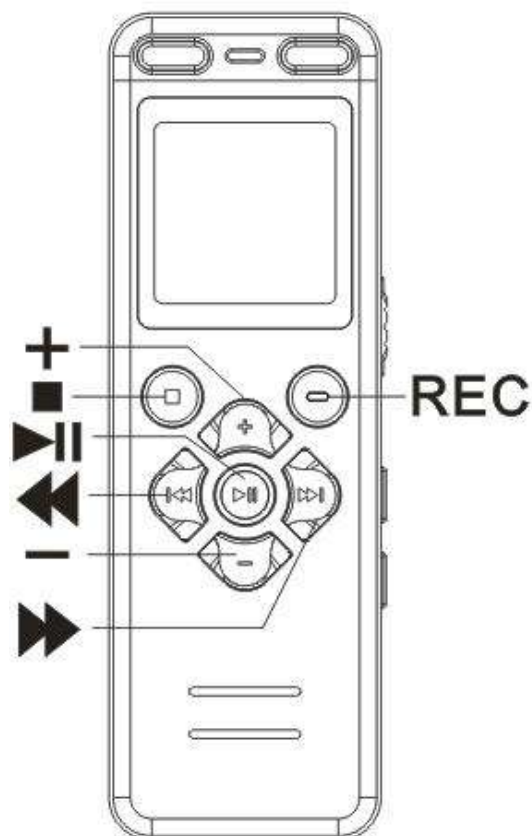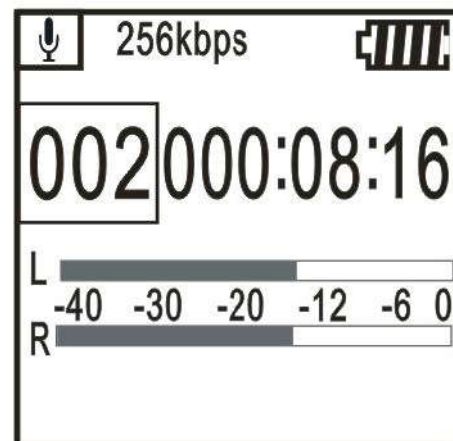


Digital voice recorder

the recording file, short press "▶||", pause recording, you can lock other key function by "lock key".

- Place the recorder so that the built-in microphones face the direction of the source to be recorded.


The new file will be automatically recorded as the last file in the current folder.

7. Play

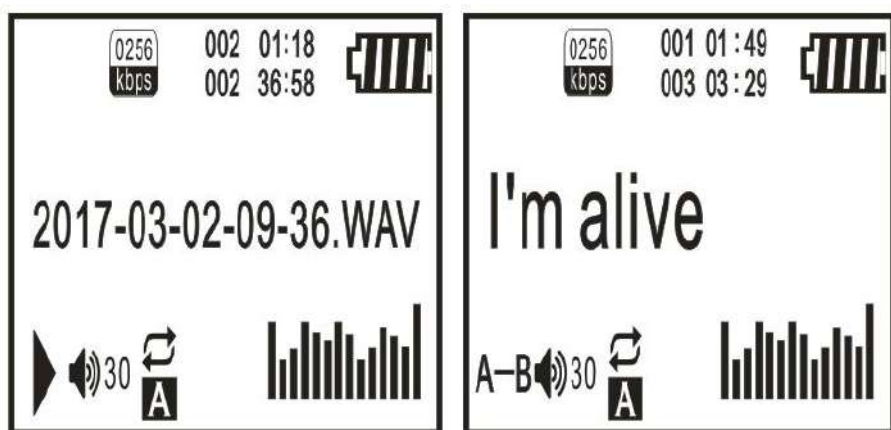

- Music player: after booting, press the "M" button to switch to music mode. Press the play button to "▶||" the music file.

- Voice play: after booting, press the "M" button to switch to the voice mode, press the "▶||" to play the recording file.

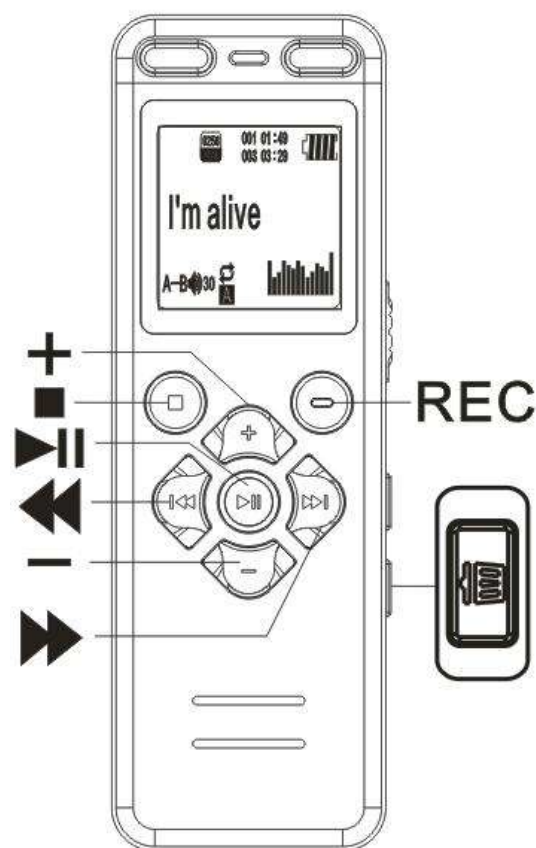

8. "A-B" Repeat Play




Digital voice recorder

- In playback state, short press "delete" a screen display "A" in the flash, said to enter the repeat mode, and then press the delete key once, the screen shows "B" in the flicker, expressed as the starting point of the repeat section, then press "delete" a the "B" section of the end point and repeat, repeat play in the range of A-B. Press again "delete" once, exit the A-B repeat mode.


9.Erase

- Standby mode short press "M" button to enter the main menu, press "▶▶" , "◀◀" select "delete files", short press "▶||" in a short press "■" exit.

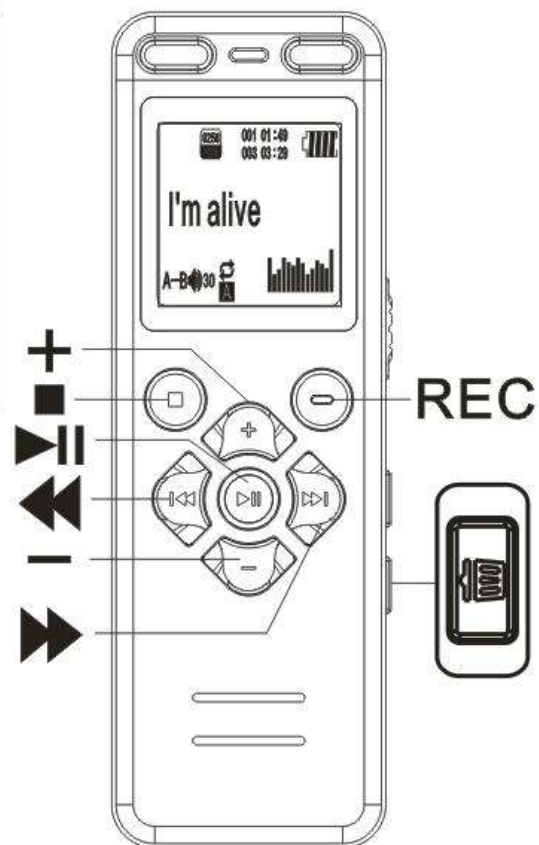

- Short press "+" / "-" select "single deletion", press "▶||" to enter, press "+" / "-", "yes / no", press "▶||" to confirm, press short "■",

Digital voice recorder

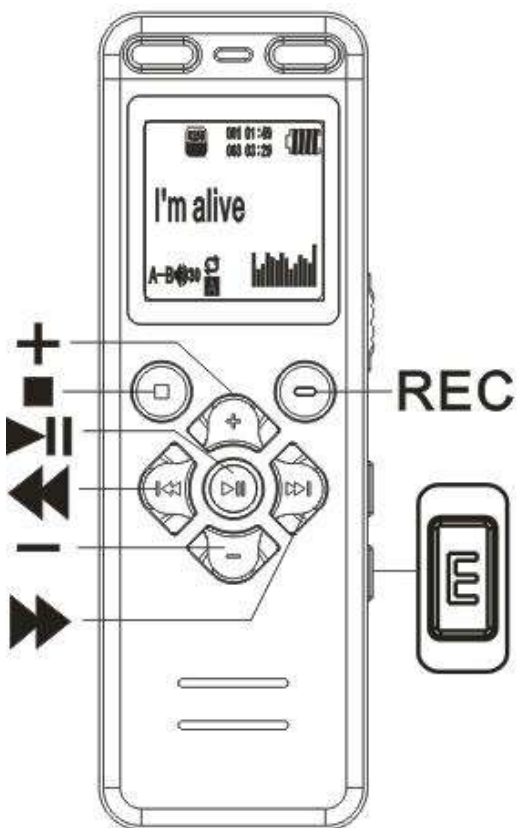


and then exit.

- Short press "+" / "-" select "delete all", press "▶||" to enter, press "+" / "-", select "yes / no", press "▶||" to confirm, press short "■", then exit.

❖ Note

Once a file has been erased, you cannot retrieve it.

10. SETUP MENU

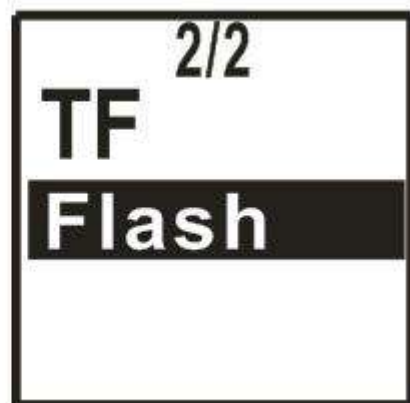

● Memory location

1. In the standby mode, short press "M" button to enter the main menu, press "▶▶", "◀◀", select "memory location", short press "▶||" in a short press "■" exit.

Digital voice recorder

2. Press "+" / "-", select "TF", "Flash", and press "▶||" to save. At this point, the recording file is stored according to the storage location of your choice, and short press "■" is exited.

● Record setting



1. In the standby mode, short press "M" button to enter the main menu, press "▶▶" , "◀◀" select "recording settings", short press "▶||" in a short press "■" exit.

2. Enter the "library", press "+" / "-" to select the recording files you want to play, press "▶||" short, press "■" to exit.

3. Short press "▶▶" , "◀◀" choose the "recording format", short press "+" / "-" choose "WAV", "MP3", press "▶||" to confirm the save, short press "■" exit, then according to

the audio file, you set the audio format recording.

4. Short press "▶▶" , "◀◀" choose the "recording

Digital voice recorder


bit rate", short press "▶||" to enter, when choosing "WAVRec"(256kbps/512kbps/1536kbps) / "MP3Rec" (32KBPS/64KBPS/128KBPS) short press "+" / "-", short press "▶||" to confirm the save settings, press "■" to exit, then the audio file, will you set the bit rate according to the tape recording.

5. Short press "▶▶" , "◀◀" select "voice" mode, short press "▶||" to enter, press "+" / "-" select "normal mode /voice mode" short press "▶||" confirmation to save the settings, press the "■" exit, then according to the mode of your recording tape set up.

(reminder: when open the "voice" mode, in the recording state, the machine will automatically sensing the sounds around, when the ambient sound reached a certain standard, the machine will automatically record, below the standard, automatic pause recording, an environment, not recommended to use this function)

Digital voice recorder


6. Short press “▶▶” , “◀◀” select "recording source" option, press "play" to enter, press "+" / "-" select "microphone /line-in", short press "▶||" to confirm the save settings, press the "■" exit, then the tape will be set according to your recording the source of the recording.

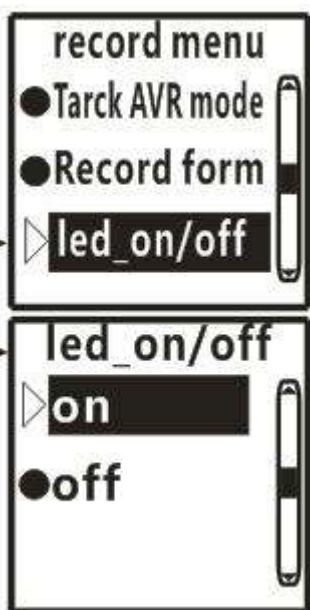

7. Short press “▶▶” , “◀◀” select "recording light switch" option, press "▶||" to enter, press "+" / "-" select "open/close", short press "▶||" to confirm the save settings, press the "■" exit, when choosing the recording light off "when recording when the indicator light is turned off, when the choice of recording light"on", when recording flashing lights.

● Playback settings


In the standby mode, short press "M" button to enter the main menu, press “▶▶” , “◀◀” select "Settings", short press

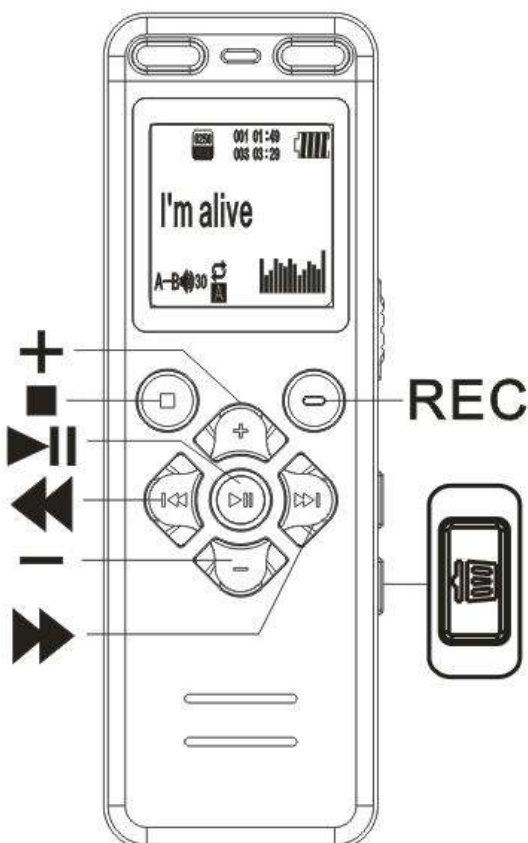

"▶||" in a short press "■" exit.

(—) Play Mode


1) Press "+" / "-" to select "play settings", press "▶||" to enter, and press "■" to exit.

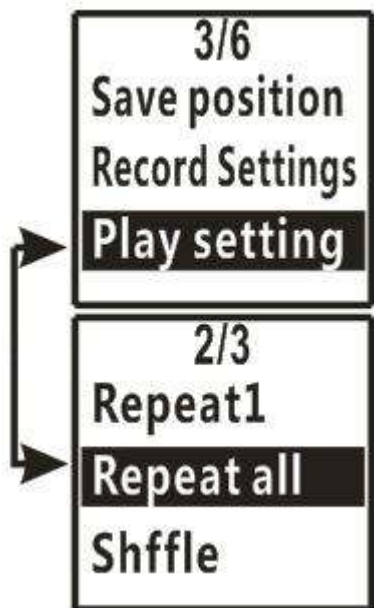

2) Short press "+" / "-" select "Settings", short press "▶||" to enter, press "+" / "-" select "repeat single / repeat/random play" short press "▶||" to confirm the save settings, press the "■" exit, then play the file according to your will set the playing mode.

3) Short press "+" / "-" select "speed play", short press "▶||" to enter, press "+" / "-" digital "+8, -8" a total of 17 kinds of variable speed playback mode, short press "▶||" to confirm the save settings, press the "■" exit, then play the file according to set the playback speed you are playing.

● System settings
In the standby mode, short press

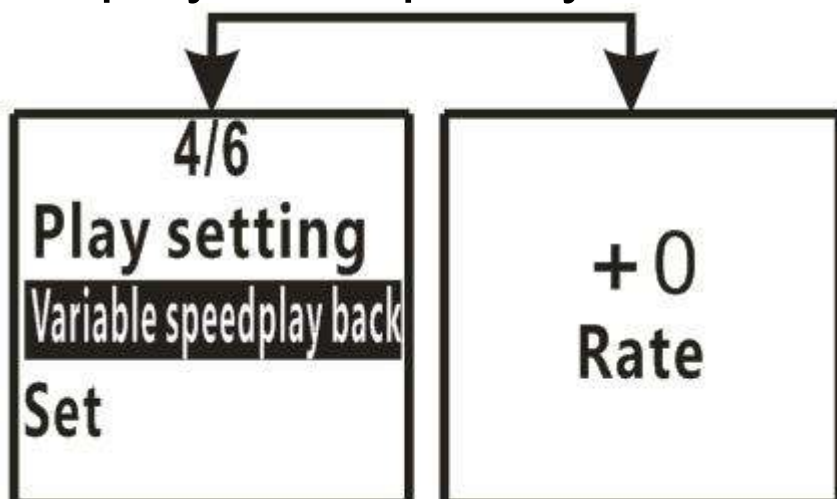


"M" button to enter the main menu, press "▶▶" , "◀◀" select "system settings", short press "▶||" in a short press "■" exit.

(—) Date and Time

1. Set time

1) Short press "+" / "-" select "time settings", short press "▶||" to enter, press "+" / "-" select "set time format", short press "▶||" to enter, press "+" / "-" select "12 hour /24 hour." short press "▶||" to confirm the save setting, press "■" exit.


2) Short press "+" / "-" select "set time", short press "▶||" to enter, press "+" / "-" digital regulation, short press "▶▶" , "◀◀" regulation digits, short press "▶||" to confirm the save settings, press the "■" exit.

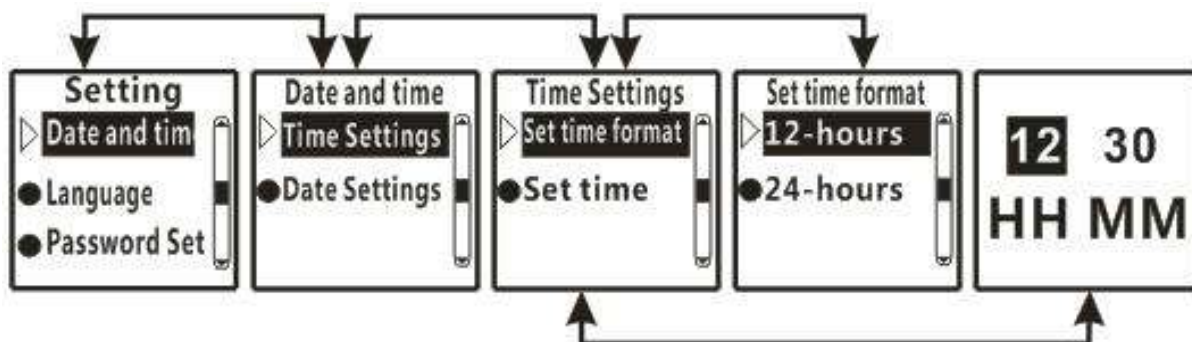 

2. Date settings

1) Short press "+" / "-" select "date set, short press "▶||" to enter, press " + "/" - "select" set date format ", short press "▶||" to enter, press " + "/" - "select" YYYY MM DD/DD MM YYYY/MM DD YYYY ". Short press "▶||" to save the settings confirmation, short press "■" exit.


2) Short press "+" / "-" select "set the date", short press "▶||" to enter, press "+" / "-" digital regulation, short press "▶▶" , "◀◀" regulation digits, short press "▶||" to confirm the save settings, press the "■" exit.

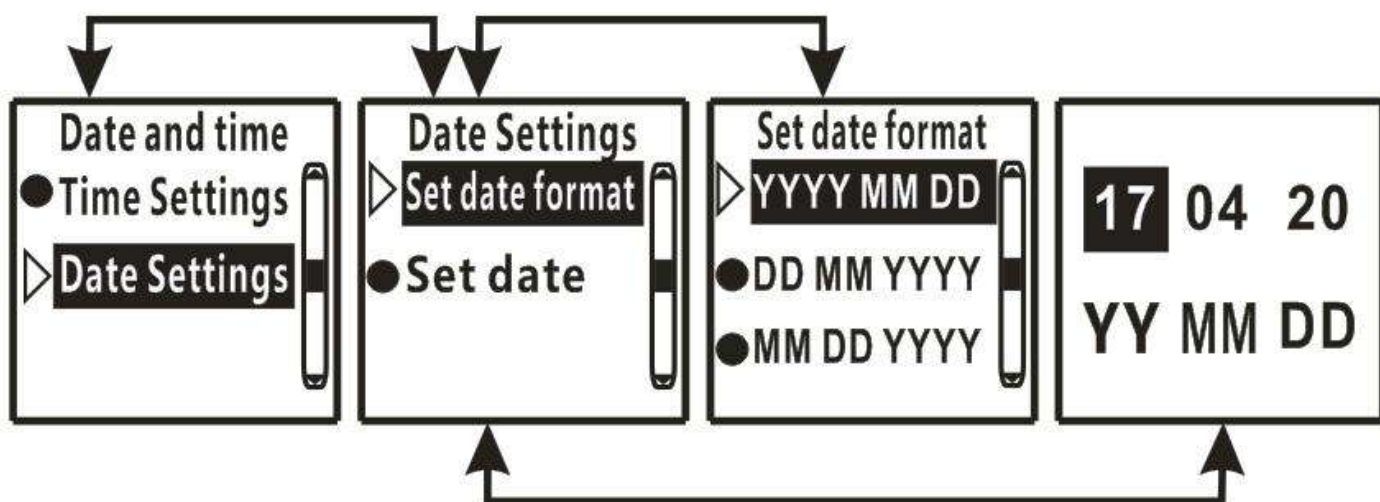 


(二) Language

1) In the standby mode, short press "M" button to enter the main menu, press "▶▶" , "◀◀" select "system settings", short press "▶||" in a short press "■" exit.

2) Short press "+"/"- " select "Language", press "▶||" to enter, press "+"/"- " select "Chinese simplified/traditional Chinese /English....." (up to 22 languages), short press "▶||" confirmation, short press "■" exit, at this time the system will be based on your language setting language display menu.

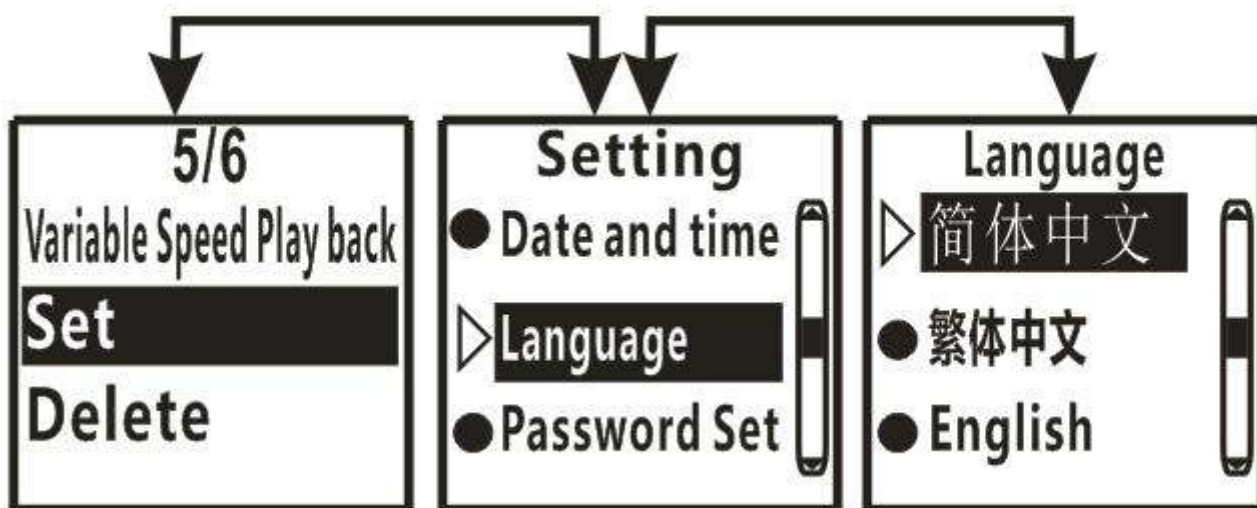

(≡) Password Setting

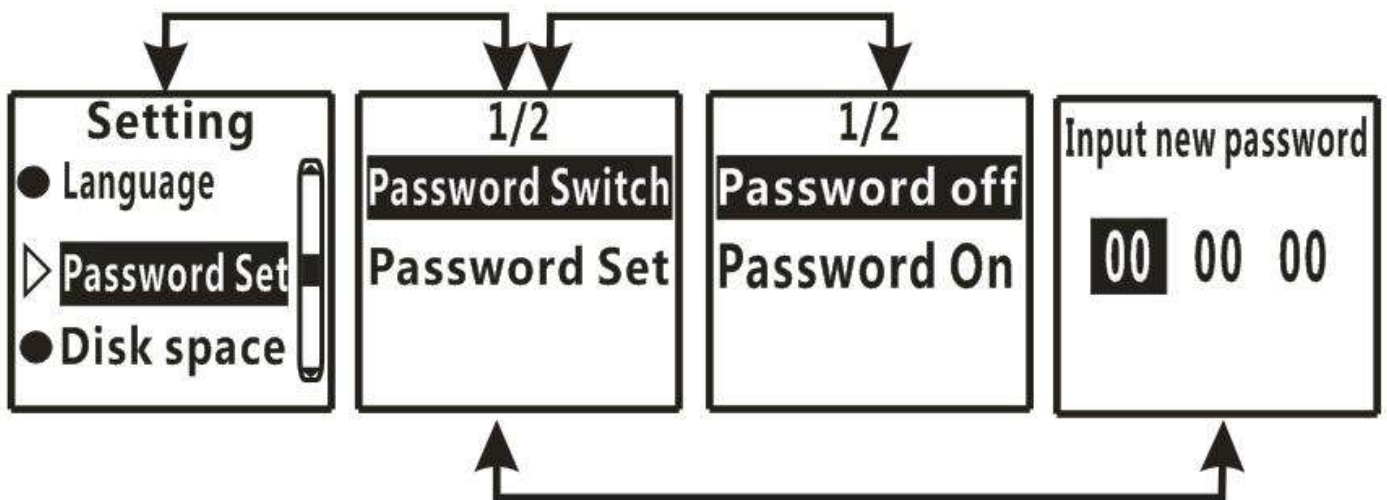 

- 1) Short press "+"/"- " select "password", short press "▶||" to enter. Short press "■" exit.
- 2) Short press "+"/"- " select "password switch", short press "▶||" to enter, press "+"/"- " select "password to open" short press "▶||" to confirm the save settings, press the "■" exit.
- 3) Short press "+"/"- " select "password", short press "▶||" to enter, press "+"/"- " digital regulation, short press "▶▶" , "◀◀" regulation digits, short press "▶||" to confirm the save settings, press the "■" exit.

Reminder:

- 1. open this function after each boot connection to the computer, you need to enter a password to use this computer.**
- 2. If you forget the password, please enter (181818), press the " ■ " for more than 3 seconds to break.**

(四) Disk space

- 1. Disk space: check the remaining space, space has been used.**

(五) The factory set up

- 1. Restore factory settings.**


11. Formatting the device

- 1. At this point you should be formatted, the recorder is plugged into the computer USB interface, enter "USB" connection mode, the recording notes memory format. (Note: WINDOW2000 above version, select the "FAT32" format.), please backup the data recorder, formatted will delete all files in the recording pen.**

Digital voice recorder

2. In any computer system under the format, such as your computer hard disk formatted floppy disk, the same method (i.e. selected "formatted removable disk").


12. Copy Files with PC

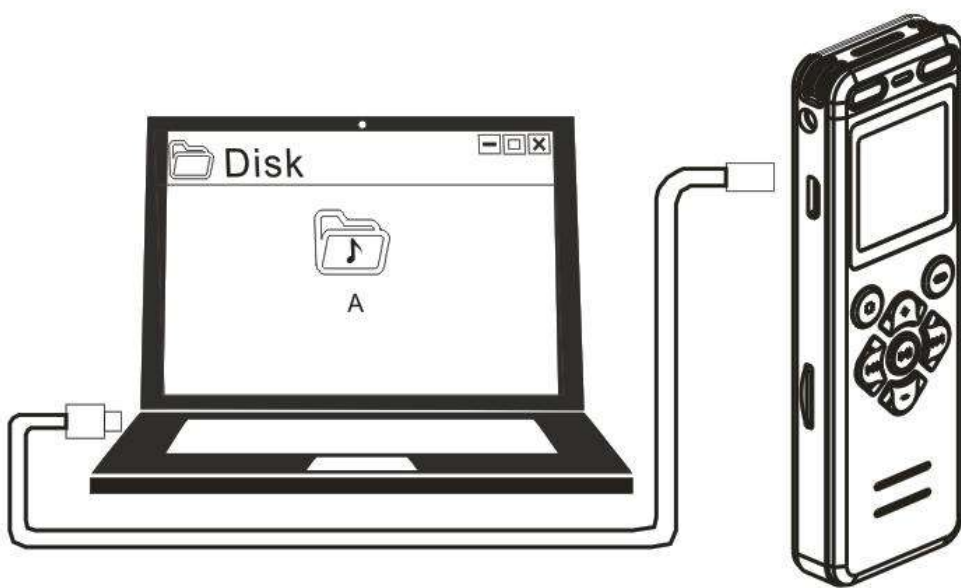

Connect the Recorder to the PC via the USB cable. Copy files or folders to your computer.

Note

Copy the PC side of the music to the recording pen.

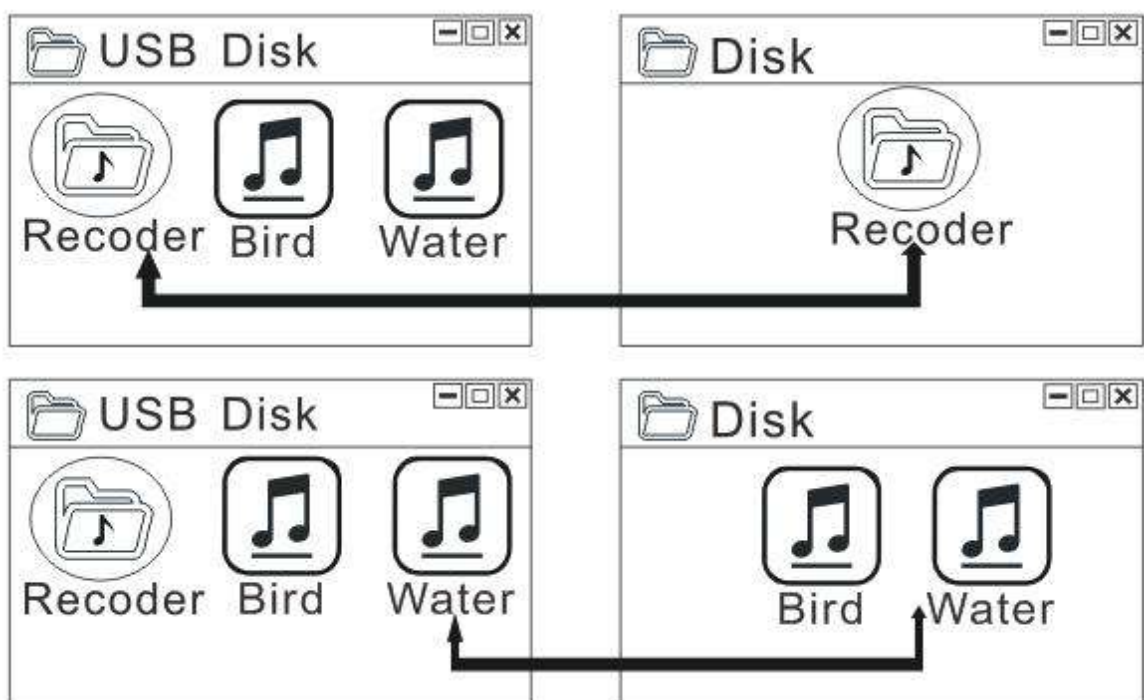

Digital voice recorder

13. General Specification

Product size	3.82 ×1.26 ×0.51 Inches			
Display screen	128*64 LCD screen			
Disk Capacity	8GB/16GB/32GB			
Weight	2.40 OZ			
Recording Format	WAV /MP3			
Expansion Card	TF card (maximum support 32 gb)			
Recording Mode	Microphone/Line-in			
WAV	Recording quality	8GB	16GB	32GB
	1536kbps	12 hours	24 hours	48 hours
	512kbps	36 hours	72 hours	144 hours
	256kbps	72 hours	144 hours	288 hours
MP3	128kbps	145 hours	290 hours	580 hours
	64kbps	290 hours	580 hours	1160 hours
	32kbps	580 hours	1160 hours	2320 hours
Music Format	MP3、WMA、FLAC、APE、OGG			
Interface	USB2.0			
Use temperature	0°C~45°C			
Power Supply	Built-in lithium polymer battery			
Battery Capacity	650mAh			