



SMART COOKING STARTS HERE

Internal Temp Range

14°F to 212°F (-10°C to 100°C)



Ambient Temp Range

14°F to 572°F (-10°C to 300°C)

**ATTENTIVE ATTITUDE, ONLY
BECAUSE OF YOU**

THE FUTURE, IS THE MOST INTERESTING
WAITING. DOQAUS IS READY.

Connection Settings

1



ios



iPhone & iPad: iOS 9.0+

Android




Android: Android 4.4+

2



3

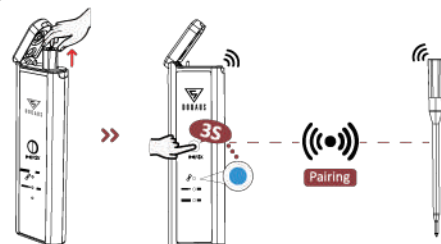

EN Note: This step is necessary when using the probe for the first time or when replacing it. Once paired, there is no need to repeat the pairing process for future use.


DE Hinweis: Dieser Schritt ist erforderlich, wenn Sie die Sonde zum ersten Mal verwenden oder wenn Sie sie ersetzen. Nach der Verbindung ist kein erneutes Verbinden für zukünftige Verwendungen erforderlich.

FR Remarque: Cette étape est nécessaire lors de l'utilisation de la sonde pour la première fois ou lors de son remplacement. Une fois appariés, il n'est pas nécessaire de répéter le processus d'appariement pour les utilisations futures.

IT Nota: Questo passaggio è necessario quando si utilizza la sonda per la prima volta o quando la si sostituisce. Una volta abbinati, non è necessario ripetere il processo di abbinamento per utilizzi futuri.


ES Nota: Este paso es necesario al utilizar la sonda por primera vez o al reemplazarla. Una vez emparejados, no es necesario repetir el proceso de emparejamiento para futuros usos.

4

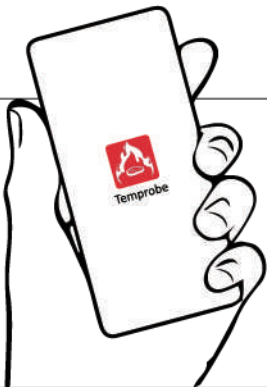

Turn on the app

5

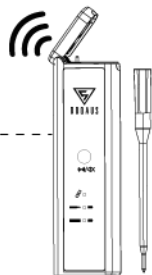






6



Perfect, let's start cooking!


STEAK DONENESS GUIDE

	DONENESS	INTERNAL TEMPERATURE
	Rare <ul style="list-style-type: none">• Cool red center• 75% red interior• Tender and juicy	125°F/52°C
	Medium Rare <ul style="list-style-type: none">• Warm red center• 50% red interior• tender, juicy, and succulent	135°F/57°C
	Medium <ul style="list-style-type: none">• Warm pink center• Firm and springy• Layered texture, showcasing juiciness	145°F/63°C
	Medium Well <ul style="list-style-type: none">• Slightly pink center• Mostly cooked throughout• Moderate chewiness with minimal juiciness	150°F/66°C
	Well Done <ul style="list-style-type: none">• Little or no pink• Firm and fully cooked• Chewy, and lacks juiciness	160°F/71°C



support@doqaus.com

Cook Settings

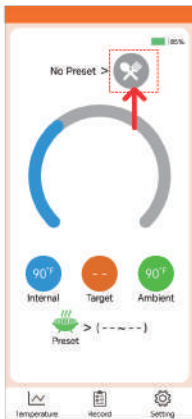

1


EN Tap to enter the preset meat options.

DE Tippen Sie, um die voreingestellten Fleischoptionen aufzurufen.

FR Appuyez pour accéder aux options de viande prédéfinies.

IT Tocca per accedere alle opzioni di carne preimpostate.

ES Toque para acceder a las opciones predefinidas de carne.

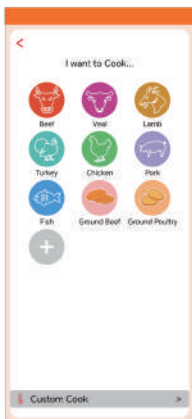

2


EN Choose the type of meat you're cooking.

DE Wählen Sie die Art des Fleisches aus, das Sie zubereiten.

FR Choisissez le type de viande que vous cuisinez.

IT Scegli il tipo di carne che stai cucinando.

ES Elija el tipo de carne que va a cocinar.

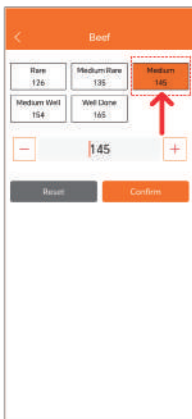

3

EN Set the meat temperature and confirm.

DE Legen Sie die Fleischtemperatur fest und bestätigen Sie.

FR Réglez la température de la viande et confirmez.

IT Imposta la temperatura della carne e conferma.


ES Configure la temperatura de la carne y confirme.

4**Attentions!**


Please insert the probe into the middle of the thickest part of the meat.
Ensure the notch on the probe is fully inside the meat.
Failing to insert the probe correctly can damage the device.


 Don't remind me again
Continue**EN** Insert the probe as required and proceed.**DE** Setzen Sie die Sonde wie erforderlich ein und fahren Sie fort.**FR** Insérez la sonde comme requis et continuez.**IT** Inserisci la sonda come richiesto e procedi.**ES** Inserte la sonda según sea necesario y continúe.**5****Attentions!**

Please place the booster as close as possible to your cooker to stay connected to the probe, but at least 50cm away from your cooker.
Please make sure do not leave it on any hot surface.

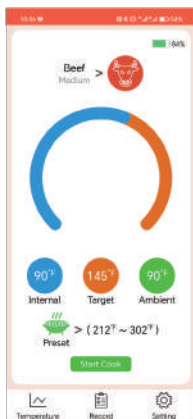
 Don't remind me again
Continue**EN** Position the booster appropriately and continue.**DE** Positionieren Sie den Booster entsprechend und fahren Sie fort.**FR** Positionnez correctement le booster et poursuivez.**IT** Posiziona il booster in modo appropriato e continua.**ES** Posicione el booster adecuadamente y continúe.**6****EN** Let's start cooking!**DE** Lassen Sie uns mit dem Kochen beginnen!**FR** Commençons la cuisson!**IT** Iniziamo a cucinare!**ES** ¡Comencemos a cocinar!

App Features

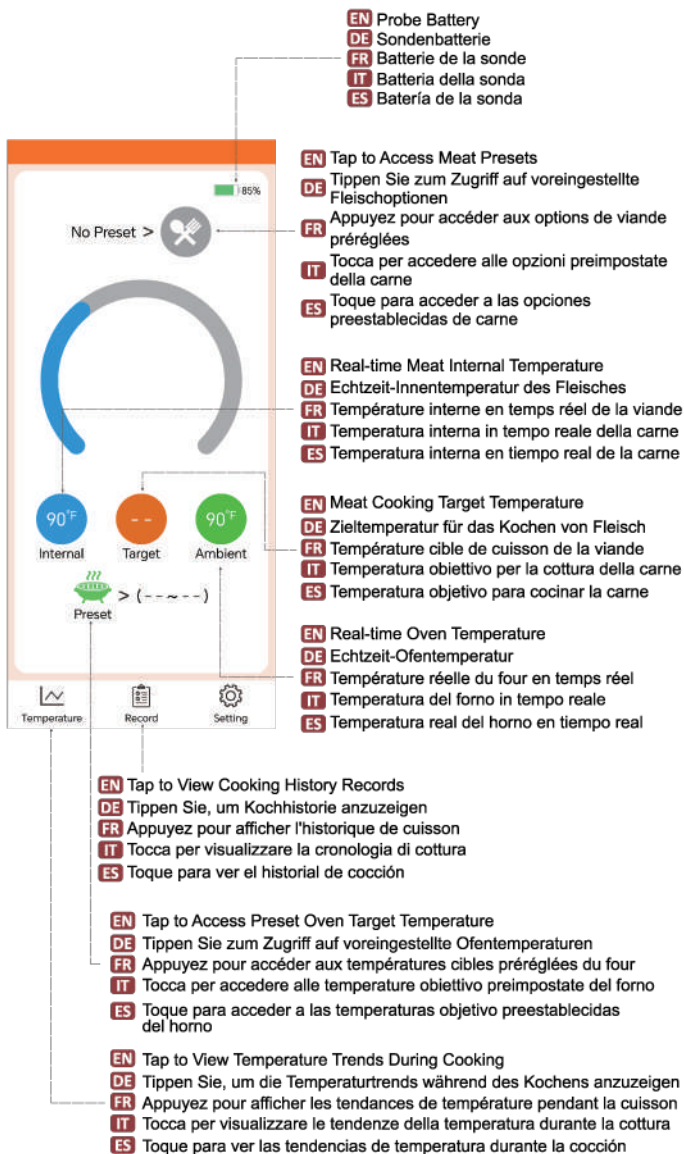

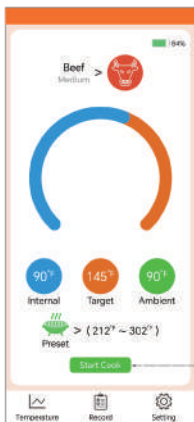


- EN** Tap to Start Cooking
- DE** Tippen Sie zum Starten des Kochens
- FR** Appuyez pour commencer la cuisson
- IT** Tocca per iniziare la cottura
- ES** Toque para comenzar la cocción

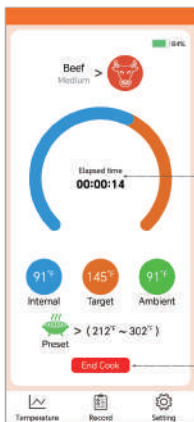

- EN** Record Cooking Time
- DE** Aufzeichnung der Kochzeit
- FR** Enregistrement du temps de cuisson
- IT** Registrazione del tempo di cottura
- ES** Registro del tiempo de cocción

- EN** Tap to End Cooking
- DE** Tippen Sie zum Beenden des Kochens
- FR** Appuyez pour arrêter la cuisson
- IT** Tocca per terminare la cottura
- ES** Toque para finalizar la cocción

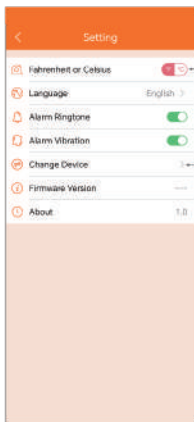

- EN** °F/°C Switch
 - DE** °F/°C Umschalter
 - FR** Commutateur °F/°C
 - IT** °F/°C Interscambio
 - ES** Conmutador °F/°C
-
- EN** Change Device/Search for Devices
 - DE** Gerät wechseln/Geräte suchen
 - FR** Changer de dispositif/Rechercher des dispositifs
 - IT** Cambia Dispositivo/Cerca Dispositivi
 - ES** Cambiar Dispositivo/Buscar Disposit