

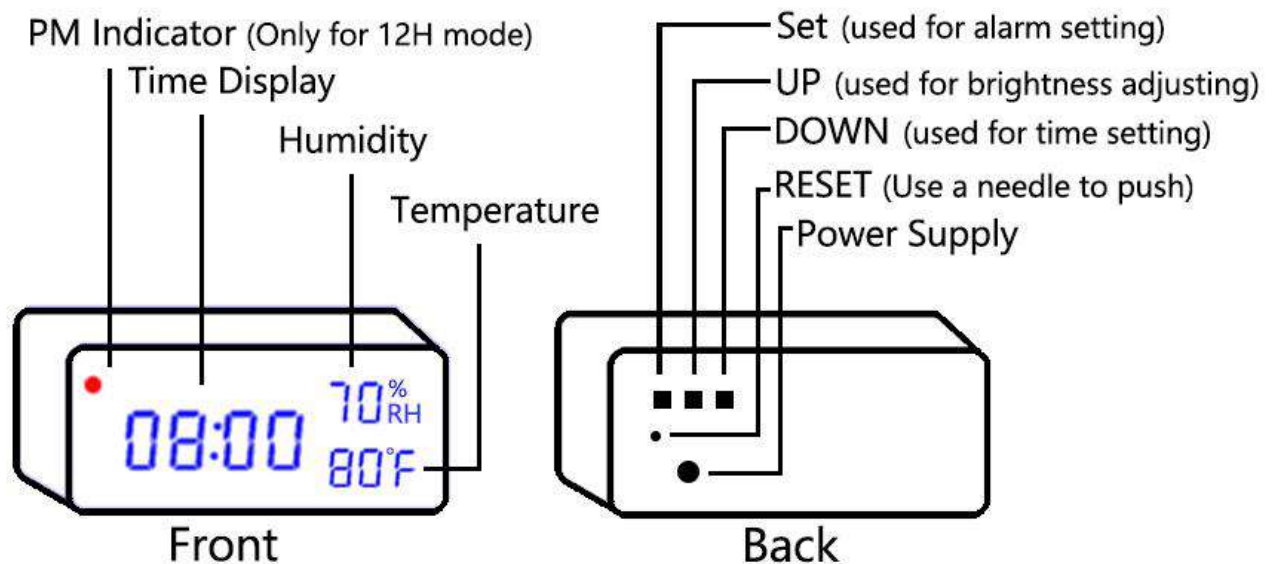
V1502 Alarm Clock Instructions

Missing accessories or any other problems, please contact us:

For setting instruction by video, please visit Youtube and search “**JALL 1502 clock**”.

Important : If you found the clock time only appears when you touch it. Don't worry. It's just because you've set it to sound control mode by mistake. Just follow section **3.4 – Sound Control** to get it right. We offer 12-Month warranty for every customer.

Structure



1. Package Includes:

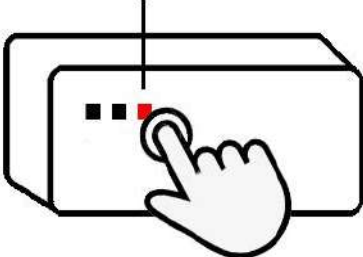





- 1 x Digital Alarm Clock (AAA Battery Not Included).
- 1 x User Manual.
- 1 x USB Cable.

2. Product Features:









- Input Voltage: AC110v-240V, 50/60HZ.
- Output Voltage: DC5V / 500MA-1000MA.

3. Setting:

3.1 Time Setting:


<p>①</p> <p>DOWN</p>  <p>HOLD for 3 secs to enter Time Setting Menu</p>	<p>②</p>  <p>Press "UP" or "DOWN" to select correct "Year" value Press "SET" to confirm and next</p>
<p>③</p>  <p>Select correct "Month" value and "Date" value. Press "SET" to confirm and next (Picture above means July,1)</p>	<p>④</p> <p>PM indicator light</p>  <p>Select "24-Hour" or "12-Hour" If you choose "12-Hour" mode, pay attention to "PM" light.</p>
<p>⑤</p> <p>PM indicator light</p> <p>ON - PM OFF - AM</p>  <p>It's 8 pm now</p> <p>Select correct "Time" value Pay attention to the small PM dot if you choose "12-Hour"</p>	<p>⑥</p>  <p>It's 8 pm now</p> <p>Display Time Setting Finished</p>

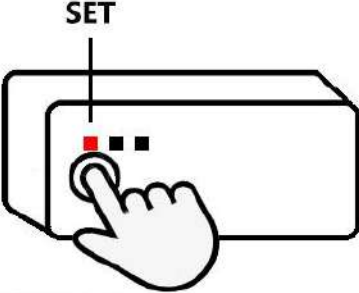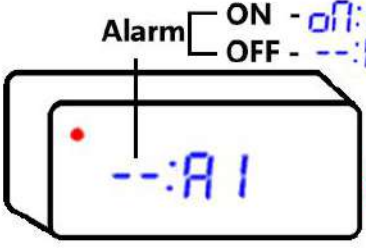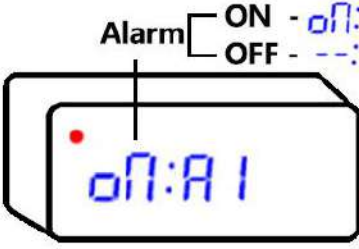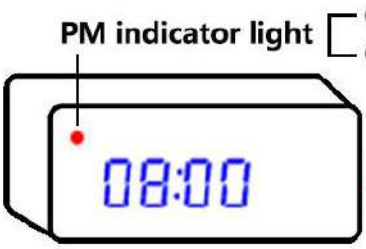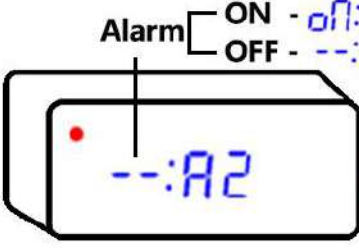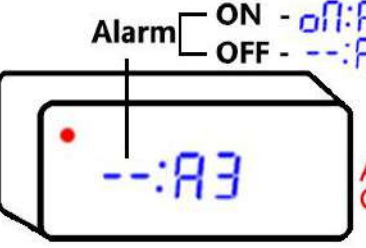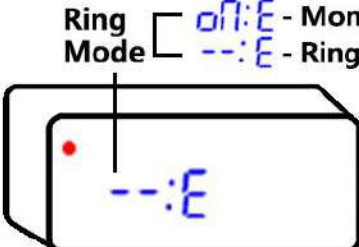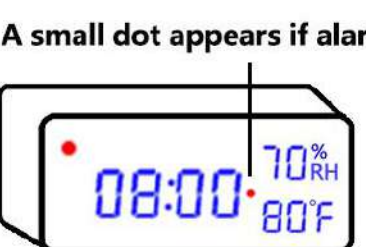3.2 Alarm Setting:

<p>①</p>  <p>HOLD for 3 secs to enter Alarm Setting Menu</p>	<p>②</p>  <p>Press "UP" or "DOWN" to Turn ON/OFF Alarm #1 Press "SET" to confirm and next</p> <p>A1 is now OFF</p>
<p>③</p>  <p>Press "SET" to confirm and next</p> <p>A1 is now ON</p>	<p>④</p>  <p>Select correct "Alarm Time" of A1 Pay attention to the small dot if you choose "12-Hour"</p> <p>It's 8 pm now</p>
<p>⑤</p>  <p>A2 is the #2 alarm clock. There're totally 3 alarms. The settings are the same as A1.</p> <p>A2 is now OFF</p>	<p>⑥</p>  <p>Then it's A3 - #3 alarm clock. The setting is the same as A1.</p> <p>A3 is now OFF</p>
<p>⑦</p>  <p>Select Alarm Mode: 0N: E - Rings on working days only --: E - Rings every day</p> <p>Now rings every day</p>	<p>⑧ A small dot appears if alarm turns ON</p>  <p>When alarm rings, press any button for TWICE to stop it. While press ONCE to get 5 mins snooze. Alarm Setting Finished</p>

3.3 Brightness Setting:

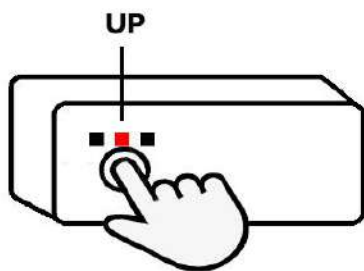①



HOLD for 3 secs to enter **Brightness Setting Menu**

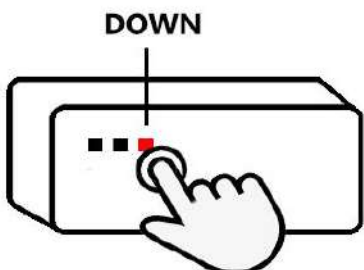
②



Press "**UP**" or "**DOWN**" to adjust brightness level.
L3 is brightest while **L1** is lowest


3.4 Sound Control:

①



DOUBLE Press "**DOWN**" Button to enter **Sound Control Setting**

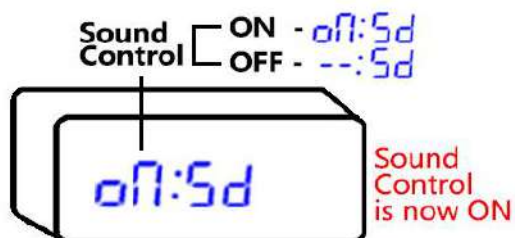
②



If sound control is ON, the display will **disappear** until any sounds wake it up or **knocking on it**.

3.5 Temperature Setting:

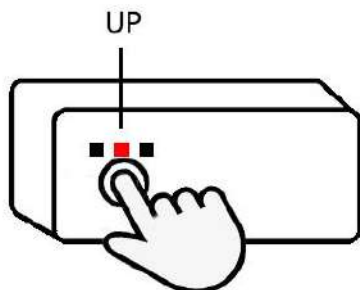①




Press "**UP**" Button to change temperature unit from **°C** to **°F**

②



3.6 Snooze Setting:

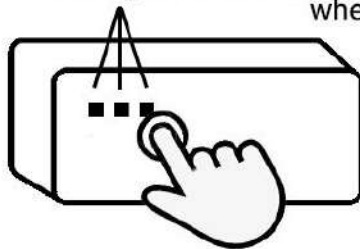Press any button **ONCE** for snooze when it rings




① When alarm rings, press **any button** to get snooze for **5 mins**.

② You can **repeat** the same to get another 5 mins.

③ If you want to stop the alarm, **press any button TWICE** to stop it.

3.7 Reset Setting:

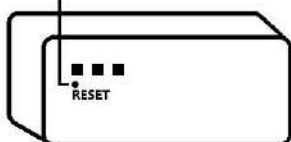RESET



Use a needle or little stick to push the "RESET" hole to reset all the settings.

4. Trouble Shooting:

- 1) Missing power cord, or instructions, please contact us on Amazon or by email for a new replacement.
- 2) If you found the clock time only appears when you touch it. Don't worry. It's just because you've set it to sound control mode by mistake. Just follow section **3.4 – Sound Control Mode** to get it right.
- 3) Please understand the temperature sensor is pre-set inside the clock. As electronic components may produce heat when working. So it's normal that the temperature is not as accurate as other professional thermometer.
- 4) To exit setting mode, stop pressing for 5 secs and it will return to time display automatically.
- 5) The alarm volume is fixed and **CANNOT** adjust higher or lower.

- 6) If some numbers are getting dimmer, you might have used batteries to power on, please know this device will run out of batteries very very quickly. It's better to use power cord to work.
- 7) If the clock time only appears when you touch it, or it will appear and disappear from time to time. That means you may have chosen the sound control mode by mistake. Please **DOUBLE** press "**DOWN**" button to adjust the mode from "**off:5d**" to "**--:5d**", which means to turn off the Sound Control mode.
- 8) We don't recommend to use batteries for working because the LED light consume power very quickly. Batteries can only last 1-2 days when working. Once batteries are running off, the digits will appear to be faded because batteries voltage is not that enough to hold its normal working.

Batteries are only used for temporary short time or for travel use.

When using this product, it is better to use power cord to work. If you insist to use batteries, please use high-energy AAA alkaline batteries. If the display is dimming or flashing, please replace batteries in time.

- 9) If you find the clock fails to remember settings. It may be the memory battery has run out of its power. You have to take out the battery shelf on the back of the clock. Take out the AAA battery also, then you will find a small kit inside, which needs to unscrew and there's a CR2032 memory battery inside. You can replace it to recover its memory function.