

# **Osmo Action 3 Easy-to-Use Guide for Beginners**

## Content

|  |           |
|--|-----------|
| <b>About Osmo Action 3</b> .....   | <b>1</b>  |
| <b>Product Specifications</b> .....                                      | <b>1</b>  |
| <b>User Manual</b> .....   | <b>1</b>  |
| <b>Unboxing and Getting Started</b> .....                                | <b>2</b>  |
| <b>Unboxing</b> .....  | <b>2</b>  |
| <b>App Download</b> .....  | <b>3</b>  |
| <b>Powering on or off Your Device</b> .....                              | <b>3</b>  |
| <b>Connecting Your Device to a Phone</b> .....                           | <b>4</b>  |
| <b>Activating Your Device</b> .....                                      | <b>5</b>  |
| <b>Finding the Serial Number (SN) on Your Camera</b> .....               | <b>5</b>  |
| <b>Status LED Descriptions</b> .....                                     | <b>5</b>  |
| <b>Product Usage</b> .....   | <b>5</b>  |
| <b>Switching the Front and Rear Touchscreens</b> .....                   | <b>6</b>  |
| <b>Operating the Camera</b> .....  | <b>6</b>  |
| <b>Firmware Update</b> .....   | <b>6</b>  |
| <b>Setting App Language</b> .....  | <b>6</b>  |
| <b>Intermediate Operations</b> .....                                     | <b>6</b>  |
| <b>Electronic Image Stabilization (EIS) Technology</b> .....             | <b>6</b>  |
| <b>EIS Priority in Low Light</b> .....                                   | <b>7</b>  |
| <b>Stereo Recording</b> .....  | <b>7</b>  |
| <b>Connecting External Mics</b> .....                                    | <b>7</b>  |
| <b>Scuba Diving Mode</b> .....   | <b>8</b>  |
| <b>Custom Mode</b> .....   | <b>8</b>  |
| <b>Dynamic Shooting Experience</b> .....                                 | <b>8</b>  |
| <b>Storing and Exporting Photos and Videos</b> .....                     | <b>8</b>  |
| <b>Inserting or Removing a microSD Card</b> .....                        | <b>9</b>  |
| <b>Exporting Materials</b> .....   | <b>10</b> |
| <b>Charging Instructions</b> .....                                       | <b>10</b> |
| <b>Choosing a Charger</b> .....  | <b>10</b> |
| <b>Charging Methods</b> .....  | <b>11</b> |
| <b>Why is my Action 3 overheating during charging or shooting?</b> ..... | <b>11</b> |
| <b>Available Accessories</b> .....                                       | <b>11</b> |
| <b>Accessory Purchase</b> .....  | <b>11</b> |
| <b>Accessory Usage</b> .....   | <b>12</b> |
| <b>DJI Care Service Plans</b> .....                                      | <b>12</b> |

## About Osmo Action 3

Osmo Action 3 supports use while recording at up to **4K/120fps**, providing a **stable and immersive first-person perspective**. It adopts a new generation of intelligent stabilization algorithm, which can effectively eliminate camera shake in all directions. The camera is designed with **two touchscreens**. The front screen is convenient for vlogging and framing selfies, while the rear one is for real-time view finding. Both screens supports commonly used touch control functions. Additionally, you are able to quickly switch and shoot videos or pictures by pressing the buttons on the camera.

The camera body is fully optimized to be used at depths of up to **16 meters (52 feet)**, and supports use with a **wide range of accessories**, enhancing your underwater adventures.



## Product Specifications

To get more details about the parameters of Osmo Action 3 modules, click this link: [Osmo Action 3 Parameters](#).

To compare Osmo Action 3 with other Osmo Action series products, click [Osmo Action Series Products Comparison](#) for details.

## User Manual

For details about product usage, check [Osmo Action 3 User Manual](#).

## Unboxing and Getting Started

Upon receipt of your device, activate it before use. Download DJI Mimo, power on the camera, connect it to a mobile phone, and follow the prompts to activate your device. Consult the content below for details.

### Unboxing

- [Osmo Action 3 Standard Combo](#)
- [Osmo Action 3 Adventure Combo](#)
- **Osmo Action 3 Standard Combo In the Box**



- **Osmo Action 3 Adventure Combo In the Box**



## App Download

Download DJI Mimo App before connecting you device to a mobile phone. [Click here](#) download and install DJI Mimo.

Click this link ([DJI Mimo Phone Compatibility List](#)) for a list of the compatible operating systems and mobile phones for DJI Mimo.

## Powering on or off Your Device

Press the Quick Switch (QS) Button at the left side of the camera to power on or off the device.

**Note:** If GIF images are not displayed properly, click [here](#) for details.

Press once to power on or switch the camera to shooting mode.



Press and hold to power off the camera.



## Connecting Your Device to a Phone

1. Enable Bluetooth and Wi-Fi on your mobile device, and power on Osmo Action 3.
2. Launch DJI Mimo. When it prompts to connect the device, tap "Connect".
3. The phone will automatically pair with Osmo Action 3 via Bluetooth, tap "Pair" to connect your camera to the device.

Watch this [video](#) for the more details.

## Activating Your Device

Go through the steps above to connect your camera to a phone before first use, and activate it according to the prompts in DJI Mimo.

Watch this [video](#) for the more details.

Check the activation details of your device via the [Activation Info](#) page.

\* Your device is warranted by DJI from the date of receipt, which will not be affected by the activation status of your device.

## Finding the Serial Number (SN) on Your Camera

Check the device SN at the barcode sticker on the side of the box or in the DJI Mimo App.

Watch this [video](#) for the more details.

## Status LED Descriptions

You can tell the status of your device through the blinking patterns of the Status LED.

Consult the picture below for details about the Status LED and descriptions.

### Status LED Descriptions

Osmo Action 3 has two status LEDs which indicate the same status information. They can be turned on and off.

| Blinking Pattern                 | Description   |
|----------------------------------|---|
| Solid green                      | Ready to use  |
| Temporarily off                  | Taking a photo  |
| Blinks green                     | Osmo Action 3 is charging when powered off  |
| Blinks red and green alternately | Updating firmware   |
| Blinks red slowly                | Recording a video   |
| Blinks red three times rapidly   | Powers off the camera or powers on the camera at low battery level  |
| Off                              | microSD card abnormality (no microSD card detected, microSD card storage is full, or microSD card error.) |

## Product Usage

## Switching the Front and Rear Touchscreens

Once the camera has been powered on, both the front and rear touchscreens light up simultaneously. When operating one of the screens, the other one is automatically locked. For example, when configuring the rear touchscreen, the front touchscreen will be locked. To use the front screen at this time, swipe up on the screen to unlock it.

## Operating the Camera

Watch this [video](#) for the more details.

## Firmware Update

Osmo Action 3 only supports updating firmware via the DJI Mimo app. If new firmware is available, you will be notified by DJI Mimo. Update the firmware according to the on-screen instructions.

Watch this [video](#) for the more details.

## Setting App Language

The language of DJI Mimo is consistent with that of your phone system by default. To reset the language, refer to the steps below:

- **For iOS users:** Reset in DJI Mimo. Go to "Profile > Settings > Language".
- **For Android users:** Reset the language of your phone system.

## Intermediate Operations

### Electronic Image Stabilization (EIS) Technology

With DJI's latest EIS technology, Osmo Action 3 can record super smooth footage for various sports scenes.

- **[RockSteady 3.0]** A new generation of intelligent stabilization algorithm fuels the latest version of RockSteady EIS, which can effectively eliminate camera shake in all directions. It supports use while recording at up to 4K/120fps, providing a stable and immersive first-person perspective.
- **[HorizonSteady]** This smart stabilization feature helps to eliminate camera shake in all directions, and even horizontally corrects tilt at any angle. That means footage can remain horizontally level, even through heavy bumps and 360° rotations.
- **[HorizonBalancing]** This feature corrects the tilt horizontally within  $\pm 45^\circ$ , and supports recording stable 4K/60fps videos.

Watch this [video](#) for the more details.

## EIS Priority in Low Light

This is a new feature for Osmo Action 3, which contributes to recording stable footage in low light or dark environment. Enabling this feature in low light will remove motion blur, but the shutter speed should be at least 1/200. Image sharpness may be affected when ambient light is too low.

To enable this feature, swipe the screen to the right to disable PRO mode.

## Stereo Recording

Osmo Action 3 is designed with three microphones. Exceptional audio performance means more immersive results. Reception direction can be adjusted for more targeted and accurate sound recording. A hidden microphone at the bottom of Action 3 even suppresses wind noise, giving you more audio-recording confidence in windy or high-speed scenarios.

Switch the camera to Video mode and tap “PRO” to set audio parameters such as Channel, Wind Noise Reduction, and Directional Audio.

## Connecting External Mics

Action 3 is compatible with DJI Mic. Consult the steps below to connect your device to DJI Mic.

1. Connect the receiver of DJI Mic to the USB-C port on Osmo Action 3 using a Type-C cable.
2. Link the receiver and transmitter of DJI Mic.

Watch this [video](#) for the more details.

## Scuba Diving Mode

As a new feature in Osmo Action 3, scuba diving mode is automatically enabled when the camera is more than 14 m underwater. Once enabled, the Shutter/Record Button will be locked. Press the Quick Switch button to start or stop recording.

To enable scuba diving mode, swipe down the camera view to enter the Control Menu, tap “Scuba Diving Mode ( $\geq 14\text{m}$ )”, and press and hold the Record Button for 5 seconds.

Press the Quick Switch Button five times to disable scuba diving mode.

\* In the event of scuba diving at depths over 16 m, it is recommended to equip your Action 3 with the waterproof case. In this case, there is no need to enable scuba diving mode.

## Custom Mode

Osmo Action 3 supports saving shooting parameters in custom mode, which can then be used directly to shoot similar scenes. You can save up to five custom modes.

Swipe down the camera view and tap the custom mode icon to save the current configuration as a custom mode.

Tap “Delete” to remove a saved custom mode.

Watch this [video](#) for the more details.

## Dynamic Shooting Experience

Osmo Action 3 supports various shooting features, which contributes to making funny videos in sports scenarios.

Watch this [video](#) for the more details.

## Storing and Exporting Photos and Videos

The footage shot on Osmo Action 3 can only be stored on a microSD card (not included). You can not shoot videos or photos if the microSD card is not inserted.

Recommended microSD Cards:

SanDisk Extreme 32GB V30 A2 UHS-I Speed Grade 3 microSDXC

SanDisk Extreme Pro 32GB V30 A2 UHS-I Speed Grade 3 microSDXC

Kingston Canvas Go!Plus 64GB UHS-I Speed Grade 3

Kingston Canvas Go!Plus 128GB UHS-I Speed Grade 3

Kingston Canvas React Plus 64GB UHS-II Speed Grade 3

Kingston Canvas React Plus 128GB UHS-II Speed Grade 3

Kingston Canvas React Plus 256GB UHS-II Speed Grade 3

Samsung Pro Plus 256GB V30 A2 UHS-I Speed Grade 3

## Inserting or Removing a microSD Card

To avoid inadvertently inserting the microSD card into the battery compartment, it is recommended to fit the microSD card into the card slot first, and then attach the battery.

**Note:** If GIF images are not displayed properly, click [here](#) for details.

### • Inserting the microSD Card



### • Removing the microSD Card



## Exporting Materials

It is recommended to download the photos and videos to your phone for editing via DJI Mimo, or transfer them to a phone or computer using a USB-C cable.

Watch this [video](#) for the more details.

## Charging Instructions

### Choosing a Charger

Follow the steps below to charge Osmo Action 3. It is recommended to charge using DJI 30W USB-C Charger (not included).

1. Charge the camera via the USB-C port. Action 3 supports PPS and PD fast charge protocols, and supports up to 23W fast charge.
  2. Charge the camera using Multifunctional Battery Case, which also supports PPS and PD fast charge protocols, and supports up to 23W fast charge.
- When charging Action 3 using DJI 30W USB-C Charger, it takes 20 minutes to charge the camera from 0% to 80%, and 49 minutes from 0% to 100%. When charging three batteries using

Multifunctional Battery Case, it takes 58 minutes to charge three batteries from 0% to 80%, and 120 minutes from 0% to 100%.

## Charging Methods

Watch this [video](#) for the more details.

## Why is my Action 3 overheating during charging or shooting?

Osmo Action 3 can shoot 4K/120fps videos at a bitrate of up to 130 Mbps, and the actual video file generated in one minute can be as large as 900 MB. With its compact and portable design, Action 3 inevitably dissipates heat when processing such a large amount of data in a short period of time, which is an irresistible physical law. The camera was designed with special attention to the heat dissipation issue. To ensure the normal performance of the camera, the internal heat is designed to be conducted to the lens cover, front and rear screens, and body itself through heat sinks and silicone grease. Additionally, strict tests have been made to ensure that the camera temperature is within a reasonable range during long-term recording.

## Available Accessories

### Accessory Purchase

#### Popular Accessories

- [Multifunctional Battery Case](#): Stores three batteries and two microSD cards. Intelligently fast charges three batteries, and can be used together with those batteries as a power bank to charge other devices like your smartphone.
- [Adhesive Base Kit](#): Features a large adhesive area with a strong connective force. With a large area of 3M tape at the bottom, the camera can be securely fixed to surfboards, snowboards, and

other sporting equipment or surfaces, making it suitable for a wide range of high-intensity scenarios.

- [1.5m Extension Rod Kit](#): Compact, easy to hold, and adjustable from 0.3 to 1.5 meters, this extension rod makes selfies and other creative-angle shots effortless. The 1/4" threaded hole on the bottom supports accessory expansion for more versatile uses.

- [Osmo Action Biking Accessory Kit](#): Includes the Osmo Action Chest Strap Mount and Osmo Action Handlebar Mount to secure your camera to your chest or handlebars, allowing you to focus on your ride and stay in the moment.

[Buy Now](#)

## Accessory Usage

- **Osmo Action 3 Waterproof Case**

Provides waterproof protection at depths of up to 60 meters, giving you more freedom to explore and capture.

Watch this [video](#) for the more details.

- **1.5m Extension Rod (Used with InvisiStick for Skiing)**

When using the 1.5m Extension Rod during skiing, the DJI Mimo app unlocks the power of your smartphone to get the most out of Action 3. It uses cloud computing and AI algorithms to eliminate the selfie stick for skiing and snowboarding scenarios, giving you breathtaking footage that looks like it was shot by a pro.

Watch this [video](#) for the more details.

- **Horizontal-Vertical Protective Frame**

It supports quick switches between horizontal and vertical mounting positions by taking off the camera, rotating it by 90°, and re-snapping the clips.

## DJI Care Service Plans

DJI Care Refresh is a comprehensive and reliable protection plan that provides your device with coverage for a range of accidental damages and natural wear. There are two DJI Care Refresh options available for you, 1-Year Plan and 2-Year Plan. By selecting the 2-Year Plan, the official warranty of main parts can be extended to 24 months.

- **[DJI Care Express]** To ensure smooth replacement, after you have paid the replacement fee, DJI will ship a replacement product to you upon receiving the damaged product.
- **[Coverage for a Range of Accidental Damage]** Inadvertent operations, water damage, or cracking and deformation.
- **[Replacement at an Additional Low Cost]** The 1-Year Plan provides up to two replacement units at an additional low cost, while 2-Year Plan up to three replacement units.
- **[Global Service and Support]** The exclusive International Warranty Service allows you to have access to replacement or repair service at any DJI authorized repair center across the globe.
- **[Rewards for Safe Use]** Throughout the service period, if you haven't used any replacements or repair discount services, DJI will provide you with a 1-year warranty extension as a reward.

[Buy Now](#)