



## **quip Rechargeable Cordless Water Flosser**

### **Product Information**

Take the plunge and discover a better way to floss! Our Rechargeable Cordless Water is so easy-to-use, you'll actually want to floss — no strings attached.

The cordless, clutter-free design of our Rechargeable Cordless Water Flosser keeps your countertops as clear as your gum line, just snap on the charging cable every few months as needed. Your Rechargeable Cordless Water Flosser comes with a Magnetic Charging Cable (no docking station!) and charges in 4 hours with an LED indicator. Battery lasts up to 8 weeks when used daily on gentle mode.

### **How do I use my quip Rechargeable Cordless Water Flosser?**

Before you get started, make sure to fully charge your Rechargeable Cordless Water Flosser, using your USB magnetic charging cable. Next, remove the Floss Tip (stored inside the Water Tank) and snap it into place. Open the reservoir hatch, fill with lukewarm water\*, then close the lid. Please be sure to keep the lid of your Water Flosser snapped shut when in use to prevent less mess.

\*Tip: Make sure to use only lukewarm water to avoid temperature shock to your teeth!

- We do not advise using any other forms of liquid as it may cause damage to the flosser's internal systems and void any warranty coverage.

To find your flow (and avoid making a mess!) close your lips slightly around the floss tip and lean over your sink. Lightly press the "q" button for on-demand water flow, or press and click for a steady stream. Press again to turn off.

For a complete clean, start in one quadrant of your mouth, and floss one tooth at a time (~2 secs each) along the gumline, front/back, and in between. Be sure to repeat these steps in all four quadrants! You'll want to be extra careful not to floss with the Floss Tip pressed directly against your gums as this will trigger the automatic shut-off sensor. (And can also damage your gums!)

To customize your clean, press the bottom LED button to switch pressure mode from gentle (white light) to deep clean (blue light). Once complete, empty tank & let fully air dry.





To recharge your quip Rechargeable Cordless Water Flosser, attach the Magnetic Charging Cable to the base of your flosser & plug it into a power adapter. You can refer to the LED indicator guide below to determine when your flosser has been fully charged.

**LED indicator guide:**

- Solid orange = low battery
- Pulsing orange = charging
- Solid green = fully charged, after about 4 hours

Please note, that the built-in rechargeable battery is non-replaceable. To reduce the risk of injury or adverse events, use only the charger provided. Discontinue and contact us via chat if this product or the power supply appears damaged in any way.

**How do I clean my Rechargeable Cordless Water Flosser?**

***Once a week:***

1. Turn flosser off and unplug
2. Run warm water through your flosser (aim into your sink), then let fully air dry.
3. Wipe the exterior of your flosser with a soft, damp cloth.

***Once a month:***

To break up hard water deposits, run a solution (1 part white vinegar, 2 parts warm water) through the flosser. Rinse before use by running through 3 tanks of warm water. Important: Never run the device with hot water.

Please do not submerge your Rechargeable Cordless Water Flosser under water or place any of these parts in the dishwasher. Stubborn stains or build-up? Spot clean with a damp cloth, water, and a few drops of dish soap. Never run any soap through the flosser.



## **quip Rechargeable Cordless Water Flosser**

### **Troubleshooting**

We're sorry to hear you're having trouble with your quip Rechargeable Cordless Water Flosser. The below troubleshooting tips should resolve most issues:

#### **Floss Tip Connection:**

- When replacing your Floss Tip, you should hear and feel a snap once it is connected in place. When properly connected, your Floss Tip should be able to turn 360 degrees
- If your Floss Tip is not connecting or is unable to turn 360 degrees, please remove the Floss Tip and inspect inside, wipe clean, and shake upside down to ensure nothing is blocking the connection

#### **Clog Detection:**

- The LED indicator will turn red when the Floss Tip is clogged and your Rechargeable Cordless Water Flosser will automatically shut down
- If this happens, please shake your Water Flosser while upside down which will help unclog any debris
- Please note, that the Rechargeable Cordless Water Flosser has a built-in sensor and will shut down if the Floss Tip is placed too close to your gums
- If you are finding that your Water Flosser is shutting down frequently while in use, you may be flossing too close to your gum line

#### **2 Min Shutdown:**

- If you're finding that your Water Flosser is turning off after 2 minutes of flossing, please note this is intentional
- We do not recommend flossing for longer than 2 minutes, so your Rechargeable Cordless Water Flosser System will automatically shut down after this time has elapsed

We do not advise using anything other than water with your Rechargeable Cordless Water Flosser as this may cause damage to the flosser's internal systems and void any warranty coverage.