


ROSEKM

Bring flowers into your life

Model:  
KC-KM13T-4.5L



Need any help?  
Please feel free to contact us and we would reply within  
1 working day.  
Contact Us: support@rosekm.net

TABLE OF CONTENTS

PACKAGE CONTENTS

SAFETY INFORMATION

SPECIFICATIONS

PRODUCT DIAGRAM

FUNCTIONS

GETTING STARTED

IMPORTANT TIPS

CARE & MAINTENANCE

TROUBLESHOOTING

WARRANTY

CUSTOMER SUPPORT

01

02

03

04

05

06

07

08

11

13

13

ROSEKM

Bring flowers into your life

Thank you for choosing our humidifier.  
Please read the following instructions carefully before use!

Humidifier × 1

User Manual × 1

Cleaning Brush × 1

01

SAFETY INFORMATION

▲

To reduce the risk of fire, electric shock, or other injury,  
follow all instructions and safety guidelines.

General Safety

• Disassembly, repair or remodeling by an unauthorized person may result in serious harm and will void the manufacturer's warranty.

• If the humidifier is damaged or is not functioning properly, stop using it and contact Customer Support immediately.

• Please always keep the humidifier out of reach of children & pet.

• Do not use the humidifier in wet environments.

• Always place the unit 12 inches (30 cm) away from the wall and other appliances.

• Do not handle the plug with wet hands.

• Please check the cord for any signs of damage. DO NOT use the humidifier if the cord has been damaged.

• Do not cover or remove the nozzle while using the humidifier.

• Do not move or tilt the humidifier while it is in operation.


• Do not fill the water tank with hot or boiling water.

• Do not use this product in direct sunlight or near a heat source such as a stove, heater or radiator.

• Use clean or distilled water in tank. Hard water areas will require more frequent cleaning.

02

SPECIFICATIONS

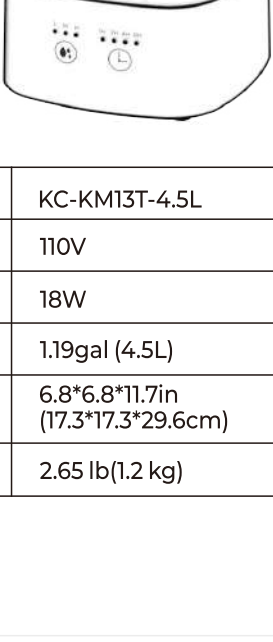

Model	KC-KM13T-4.5L
Rated Voltage	110V
Rated Power	18W
Capacity	1.19gal (4.5L)
Dimensions	6.8"6.8"11.7in (17.3"17.3"29.6cm)
Net Weight	2.65lb(1.2 kg)

03

PRODUCT DIAGRAM

1

2

3

4

5

6

7

8

9

10

11

12

13

14

15

16

1. Nozzle

2. Tank Cover

3. Handle

4. Water Tank

5. Mist Tube

6. Water Inlet

7. Tank Cap

8. Base

9. Indicator

10. Timer Button

11. Power Button

12. Air Outlet

13. Base Chamber

14. Atomizer

15. Floater  
(Low water level sensor)

 
16. Air Inlet

 
04

FUNCTIONS

L M H


1H 2H 4H 8H






**Power On/Off & Mist Level Setting**

1. Plug in the humidifier.

2. Press  repeatedly to cycle through mist level settings: Low, Mid, High, OFF.

3. After turning off the humidifier, the humidifier will immediately stop producing mist and the fan will stop after 1 minute.

4. When your room has reached a comfortable humidity level, turn your humidifier to a lower setting or turn it off. A comfortable humidity level is above 40% and below 60%.

**Timer**  to cycle through the options of 1 hour, 2 hours, 4 hours, and 8 hours to shut off the humidifier, or turn off the timer.

**360° Nozzle**

Easily direct the flow of mist.

**Auto Dim Indicator**

The indicator will turn off if the humidifier is not operated within 10 seconds.

**Auto Shut-off**

When the humidifier runs out of water, it would stop producing mist and the indicator will keep flashing. It is designed for safety in case the humidifier overheats.

05

GETTING STARTED

1

2

3

4

5

6

1. Turn the water tank upside down and remove the tank cap.

2. Fill the tank with clean and cool water only.

3. Attach the tank cap.

4. Turn the tank over to place on humidifier base.

5. Plug in the humidifier.

6. Press the power button to turn on the humidifier.

06

IMPORTANT TIPS

1

2

3

4

5

1. Do not add water through the mist tube, otherwise water may enter the air outlet and damage the electrical components.

2. Please always place this humidifier on a firm, flat & water-resistant surface at least 2-4 feet above the floor. Placing a humidifier in a corner, on the floor, or near a wall will get localized higher humidity levels but the rest of the room will still feel dry.

3. It is not recommended to place this humidifier directly on wood furniture or floor, because the locally high humidity levels may wet the surroundings. Please put a tray underneath the humidifier if you place the humidifier on a non-waterproof surface.

4. Do not add essential oils into the water tank or base chamber. Essential oils will corrode the humidifier, causing the water tank or base to crack.

5. Place this product on cloth or carpet that may block air inlet. Attention to whether the mist output of the humidifier is affected if you do that.

07

GETTING STARTED

• You should clean your humidifier every week and when you're ready to store it.

• All maintenance should be done on a water-resistant surface such as a kitchen counter.

• Change the water frequently to avoid bacteria growth.


• If not using the humidifier for 3 days or longer, do not leave water inside. Clean and dry the humidifier instead.


• Distilled or purified water is recommended to fill the humidifier. In some areas, water is richer in minerals. The humidifier won't instantly go haywire if you do use tap water, but in the long term will cause scale and you need to maintain it more often.

CAUTION

• Never immerse the humidifier base in water.

• Please avoid the water into the air outlet and air inlet while cleaning, or filling water, which will damage the electrical components.



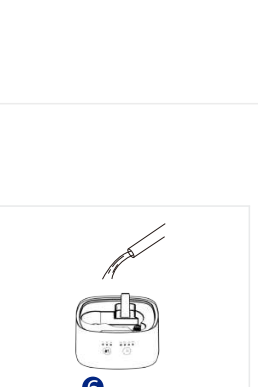

08

Cleaning & Descaling

1

2

3

4

1. Turn off and unplug the humidifier.

2. Remove the water tank from the base and remove the tank cap. Drain water from the water tank and base.

3. Fill the tank with 2 US cups /474 mL of distilled white vinegar. Replace the tank cover and swish the vinegar around the tank.

4. Place the tank on the base. The vinegar solution will enter the base chamber to loosen mineral buildup (scale) on the atomizer and the bottom of the water tank. Soak for 15-20 minutes.


09

5. Remove the water tank and tank cover, pour out any solution. Clean the atomizer with a soft cloth or cotton swab to remove loosened mineral deposits. (The mist tube or corners that are out of reach can be cleaned with the included brush)

6. Rinse all parts until any vinegar smell is completely gone before reassembling.

CAUTION

When putting the tank cover back onto the top of the humidifier, in order to tightly seal the tank cover, the edge of the cover with the arrow should be aligned with the direction indicated by the arrow on the top of the humidifier. Otherwise, mist may escape from the gaps during working of the humidifier.

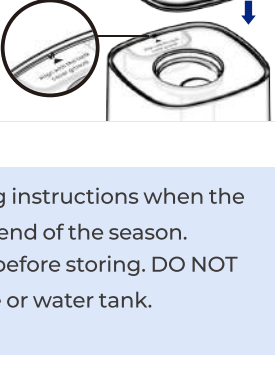

End of Season Storage

• Follow the Cleaning & Descaling instructions when the humidifier will be stored at the end of the season.

• Dry the humidifier completely before storing. DO NOT store with water inside the base or water tank.

• Store in a cool, dry location.

10

TROUBLESHOOTING

1

2

3

4

Spring

Rubber ring

Water floater

Problem	Possible Cause
Indicator flashes.	Not enough water inside the base chamber. Fill the water tank.
	Ensure the ① spring is secured properly to the tank allowing water to pass through to the base. ④ Water floater get stuck. Adjust the water floater to a horizontal position and make sure it can rise up with water.
Water leaks from the humidifier.	Tighten the water tank cap.
	The ② rubber ring was not installed on tank cap. Check the tank cap for rubber ring. If it is missing, please contact Customer Support. (see page 13). Leak from TANK: Check for possible cracks in the tank or around the seam of the tank. Leak from BASE: Contact Customer Support (see page 13).

11

Problem	Possible Cause
Humidifier doesn't turn on.	Ensure unit is properly plugged into a power outlet / try another power outlet.
Humidity level is low or no mist comes out.	Turn the mist level to a higher setting.
	Mineral buildup on atomizer. Clean atomizer (see Cleaning & Descaling, page 9).
	Make sure the air inlet on the bottom of the base is not blocked. The humidifier should not be set on carpet or other surfaces that may block the air inlet.
	Make sure the humidifier is not blocked or clogged. Make sure the humidifier is on a level surface. Water in unit is too cold: Replace with cool water.
Condensation forms around humidifier.	Saturation of humidity: Lower mist control setting. Point mist away from objects: Raise unit on a water-resistant level surface 2-4 feet off of floor.
Mold grows inside the humidifier, or white dust appears around the humidifier.	Use purified or distilled water to fill the humidifier. Avoid using water with high mineral content. Clean the humidifier (see Cleaning & Descaling, page 9).
Humidifier produces an unusual smell.	Clean the water tank and base chamber (see Cleaning & Descaling, page 9). Bubbling or knocking sounds is normal, that is the sound of water moving from the water tank to the base.
Humidifier makes a loud or unusual noise.	If it is continuous motor noise, the humidifier may be malfunctioning. Stop using the humidifier and contact Customer Support. (see page 13)

12

WARRANTY

This humidifier comes with an 1 Year Warranty that begins on the date of purchase.

Rosekm will replace any product found to be defective due to manufacturer flaws based on eligibility.

This warranty is void if the defect is due to any damages, losses, or inconveniences caused by equipment failure by user negligence, abuse, or use noncompliant with the user manual or any additional safety, use, or warnings included in the product packaging and manual.

CUSTOMER SUPPORT

If you encounter any issues or have any questions regarding your new product, feel free to contact our helpful Customer Support Team.

Contact Us:  
support@rosekm.net

\*Please have your order ID ready before contacting Customer Support.

13