



ELECTRONIC SAFE

USER MANUAL

OPENING YOUR SAFE FOR THE FIRST TIME

Upon first use, users should open the safe with the emergency key.

- **To do this:** Remove emergency lock cover, insert the emergency key, and turn it counterclockwise.
- Turn the knob counterclockwise to open the door.

CAUTION: Finish operation, pull the emergency key out and keep it in a safe place.

INSERTING THE BATTERIES

- Open the door with the emergency key
- Insert 4 X 1.5V batteries into the battery compartment. Upon inserting, the buzzer will beep and the green light will flash.
- If both green and red light are on, it indicates the batteries are low and should be replaced.

SETTING USER CODE

- With the door open, press the reset button (the red button on the battery compartment), input the 3- to 8-digit user code and press the “enter” button or the “lock” button.
- 2 buzzer beeps with green light flashes indicates the new user code is stored.

OPENING DOOR WITH USER CODE

Input your user code. After each press, the buzzer will beep and the green light will flash, press the “enter” button or the “lock” button. After the correct code is entered, there will be 2 buzzer beeps and the green light will flash, rotate the knob counterclockwise within 5 seconds to open the door.

CAUTION: A wrong code input will activate 3 buzzer beeps.

CLOSING DOOR

Turn the knob clockwise to close the door.

MOUNTING METHOD

- Fix the safe in a place which is not easy to move.
- Drill holes for expansion bolts (or clamping screws) in the right place.
- Turn the expansion bolts counterclockwise to separate.
- Use the expansion bolts (or clamping screws) to secure the case to the wall.
- Make sure the case is mounted in place as required and then tighten screws.

CAUTION: Use the expansion bolt when there is a concrete wall surface. Use the clamping screw when there is a wooden wall surface.

AUTOMATIC LOCK

3 continuous wrong inputs will activate the warning beep for 20 seconds.

Another 3 continuous wrong inputs will activate the warning beep for 3 minutes.

CAUTION: The keypad will be disabled during the beeping. You can only stop the beeps by opening the safe with emergency key or removing the batteries.