

SkyCaddie® LX5



USER GUIDE

IMPORTANT NOTICE

Read carefully the SkyCaddie LX5 Product Information Guide before use of the SkyCaddie LX5. Failure to read and follow the Product Information Guide may cause serious injury or death.

The SkyCaddie LX5 specifications and functionality are constantly evolving, and we may update or change them in whole or in part, without notice to you. Such updates may be required for you to use new functionality, access new courses or features, or continue to access and use existing courses and features. The courses and features available for use on the SkyCaddie LX5 change from time to time, and not all courses or features previously offered will be available. Some features require an annual subscription.

The software in the SkyCaddie LX5 is licensed and not sold to you, and is subject to the End User License Agreement set forth in the SkyCaddie LX5 Product Information Guide.



WARRANTY VOID IF OPENED

ANY AND ALL WARRANTIES ARE INVALID ONCE OPENED OR AFTER ANY TAMPERING WITH SCREWS OR SEALS

TABLE OF CONTENTS

1.0	Power On/Off.....	5	4.6	Target (Hazards, Carries And Layups)	20
2.0	Product Setup	5	4.7	Front, Center And Back Screen (Basic View)...	21
2.1	Charging Your SkyCaddie SX400	5	4.8	The Digital Scorecard	21
2.2	Registering Your SkyCaddie SX400	9	4.9	Intelligent Automation	22
3.0	Navigation	10	4.10	Reviewing Saved Rounds	22
4.0	Playing Golf	10	5.0	SkyCaddie SX400 Settings	23
4.1	(A) Selecting A Course To Play	10	5.1	Account Settings.....	23
	(B) Updating A Golf Course With Wi-fi	11	5.2	Golf Settings	23
	(C) Updating A New Course To Your SX400 ..	12	5.3	System Settings.....	24
4.2	Changing Golf Views	14	5.4	Versions	25
	(A) Round Options	15	Appendix A	Helpful Hints	26
4.3	Features Of Interactive HoleVue	18	Appendix B	Target Descriptions.....	29
4.4	Features Of IntelliGreen®	19	Appendix C	Battery Life.....	30
4.5	IntelliGreen® Pro	20			

  PRODUCT OVERVIEW

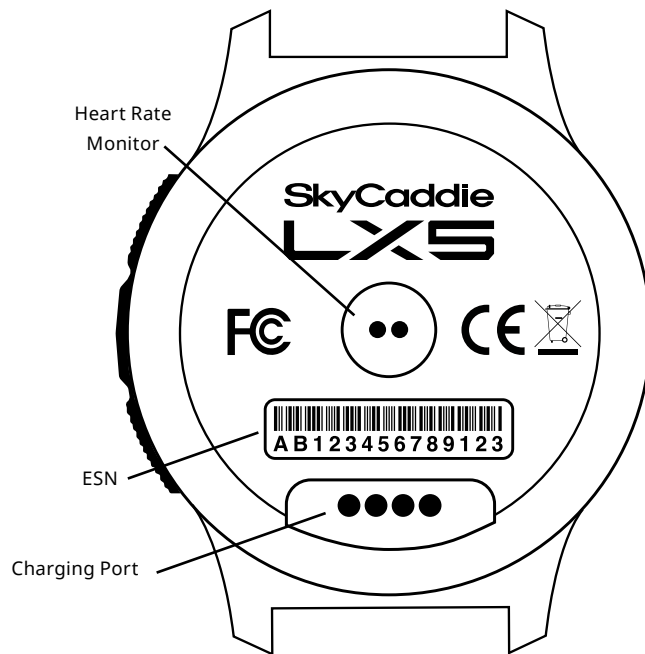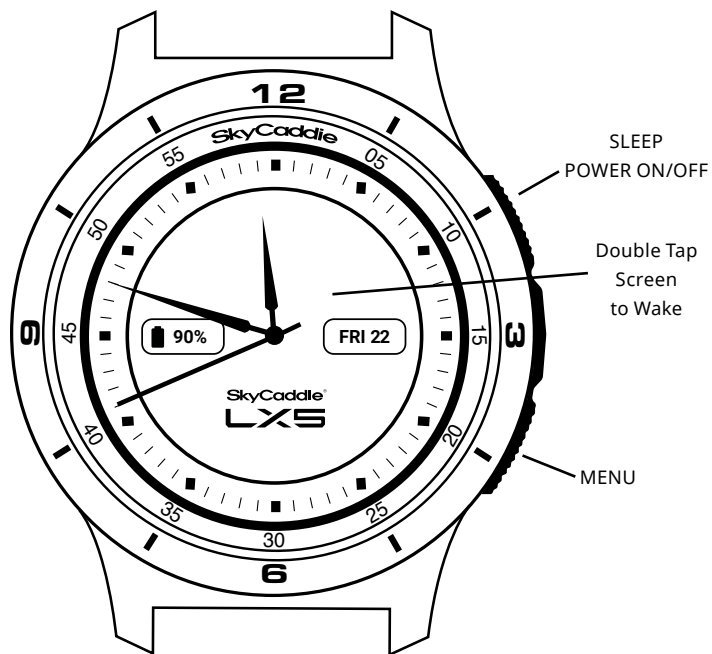

30-DAY COMPLIMENTARY COURSE MAP TRIAL

Your SkyCaddie LX5 comes preloaded with over 35,000 of SkyGolf's ground-verified, error-corrected maps for unmatched accuracy to provide you with precise yardages to all critical targets, on a 30-day trial basis. Your complimentary 30-day trial period will begin with your first round of golf. After 30 days, access to course

data requires a registration for either a 'no annual fee' option which will provide limited front, center, back information or a nominally priced membership plan which will provide full course data and cloud storage.

If a SkyCaddie membership card is included with your promotional packaging, you can redeem it during the registration process (use the Apply Prepaid Membership Card option).

This plan gives your SkyCaddie LX5 worldwide access to SkyCaddie's Advanced Feature Course Maps, which includes SkyCaddie's proprietary Intelli-Green® Technology and distances to up to 40 TrueGround Targets per hole.

SkyGolf membership plans have no hidden fees or variable charges. Through this minimal annual investment, you have access to SkyCaddie's highly accurate and proprietary course map database, software updates, post-round game analysis, and many more member benefits and rewards. For more information go to www.skygolf.com/plans/plansoverview.

SkyGolf Memberships Offer Much More Than Just a Better Golf Game!

EXTENDED WARRANTY

When registering your SkyCaddie LX5, you will be given the option of purchasing an Extended Warranty if you reside in the United States or Canada. This will extend the standard 6-month manufacturer's limited warranty to a

12-month warranty against defects in materials and workmanship. Terms and conditions are listed online at www.skygolf.com

CUSTOMER SERVICE

SkyGolf is committed to providing the highest level of customer support. To view the latest version of this guide or to access additional information including product FAQs or to chat with a customer service representative, please visit www.skygolf.com and click on Support at www.skygolf.com/mylx5

HOW TO TURN ON / OFF YOUR SKYCADDIE LX5

- To turn on, press and hold top button. LX5 will advance through start up sequence
- To turn off, press and hold top button.
- Or, press menu button, >menu > scroll down to 'Turn Off' – and confirm turn off



How to wake up LX5 Screen:

In order to conserve battery, the LX5 screen will DIM to dark when not in use. To wake up screen either press top right button or double tap the screen.

Auto Dim Settings can be changed in the menu:

 
Menu>Settings> System>Auto Dim> 10 sec, 15sec, 20, 30 or Never. Choosing NEVER will reduce battery life significantly

CLEAN THE CHARGING PORT ON YOUR SKYCADDIE LX5

Make sure the charging port on your SkyCaddie LX5 and the magnetic charging connector on the USB charging cable are clean and dry. You can wipe off sweat, dust, or grass with a clean, dry cloth or towel, but in some instances your SkyCaddie LX5 may require additional cleaning. To remove tarnish or built-up grime on the gold contacts, follow these steps:

Cleaning the charging port on the back of your SkyCaddie LX5

- Step 1: Moisten a clean cotton Q-Tip™ swab with isopropyl alcohol. Use only enough alcohol to moisten the Q-Tip™ swab—do not soak the swab.
- Step 2: Scrub the four gold contact points on the underside of the SkyCaddie LX5's face.
- Important:** Scrub only the contact points. Using isopropyl alcohol on other parts may damage your LX5.
- Step 3: Continue scrubbing the contact points with clean, alcohol-moistened Q-Tip™ swabs until the swabs no longer pick up any debris and the contact points are shiny.

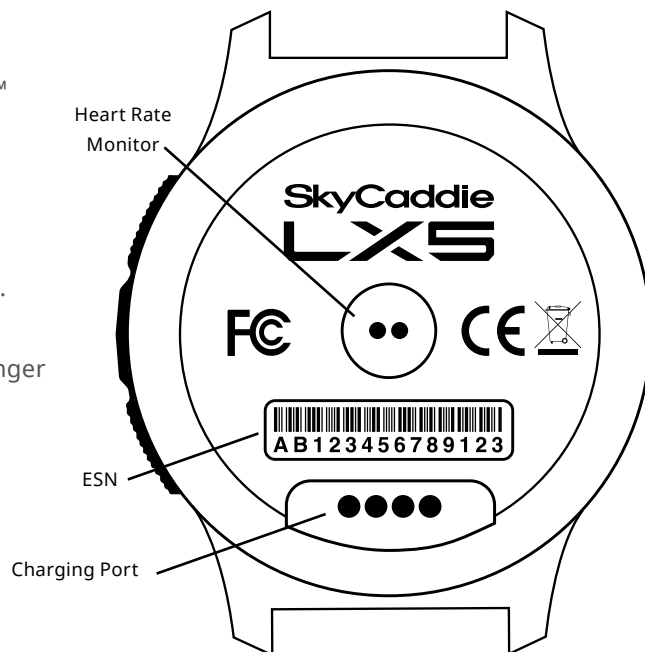

ACTIVATING AND REGISTERING YOUR SKYCADDIE® LX5

There are two ways to register your SkyCaddie LX5:

- Via Bluetooth® on your smart device
- Via CaddieSync® Express on your computer

Activate Your SkyCaddie LX5 via Bluetooth® and SkyGolf 360 Mobile app.

1. Using your smart device, go to the Google Play™ Store or the Apple® App StoreSM to download the SkyGolf 360™ Mobile App.
2. Log in with your username and password or create an account.

IMPORTANT: To complete the registration process, you will need to pair your SkyCaddie LX5 with the SkyGolf 360 app. The pairing instructions are listed below.

Bluetooth Pairing: To pair your SkyCaddie LX5 with SkyGolf 360:

1. Press and hold the MENU button until the Menu opens.
2. Select SETTINGS and press the OK button.
3. Select BLUETOOTH.
4. Select SYNC NOW.



5. The LX5 will turn on Bluetooth and it will go to the "Pair Ready" screen.
6. In the SkyGolf 360 mobile app, press the SYNC icon and follow the on-screen instructions to complete pairing process.

Activate your SkyCaddie LX5 via the enclosed USB cable

 
1. On your LX5, go to MENU>SYNC>USB.
2. On your computer, go to www.MySkyCaddie.com and follow the onscreen directions.
3. Either enter the ESN (Electronic Serial Number) found on the back of the LX5, or on your SkyCaddie LX5, select CODE in the Main Menu to display your unique 8-character Access Code.
4. To complete activation, the website will ask you to log into your SkyGolf account or to create a user account, should you not yet have one.
5. Follow the onscreen prompts to complete registration and activation of your SkyCaddie LX5

CHARGING YOUR SKYCADDIE LX5

Please fully charge your LX5 before first use. Prior to charging or recharging, make sure the charging contacts and surrounding areas on your LX5 are dry and free of any dirt or debris to ensure proper electrical contact and to prevent corrosion.

Use the enclosed magnetic clip/ USB cable to charge the SkyCaddie LX5.

1. Align the magnetic clip on the back of the LX5 as shown
2. Insert the USB Plug into a USB port on your computer, or a SkyCaddie wall charger (optional accessory)
3. If connected correctly, CHARGE screen will display. When fully charged, 100% Charge will appear on screen

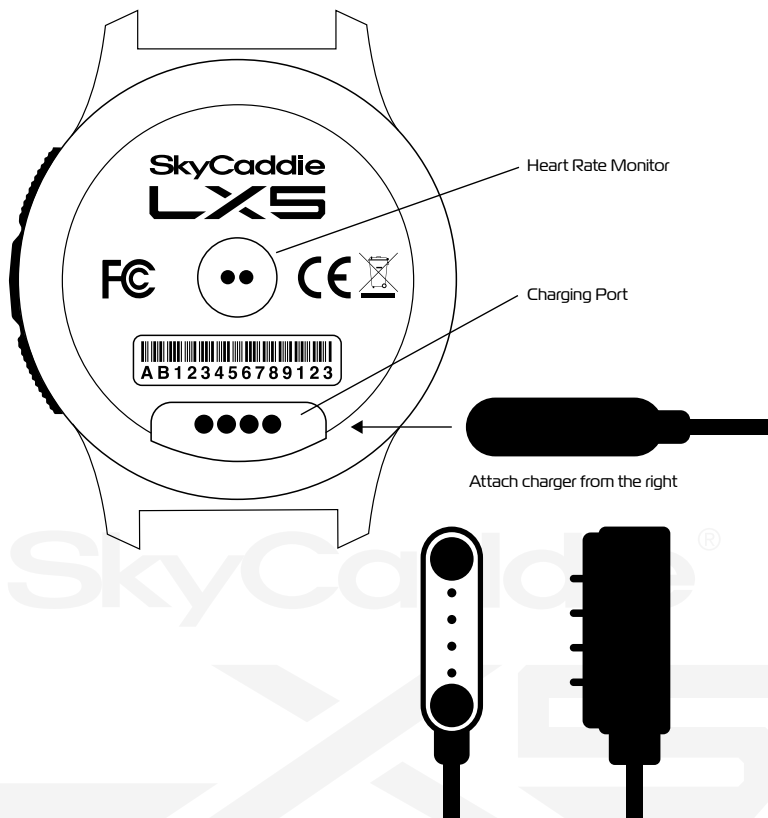

NAVIGATION

The screen of your SkyCaddie LX5 responds to several gestures:



Tap gesture



 
 
Drag gesture



Slide gesture

MENUS AND PLAYING GOLF

Time: Displays the watch face and time. At any time, you can change watch face by press and hold the time screen. It will reduce in size and then you can scroll left or right to choose another watch face.

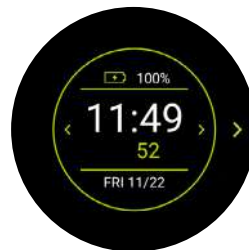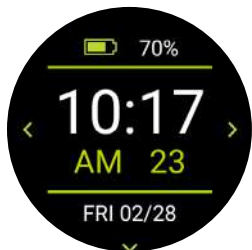



To change watch face - Press and hold screen watch display will reduce in size and now you can swipe right for a different watch face design

Setting the Time: Go to Menu, then Settings, then Time and Set time. Confirm GMT setting example - 6hours. Confirm time zone example Central America. Confirm time and scroll to adjust as needed. Finally, confirm date and scroll to adjust as needed. When complete touch back arrow to exit menu.

Scroll to the right to see smart phone notifications.



  Scroll the left to see 'Today's' fitness tracking – Steps, Miles and BPM.
Scroll down from this menu to see yesterday's steps and fitness goals

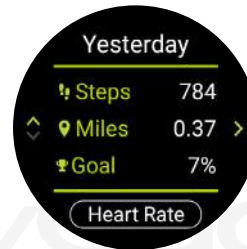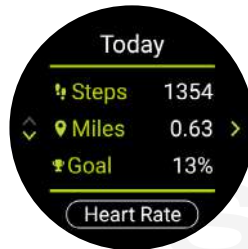

Hear Rate Monitor:

- Turn on/off HRM. **NOTE:** we recommend turning it on, check heart rate and turn off. Leaving the HRM on continually will deplete battery more rapidly when in use
- Heart rate monitor may not work on all Skin Tones

Golf:

Resume a round, start a new round, access Demo course, view saved rounds and access Golf Settings.

Golf Settings Menu:

- Units: change yards to meters
- Targets At: set the distance you want to start seeing targets off the tee box
- Green At: set the distance that you want the green to show. Or auto appear or auto show
- Tee Gender: choose your gender for correct tee box
- Auto Hole: on or off – will auto advance to next hole if ON
- Default view: HoleVue or Front, Center, Back – will change which view you want to see first for each hole

Sync:

Choose either USB or Bluetooth sync here. This will initialize the LX5 to be discoverable. You will need to sync when doing the following actions:

1. Activating and registering your LX5
2. Syncing a score to SkyGolf 360
3. Renewing your membership plan
4. Updating or adding golf courses to your LX5

Alarms:

Here you will find access to set up to 10 different alarms.

Stopwatch:

Lap timer

Timer:

Here you can set timers for up to 59 hours in length

Settings:

- Time: set the time here
- Fitness:
 - Units of measurement can be changed from Miles to Kilometers
 - Step Goal: set daily goals
- Golf (as above menu)
- Bluetooth
 - Turn on/off
 - Pair/Unpair

SkyCaddie®
LX5

- System:
NOTE: changing these default settings may reduce battery time.
 - o Backlight: Low, Medium. High
 - o Auto Dim: dimming can be changed here.
 - o Auto Wake
 - o Vibrate – on or only for alarms
 - o Language – change language here
 - o Diagnostics – submit logs or clear
 - o Reset – courses, time, factory

Info

- Account – registered users name, ESN, membership, expiration date
- Versions – ESN, OS version, App Version, Golf Version, Map Pack, WIFI/ MAC, BLE MAC
- GPS – search screen will provide GPS information

Turn off

The LX5 can be turned off here

PLAYING GOLF WITH THE LX5

Top Tip: To familiarize yourself with the screens of the LX5, use the DEMO course in GOLF MENU. This can be accessed without GPS mode turned on and you will be press icons, pan, zoom in and out, score and get yourself ready to play golf. MENU >GOLF >DEMO

A GPS signal is required to use the GOLF features on your LX5. To acquire a GPS signal, ensure you are outside and allow the LX5 to have a clear view of the sky. We recommend that you start with a fully charged battery as the GOLF features use more battery.

Starting a New Round

When at the golf course:

1. Press MENU button until the Menu list appears.
2. Choose GOLF
3. Choose NEW Round
4. The LX5 will turn on the GPS and auto-search for nearby courses.
5. When the search is completed, a list of nearby courses will display.
6. Select the course you want to play

SkyCaddie®
LX5

Customizing your Golf Settings:

To get to golf settings: Menu> Golf > Settings:

Here you find menu options to do the following:

- Units: change yards to meters
- Targets At: set the distance you want to start seeing targets off the tee box
- Green At: set the distance that you want the green to show. Or auto appear or auto show
- Tee Gender: Men or Ladies
- Auto Hole: on or off – will auto advance to next hole if ON
- Default view: HoleVue or FCB – will change which view you want to see first for each hole

Changing Golf Views on the LX5:

 
To change golf views on your LX5, go to Menu> Golf >Default View:

Here you find two options:


- FCB: Defaults to standard front/center/back screen
- HoleVue: Defaults to HoleVue/IntelliGreen map view

Navigation from Default Golf View screen:

FCB

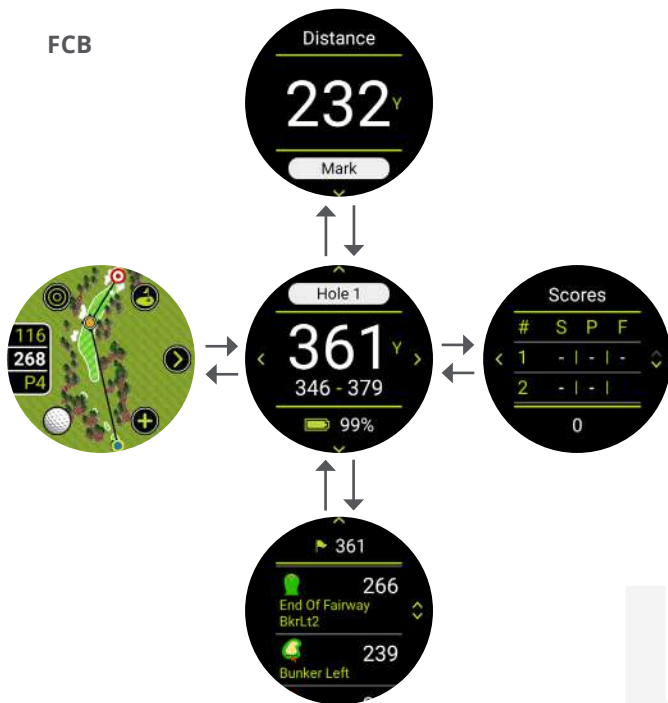

HoleVue

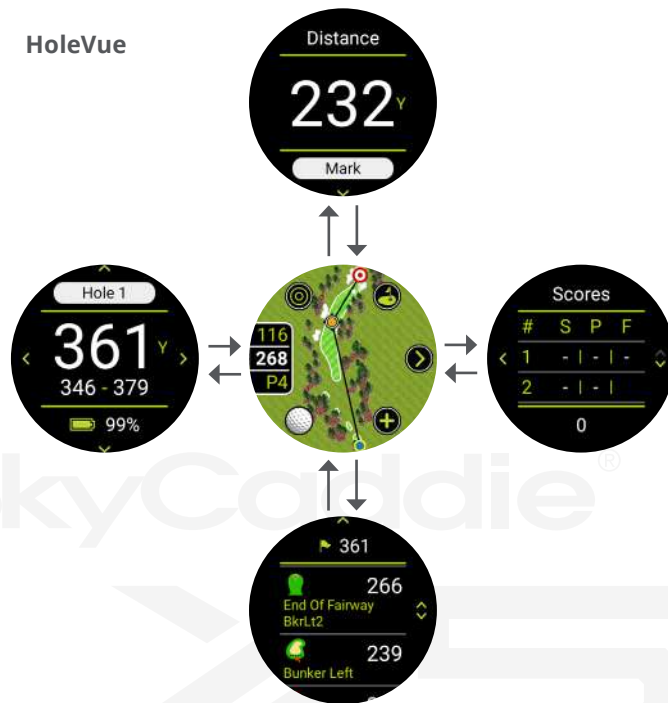 

SkyCaddie®

Golf Screen Icons:



 
Zooming in and out:

With your finger on the touch screen, pan around to any area of the fairway image or press on the target cursor to move the cross hair to any place on the fairway you want to zoom in too. Touch the plus (+) icon to zoom in, the minus (-) icon to zoom back out.




Enhanced Big Numbers:

Press on the fairway numbers shown here to enhance the number size. Press on the numbers again to reduce them.

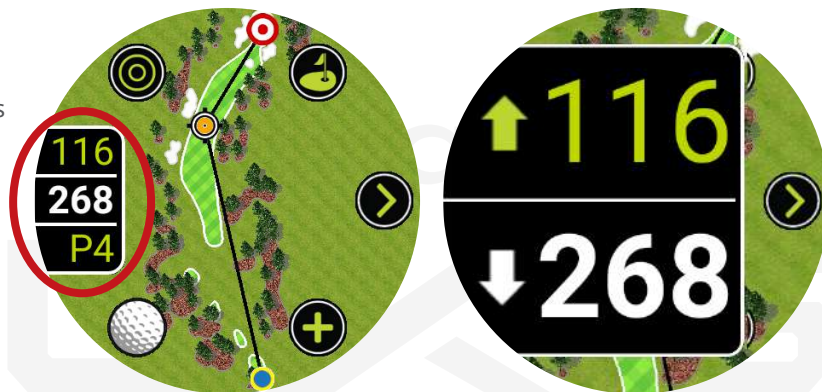


This can also be done with Range Rings.

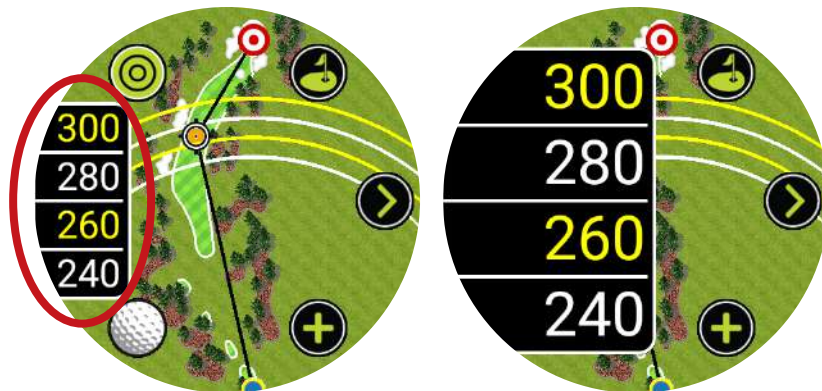 

Turning Range Rings On and Off:


Simply press on the target icon on the top left of screen to turn on Range Rings.

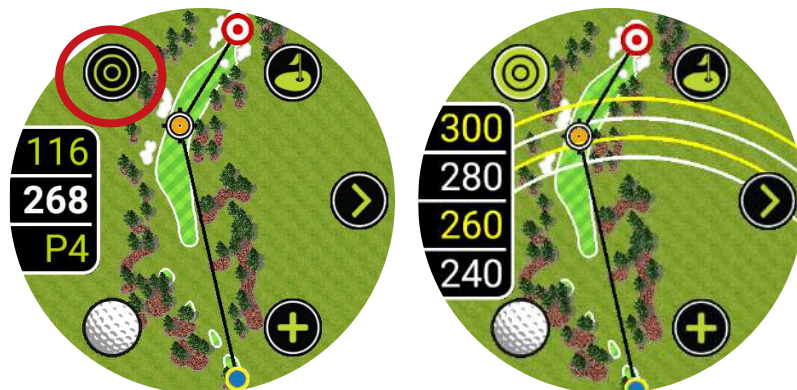 

IntelliGreen Icons:



 IntelliGreen Icon Menu:

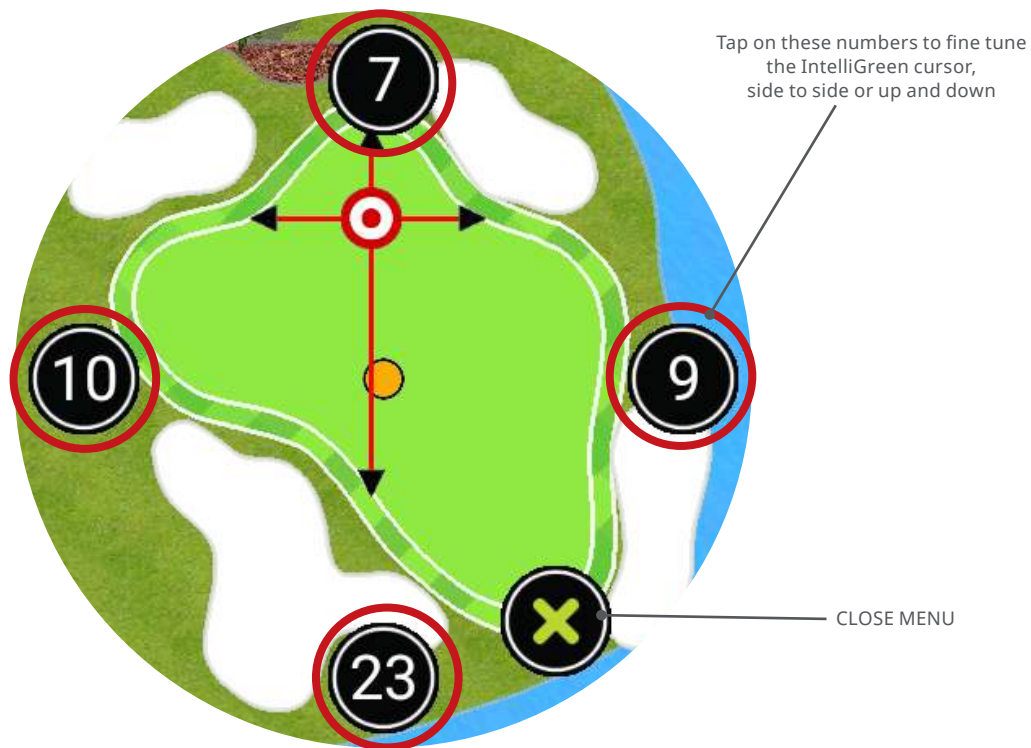

Measure any Shot Distance:

Press on the "Golf Ball" on the HoleVue screen, then press Mark to record the distance.



Scoring:

The LX5 allows you to keep track of and save your score to sync with SkyGolf 360.

You can track: Total score for each hole, Putts, GIR, and Fairways hit or missed, left or right.



SYNCING TO SKYGOLF 360:

USB via web

BT via 360 app

Need more explanation

Updating golf courses:

Adding new course

Updating course map packs

SkyCaddie®
LX5

APPENDIX A

HELPFUL HINTS

- Never disconnect or turn off your SkyCaddie LX5 while it is syncing, either via a USB cable connection to your computer or wireless technology connection to your smart device. Wait until it is finished communicating before you disconnect it, power it off, or power off your computer.
- When at the golf course, Turn on your SkyCaddie LX5 outdoors, with a clear view of the sky, to receive satellite signals. Give it an initial five minutes to warm-up before play. Do not carry in pocket or in glove box of cart
- While the high-performance GPS has been designed to acquire satellites quickly and stay locked to maintain performance in all terrains, it is still a good idea to avoid being around buildings, obstructions, heavy foliage, low areas with adjacent obstructions, or reflective objects (such as metal/glass structures) while using the LX5
- To maintain optimal accuracy during play, ensure that your SkyCaddie LX5 is always on, that it is in an upright position and that it has a clear view of the sky. Do not put the SkyCaddie LX5 in your pocket.
- Do not turn the LX5 on and off during play. The LX5 is a “smart system” that continues to download data from satellites to adjust to your environment during play. It is designed to stay on continuously during a round of golf. Turning it on and off will interrupt satellite communication and slow down play. If you take a long break at the turn, you may turn your SkyCaddie off to conserve battery power. When you turn it back on, remember to allow 5-10 minutes for it to return to optimal GPS accuracy. In the Main Menu, press “Resume” to continue your round.
- Fully charge the battery before each round.
- ONLY USE AC chargers and USB cables that come with or are authorized for use with your LX5. The wrong adapters or cables may damage the LX5

- DO NOT expose your LX5 to extreme temperatures.
- DO NOT expose your LX5 to harmful insect repellant or sunscreen containing chemical such as deet.
- Sync your LX5 regularly. Syncing regularly allows the LX5 to keep running at peak performance. Syncing allows you to check alerts for new features and software updates; automatically upload your latest scorecard to SkyGolf 360, update your course maps, and download add Vivid HD maps to your list of courses.
- Your LX5 is highly water resistant. Still, you should take care not to expose your LX5 to water, as too much exposure to water may cause damage, such as might happen if you drop your LX5 into the water hazard while looking for your ball. If you do get your LX5 wet, do not attempt to dry it with an external heat source like a microwave oven or hair dryer. SkyCaddie LX5 devices that do manage to get water damaged may not serviceable.
- Storing your LX5 the right way will help preserve its condition. Your devices should to be stored in a dry environment, out of direct sunlight, and away from excessive heat. Do not leave the watch in your golf bag or trunk of your car for extended periods of time. If you do not wear the watch every day, do not fully charge watch for storage purposes, this could affect the lithium ion battery for next season.
- Never attempt to repair or modify the LX5 yourself. Disassembling your SkyCaddie will void the warranty. Your[®] SkyCaddie LX5 does not contain any user serviceable parts. Service should only be provided by a SkyGolf[®] Authorized Service Provider. If your LX5 has been punctured, or subjected to a severe fall, do not use it until you contact an Authorized Service Provider.
- The rechargeable battery in your SkyCaddieLX5 is not user replaceable. For service information, go to www.skygolf.com.

U.S. FEDERAL COMMUNICATIONS COMMISSION REGULATORY AGENCY COMPLIANCE

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interferences received, including interference that may cause undesired operation. NOTICE: The FCC warns that user modifications of this device without the express approval of SkyHawke Technologies could void the user's authority to operate this device. CANADIAN REGULATORY AGENCY COMPLIANCE This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the interference causing equipment standard entitled: "Digital Apparatus", ICES-003 of Industry Canada.

BATTERY INFORMATION AND SAFETY REQUIREMENTS

Failure to comply with all of the following precautions could:

- Cause personal injury or property damage
- Cause abnormal chemical reactions which would make the battery overheat, smoke, distort, leak, explode, or catch on fire
- Destroy internal protections built into the battery
- Shorten battery life • Reduce battery performance
- Use only a SkyGolf supplied USB cable with your LX5
- Do not leave your LX5 attached to a charger or a USB port for over 24 hours. Under the recommended conditions, a completely discharged LX5 battery should completely re-charge in about 1-2 hours when on the charging screen.

- Do not charge the LX5 in a place where it could become over heated by direct sunlight, a stove, a fire, or other source of extreme heat.
- Keep the LX5 away from sources of high voltage or static discharge.
- If storing the unit for long periods of time - charge the battery to around 50% and check periodically to keep battery at around 50% charge.
- Store the LX5 in a place where it will not experience temperatures or absolute humidity over 85%. 31
- Do not put the LX5 into a microwave oven.
- Do not allow the LX5 to be crushed.
- Do not incinerate or burn a LX5
- Do not leave a LX5 where it could become submerged in water.
- If your LX5 is overheating, leaking, smoking, or if you detect an unusual odor, do not use. Immediately disconnect the cable from any charger or USB port. Avoid leaked-out materials. Do not allow these materials to your skin or clothes. Leaked materials may cause skin irritation. Seek medical attention if irritation persists. If leaked material contacts your eyes, do not rub your eyes. Rinse the eyes thoroughly with water and see a doctor immediately.
- Opening the SkyCaddie will void your warranty.

LX5



THE TRUE MEASURE OF THE GAME™

©2020 SkyHawke Technologies, LLC. All rights reserved.

SkyCaddie® LX5™, SkyGolf®, SkyCaddie®, #1 Rangefinder in Golf®, SkyGolf 360™, IntelliGreen®, IntelliPath™, HoleVue®, Dynamic HoleVue™, RangeVue™ and TrueGround® are trademarks of SkyHawke Technologies, LLC. Apple® and App StoreSM are trademarks of Apple, Inc. Android® and Google Play™ are trademarks of Google, Inc. Any use of such marks by SkyHawke Technologies, LLC is under license. All other trademarks and copyrights are the property of their respective owners.

U.S. Patent No. 7,118,498; 8,221,269; 8,556,752; 8,172,702; 8,523,711; 7,121,962; 8,758,170; 6,456,938 & Patent Pending.

For product terms and conditions, please visit www.SkyGolf.com.

All content within this Guide is copyrighted by SkyHawke Technologies, LLC and may not be reprinted without permission. The content of this Guide is furnished for informational use only, is subject to change without notice, and should not be construed as a commitment by SkyHawke Technologies, LLC. SkyHawke Technologies, LLC assumes no responsibility or liability for any errors or inaccuracies that may appear in the informational content contained in this Guide.