

**TOSY<sup>®</sup>**  
***ULTIMATE DISC***  
**LED & UltraLED**



# QUICK START GUIDE

# TOSY® **ULTIMATE DISC**

Our Ultimate Disc is available in 2 models: **UltraLED** and **LED**.

## **UltraLED**

Our premium light-up Ultimate Disc line with **360 LEDs**, 6 adjustable brightness and timer modes, **1000x times brighter** than any other discs.

## **LED**

Our standard light-up Ultimate Disc line with **36 LEDs**, 4 adjustable brightness and timer modes, **100x times brighter** than any other discs.

## **Recharge**

When charging, the Battery Indicator Light will blink, and it will turn Green when fully charged.

### **Battery Indicator Light**

Full battery: Green

Low battery: Red

### **Brightness Modes Button**

**Charging time: 45 minutes**


**Battery life: up to 1000 throws**

To recharge, use the provided USB-C cable to connect the charging port on the disc to a computer's USB port or a USB charger.

### **USB-C Charging Port**

Quick tip: use your fingernail to open the lid of the charging port.

### **Timer Modes Button**

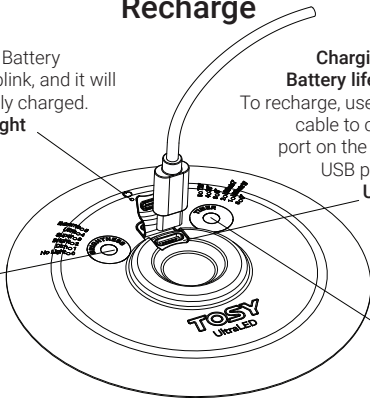

**First-time activation:** For transportation safety, we put the disc in "locked" mode. To unlock the disc and activate the lights, press any button and throw the disc. Once activated, the lights will turn on automatically each time you throw or spin the disc.

**Change Mode:** press the button once to go up and twice to go back to select your preferred mode.

**Turn Off:** the disc will **automatically** turn off after 10 minutes if it does not move, so you do not need to turn it off after each play. But if you want to turn it off, press either the Brightness or Timer button for 3 seconds.

**Quality Maintainance:** TOSY Ultimate Disc is designed to withstand substantial impact during play and is as durable as any regular disc. But it can still break if you deliberately smash it on hard surfaces using full force.

# Brightness Modes



**B0 - No Light:** You can turn off the disc light by choosing this mode.

**B1 - Dim Light:** Suitable to play in complete darkness or to save the battery. When combined with Timer mode T0, the battery life is up to thousands of throws.

**B2 - Bright.**

**B3 - Super Bright: Default mode.**

**B4 & B5:** Choose these modes with caution as they are extremely bright. Do not look directly at the light in close range. At these brightness modes, the disc only lights up for 5 seconds for each throw before changing to brightness B3. You may not select a preferred brightness level if the battery level is insufficient.

*(The 36 LEDs version does not have B4 & B5 modes)*

# Timer Modes


**T0 - Default Mode:** The disc will light up when in flight, and turn off when it lands.

**T1 & T2 - Ultimate Modes:** Once you catch or pick up the Disc, it will do the counting for you. The light will blink to let you know it is counting each second, and flash for the last second at the 10" (or 7") mark to signal a turnover if the disc has not left the player's hand.

**T3 & T4 & T5 - Timer Modes:** The light will stay on after each throw for 8 or 30 or 120 seconds.

*(The 36 LEDs version does not have T4 & T5 modes)*

To help you find the disc in the dark, when the disc falls on the ground after a throw, it will blink for 5 minutes until you pick it up. This feature is not available if the disc is in Ultimate modes T1 or T2.

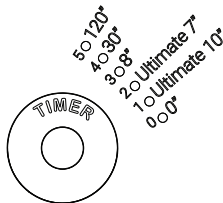

# Precautions

1. This product contains non-replaceable batteries and other electronics with complex design. Please do not try to open the battery compartment and replace/repair the battery yourself - you may damage the battery as well as the product's performance, durability and waterproof capability.
2. If the product is overheated, let it cool down before charging.
3. If the product is not overheated but does not seem to work properly, try to charge it and then remove immediately to help reboot it.
4. Do not charge the product in an extremely hot or cold environment.
5. Keep away from flammable and explosive materials when charging.
6. Never charge the product unattended for a long time.
7. Although the TOSY Ultimate Disc is waterproof, we don't recommend leaving it in water for too long, especially saltwater for high risk of corrosion.
8. When not in use, place the disc on a flat surface to avoid product deformation.

# TOSY®

*Game Changer*

## Product Video



Scan me

### FCC Compliance Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment



**RoboFi LLC**

101 Jefferson Dr, Menlo Park, CA 94025, United States.

wecare@tosy.com **www.tosy.com**



G.T.UDI/SC.03