



Theme Series

XVX S-K80 User Manual

Keyboard features


Top view



OLED display

Select the screen by turning the knob.

Boot screen

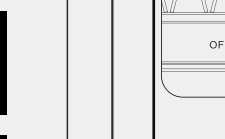

Support for custom startup screen.
Note: The programmer is only for Windows system currently.

Requirements: gif, under 255 Frame (240 x 135pixels recommended)




Home screen




- A Battery Status
- B Win Mode
- C Mac Mode
- D Win Lock
- E Caps Lock

The OLED display will show the current settings and items enabled/disabled.

Functions setting screen

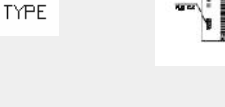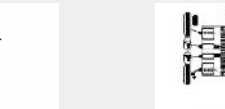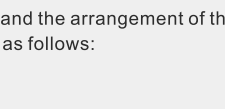

Wired Mode

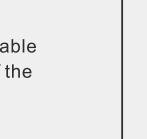

Type-C cable length: total length 1800mm±30mm.

The keyboard is connected to the host through a cable signal line, and the arrangement of the PIN pins of the interface is as follows:



USB "A" TYPE




MAC


WIN

Backlight effect / color control

1. Use the combination Key FN + ←/→ change the screen to this page.

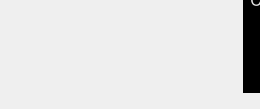

2. Use the combination Key FN + Enter to enter the Backlight effect/Colour selection page.

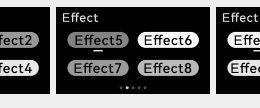


3. Use the combination Key FN + ←/→ select the Backlight effect/Colour.


4. Use the combination Key FN + Enter to confirm the Backlight effect/Colour.

Backlight brightness/speed control

1. Use the combination Key FN + ←/→ change the screen to this page.

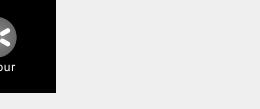


2. Use the combination Key FN + Enter to enter the Backlight brightness/Speed control selection page.

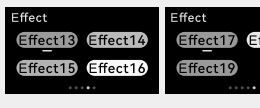

3. Use the combination Key FN + ←/→, Increase/Decrease the Backlight brightness/Backlight brightness/Speed control, Total 5 levels optional: 0%-20%-40%-60%-80%-100%

 4. Use the combination Key FN + Enter to confirm the Backlight brightness/Speed control.



Volume / language setting

1. Use the combination Key FN + ←/→ change the screen to this page.



2. Use the combination Key FN + Enter to enter the Volume/Language selection page.




3. Use the combination Key FN + ←/→ select the Volume/Language.

4. Use the combination Key FN + Enter to confirm the Volume/Language.




Multimedia key for windows

1. Use the combination Key FN + ←/→ change the screen to this page.

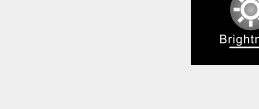


2. Use the combination Key FN + Enter to enter the Volume/Language selection page.

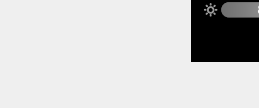


3. Use the combination Key FN + ←/→ select the Volume/Language.

 4. Use the combination Key FN + Enter to confirm the Volume/Language.




Multimedia key for Mac

 1. Use the combination Key FN + ←/→ change the screen to this page.




 2. Use the combination Key FN + Enter to enter the Volume/Language selection page.




3. Use the combination Key FN + ←/→ select the Volume/Language.

 4. Use the combination Key FN + Enter to confirm the Volume/Language.



Product basic

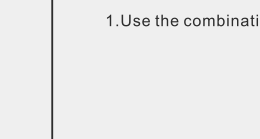

MAC

WIN

Keyboard Bottom Switch Instructions

CE

RoHS

WEEE

QR Code

https://www.xvxchannel.com

instagram.com/xvx_keyboard

facebook.com/xvxkeyboard