



IMA.....	2191	Moteva.....	1261, 3661
Infinity.....	1171, 1961, 4791	Motorola.....	1441, 2151, 3431
InFocus.....	3421	MTC.....	0001
Initial.....	2481, 4231, 4821, 5031, 5041		0011, 0251, 0351, 1221, 1311
Insignia.....	0371, 0581, 0701, 0871	Multitech.....	2191
.....	0921, 1241, 1381, 2241, 2271	Multivision.....	0081
.....	2891, 2921, 3761, 3841, 4371	Myron&Davis.....	2101
.....	4721, 4761, 5051, 5061, 5181	NAD.....	0001, 0401, 1221, 1311, 4021
Integra.....	1841	NEC.....	0001, 0251, 0341, 1221, 1431
Inteq.....	1771, 1781		1801, 1841, 2151, 3431, 4401
ISymphony.....	3041	Net TV.....	0121, 0501
Janeil.....	0151	Nexxtech.....	0871, 1201
JBL.....	1961	Nikei.....	1941
JC Penney.....	0001, 0051, 0251, 0261	Nikko.....	0001, 1011, 1221, 4321
.....	0351, 0791, 0811, 0961, 1221	Niko.....	3581
.....	1311, 1421, 1451, 1691, 1911	Norcent.....	0511, 0671, 2181
.....	1921, 1951, 3421, 3451, 4011	NTC.....	1011, 4321
JCB.....	1901	Olevia.....	3081, 2431
Jensen.....	0001, 1221, 2271		2771, 2781, 2791, 5151, 5161
JVC.....	5281, 0311, 0481, 0771, 0901	Oncommand.....	1861, 3991
.....	0941, 1281, 1481, 1801, 1911	Onking.....	1941
.....	2381, 2751, 4121, 4201, 5071	Onkyo.....	3101
Kawasaki.....	4741	Onwa.....	1941, 2191
Kawasho.....	0001, 1221, 1901	Optimus.....	0201, 0401, 1571
Kaypani.....	0391, 4221		1881, 3551, 4021, 4691, 5201
KEC.....	2191, 1941	Optoma.....	3121, 2441
Kenwood.....	0001, 1221	Optonica.....	0341, 1441
KLH.....	0191	Orion.....	0281, 0371, 1771, 1781
Kloss Novabeam.....	0151, 1021	Panasonic National.....	5481, 3381, 3401
Kogi.....	4871		0051, 0201, 0951, 1091, 1491
Konka.....	5441, 0471, 0521		1571, 1651, 1831, 1881, 1961
.....	0751, 1241, 1671, 2121, 2191		2151, 2711, 2801, 3431, 3551
.....	2241, 2371, 4621, 4901, 4971		3771, 4691, 4781, 4861, 5201
KTV.....	0011, 1491, 1681, 1941, 2191	Philco.....	0001, 0251, 0321, 0961
Kurazai.....	1661		1021, 1221, 1671, 1801, 1961
KWorld.....	2931		2151, 2321, 2941, 3431, 3931
Lasonic.....	1211, 1611, 4811	Philips.....	3031, 3131, 3151
Legend.....	0581		3171, 3371, 3391, 0181, 0001
LG.....	5501, 5511		0161, 0321, 0421, 0541, 0661
.....	3001, 3021, 3091, 3221, 3281		0701, 0791, 0911, 0961, 1021
.....	3311, 5271, 0001, 0131, 0251		1151, 1171, 1381, 1391, 1601
.....	0611, 0761, 0931, 1181, 1221		1741, 1801, 1961, 2151, 2321
.....	1471, 1501, 1911, 3811, 4731		3431, 3541, 3591, 3861, 3911
Liquidvideo.....	0881, 1111		3971, 3981, 4191, 4761, 4791
Lodgenet.....	1421	Philips Magnavox.....	0181, 0681, 0911, 1171
.....	1661, 1691, 2091, 3421, 4091		1961, 2321, 3591, 4791, 4991
Loewe.....	1871, 1961	Pilot.....	0001
Logik.....	1421, 1661, 1691, 3421	Pioneer.....	0001, 0401, 1221, 1371
Luce.....	0301		1511, 1841, 1981, 4021, 4661
Luxman.....	0001, 1221	PIVA.....	2411, 5021
Lxi.....	0001, 0261, 0811	Planar.....	4251
.....	0931, 1221, 1261, 1311, 1421	Polaroid.....	0191
.....	1691, 1961, 3421, 4011, 4731		0581, 1241, 2081, 2271, 2311
Magnasonic.....	1711		2401, 2451, 3741, 4631, 5131
Magnavox.....	0001	Portland.....	0001
.....	0321, 0681, 0701, 0961, 1021		0251, 1011, 1081, 1221, 1551
.....	1171, 1221, 1801, 1961, 2321	Precision.....	0621
.....	4191, 4641, 4761, 4791, 4991	Price Club.....	0351
Majestic.....	1421, 1661, 1691, 3421	Prima.....	3011
Manhattan.....	5381		0381, 0581, 0631, 0871, 2451
Marantz.....	0001, 1221, 1841, 1961	Princeton Graphics.....	1301, 1441
Maxent.....	3361, 0501	Prism.....	0051
Medion.....	1101, 1141, 2351	Proscan.....	0261, 0811, 1421
Megatron.....	0001, 1221, 1271		1691, 2061, 2301, 3421, 4011
Mei.....	0011	Proton.....	0001, 0391, 0641, 1221
Memorex.....	0001, 0211, 0371, 1161, 1221		1911, 2231, 4211, 4221, 4271
.....	1261, 1421, 1631, 1661, 1691	Prottron.....	3731, 4301
.....	1711, 2401, 3421, 4251, 5001	Proview.....	2401, 2421, 2431
MGA.....	0001, 0251, 1221	Pulsar.....	0001, 1771, 1781
.....	1581, 1711, 1801, 1911, 1921	Pyle.....	3331
Midland.....	0051, 0261	Quasar.....	0051, 0201, 1091
.....	0811, 1691, 1771, 1781, 4011		1491, 1571, 1831, 1881, 1961
Mintek.....	4231		2151, 3431, 3551, 4691, 5201
Minutz.....	1951	Radio Shack.....	0001, 0141, 0341, 0931
Misakai.....	1381		1001, 1221, 1261, 1421, 1571
Mitsubishi.....	3271, 0001, 0251, 1221, 1581		1691, 1701, 1911, 1941, 2111
.....	1711, 1801, 1811, 1921, 2701		2191, 3421, 3551, 4731, 4921
Monivision.....	0491	RCA.....	0001, 0051, 0091
Montgomery Ward.....	1421, 1661, 1691, 3421		0141, 0251, 0261, 0361, 0551





.....0811, 0891, 1001, 1131, 1221
.....1331, 1371, 1421, 1521, 1691
.....1851, 1921, 2011, 2061, 2111
.....2151, 2251, 2301, 2851, 2951
.....3421, 3431, 3571, 4011, 4921
Realistic.....0001, 0141
.....0341, 0931, 1001, 1221, 1261
.....1421, 1571, 1691, 1701, 1911
.....1941, 2191, 3421, 3551, 4731
Rhapsody.....0011
Runco.....1771, 1781, 1841
Sampo.....0001, 0121
.....0391, 0501, 1221, 1911, 4221
Samsung.....5471, 5521, 3301, 3321
.....2741, 2961, 0331, 0001, 0101
.....0251, 0261, 0351, 0531, 0571
.....0711, 0781, 1191, 1221, 1311
.....1501, 1911, 2071, 2141, 2721
.....3471, 3561, 4011, 4941, 4961
Samsux.....1221
Samtron.....0351
Sansui.....5551, 0211, 0371, 1631
Santeca.....0171
Sanyo.....2981, 2991, 3051
.....5251, 2871, 5241, 5261, 0001
.....0801, 1051, 1161, 1261, 1531
.....1581, 1911, 2881, 3481, 5001
Sceptre.....3521, 4071, 5111
Scotch.....0001, 1221
Scott.....3215, 0001, 0021, 0281
.....1221, 1711, 1941, 2191, 5141
Sears.....0001, 0211, 0261
.....0351, 0701, 0811, 1221, 1261
.....1291, 1311, 1381, 1421, 1531
.....1581, 1691, 1711, 1911, 1961
.....2021, 3421, 3481, 4011, 4761
Selectron.....2471, 2491, 2501
Semp.....3611
Sharp.....5421, 3181, 3191, 3201
.....2731, 0001, 0341, 0461, 0681
.....0691, 1221, 1291, 1441, 2031
.....2201, 2261, 3461, 4751, 4991
Shogun.....0001
Signature.....1421, 1661, 1691, 2171, 3421
Signet.....2811, 2821, 2861
Simpson.....0961
Sonic.....0011
Sony.....5321
.....1071, 1641, 1731, 1901, 2161
.....2741, 3531, 3891, 4101, 4981
Soundesign.....0001
.....0961, 1221, 1711, 1941, 2191
Sova.....3631, 4431
Soyo.....4611, 5101
Spectra.....1611
Spectravision.....2341
Squareview.....1381
SSS.....0001, 1941, 2191
Star Sight.....0061
Starlite.....2191
Superscan.....0701, 1291, 2021, 4761
Supersonic.....0241, 4701
Supro.....0001, 1991
Supremacy.....0151
Supreme.....1901
SVA.....0671, 2101
Sylvania.....0001, 0321
.....0371, 0701, 0931, 0961, 1021
.....1221, 1381, 1801, 1821, 1961
.....2321, 2761, 3701, 4731, 4761
Symphonic.....0021, 0701
.....0931, 1381, 2191, 4731, 4761
Syntax.....2431, 5151, 5161
Tandy.....1441
Tatung.....1141, 1741, 2151, 3431
TCL.....2851, 0091, 1421
.....1691, 1851, 2011, 2061, 2111
.....2301, 3421, 3431, 3571, 4921
Technics.....0051

Techwood.....0001, 0051, 1221
Teknika.....0001, 0151, 0251
.....0351, 0961, 1011, 1221, 1311
.....1421, 1571, 1661, 1691, 1711
.....1911, 1941, 2191, 3421, 3551
Telecaption.....0821
Telerent.....1421, 1661, 1691, 3421
Tera.....0001, 0641
Tevion.....1141
TMK.....0001, 1221
Toshiba.....5531, 3211, 1311
.....0211, 0231, 0341, 0351, 0821
.....1121, 1191, 1261, 1351, 1541
.....1571, 1621, 1801, 1841, 1911
.....2691, 3551, 4891, 4941, 5081
Trutech.....2461, 3821, 4551
Universal.....0791, 1951
Venturer.....3781
Victor.....1481, 4121
Videocon.....4061
Vidtech.....0001, 0251, 1221
View Sonic.....5301
.....0501, 1981, 3751, 3801, 4281
Viking.....0151
Viore.....5431, 2831, 2841, 3681
Visteon.....3411
Vizio.....5561, 5571, 5581, 5591
.....5601, 5611, 5621, 5631, 5641
.....5651, 5661, 5671, 5681, 5691
.....5701, 5711, 2901, 1471, 1741
.....2021, 3651, 3741, 3851, 4081
Wards.....0001, 0021
.....0251, 0321, 0341, 0791, 0961
.....1021, 1221, 1321, 1421, 1661
.....1691, 1711, 1951, 1961, 3421
Westinghouse.....3241, 3251
.....0111, 1901, 2281, 3711, 3851
White-Westinghouse.....0601, 0931, 1081
.....1501, 1521, 1551, 3641, 4731
Yamaha.....0001, 0251, 1221, 1571, 3551
Zenith.....5281, 5271, 0001
.....0061, 0131, 0371, 0681, 0691
.....0931, 0941, 0991, 1011, 1031
.....1081, 1171, 1181, 1191, 1221
.....1251, 1271, 1471, 1631, 1661
.....1751, 1771, 1781, 1791, 2171
.....2291, 3501, 4201, 4321, 4731
.....4751, 4791, 4941, 4991, 5211

TV/VCR COMBOS

Admiral.....0302, 1682
Aiwa.....0312, 0432, 0752
Akai.....0032, 1592
Broksonic.....(0851 & 0462)
.....(0851 & 0892), 0942, 1631
Curtis mathes.....0652, 1522
Daewoo.....(1081 & 0762)
.....(1251 & 0082), 1092
Diamond vision.....(2001 & 0422)
Durabrand.....(2291 & 0182)
Electrohome.....0032, 1592
Emerson.....(0851 & 0462), (0851 & 0892)
.....(1251 & 0082), 0032, 0192
.....0232, 0312, 0332, 0432, 0942
.....1092, 1172, 1432, 1592, 1631
Fisher.....0602, 1712
Funai.....0312, 0432
GE.....1152, 1482
Goldstar.....0312, 0432, 1181
Gradiente.....(2291 & 0182)
Hitachi.....0312, 0432
Infinity.....0622
JVC.....0452, 4201
LG.....0312, 0432, 1181
LXI.....0312, 0432
Magnavox.....0302, 0412, 0622, 1682
Memorex.....0602, 0942, 1631, 1712
Mitsubishi.....0032, 1592





4



Entone.....	2043, 2053		0474, 0494, 0554, 1064, 1084
Everquest.....	0014		1094, 1104, 0203, 0303, 0443
Expressvu.....	0073, 0173, 0343, 0433, 0903		0523, 0533, 0623, 0703, 0783
Fortec Star.....	0083		1093, 1103, 1153, 1633, 1753
.....	0183, 0263, 0373, 0463, 0473	Philips Magnavox.....	0203
Fujitsu.....	0673, 0763		0533, 0783, 0064, 0104
Garrard.....	0474	Pinnacle.....	1493, 1823, 1833
GC Electronics.....	0334	Pioneer.....	1404, 0532, 0985, 2855
GE.....	0384, 0874, 0333		1853, 0024, 0274, 0614, 0924
.....	0543, 0643, 0723, 0793, 0803	Polaroid.....	4561
.....	0873, 1073, 1083, 1373, 1383	Primestar.....	1253, 0323, 0633, 1563, 1573
Gemini.....	0123, 0204, 0344	Prosat.....	0813, 1333
General Instrument(GI).....	0013	Proscan.....	0333, 0643, 0723
.....	0004, 0093, 0163		0803, 0873, 1073, 1083, 1383
.....	0193, 0323, 0453, 0633, 0833	Pulsar.....	0154
.....	0893, 0953, 0963, 1573, 1583	Quasar.....	0154
.....	1603, 0044, 0074, 0314, 0374	Radio Shack.....	0064, 0104, 0114, 0964
.....	0464, 0514, 0594, 0634, 0784	RCA.....	0244, 0394
.....	0794, 0814, 0884, 0894, 1034		0474, 1014, 1083, 0333, 0363
Geosatpro.....	2003		0543, 0643, 0723, 0793, 0803
Globecast.....	0003, 1004		0873, 1073, 1373, 1383, 1873
Go Video.....	1883	RCN.....	0514, 0824
Gold Star.....	0924	Realistic.....	0334, 0273, 0843, 1643
Hamlin.....	0414, 0464, 0484, 0544, 0784	Regal.....	0544
Hitachi.....	0594, 0303	Regency.....	0214
.....	0443, 0523, 0623, 1103, 1153	Rembrandt.....	0594
HNS.....	1153	ReplayTV.....	1272
Hughes.....	0593, 1343	Rogers.....	1344, 0174, 1523
Hughes Network.....	0303	Runco.....	0154
.....	0443, 0523, 0563, 0593	Samsonic.....	1433
.....	0703, 1093, 1103, 1153, 1343	Samsung.....	4451, 1213
Humax.....	1505		0043, 0233, 0853, 1113, 1123
Illico.....	1354, 1404, 1523		1143, 1763, 0014, 0024, 0924
ILO.....	1035	Scientific Atlanta.....	1324
Insight.....	1284, 1314		1334, 1364, 1404, 1414, 1444
Jasco.....	0474		1454, 1464, 1474, 1484, 1494
Jerrold.....	0004, 0074, 0194		0124, 0134, 0164, 0234, 0294
.....	0314, 0324, 0444, 0464, 0514		0574, 0714, 0804, 0834, 0864
.....	0594, 0784, 0794, 0814, 1034	Seiki.....	1263
JVC.....	1145, 0433, 0783	Sharp.....	1853
Kenwood.....	0413	Shaw.....	1524, 0514
Knology.....	1424, 1344, 1284, 1564	Sierra I II III.....	0653
LG.....	2925, 0303, 1103, 1153	Signal.....	0014
Liteon.....	1035	Signature.....	0594
Luxor.....	0503, 1653	Sky Network.....	0053, 0133, 1363, 1593, 1673
Macom.....	0613		1743, 1753, 1773, 1783, 1793
Magnavox.....	0203, 0533, 0783, 0094, 1064	SL Marx.....	0014
Mediacom.....	1284, 1584	Sonic Blue.....	1272
Medion.....	1035	Sony.....	1162, 1302, 2865, 2985, 3055
Memorex.....	0154		0113, 0353, 0553, 0773, 1893
Microyal.....	1423	Sprucer.....	0394, 1014
Mitsubishi.....	1534, 0303, 0443	Standard.....	0364
.....	0523, 0623, 1093, 1103, 1153	Star Sight.....	0244, 0863
Motorola.....	0453, 1573	Star Trak.....	0423, 0184
.....	1593, 1603, 1863, 0004, 0074	Starchoice.....	0163
.....	0194, 0314, 0374, 0514, 0594		0323, 0633, 1563, 1573, 1583
.....	0634, 0684, 0794, 0814, 0824	Starcom.....	0314, 0464, 0784
.....	0844, 0884, 0894, 0914, 1034	Stargate.....	0014
Movie Time.....	0224, 1074	STS.....	0383, 0583, 0663
Moxi.....	1274	Super Guide.....	0513
NEOSTAT.....	1413	Sylvania.....	1903
NET.....	1543, 1713	Tandy.....	0434, 0974
Norstat.....	0683	Televue.....	0014
Novaplex.....	0834, 0854	Telsat.....	1723
Nowtv.....	1473	Telus.....	1943
NSC.....	0224, 1074	Texscan.....	0364
OAK.....	0144, 0354, 1054	Thomson.....	0803, 1753
Omegasat.....	1983	Time Warner.....	1254, 1424, 1404
Onkyo.....	1243		0514, 0694, 0724, 0824, 1523
Orasat.....	1973	Tivax.....	1293
Orion.....	1523	Tivo.....	0092, 0252, 0353, 0982, 1052
Pace.....	1363		1162, 1492, 1502, 1505, 1542
.....	0053, 0133, 1593, 1673, 0904		1745, 1223, 0704, 0754, 0764
Panasonic.....	0545, 1272, 0304, 0394, 0954	Tocom.....	0004
.....	1014, 0213, 0223, 0243, 1353		0444, 0504, 0634, 0934, 1034
Pansat.....	1993, 0033, 0883, 1403	Toshiba.....	1735, 1745
Paragon.....	0154, 0284		3325, 0154, 0063, 0143, 0303
Philips.....	0092, 0252, 1052, 1163, 1492		0443, 0523, 0623, 0713, 0743
.....	1502, 1542, 0094, 0344, 0424		0973, 1093, 1103, 1133, 1153





TV86.....	0224, 1074
TVA.....	1703
Ultimate TV.....	0333, 0553, 0873
Uniden.....	0693, 0823, 0863
Unika.....	0264, 0334, 0474
United.....	1663
United Cable.....	0464, 0784
Universal.....	0054, 0264, 0334
.....	0404, 0474, 0564, 0944, 1044
Verizon.....	2033, 1404, 0514
.....	1283, 0174, 0684, 0824, 1523
Video Cipher ii.....	0023
Video Tech.....	0454
Videotron.....	1404, 1574, 1523
Videoway.....	0034
Viewsat.....	1803
Viewstar.....	0084, 0094
.....	0224, 0434, 0974, 1064, 1074
Visionetics.....	1483
Visiontec.....	1693
Voom.....	2971
V-Tech.....	1813
Web TV.....	0113, 0783
Zenith.....	0114
.....	0154, 0474, 0524, 0584, 0624
.....	0644, 0023, 0123, 0153, 0253
.....	0293, 0313, 0733, 1173, 1593
Zenith Network.....	0254
Zinwell.....	2013

HDTV Set Top Boxes

Apex.....	2911
Charter.....	0174, 1523
Directv Models.....	0703
.....	0983, 1443, 1513, 1533
GE HDSTB.....	0874
Go Video Hdt100.....	2631
Hitachi 61hdx98b.....	1103, 2661
Hughes Hird E8.....	0303
.....	1103, 1153, 2591, 2651, 2661
Hughes Htl HD.....	0303
.....	1103, 1153, 2591, 2651, 2661
Insignia.....	2921
KWorld SA290QE.....	2931
LG HTL HD.....	0303
.....	1103, 1153, 2591, 2651, 2661
LG LSS 3200a.....	0303
.....	1103, 1153, 2591, 2651, 2661
Mitsubishi SRHD 400.....	1103, 2661
Mitsubishi SRHD 500.....	1103, 2661
Mitsubishi SR HD5.....	1103, 2661
Motorola HDT100.....	2601
Motorola HRT100.....	2601
Philco TB100HH9.....	2941
Philips DSHD800R.....	1103, 2661
Pioneer SH-D505.....	2561
Proscan PSHD105.....	0803, 2581
RCA DTA800B1.....	2951
RCA DTC-100.....	0803, 2581
RCA DTC-210.....	0803, 2581
RCA HD65W20.....	2611
RCA PSHD105.....	0803, 2581
Samsung SIR-T165.....	1143, 2671
Samsung SIR-T351.....	1143, 2671
Samsung SIR-TS160.....	1123, 2621
Samsung SIR-TS360.....	1123, 2621
Sony SATHD100.....	2681
Sony SATHD200.....	2681
Sony SATHD300.....	2681
Sylvania 6900DTD.....	2641, 2941
Toshiba DST3100.....	0303, 1153, 2591, 2651
Toshiba DW65x91.....	0303, 1153, 2591, 2651
Toshiba DST3000.....	0303, 1153, 2591
Venturer.....	1164
Zenith DTV1080.....	1173, 2571
Zenith HDSTAT420.....	1173, 2571
Zenith HDSTAT520.....	1173, 2571

DTV

Access HD.....	1234
Airlink101.....	1174
Alpha Digital.....	1234
Amtc.....	1234
Apex.....	1114
Artec.....	1224
Cadence.....	1214
Channel Master.....	1204
Coship.....	1214
Digitalstream.....	1194
Dish Network.....	0073
Echostar.....	0073
GE.....	0874
Goodmind.....	0874
Gridlink.....	1144
iNet Access.....	1234
Insignia.....	1184
Kingbox.....	1224
Lasonic.....	1144
Magnavox.....	2941
Microgem.....	1154
Philco.....	2941
RCA.....	1083
Sansonic.....	1144
Skardin.....	1174
Sunkey.....	1134
Tivax.....	1234
Venturer.....	1164
Winegard.....	1164
Zenith.....	1184
Zentech.....	1174
Zinwell.....	1124

STREAMING MEDIA

Apple.....	5541, 4295
Asus.....	1684
Dlink.....	1614, 1724
HP.....	1624
lomega.....	1744
LG.....	1714
Magnavox.....	1704
Netgear.....	1604, 4475
Niveus.....	1634
Philips.....	1654
Popcorn Hour.....	1664
RCA.....	1694
Roku.....	4395, 4355
Seagate.....	1674
Sling Media.....	1644
Vudu.....	1734
WD.....	4345, 4265
X-Box.....	4245, 4255

DVD

Acesonic.....	3135
Advent.....	1515
Afreedy.....	0575
Aiwa.....	0035, 0195, 0235, 3285, 3565
Allegro.....	3725, 3885
Ames.....	1275
AMW.....	0645, 0825
Anaba.....	1375
Apex.....	0045, 0245
.....	0375, 0425, 0615, 0845, 0945
.....	0965, 1025, 1065, 1105, 1235
.....	1245, 1405, 1675, 3825, 3895
Aspire.....	1695
Astar.....	3525
A-Trend.....	1585
Audiovox.....	1335, 3585, 3625
Axion.....	1335
B&K.....	0885
Blaupunkt.....	1105, 3895
Blue Sky.....	0215, 0245, 3155
Blue-Ray.....	2795, 2965, 2995, 3315







.....0735, 0745, 1395, 2945, 3795
Portland.....0235, 1545
Power Acoustik.....3575
Proline.....0215
Proscan.....0915, 1135
Prosonic.....0485
Prottron.....0305
Pyle.....2515, 1155
Radio Shack.....0955
.....0995, 1165, 1645, 2905, 3945
RCA.....2465, 0215
.....0915, 0955, 1105, 1135, 1165
.....1645, 2755, 2905, 3895, 3945
Regent.....1345, 3925
Reoc.....1295
RIO.....0205, 3885
RJ Technology.....1825, 2715
Rosen.....1175, 3035
Rotel.....0395
Saba.....0995
Sampo.....0575
Samsung.....4125, 2285, 2325, 2345
.....2485, 4095, 0075, 0255, 0565
.....1305, 1535, 1725, 2185, 2725
.....2995, 3085, 3555, 3765, 3865
Sansui.....0015, 0695, 3495
Sanyo.....2495, 0095, 0405, 2205, 2215
.....2225, 2235, 2245, 2645, 3945
Sears.....0015, 0445, 3495, 3745
Seg.....0765
Selectron.....1855, 1885, 1915
.....1955, 1995, 2035, 2075, 2875
Semp.....0725
Sensory Science.....1495
Sharp.....4115
.....4315, 4325, 4335, 2315, 2445
.....0555, 0625, 0815, 2795, 3115
Sherwood.....4225, 0225
Shinco.....1105, 3895
Shinsonic.....1105, 3895
Sonic Blue.....0665
Sony.....4165
.....4275, 2305, 0365, 0535, 0715
.....0725, 0895, 0905, 2165, 2865
.....2985, 3055, 3685, 3825, 3995
Soundstorm.....1155, 1325
Sova.....3545
Spectroni.....2575
Sungale.....0675, 1715
Superscan.....0445, 3745
Supersonic.....0135
SV2000.....0445, 3745
SVA.....0245, 0815
Sylvania.....4215, 2405, 0445
.....0795, 3745, 3815, 3855, 3875
Symphonic.....0445
.....0795, 0975, 3745, 3815, 3855
Tascam.....0395
TCL.....2435
Teac.....0025, 0955, 1245, 3885, 3945
Technics.....1075
Techwood.....1625, 1985, 2945, 3845
Terapin.....1705
Tevion.....0435, 0605
.....0725, 0785, 1125, 1295, 1465
Theta Digital.....0025, 1245
Tivo.....0985, 1505
Toshiba.....4145, 2295, 2475
.....2545, 0015, 0115, 0735, 1735
.....1745, 2135, 2145, 2175, 2835
.....3065, 3075, 3325, 3495, 3795
Tredex.....1355
Trutech.....1385, 2045, 3655
United.....0955, 3945
Venturer.....0955, 3065, 3945
Vizio.....4135, 4405
.....4415, 4425, 4435, 4445, 2265
Westinghouse.....2865
Wharfedale.....0575, 1455

White Westinghouse.....0795, 3815
X-Box.....4245, 4255, 0915
Xenius.....0725
Yamaha.....4105, 0745, 1055, 1075
.....1095, 1225, 2785, 2945, 3005
Yamakawa.....0765, 0775, 1865
Zenith.....0205, 0635, 3785, 3795, 3885

Blue-Ray-DVD

Denon.....4035
Dynex.....4235
HP.....4085
Insignia.....4205, 0975, 2635
JVC.....2385
LG.....4285, 2635, 2335
Magnavox.....2425
Memorex.....2375
Onkyo.....2355
Oppo.....4365, 4375, 4385, 4045
Panasonic.....4175, 2395
Philips.....2415
Pioneer.....4055
Samsung.....4125, 2325, 2345, 4095
Sharp.....4115, 2315
Sherwood.....4225, 4065
Sony.....4165, 4275, 2305
Sylvania.....4215, 2405
TCL.....2435
Toshiba.....2295
Vizio.....4135, 4025
Yamaha.....4075

DVD-R

Apex.....0845
Aspire.....1695
Astar.....2885
Broksonic.....0695
Centrios.....1365, 1935, 1975
Coby.....2885
Cyberhome.....1015
Emerson.....1612
Funai.....0412
Go-Video.....1275, 1315, 1495
Hitachi.....0545, 0925
Humax.....1505
Ilo.....1035
Insignia.....0562
JVC.....1145, 2025
KXD.....2885
LG.....0562
Liteon.....0805, 1035, 1495
Magnavox.....1055, 1225, 3025
Medion.....1035, 1665
Memorex.....1925, 3125
Mustek.....1275
Oritron.....1935
Panasonic.....0545
Philips.....1055, 1225, 2705, 3165
Philips-Magnavox.....1055, 1225
Pioneer.....0985, 2695, 2855
Polaroid.....0185
RCA.....0915
Samsung.....1305, 4451
Sanyo.....0095
Selectron.....1955
Sharp.....0625
Sony.....2865, 2985, 3055
Sylvania.....1612, 1672
Symphonic.....1612
Toshiba.....0682, 1735, 3325
Trutech.....2045
Yamaha.....1055, 1225
Zenith.....0562
DVD/VCR COMBOS
Allegro.....(3885 & 0182)
Apex.....0852, 1025
Broksonic.....0015, 0211, 0695







Memorex.....	0052, 0102		0892, 0922, 1032, 1192, 1422
.....	0182, 0302, 0312, 0432, 0482	Sears.....	0042, 0132, 0182, 0211, 0412
.....	0502, 0592, 0602, 0792, 0942		0482, 0592, 0602, 0812, 1112
.....	0992, 1112, 1631, 1682, 1712		1142, 1202, 1242, 1262, 1712
MGA.....	0032, 0922, 1592	Sharp.....	0032
MGN Technology.....	0102		0302, 0312, 0332, 0432, 0932
Midland.....	0612		0962, 1042, 1082, 1592, 1682
Minolta.....	0812, 1142	Shintom.....	0362, 0372
Mitsubishi.....	0032, 0202, 0392, 0522		0522, 0712, 0812, 1252, 1512
.....	0532, 0632, 0812, 0922, 1592	Shogun.....	0102
Montgomery Ward.....	1162, 0302, 0932	Signature.....	0312, 0432
Motorola.....	1742, 0302, 1112, 1682	Singer.....	0362, 0372, 1112
MTC.....	0102, 0312, 0432, 0992	Sonic Blue.....	1272
Multitech.....	0102, 0312	Sony.....	0072, 0112, 0262, 0382
.....	0362, 0372, 0432, 0612, 0992		0712, 0822, 0832, 0972, 1006
NEC.....	0012		1162, 1232, 1252, 1582, 1652
.....	0392, 0522, 0532, 0602, 0732	STS.....	0812, 1112, 1142
.....	0772, 1012, 1122, 1212, 1712	Superscan.....	0412
Nexxtech.....	0486, 0492, 0842, 0852, 2055	Sylvania.....	0162, 0312
Nikko.....	0182		0412, 0432, 0482, 0702, 0922
Noblex.....	0102		0992, 1112, 1392, 1612, 1672
Olympus.....	1112	Symphonic.....	0312, 0412
Onkyo.....	1382		0432, 0702, 0992, 1392, 1612
Optimus.....	0102, 0122, 0182, 0302, 0722	Tandy.....	0312, 0432, 0602, 1712
.....	1042, 1062, 1262, 1682, 1722	Tashiko.....	0182
Optonica.....	0102, 0932	Tatung.....	1212
Orion.....	0322, 0942, 1562, 1631	Teac.....	0312, 0432, 0992, 1212
Panasonic(National).....	0122, 0162, 0552, 1062	Technics.....	1112
.....	1112, 1262, 1272, 1642, 1722	Techwood.....	1602
Pentax.....	0012, 0812, 1142	Teknika.....	0182
Philco.....	0162, 0172, 0482, 1112		0232, 0312, 0432, 0992, 1112
Philips.....	1352, 1372, 0092, 0105	Tivo.....	1052, 1162
.....	0252, 0342, 0412, 0482, 0622	TMK.....	0102, 0732, 1012
.....	0672, 1052, 1112, 1282, 1642	Toshiba.....	0042
Philips Magnavox.....	0302, 0482, 0622, 1682		0152, 0482, 0652, 0682, 0812
Pilot.....	0182		0882, 0902, 0922, 1002, 1032
Pioneer.....	0222, 0392		1312, 1402, 1412, 1522, 3075
.....	0522, 0532, 0812, 1242, 2695	Totevision.....	0102, 0182
Polaroid.....	0852	Trutech.....	1385
Portland.....	0022, 1082	Unitech.....	0102
Proscan.....	0162, 0642	Vector Research.....	0012
Protec.....	0362, 0372		0392, 0522, 0532, 0882
Pulsar.....	0792	Victor.....	0392, 0522, 0532
Quarter.....	0602, 1712	Video Concepts.....	0012, 0032
Quartz.....	0602, 1712		0392, 0522, 0532, 0882, 1592
Quasar.....	0122, 0162	Videosonic.....	0102
.....	1062, 1112, 1262, 1642, 1722	Wards.....	0032, 0102, 0162, 0182, 0302
Radio Shack.....	0032, 0042		0312, 0362, 0372, 0432, 0592
.....	0102, 0162, 0182, 0302, 0312		0812, 0882, 0932, 0992, 1032
.....	0432, 0502, 0592, 0602, 0722		1112, 1142, 1462, 1592, 1682
.....	0932, 0992, 1042, 1112, 1152	White Westinghouse.....	0312, 0432, 0702, 0762
.....	1262, 1482, 1592, 1682, 1712	XR-1000.....	0362, 0372, 0992, 1112
Radix.....	0182	Yamaha.....	0012, 0392, 0522, 0532, 1212
Randex.....	0182	Zenith.....	0082, 0182, 0302, 0312
RCA.....	0062, 0102, 0162		0332, 0392, 0432, 0452, 0512
.....	0182, 0212, 0242, 0352, 0582		0522, 0532, 0622, 0652, 0662
.....	0612, 0642, 0782, 0812, 0915		0712, 0762, 0792, 0942, 1072
.....	1022, 1112, 1132, 1142, 1152		1092, 1181, 1182, 1252, 1522
.....	1222, 1452, 1482, 1572, 1702		1532, 1631, 1682, 1732, 4201
Realistic.....	0032, 0042, 0102, 0162		
.....	0182, 0302, 0312, 0432, 0502	LASER DISC	
.....	0592, 0602, 0932, 0992, 1042	Denon.....	0222
.....	1112, 1262, 1592, 1682, 1712	Pioneer.....	0222
ReplayTV.....	1272	Proscan.....	0642
Ricoh.....	1252	RCA.....	0642
Rio.....	0182, 0282, 1732	Sanyo.....	1072
Runco.....	0792	Sony.....	1006, 1232
Samsung.....	0102	Zenith.....	1072, 1232
.....	0255, 0292, 0502, 0652, 0812		
.....	0872, 0882, 1522, 1535, 1662		
Samtron.....	1692		
Sanky.....	0302, 0792, 1682		
Sansui.....	0132, 0211	CD	
.....	0322, 0392, 0522, 0532, 0572	ADC.....	0517, 1277
.....	0695, 0942, 1212, 1562, 1631	Adcom.....	0027, 0777
Sanyo.....	0052, 0102	Aiwa.....	0357, 0966, 0987, 1007
.....	0472, 0592, 0602, 1072, 1322	Akai.....	0167, 0377, 0757
.....	1332, 1342, 1442, 1712, 2645	Audio Technica.....	0117
Scott.....	0442, 0462, 0882	California Audio Labs.....	0257
		Captronic.....	0527, 1623





Carver0197, 0207, 0317, 0417
Casio0397
Centrios1097
Citizen0277
Coby1287
Curtis Mathes0397
Denon0637
Emerson0777, 1017
Fisher0127, 0217
.....0317, 0327, 0457, 1137, 1157
Genexxa0427, 0577, 1017
Goldstar0687
Harmon Kardon0647, 0797
Hitachi0427
Inkel0787
Insignia1526
JC Penny0397, 0657
JVC0897, 1056, 1107
Kenwood0137, 0367, 0467, 0497
.....0537, 1016, 1027, 1147, 1167
Krell0207
Kyocera0517, 1277
Luxman0227, 0337, 0477, 0587
LXI0397
Magnavox0207, 0737, 0837
Marantz0207, 0437, 0547, 0947
MCS0397, 0657
MGA0797
Mission0207
Mitsubishi0797, 0907
NAD0766, 0827, 1026, 1087
Nakamichi0007, 0877, 1037
NEC0657
Nexxtech0097, 0487, 0536
.....0576, 0607, 0617, 0666, 0727
.....0856, 0887, 0916, 0967, 1217
Nikko0117, 0217, 1017
NSM0207
Onkyo0147
.....0237, 0816, 0867, 0937, 1177
Optimus0057, 0317
.....0347, 0387, 0417, 0427, 0447
.....0537, 0557, 0667, 0776, 0857
Panasonic0257
.....0696, 0707, 0747, 0997, 1077
Philips0197, 0207, 0837
Pioneer0057, 0307, 0407, 0427
.....0577, 0717, 0807, 0917, 1227
Proton0207
Quasar0257
Radio Shack0107, 0247, 0267
.....0307, 0417, 0507, 0717, 1227
RCA0087, 0107
.....0187, 0307, 0317, 0717, 0777
.....1047, 1067, 1117, 1207, 1227
Realistic0317, 0347, 0427, 0527
.....0547, 0557, 0777, 1017, 1623
Rotel0207
SAE0207
Samsung0847, 1396
Sansui0017, 0047, 0207, 1067
Sanyo0157, 0177
.....0317, 0457, 0957, 1127, 1197
Scott0777, 1017
Sears0397, 0537, 0547
Sharp0537, 0547
Sherwood0247
.....0447, 0547, 0606, 0627, 0787
Shure0657
Sony0077, 0357, 0737, 0977
STS0517, 1277
Sylvania0207
Symphonic0567
Teac0217, 0297, 0547, 0557
.....0567, 0646, 0677, 0817, 1187
Technics0257, 0696, 0747, 0997, 1077
Theta Digital0837
Toshiba0766, 0827
Victor0897

Yamaha0037, 0117, 0287, 0927, 1057
Zenith0067, 0217, 0516
.....0597, 0656, 0697, 0716, 0767

AUDIO

Aiwa0586
.....0726, 0846, 0966, 1296, 1386
Apex0425
Apple Ipod0186
Bose0886, 1237, 1606
Carver0197
Centrios1116, 1217, 1546, 1552, 1566
Citizen0277
Criterion0785
Delphi0376
Denon0316, 0976, 1046, 1136
Duraband1476
Fisher0026, 0826
Gold Star0216
Harman/Kardon0016, 0436
Insignia0725
Ipod0066
JVC0566, 0676, 1056
JWL1126
Kenwood0246, 0426, 0497
.....0616, 0956, 1016, 1416, 1596
Koda1552
Koss0215
Magnavox0026, 0206, 0226, 0295, 1266
Marantz0036, 0437
Mitsubishi0366
NAD0496, 0766, 1026
Nelson1217
NEO0076
Nexxtech0487, 0536, 0576, 0666
.....0725, 0856, 0916, 1116, 1217
Norcent0835
Onkyo1186, 1246, 1256
.....0116, 0816, 0936, 0996, 1376
Optimus0006, 0317, 0386, 0387, 0506
.....0776, 0896, 1036, 1446, 1486
Panasonic1206, 1236, 0056
.....0126, 0686, 0746, 0796, 0876
.....1066, 1096, 1346, 1436, 1466
Philips1196, 0026, 0036
.....0197, 0265, 1066, 1266, 1576
Pioneer0266, 0356
.....0407, 0476, 0776, 0896, 1106
.....1406, 1446, 1496, 1506, 2675
Radio Shack0006
.....0166, 0176, 0236, 0247, 0266
.....0356, 0476, 0507, 0626, 1036
.....1316, 1406, 1446, 1486, 1506
RCA0146, 0176, 0196, 0266, 0276
.....0326, 0356, 0476, 0486, 0626
.....0736, 0786, 0866, 0906, 0986
.....1165, 1207, 1276, 1286, 1306
.....1316, 1326, 1336, 1406, 1506
Realistic0946
Regent1476
Rio3885, 0286
Saba0995
Samsung0075
Sanyo0157, 1156, 1166, 1176
Scott0396
Sharp1616
.....1626, 1216, 0556, 0756, 1267
Sherwood0236, 0247, 0466, 0606
Sirius1247, 1267
Skyfi0076
Sony1226, 0046
.....0106, 0136, 0256, 0296, 0406
.....0416, 0526, 0546, 0636, 1006
.....1076, 1086, 1426, 1456, 1586
TAO0076
Teac0156, 0297, 0306, 0346, 0646
Technics0056, 0126, 0686
.....0696, 0796, 1066, 1096, 1436





Tevion.....	0785
Venturer.....	0086
Vizio.....	1636, 1646
Wonder.....	1566
XM Radio.....	0076, 0376
Yamaha.....	0076, 0287
.....	0336, 0446, 0456, 0596, 0706
.....	0806, 0836, 0926, 1146, 1536
Zenith.....	3885
.....	0026, 0067, 0096, 0216, 0217
.....	0286, 0506, 0516, 0656, 0716

TV/VCR/DVD COMBO

Broksonic.....	1525
Diamond Vision.....	(2001 & 0422), 0455
Magnavox.....	0445, 0412
Panasonic.....	0595, 0552
Philips.....	0445, 0412
Samsung.....	1535
Sears.....	0445, 0412
Superscan.....	0445, 0412
Sylvania.....	0445, 0412
Toshiba.....	0115, 3075

HOME AUTOMATION

GE Homeminder.....	0008
Lutron.....	1516
X10 Home Automation.....	0018
X10 NEC.....	0028
Vizio.....	0068

MEDIA CENTER PC

MCE.....	3255
Microsoft.....	3255
Vista.....	3255

HTIB

(HOME THEATER IN A BOX)

Aiwa.....	(0586 & 0035)
Amw.....	0825
Apex.....	0425
Bose.....	4455, 0886, 1475
Boston Acoustic.....	3245
Centrios.....	0486, 0955, 1116, 1785, 1845
Classic.....	1965
Criterion.....	0785
Durabrand.....	3885, 0205
.....	0486, 0955, 1476, 2685, 2935
Dynex.....	0038
Emerson.....	1185
Insignia.....	0725
JVC.....	0155
KLH.....	0465
Koss.....	0215
Lenoxx.....	1345
LG.....	4285, 1463, 1565
Magnavox.....	(0105 & 1266), (2945 & 1266)
.....	0206, 0295, 0745, 1045
Myron & Davis.....	1555
NESA.....	1555
Nexxtech.....	0486, 0725, 0955, 1116, 1785
Norcent.....	0835
Onkyo.....	0048, 0058, 0355, 1376
Panasonic.....	0165, 1466
Philips.....	(0105 & 1266)
.....	(2665 & 1266), (2945 & 1576)
.....	0206, 0265, 1045, 2765
Pioneer.....	(2675 & 1496), 0525, 0875, 2895
Radio Shack.....	(0003 & 1316)
.....	0085, 0275, 0486
.....	0626, 0955, 0995, 1165, 1645
RCA.....	(0003 & 1316)
.....	0486, 0626, 0955, 1165, 1645
Regent.....	1345, 1476
Rio.....	(0205 & 0286)
Saba.....	0995
Samsung.....	0075, 1535, 2725
Selectron.....	1885, 2075
Sony.....	0365, 1426
Techwood.....	1602, 1985
Tevion.....	0785
Zenith.....	(0205 & 0286)

