

SCHOK

Volt SV55

User Manual

(Model number SV55216)



Conventions used in this guide

In this user guide, we use the following symbols to indicate useful and important information:

NOTE

Notes, usage tips, or additional information



Warning

Situations that could cause injury to yourself or others



Caution

Situations that could cause damage to your device or other equipment

Specifications.....	3
Basics	4
In Box.....	4
Phone Overview	4
Battery	4
MicroSD Card	5
Turning Phone On or Off	5
Phone Options	6
Touchscreen Gestures	6
Using the Onscreen Keyboard	7
Editing Text	8
Getting Started	9
Google Account	9
Getting to Know the Home Screen.....	10
Customizing the Home Screen.....	10
Essential Display Icons	11
Notifications Panel.....	12
Opening & Switching Between Applications	12
Sleep Mode.....	13
Adjusting Volume.....	14
Searching Your Phone and the Web.....	14
Connecting Your Phone to a Computer.....	15
Phone Calls	16
Making Calls	16
Answering or Rejecting Calls.....	17
Using In-Call Options.....	18
Using Call Log.....	18
Listening to Your Voicemail	19
Using Voice Dialer.....	19
Contacts	20
About contacts.....	20
Opening Your contacts.....	20
Getting Started	20
Editing/Deleting Contacts.....	22
Communicating.....	23
Account Setting	23
Messaging	24
About Messaging	24
Sending Messages.....	24
Reading Messages.....	25
Receiving Emergency Alerts Messages	26

Changing Messaging Settings.....	27
Google	28
Gmail	28
Maps	29
Calendar	30
Play Music	33
Google Play Store.....	33
Web.....	35
Chrome.....	35
YouTube	37
Wi-Fi	39
Downloads	40
Bluetooth.....	40
Using Bluetooth.....	40
Disconnecting or Un-pairing from a Bluetooth Device ...	41
Connecting to a Bluetooth Headset.....	41
Sending and Receiving Information Using Bluetooth	42
Entertainment	43
Camera/Camcorder.....	43
Tools	44
Clock	44
Calculator	45
Settings	46
Settings on Your Phone	47
Firmware Upgrade	54

Specifications

1. Display

- 5.5" FWVGA (480x960) Display
- Capacitive Touch Screen

2. Camera

- Front camera: 2.0MP
- Rear camera: 5.0MP with Flash

3. Dimensions and Weight

- Dimensions: 149.6x72.8x9.8mm
- Weight: 167g.

4. Memory

- Internal Memory: 2GB RAM / 16GB ROM
 - External Memory: Supports up to 256GB via its SD card slot*.
- *SD card not included.

5. Operating System

- Android 11 (Go edition)

6. Connectivity

- Wi-Fi (802.11 b/g/n), Bluetooth 4.2+HS

7. Sensors

- Accelerometer, Barometer, Proximity sensor, Light sensor

8. Battery

- 3,000mAh Lithium Ion, non-removable

Basics

In Box

The Schok Volt SV55 comes with the following items included in the box:

1. Handset (SC55216)
2. Micro USB cable
3. Battery cover
4. Battery (non-removable)
5. USB power adapter
6. Quick Start Guide
7. Safety precautions guide

Phone Overview



Battery

Note that browsing the web frequently, extended data usage, being in a poor signal area, or subjecting the device to extreme temperatures will cause the battery to discharge quicker than normal. To increase battery life, limit your data usage, or turn off location and Bluetooth when not required.

 
Charging your battery

Before you turn on your device and start using it, it is recommended that you charge the battery.

1. Plug the USB cable into the USB power adapter.
2. Plug the power adapter into a standard outlet.
3. Plug the other end of the USB cable into the phone's micro USB port.
4. The USB icon on the cable should always face up when connecting the cable to your device, as shown.

NOTE

- It is more efficient to charge the battery with your device powered off.
- Battery operating time gradually decreases over time.
- Never leave the battery connected to the wall charger for more than eight hours.

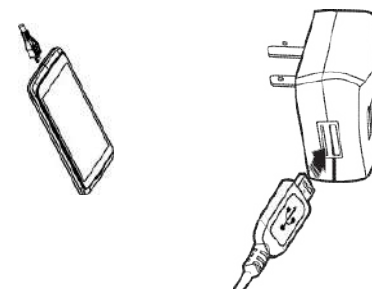

MicroSD Memory Card

Use the microSD card to store your photos, videos, music and certain apps from Google Play™ Store. You can also move and copy files to your computer from your device.

NOTE When you insert or remove the microSD card, you will need to remove the battery cover. Always use a MicroSD memory card from a well-known manufacturer.

1. Insert the microSD card

1. Locate the microSD card slot.
2. Insert the microSD card into the slot with its gold contacts facing down and slide it to the left until it is securely fit in its place.



2. Removing the microSD card

1. Turn off the device.
2. Remove the phone back cover
3. Slide to the right the SD card.

3. Removing the microSD card while the phone is on

If you need to remove the microSD card while the phone is on, you have to first unmount the microSD card via settings to prevent corrupting or damaging the files in the microSD card.

1. From the Home screen, Swipe up to reveal all your **Apps**  > then find and tap the **Settings icon**  .
2. Tap  **Storage** > **Portable Storage** > click the **eject button**  to unmount the Micro SD card.

Turning Phone On or Off

1. Turning your phone on

1. Press and hold **Power/Lock**.

NOTE The first time you use your phone you'll need to set it up. See the Getting Started chapter for details.

2. Turning your phone off

1. If the display is off, press **Power/Lock** to turn it back on.
2. Press and hold **Power/Lock** for a few seconds.
3. When Phone options menu appears, tap  **Power off** > **OK**.

Phone Options

1. Silent mode

1. Press the Volume key on the side of your phone.
2. The volume status bar will appear.
3. Tap the bell sign  one time to set your phone to **vibrate only**.
4. Tap the Vibration sign  one time to set your phone to **silent**.
5. When you select **Silent mode**,  a bell icon with a diagonal line is displayed in the Status bar. All ringtones, alerts, and all audible sounds except media and alarms are silenced.

NOTE To turn silent mode off, press the volume key on the side of your device and then tap the silent mode until the bell icon is displayed .

2. Airplane mode

1. From the top of the screen swipe down twice to bring the Quick Setting icons. Swipe to the left to find Airplane mode.
2. Tap the **Airplane mode icon** 
 - When you set Airplane mode,  is displayed in the Status bar. Wi-Fi, Bluetooth, and mobile network functions are all disabled.

-
1. **NOTE To turn off Airplane Mode**, swipe down twice to bring the Quick Setting icons. Swipe to the left to find Airplane mode and tap  **Airplane mode** again.
-

Touchscreen Gestures


Tap	To select onscreen items such as application and settings icons or press onscreen buttons, simply touch them with your finger.
Tap and hold	To open available options for the item, simply touch and hold your finger on the screen over the item.
Swipe or slide	Quickly drag your finger vertically or horizontally across the screen.
Drag	Tap and hold your finger before you start to drag. While dragging, do not release your finger until the item reaches your desired location.
Flick	Flicking the screen is similar to swiping, but you only need to swipe your finger in lighter and quicker strokes. This finger gesture is always in a vertical direction, such as flicking through the contacts or the message lists.
Rotate	For most screens, you can automatically change the screen orientation from portrait to landscape by turning the phone sideways. When entering text, you can turn the phone sideways to bring up a bigger on-screen keyboard.

Using the Onscreen Keyboard

You can enter text using the onscreen keyboard. Some applications open the keyboard automatically. In others, tap anywhere in a text field to open the keyboard.

1. Tap each letter on the on-screen keypad.
2. Tap and hold a letter for additional key options (not all keys have additional options). Additional key options include numbers and letters with accent marks. If options are available, you will see a box with all the options shown. Slide your finger to select the character you want.
3. Continue until you have finished the word.

 You can also use the following icons:

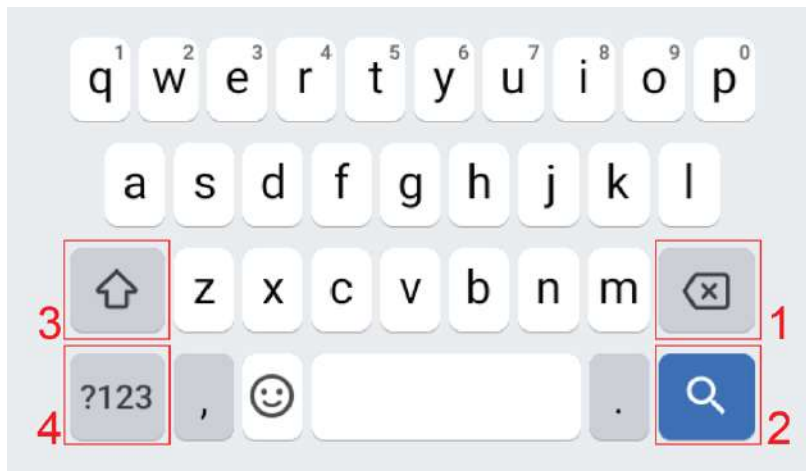

- Tap the key marked **3** above while you type. When you release the key, the lowercase letters reappear.
- **Turn caps lock on** - double-tap or touch & hold
- Tap the key marked **3**, so it changes to . Touch again to return to lowercase.
- Tap the key marked **1** in order to delete words, tap **4** so you can change to the number and sign keyboard.

- To hide the Android keyboard, tap the **Back icon**
- When you write a new message, you can tap **2** to skip from the receiver frame to text frame.

NOTE When you type, the notification panel will have a “select input method” so you can set the input methods.

Adding, Editing or Deleting Words in the User Dictionary.

Sometimes you may need to add a word to the predictive text dictionary, for example, a name or a specialized technical word. If you want to add a word to your User dictionary while entering text, double tap the word to highlight it, then tap and hold the word and select **Add ** to dictionary**.

Adding a word manually

1. From the Home screen, Swipe up to reveal all your **Apps**
 > then find and tap the **Settings icon**
2. Scroll down and Tap the **System icon**
3. Tap **Language & input** > Tap **Advanced**.
4. Tap > **Personal Dictionary** and tap the plus sign
5. Type the word > tap **Enter on the keyboard**.

Editing or deleting a word

1. From the Home screen, Swipe up to reveal all your **Apps**
 > then find and tap the **Settings icon**
2. Scroll down and Tap the **System icon**
3. Tap **Language & input** > Tap **Advanced**.
4. Tap **Personal Dictionary**, tap the word to delete or edit.
5. Tap the **trash can** to delete the word .

Editing Text

You can select, copy or cut the text you've entered, then paste it in another text field within the user interface.

 
NOTE Some applications may offer different text editing methods.

1. Selecting text

1. Tap the text field.
2. Move the cursor to the beginning or end of the desired text by tapping in the location you want the cursor.
3. Tap and hold the text field.
4. Tap **Select word** in the pop-up menu.
 - Or tap **Select all** to select all the text in the text field.
5. Drag your finger to move the text cursor to a letter within the text that you want to select. The selected text is highlighted in orange.

2. Cutting and copying the text

1. Double-click to select the text to cut or copy it.
2. Tap and hold the selected text.
3. Tap **Cut** or **Copy** in the menu that opens.

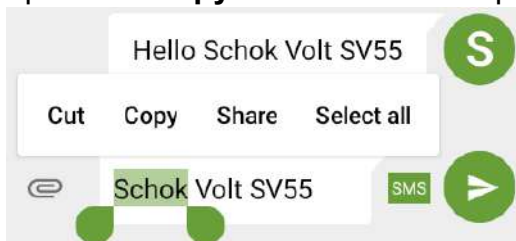

- If you tap **Cut**, the selected text is removed from the text field. In this case, the text is saved to the clipboard, so that you can paste it into another text field.

3. Pasting the text

1. Cut or copy the text to paste.
2. Tap the text field where you want to paste the text and move the cursor to your desired location.
 - You can paste text that you copied from one application into the text field in any other application.
3. Tap and hold, then select **Paste** in the pop-up menu.
 - The text is inserted after the cursor. The text also remains in the clipboard, so you can paste that same text into another location.

Getting Started

Google Account

You must sign in to a Google account to use Gmail, Google Calendar, and other Google applications; to download applications from Google Play Store; to back up your settings to Google servers; and to take advantage of other Google services on your phone.

1. Registering a Google account

Gmail, Google Play Store, and other applications require a valid Google account for use. You will be prompted to login into Google the first time you use these applications.

1. Tap **Existing** > **Sign in** to register your Google account.
 - If you don't have a Google account, tap **New** instead. See the next section for more details.
2. Enter your Google account **Email** and **Password** > Tap **Sign in**.

2. Creating a new Google account

1. Tap **New** > Enter **First name**, **Last name** and **Email** > Tap **Next**.
2. Enter a password in to the **Type a password**, **Confirm password** fields, then tap **Next**.
 - Password tip: Your password must be a minimum of 8 characters in length.

3. Select **Security question** and enter the **Answer**, which will be needed if you forget your password and then enter a **Secondary Email** > **Create**.
4. Read through Google Terms of Service > Tap **I agree**, **Next**.
5. Enter the letters shown on the screen > Tap **Next** > Tap **Finish**.

3. Adding a Google account

1. From the Home screen, Swipe up to reveal all your **Apps**

 


> then find and tap the **Settings icon**

2. Tap **Accounts** > **+** **Add account**.
3. Tap **Google**
4. Enter your Google account **Email** and **Password** > Tap **Sign in** > **Finish**.
 - This device supports multiple Google accounts.
 - If you have the same contact across multiple Google accounts, you can merge duplicates into a single item in the contact list.

Getting to Know the Home Screen

- The Home screen is displayed when the device is in idle mode. You can add your favorite apps, shortcuts, folders and widgets to the Home screen so they're only a tap away.
- Press  **Home** to return to the center home screen.

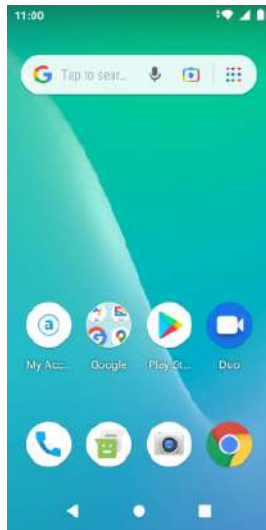

1. Previewing the Home screens

1. From any Home screen, tap and hold an application.
2. When you choose a desired Home screen, the application shifts to the selected Home screen.

Customizing the Home Screen

The Home screens and display wallpaper are customizable.

1.Home screen customization options

Open the Home screen you want to customize.

2.Moving an item on the Home screen

1. From the Home screen, tap and hold the item you want to move until it vibrates. Don't lift your finger.
2. Drag the item to a new location on the Home screen.
3. Lift your finger at the location where you want the item.

 
To add a shortcut for any application to a Home screen, Swipe up to reveal all your **Apps**  > then find the desired **App**, tap and hold the item, then drag it onto a Home screen.

3.Removing an item from the Home screen

1. From the Home screen, tap and hold an item until it vibrates. Don't lift your finger. The × Remove icon will appear at the top of the display.
2. Drag the item to × Remove.
3. When the item turns blue, lift your finger.

4.Changing the Wallpaper of the Home screen

1. From the Home screen, tap and hold any empty area on a Home screen for a few seconds.

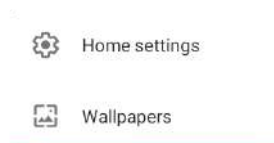

2. Tap **WALLPAPERS**:
From the list of menus, Choose a photo from your camera gallery or memory card storage.
3. Tap **Set wallpaper**.

Essential Display Icons

1. Status icons

You can tell a lot about your phone when you understand the icons in the Status bar.

Here's what each one means:

	Signal strength		Synchronized with the web
	No signal		Vibrate only mode
	Network connected		Speakerphone is on
	Wi-Fi signal strength		Silent mode – no audio or vibration
	Airplane mode		Microphone is muted
	Data synchronizing		It indicates that battery is remaining (Empty to full charge states)
	Bluetooth is on		Connected to a computer via USB cable
	Storage is insufficient		

2. Notification icons

Notification icons in the Status bar alert you to items that may require your attention such as new messages, calendar event reminders, missed call notifications, etc. Here's what each one means:


	Call in progress		Downloading data
	Missed call		Uploading data (animated)
	Call Diverted		General Warning Icon
	More (not displayed) notifications		No microSD card installed
	Missed Google Duo Call		MicroSD card is being prepared
	New voicemail		Upcoming event
	New message		Alarm is set
	New Gmail		Wi-Fi is on and wireless networks are available
	Connected to or disconnected from VPN		Song is playing
	New Email		

Notifications Panel

When you receive a new notification, an icon will be displayed in your status bar at the top of your screen.

1. Viewing and responding to Notifications

 1. Tap and hold Status bar, and then slide your finger downward to open the Notifications panel.

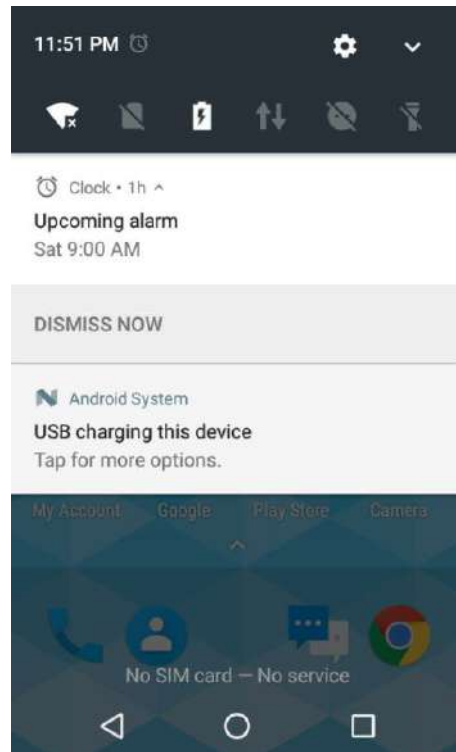

2. If you have multiple notifications, you may need to scroll to see them all.
3. Tap a notification to respond to it.

2. Closing the Notifications panel

Drag the bottom bar of the panel up. Or just press **Back**. ◀

 
Opening & Switching Between Applications

1. Opening and closing the Applications List

1. From the Home screen, Swipe up to reveal all your **Apps**. 
2. To close, press **Home** ● or **Back**. ◀

2. Switching to a recently used application

1. From any screen, tap  **Recent apps**. Swipe from left to right to see all recently used application.

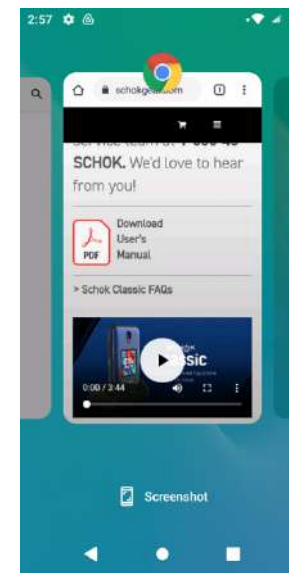

2. Tap an Application to open or press ◀ **Back** to return to your previous screen.

Screen timeout / Sleep Mode

Sleep mode saves battery power by turning off your display. You will still receive messages and calls when the display is turned off.

1. Switching to Screen timeout mode

1. Press **Power/Lock** to switch your phone to Screen timeout mode.
2. Your phone automatically turns off the display after a period of inactivity. To customize the screen timeout settings, from the Home screen, Swipe up to reveal all your **Apps**  > then find and tap **Settings icon**  >  **Display** > **Screen timeout**.

2. Waking up from Screen timeout mode

1. Your phone automatically wakes up when you have an incoming call.
2. To wake it up manually, press **Power/Lock**. You'll need to unlock the screen as described below.

 
3. Unlocking the screen

On the lock screen, tap the unlock icon and slide your finger in the direction of the arrows to unlock the screen. The screen unlocks automatically when you answer an incoming call.

NOTE If you have set up a screen unlock pattern, pin, or password, you will be asked to draw the pattern on the screen or enter the PIN or password to access the phone software.

4. Activating Secure Screen Lock

1. From the Home screen, Swipe up to reveal all your **Apps**  > then find and tap **Settings icon** 
2. Tap  **Device Security** > **Screen lock**.
 - If you have already configured the screen lock, tap **Screen lock** to change how to lock or unlock your screen.
3. Tap Pattern, PIN, Password, or Face Unlock. Then enter a custom pattern, PIN or password as prompted.

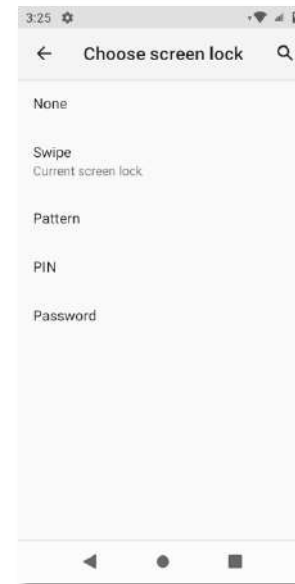

- If you select 'None', screen unlock security is cancelled

Adjusting Volume

Ringtone and Media volume are independent of each other and adjusted separately.

1. Adjusting the ringer volume

- From the Home screen, press **Volume up** or **Volume down** on the right side of the phone to adjust the ringer volume to your desired level.
- While in the lowest ringer volume level, press **Volume Down** once to set your phone to Silent mode.
- While in the Silent, press **Volume Up** once to switch to ringtone mode.

2. Adjusting the media volume

While playing music, watching a video or using preloaded or downloaded games or applications, press **Volume Up** or **Volume Down** on the right side of the phone to adjust the media volume.

3. Adjusting the earpiece volume for phone calls

During a phone call, press **Volume Up** or **Volume Down**.

4. Adjusting the volume via Settings menu

1. From the Home screen, Swipe up to reveal all your **Apps**  > then find and tap **Settings icon** 
2. Tap  **Sound**
3. Drag the volume sliders left or right to adjust your phone's Ringtone, Media, and Alarm. Your phone

4. plays a sample tone at the selected volume level while you drag the slider.
5. When you're done, tap  **Back** or  **Home**.

Searching Your Phone and the Web

The search key is a powerful part of the Android software and enables you to quickly locate files, contacts, and applications. You can also search the web using your favorite web search service.

1. Swipe up to reveal all your **Apps**  > Tap the **Google Go app**  >
2. Begin entering text or tap a previously used search term.
 - As you enter the text, matching items on your phone and suggestions from Google web search will appear on the screen.
3. Tap a suggestion to go directly to that result.

Connecting Your Phone to a Computer

1. Copying files to/from the microSD card

You can copy your music, photos, and other files to the microSD card of your phone.

NOTE This option is available only when a microSD card is inserted into the slot of your phone. While your phone is connected to a computer, USB Mass storage mode prevents you from using applications that access the memory card. microSD card not included.

1. Connect your phone to your computer using the supplied USB cable.
2. Open the Notifications panel > tap **USB options**.
3. On your computer, the connected phone is recognized as a removable hard drive.
4. Navigate to the removable drive and open it.
5. Choose one of the following:
 - Copy the files from the computer to the microSD card's root folder.
 - Copy the files from the phone's microSD card to a folder in your computer.
6. After copying the files, un-mount the removable drive (that is, your phone) as required by your computer's operating system to safely remove your phone.
7. After you have un-mounted the removable drive, you can disconnect the phone from the computer.

Phone Calls

Making Calls

The simplest way to make a call is to dial the number directly. You can also call numbers listed in your call log or Contacts list.

1. Making a call from the dialer screen

- From the Home screen, tap **Phone**.
Or Swipe up to reveal all your **Apps** then find and tap on **Phone**.
- Tap the Dial Pad > and then the number you want to dial.
 - If you make a mistake, tap to erase a single character. Tap and hold to erase the entire string.
- Tap **Dial**.
 - The Calling screen is shown and appears in the Status bar while the call is active.
 - To change the volume during a call, press **Volume Up** / **Volume Down**.
- To end the call, tap **End Call**.

2. Entering a Pause/Wait

Pause and wait options can help you dial additional numbers such as a voicemail password, or phone banking system menus.

- From the Home screen, tap **Phone**.
- Tap the number you wish to dial > tap **Option** > **Add 2-sec pause** or **Add wait**.

Add 2-sec pause: Your phone will wait for 2 seconds then continue to dial the remaining numbers automatically.

Add wait: Your phone will wait with the message, 'Send the following tone?' until **Send** is tapped, then continue dialing the remaining numbers.

3. Making an international call

- From the Home screen, tap **Phone**.
- Tap and hold **0** until the international prefix '+' appears.
- Tap the country code, area code, and phone number.
- Tap **Dial**.

4. Calling a number from the Recents Call menu

Your phone logs all incoming and outgoing calls.

- From the Home screen, tap **Phone** > **Recents**.
- Tap **Dial** at the right of any entry to dial.
 - Calls are listed with the most recent at the top.
 - Calls to the same phone number are grouped together.
 - Scroll up or down to view additional entries in the log.
 - If you want to edit a number before calling, tap and hold the desired number, and then tap **Menu** > **Edit number before call**.

5. Making a call from the Contact list

- From the Home screen, tap **Phone** > **Contacts** Or Swipe up to reveal all your **Apps** > **People** > .
- Scroll through the contact list.
 - To find a specific contact, you can search by tapping **Search**. Enter the name of the contact you're searching for. As you type, contacts with matching names appear below the search box. Or you can use the tab on the right side of the screen to scroll through the alphabetical contacts.
- Tap the contact you want to call.
- Tap the phone or mobile number.

6. Making an emergency call

Your phone supports international emergency numbers such as 911. Emergency calling is supported anywhere the phone has a network signal.

1. Making an emergency call

1. From the Home screen, tap  **Phone**.
2. Tap the emergency number for your location.
This is usually **911**, ***911** or **#911**.
3. Tap  **Dial**.
4. To end the emergency call, tap  **End Call**.

2. Making an emergency call while the phone is locked

1. When your phone has no service status, **Emergency call** button is displayed on the lock screen.
Tap **Emergency call**.
2. Tap the emergency number for your location.
This is usually **911**, ***911** or **#911**.
3. Tap  **Dial**.
4. To end the emergency call, tap  **End Call**.

Answering or Rejecting Calls

When you receive a phone call, the screen displays the caller's name, phone number, and caller ID icon (if stored in Contacts). When you receive a phone call from a phone number not stored in your Contacts, only the default caller ID icon and phone number are shown.

 
All incoming calls are recorded in the Call log. If you miss a call, you receive a reminder notification.

1. Answering or declining an incoming call

1. A notification of an incoming call will appear towards the top of the screen.
 2. Press **DECLINE** to reject the call or press **ANSWER** to answer the call.
- If you were already in a call, the first call is placed on hold during answering the new call.

To silence the ringer before answering the call, press either of the volume keys.

NOTE The caller you reject is sent directly to your voicemail box to leave a message.

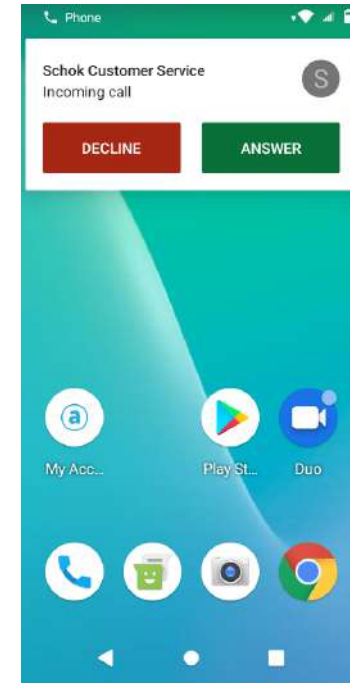

2. Checking missed calls

- If you miss a call,  is displayed in the Status bar.
- If you open the Notifications panel, you will see the number of missed calls. Tap the notification to be taken to the call log and view detailed information.

Using In-Call Options

When a call is in progress, the following options are available:

Dial Pad	Tap Dial Pad to enter additional numbers during your call.
Mute	You can unmute the microphone by tapping Mute icon again.
Audio	You can turn the speakerphone off by tapping the Speaker icon again. The speaker is turned off automatically when your current call ends.
Add call	Tap Add call to put the current phone call on hold and add another person to the phone call.
Bluetooth	When a Bluetooth device is paired and connected to your phone, you can conduct all calls using Bluetooth for hands-free conversation. When using Bluetooth headset during a call, the current call screen has a blue border and the Ongoing Call icon turns blue in the Status bar. Tap Bluetooth icon to toggle in-call audio to and from the Bluetooth accessory.



NOTE To avoid damaging your hearing, do not hold the phone up to your ear when the speakerphone is on.

 
 
Using the Recent call menu

The phone stores the numbers of all incoming and outgoing calls in the Call log. The recent call displays the details of the call including time, date, and duration.

1. Opening the Recents menu

- From the Home screen, tap  **Phone** >  **Recents**.
 - Calls are listed with the most recent at the top. Calls of the same phone number are grouped together. Scroll to view earlier entries in the log.

NOTE You can tap and hold the desired number in the call log list to select options such as **Call**, **View contact**, **Edit number before call**, **Send a message**, **Add to contacts**, **Call details**, **Copy number**, **Block number**.

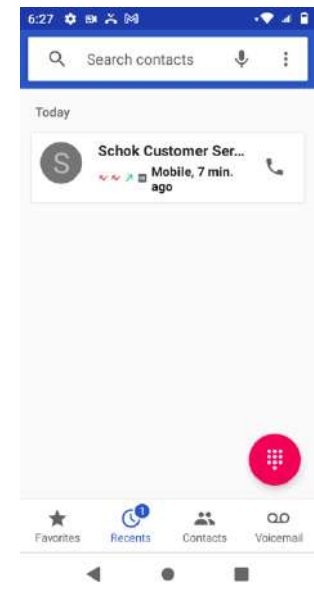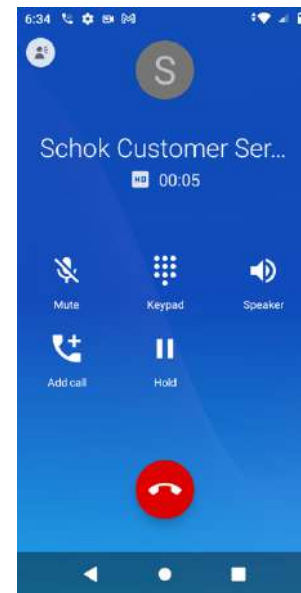

2. Calling a number from the Recent calls

- From the Home screen, tap  **Phone** >  **Recents**.

2. If you want to call a number directly, tap  to the right of the entry. Or select a contact > tap  **Dial**

 
- If you want to edit a number before calling, tap and hold the desired entry, and then tap **Option > Edit number before call**.

3. Adding a phone number from your Recent calls to your Contacts list

1. From the Home screen, tap  **Phone** >  **Recents**.
2. Tap the desired entry > **Add to contacts**.
3. In the list of contacts that opens, tap **Create new contact** or add to an existing contact.
4. Tap **Done**.

4. Sending a text message from Recent calls

1. From the Home screen, tap  **Phone**  **Recents**
2. Tap the contact >  **Send text message**.
3. Enter your message and tap the letter that appears right beside the space to add text  to **Send**.

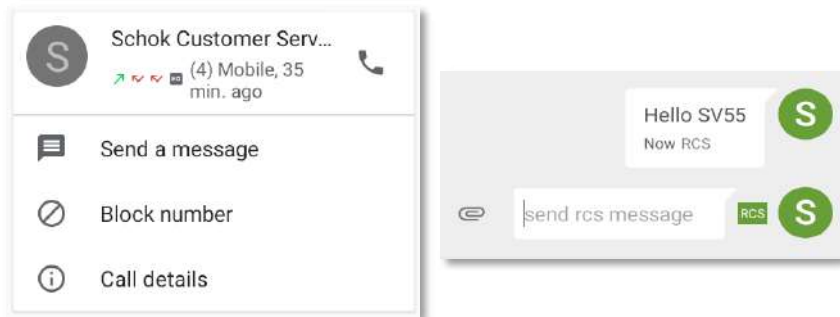

5. Clearing the Call log

1. From the Home screen, tap  **Phone** >  **Recents**.
 2. Tap  **Option** > **Call History** > Tap  **Option** > **Clear call history** > **OK**.
- To remove just one entry from the Recents menu, long tap the entry. In the pop-up options, tap **Delete** > **OK**.

Listening to Your Voicemail

Voicemail application is displayed only when phone calls are available.

When you have a new voicemail message,  appears in the Status bar.

1. Calling your voicemail from the Dial Pad

1. From the Home screen, tap  **Phone**.
2. Tap your phone number and tap  **Dial**.

2 Calling your voicemail from the Notification panel

1. Open the Notifications panel and tap **"New voicemail"**.

Using Voice Dialer

You can use the Voice Search application or Voice Dialer application to place a phone call by speaking the name of a contact or a phone number.

1. From the Home screen, tap  **Phone** >  **Search contacts**.

- If you have a Bluetooth headset that supports "voice-recognition" or "voice-dialing," you may be able to open Voice Search by pressing and holding your headset's main button and dial by voice using your headset. For details, see your headset manual.

2. Say the name of the contact you want to call

- Or, follow one of the suggestions for dialing a number or controlling your phone in other ways.

Contacts

About contacts

Contacts give you quick and easy access to the people you want to reach. Contacts from Google accounts are also downloaded and synced with the Contact list.

You can manage your communications with your contacts via phone, messaging, and email without the need to jump from one app to another.

Opening Your contacts

Open contacts to add, view, and communicate with your friends and acquaintances.

1. From the Home screen, Swipe up to reveal all your **Apps**  > then find and tap on **Contacts** 
 - All of your contacts are displayed alphabetically in a scrolling list.
 - You can use the tab on the right side of the screen, or flick your finger up or down to scroll quickly.

Getting Started

1. Adding a new contact

1. From the Home screen, Swipe up to reveal all your **Apps**  > then find and tap on **Contacts** 
2. Tap 
3. If you have more than one account, select an account then enter the information for the contact.
 - Tap  > select **Take photo** or **Choose photo from Gallery** to add a picture.
 - Enter your contact's information.
4. Tap **Done**.

Saving a phone number from the Dial Pad

1. From the Home screen, tap  **Phone**.
2. Enter the number > Tap  **Create new contact**.
3. Enter the information for the contact > tap **Done**.

Storing a contact using Recent calls

1. From the Home screen, Swipe up to reveal all your **Apps**  > then find and tap  **Phone**
2. Tap  **Recents** > tap the number you want to save > **Add to contacts**.
3. Tap **Create new contact** or select an existing contact.
4. If you have more than one account, tap the account where you want to save the contact > enter the information for the contact > tap **Done**

2. Importing / Exporting / Sharing contacts

Importing contacts from your microSD card

If you have contacts stored in vCard format on the microSD card, you can import them into Contacts on your phone.

1. From the Home screen, Swipe up to reveal all your **Apps**  > then find and tap on **Contacts**  Tap **Option**  > **Import/Export**. Tap **Import from .vcf file**.
2. If you have more than one account on your phone, select the desired account.
3. Tap the vCard files on the microSD card. The contacts are imported.

Exporting contacts to your microSD card

1. From the Home screen, Swipe up to reveal all your **Apps**  > then find and tap on **Contacts** 
2. Tap  **Option** > **Import/Export**.
3. Tap **Export to .vcf file**.
4. Select contacts, tap **OK** to confirm.
 - This process creates a file containing all your selected contacts with a .vcf extension on your microSD card.

 
Sharing visible contacts

1. From the Home screen, Swipe up to reveal all your **Apps**  > then find and tap on **Contacts** 

1. Tap **Option > Import/Export**.
2. Tap **Share all contacts** > Select **Bluetooth**,  **Gmail**.

3. Viewing details about a contact

1. From the Home screen, Swipe up to reveal all your
2. **Apps**  > then find and tap on **Contacts**. 
3. Tap the contact whose details you want to view.
4. Tap the communication icon to start dialing, texting, or emailing the contact.

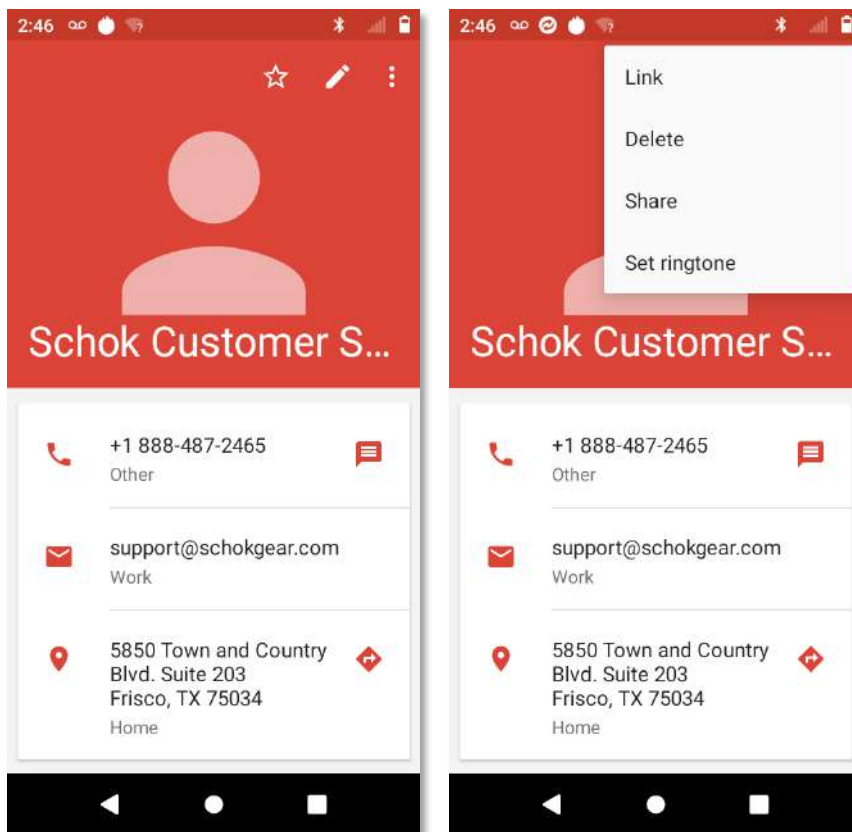

4. Search for a contact

1. From the Home screen, Swipe up to reveal all your **Apps**  > then find and tap on **Contacts**. 
2. Tap **Search contacts**.
3. Start entering the contact's name.
4. As you type, contacts with matching names appear below the search box.
5. Tap the matching contact in the list to open.

Editing/Deleting Contacts

1. Editing contact details

1. From the Home screen, Swipe up to reveal all your **Apps**  > then find and tap on **Contacts**. 
2. Tap the contact you want to edit > Tap  **Edit contact**.
3. Edit the contact information.
4. Tap **Done**.

2. Setting a contact's default phone number/email

Setting a contact's default phone number

The default phone number is used when you initiate a call or text message by tapping and holding a contact.

1. From the Home screen, Swipe up to reveal all your  **Apps** > then find and tap on **Contacts**. 
2. Find the desired contact > Tap and hold the phone number to designate it as the default phone number.
3. Tap **Set default**.

The default phone number is indicated with a checkmark.

Setting a contact's default email

The default email is used when you send an email from the list by tapping and holding a contact.

1. From the Home screen, Swipe up to reveal all your  **Apps** > then find and tap on **Contacts**. 
2. Find the desired contact > Tap and hold the email address to designate it as the default email address.
3. Tap **Set default**.

The default email is indicated with a checkmark.

3. Setting a ringtone for a contact

1. From the Home screen, Swipe up to reveal all your  **Apps** > then find and tap on **Contacts**. 

2. Tap the desired contact> Tap  **Edit contact**.
3. Tap  : **Option** > **Set ringtone**.
4. Tap a ringtone from the list to play when the contact calls.
A sample of the ringtone is played.
5. Tap **OK**.

4. Adding a contact to your favorites

1. From the Home screen, Swipe up to reveal all your  **Apps** > then find and tap on **Contacts**. 
2. Tap the desired contact > Tap .
3. To remove a contact from your favorites list, tap **Contacts** > tap the desired contact > Tap .

5. Linking contacts

1. From the Home screen, Swipe up to reveal all your  **Apps** > then find and tap on **Contacts**. 
2. Tap the contact you want to save. The others will merge into this file. This is the contact you will see in contacts after linking.
3. Tap  **Edit contact** > Tap  : **Option** > **Link**.
4. Tap the contact you want to join with the first contact. The information from the second contact is added to the first contact, and the second contact is hidden.

6. Deleting a contact

1. From the Home screen, Swipe up to reveal all your  **Apps** > then find and tap on **Contacts**. 
2. Tap the contact you want to delete,
3. tap  : **Option** > **Delete**.
4. Tap **OK**.

Communicating

1. Sending text message

1. From the Home screen, Swipe up to reveal all your  **Apps** > then find and tap on **Contacts**. 
2. Tap and hold the contact you want to send > tap 
3. The Primary Phone Number is used, or you are prompted to choose a phone number.

2. Making calls

1. From the Home screen, Swipe up to reveal all your  **Apps** > then find and tap on **Contacts**. 
2. Tap and hold the contact to call > **tap the number**.
The Primary Phone Number is used, or you are prompted to choose a phone number.

3. Connecting by using Quick Contact

1. From the Home screen, Swipe up to reveal all your  **Apps** > then find and tap on **Contacts**. 
2. Tap the icon or photo next to your desired contact > tap the desired communication method.
 - Only the icons relevant to your contact's data are displayed.
 - If there are too many icons to fit on the screen, drag to the left or right to select an icon.

Account Setting

1. Working with Google accounts

1. From the Home screen, Swipe up to reveal all your  **Apps** > then find and tap on **Contacts**. 
2. Tap  > **Settings** > **Accounts** > **Add account**.
 - After registering your Google account, your online Google contacts are synchronized to your phone. Changes made online or on the phone are automatically synchronized and updated in both locations. This address book will be used throughout the user interface.
 - If you register two or more accounts, you can merge address books from the multiple accounts into one address book.

2. Contact List Display and Settings Options

1. From the Home screen, Swipe up to reveal all your  **Apps** > then find and tap on **Contacts**. 
2. Tap  > **Settings** > **Contacts to display**.
 - All contacts display in the contacts list.
3. Tap  > **Settings**.
 - Sort list by: Select **First name** or **Last name**.
 - View contact names as:
Select **First name first** or **Last name first**.
 - About Contacts: Build version, Open source licenses, Privacy policy, Terms of service.

Messaging

About Messaging

Use Messaging to send text messages (SMS) and multimedia messages (MMS) to other mobile phones and email addresses.

1. From the Home screen, Swipe up to reveal all your  **Apps** > then find and tap on  **Messaging**.

On the Messaging screen, your sent and received messages are neatly grouped into conversations, by contact names or phone number. You can:

- Scroll up or down the list of conversations by flicking your finger on the screen.
- Tap a contact name or number to view the conversation history.
- Tap the **options icon**  to open additional menu options.

Sending Messages

1. Sending a Text Message

NOTE Depending on your billing plan, if you exceed the single text message character limit, you will be billed for multiple messages.

1. From the Home screen, Swipe up to reveal all your  **Apps** > then find and tap on  **Messaging**.
2. Tap  **Create New message**.

3. Enter the phone number in the “**To**” field. Fill in one or more recipients. You can:

- Enter the first few letters of a contact name or phone number. Matching contacts are displayed. Continue typing or tap a name or phone number from the search results.

4. Tap **Type message** > enter your message.

5. Tap  to add another contact to your message.

Add subject	Add subject.
Attach	Attach Media Files or a Slideshow within the message.
Send	Send the message.
Insert smiley	Insert a smiley in the message.
Discard	Delete the message in progress.
Import Template	Some default text

6. Tap  to **Send**.
 - Tap the **Back button**  on the top of the screen to save the message as a draft.

NOTE Your text message automatically becomes a multimedia message on below condition:

- Add subject
- Attach an item

Sending a multimedia message (MMS)

To compose a multimedia message, start by creating a new text message. Then simply add an attachment.

1. From the Home screen, Swipe up to reveal all your  **Apps** > then find and tap on  **Messaging**.
2. Tap  **Create New message**.
3. Enter the phone number in the **To** field.
Or select recipients from the contact list.
4. Tap **Type message** > enter your message.
Tap  to add the message template.
5. Tap  **Attach** > choose the type of attachment.

• Pictures	Select a photo.
• Capture picture	Capture a new photo.
• Videos	Select a video.
• Capture video	Record a new video.
• Audio	Select an audio file.
• Record audio	Record a new audio file.
• Slideshow	Create a slideshow from up to 10 of your photos.

6. From the message body, tap:
 - **View**: To view the attached item.
 - **Replace**: To change attached files.
 - **Remove**: To remove attached files.
7. Tap  **Send MMS**.
 - Tap  **Back** to save it as a draft.

3. Resuming a draft message

1. From the Home screen, Swipe up to reveal all your  **Apps** > then find and tap on  **Messaging**.
2. Tap the message indicated by **"Draft"** to resume editing.
3. When you finish editing, tap **Send**.

Reading Messages

1. From the Home screen, Swipe up to reveal all your  **Apps** > then find and tap on  **Messaging**.
2. Tap a message thread.

3. Tap and hold an individual message to see more options.

Save to SIM card	To save the message to SIM card.
Call icon	To call the message sender
Add to Contacts	To save the phone number or email address to Contacts. (Only on messages from unknown number)
Forward	To forward a message. Enter a recipient, edit the content of the message as needed > tap Send .
Copy message text	To copy text from a message.
View message details	To view details about a message.
Delete message	To delete a message.

1. Deleting a message thread

1. From the Home screen, Swipe up to reveal all your  **Apps** > then find and tap on  **Messaging**.
2. Tap and hold to select the message thread, tap  **Delete thread**.
 - If you want to delete all message threads, tap and hold a message thread and select all, tap  **Delete all threads**.
3. Tap **Delete**.

2. Searching messages

- From the Home screen, Swipe up to reveal all your  **Apps** > then find and tap on  **Messaging**.
1. Tap  **Search** to search.
 2. Enter the search term > tap  **Search**.

3. Replying to a message

- From the Home screen, Swipe up to reveal all your  **Apps** > then find and tap on  **Messaging**.
1. Tap the received message > tap **Type message** > enter your message
 2. Tap 

Receiving Emergency Alerts Messages

Emergency Alerts service allows you to receive automatic alerts in times of crisis (e.g., earthquake, hurricanes, etc.). Wireless Emergency Alerts (WEA), also known as CMAS, is a part of a national alerting system called IPAWS (Integrated Public Alert and Warning System) that enables emergency management officials to rapidly disseminate the warnings and safety information via text alerts to wireless phones based on the phones' geographic location. The Federal Emergency Management Agency or FEMA is responsible for receiving the alerting information and forwarding the alerts to participating wireless carriers such as Sprint. Such alerts may come from the President of the United States; the National Weather Service, state or county public safety officials. This system is integrated into the same national alerting services that serve television and radio today. For more information regarding WEA/CMAS please go to: [FEMA website](https://www.fema.gov/emergency-managers/practitioners/integrated-public-alert-warning-system/public/wireless-emergency-alerts).

<https://www.fema.gov/emergency-managers/practitioners/integrated-public-alert-warning-system/public/wireless-emergency-alerts>

1. Receiving Emergency Alerts Messages

1. From the Home screen, tap **Apps > Messaging**.
2. Tap Emergency alerts message you want to view.
Emergency alert messages are indicated with Emergency alert icon. 
- If Emergency alert arrives on your phone during a call,  is displayed in the Status bar. If Presidential Emergency Alert, emergency alert icon will flash. If non-Presidential, Emergency alert icon is static icon.
- Only the Presidential Emergency Alert icon is displayed under the Time/Date on the unlock/lock screen.

- If you are on an Emergency alert message screen in the Messaging application, the following options are removed or disabled: **Reply**, **Forward**, and **Call**.
- If you have power cycled your phone and a Presidential Emergency Alert has not been viewed, the Presidential Emergency Alert icon will continue to flash when the device is powered on again.

Changing Messaging Settings

1. From the Home screen, Swipe up to reveal all your



Apps > then find and tap on



Messaging.

2. Tap  **Option > Settings**

Storage settings

Delete old messages	Check to delete older messages in a thread when messaging memory or thread limits are reached. Uncheck to keep all messages. You may need to manually delete messages if the messaging memory limit is reached.
Text Message limit	Tap to set the number of messages to save per message thread. When the limit is reached, older text messages are deleted if 'Delete old messages' is checked.
Multimedia message limit	Tap to set the number of multimedia messages to save per message thread. When the limit is reached, older multimedia messages are deleted if 'Delete old messages' is checked.

Multimedia message (MMS) settings

Auto-retrieve	Uncheck to download only the heading of multimedia messages. You will need to tap the MMS message heading and manually download each MMS message. You may want to use this feature when roaming or when connected to a slow data network.
MMS Validity period	Set MMS Validity period to Maximum or Two days

Notification settings

Sound	Select a ringtone to sound when you receive new message notifications.
Vibrate	Set the phone to vibrate every time you receive a new message notification, only when silent mode, or never.

Receive Emergency Alerts

Show extreme threats	Set to receive Extreme Emergency Alerts.
Show Severe alerts	Set to receive Severe Emergency Alerts.
Show Amber alerts	Set to receive Amber Emergency Alerts.
Turn on notifications	Set to display emergency alert broadcasts
Alert reminder	Set alert reminder to once, every 2 minutes, every 15 minutes, or off
Speak alert message	Set to use text-to-speech to speak emergency alert messages

Google

Gmail

1. Opening your Inbox and Reading your Gmail

The inbox is your default Gmail view. All your received emails are delivered to your inbox.

1. From the Home screen, Swipe up to reveal all your  **Apps** > then find and tap on  **Gmail**.
2. Tap the email you want to read.

- Tap  to star the email. (Important email)
- If the sender is a friend in Google Talk, you can see your friend's online status.
- Tap **Archive** to archive the message.
- Tap **Delete** to delete the message from your inbox.
- Slide left and right to see the previous or next message in the list.

Replying to or forwarding an email message

1. From the Home screen, Swipe up to reveal all your  **Apps** > then find and tap on  **Gmail**.
2. When reading a message:

- To reply to the sender, tap  **Reply**.
- To reply to all message recipients, tap  **Reply all**.
- To forward the message, tap  **forward**.

2. Sending a new email

1. From the Home screen, Swipe up to reveal all your  **Apps** > then find and tap on  **Gmail**.
2. From any message list, tap  **compose**.
3. Enter a name or address in the **To** field. To send the email to several recipients, separate each email address with a comma.
4. Enter a subject in the **Subject** field.
5. Type the message text in the **Compose Mail** field.

- To attach an image file, Tap  **Attach file** select the picture you want to attach.

6. Tap  **Send**.

- To save the message as a draft, tap  **Option** > **Save draft**.

3. Working with Multiple Email Messages

You can archive, delete or label groups of email messages at the same time.

1. From the Home screen, Swipe up to reveal all your  **Apps** > then find and tap on  **Gmail**.

2. From any message list,  check the bubble with a letter next to the email messages you want to work with. The bubble will now be selected checkmark. 

Tap  **Archive** to move messages out of your inbox without deleting. Archived emails are assigned the All Mail label.

- Tap **Delete** to delete selected messages.
- Tap **Labels** > select the labels that you want to assign > tap **OK**.

4. Switching between Google accounts

If you have set up two or more Google Accounts on your phone, you can switch between them in Gmail. Gmail displays only one Google Account at a time. The current account is shown at the top right of any message list.

1. From the Home screen, Swipe up to reveal all your  **Apps** > then find and tap on  **Gmail**.
2. From any message list, tap **Option** > **Accounts**.
3. Tap the account that you want to view. You can also tap the account name at the top of the screen to see a list of your accounts.

5. Labeling email messages

You can organize your emails by label. Gmail has preset labels, or you can create your own labels in Gmail when viewed on a computer. (Note: Custom label colors created on the web are not supported on your phone).

Labeling an email

1. From the Home screen, Swipe up to reveal all your  **Apps** > then find and tap on  **Gmail**.
2. When reading a message, tap  > **Change labels**.
3. Select a label > tap **OK**.

6. Viewing emails by label

1. From the Home screen, Swipe up to reveal all your  **Apps** > then find and tap on  **Gmail**.
2. From any message list, tap  > **Go to labels**.
3. Tap a label to view matching email messages.

7. Starring/un-starring an email message

You can star an important email to make it easy to find again. Starred emails are assigned the Starred labels.

1. From the Home screen, tap **Apps** > **Gmail**.
2. From any message list, Tap  to star a message, tap  to un-star a message.

Maps

Use Maps to find your current location and get directions. You can search for addresses, landmarks and businesses directly on a street map or satellite image.

NOTE You need an active mobile data or Wi-Fi connection to use Maps. To see your location and get directions, you must turn on location services. From the Home screen, Swipe up to reveal all your  **Apps** > then find and tap on  **Settings** >  **Location**. Switch on **Use Location**. Maps may not be available for all locations.

Opening and viewing Maps

Viewing your location

1. From the Home screen, Swipe up to reveal all your  **Apps** > then find and tap on  **Maps**.
2. Shows your location on the map and points north for your reference.

Using Maps

1. From the Home screen, Swipe up to reveal all your  **Apps** > then find and tap on  **Maps**.
2. While viewing a map, swipe to any direction on the screen.

1. Viewing location details

Viewing information for a location

1. From the Home screen, Swipe up to reveal all your  **Apps** > then find and tap on  **Maps**.
2. While viewing a map, tap and hold a location, starred place, or a search result on the map.
 - A balloon opens over the location, with summary information.

3. Tap the balloon to see the address or more information.

Starring or un-starring a location

Add a Star to bookmark and easily return to a map location.

1. While viewing detail information for a location,
 - Tap  to star the location.
 - Tap  to un-star the location.

Viewing a location in Street view

Street view mode provides a street-level view of the location. Street view may not be available for all areas.

1. From the Home screen, Swipe up to reveal all your  **Apps** > then find and tap on  **Maps**.
2. While viewing information for a location, tap. 
3. Select **Street View** 

 - To view surrounding areas, swipe the screen in any direction.

2. Searching for a location

You can search Google Maps for specific locations, company names, or business types.

1. From the Home screen, Swipe up to reveal all your  **Apps** > then find and tap on  **Maps**.
2. Tap **Search here**  Search here
3. Enter the search criteria. As you type, suggested matches from your contacts, the web, and previously searched items are displayed.
 - Tap  to search
 - Tap a suggested search term.
4. The search results are displayed as  markers with letter labels on the map.
 - Tap markers and titles to view more information.

3. Viewing map layers

Initially, Google Maps opens with a street map. You can view additional map layers, such as satellite images and traffic information. You can also view custom Web created Google Maps.

1. From the Home screen, Swipe up to reveal all your  **Apps** > then find and tap on  **Maps**.
2. Tap  **Map Type**. A dialog opens with a list of layers.
3. Turn layers on or off by tapping the layer name. A highlighted mark surrounding the **Map type** indicates the layer is selected.
 - Tap  **Map Type** and tap on the Map type you want to deselect.

Layers may change the map entirely or overlay additional information. Tap icons or interactive items to explore different layer types.

5. Getting directions

1. From the Home screen, Swipe up to reveal all your  **Apps** > then find and tap on  **Maps**.
2. Tap  > **Directions**.
3. Use your current location as the starting point, or enter a location in the **Start point** field.
4. Enter your destination in the **End point** field.
5. Tap your desired method of transportation > tap **Get directions**.



Calendar

The Calendar application data on your phone syncs with the web-based Google Calendar service. It is also compatible with Microsoft Exchange ActiveSync Calendar.

1. Opening Calendar

1. From the Home screen, Swipe up to reveal all your  **Apps** > then find and tap on  **Calendar**.

Events are color coded to enable you to distinguish between multiple calendars. Event times are shown using your local time zone, which is provided by your active mobile network. When traveling, you may want to set a home time zone in Calendar.

2. Creating an event

Events created on your phone will be synced to Google Calendar or Microsoft Exchange automatically.

1. From the Home screen, Swipe up to reveal all your  **Apps** > then find and tap on  **Calendar**.
2. Tap the  **Add Calendar button** > **New event**.
 - In Day, Week, or Month view, tap and hold the screen at the date and/or time you want > **Event**.
3. Enter the name, time, location, description, and optional additional details for your event.

- If you have more than one calendar, choose the calendar to which to add the event.
 - In the Guests field, enter email addresses of anyone you want to invite. Separate multiple addresses with commas (,). If your invitees use Google Calendar, they'll receive an invitation in Calendar and by email.
 - If the event occurs on a regular basis, tap the Repetition box and choose the reoccurrence information.
 - You can set multiple reminders for an event.
4. Tap **Save**.

3. Viewing calendar and events

Changing calendar view

When you open Calendar, Month view is shown by default. You can also view the Calendar by Agenda, Day, or Week.

1. From the Home screen, Swipe up to reveal all your  **Apps** > then find and tap on  **Calendar**.
2. Tap  **Menu** and choose the type of view that you want

Day	Displays a chart of the events of one day, in a table of one-hour rows. All-day and multiday events are displayed at the top. Each event is displayed at the corresponding time. Swipe left or right to change dates, and swipe up or down to view earlier or later times.
Week	Displays the one week calendar. All-day and multiday events are displayed at the top. Swipe left or right to change weeks, and swipe up or down to view earlier or later times.

Month	Displays a chart of the events of the month. Events are shown as blue bars on each calendar date. Swipe left or right to change months.
Agenda	A list of your events in chronological order. All-day and multiday events are listed at the start of each day. Days without events are not shown. Flick up or down to view earlier or later events.
Today	Displays a chart of the events of today.

Viewing event details

- In Day, Week, or Agenda view, tap an event.
- In Month view, tap a day to switch to Day view > tap an event.

4. Editing or deleting an event

1. In event details view, press the event >  **Edit event** to edit the event.
2. Make your changes to the event > tap **Done**.
 - To delete the event, press the event, and tap  > **Delete** > tap **Delete**.

5. Synchronizing and displaying calendars

You can select which calendars to show or hide on your phone's Calendar, and which ones to synchronize.

1. From the Home screen, Swipe up to reveal all your  **Apps** > then find and tap on  **Calendar**.

Calendar view setting	Hide declined events	Check if you don't want to see events to which you've declined invitations.
	Use home time zone	Displays calendars and event times in your home time zone when traveling.
	Home time zone	If Use home time zone is checked, you can set home time zone.
Week number setting	Display week number	Check if you want to see week number in Calendar.
	First week of year	If Display week number is checked, you can set first week of year.
Reminder settings	Set alerts & notifications	Configure event reminders.
	Select ringtone	Select which ringtone will sound when you receive an event reminder.
	Vibrate	Configure the phone to vibrate whenever you receive an event reminder.
	Default reminder time	Select the default reminder time used when creating new calendar events.

2. Tap  **Menu** > Select the **Calendars to display**.

All the calendars you've added or subscribed to are displayed. (Calendars for accounts you've configured not to synchronize are not included in the list.)

3. Tap the icon next to a calendar to change storage and visibility settings.

	Calendar events stored on phone and visible in Calendar.
---	--

	Calendar events stored on phone but not visible in Calendar.
	Calendar events not synchronized to phone.

4. Tap **OK**.

6. Changing Calendar settings

1. From the Home screen, Swipe up to reveal all your



Apps > then find and tap on  **Calendar**.

2. Tap  **Menu** > **Settings**.

Play Music

Play music and audio files with Music application.

NOTE You need to copy music files to the device music folder or to the microSD card to use the Music application.

1. Viewing your music library

1. From the Home screen, Swipe up to reveal all your  **Apps** > then find and tap on  **Files**.
2. Under **Categories** Tap  **Audio** screen.
 - You can view the lists of music in the Music folder
 - The lists are automatically organized in Alphabetical order.
 - To change the view from List to Grid View, Tap  > **Switch to grid view**

Google Play Store

Google Play Store provides direct access to applications and games to download and install on your phone. To access Google Play Store, you must first sign into your Google account using a Wi-Fi or data connection. When you open Google Play Store for the first time, you must read and accept the terms of service to continue.

1. Finding applications

1. Browsing applications

You can browse and sort applications by category.

1. From the Home screen, Swipe up to reveal all your  **Apps** > then find and tap on  **Play Store**.
2. Tap **Games, Apps, Movies & More, Books**, etc. at the bottom of the screen.   
- Scroll to view subcategories and tap one to explore.
3. Tap the subcategory you want.

2. Searching for applications

1. From the Home screen, Swipe up to reveal all your  **Apps** > then find and tap on  **Play Store**.
2. Tap  at the top right of the screen to search apps.
3. Enter the name or type of app you're looking for > tap  to search.

3. Viewing details about an application

1. While browsing Google Play Store, or in a list of search results, tap an application to view more details.

Application details screens include a description, ratings, and specific information about the application. The Comments tab includes comments from people who have used the application. You can download and install an application from this screen.

2. Installing applications

1. Installing an application

1. From the Home screen, Swipe up to reveal all your  **Apps** > then find and tap on  **Play Store**
2. Find the application you want to purchase and view the application details.
3. Tap **Download** to download and install the application. For paid applications, the download button is labeled with the application's price. Tap the price to buy the application. The subsequent screen notifies you whether the app will require access to your personal information or access to certain functions or settings of your phone.

1. Tap **Accept & download** to begin downloading and installing the app. If you selected a paid app, you will need to add a payment method.

NOTE

Be cautious when downloading apps that have access to phone functionality or a significant amount of personal data. You're responsible for the results of using downloaded apps on your phone.

NOTE

Once you've purchased something from Google Play Store, the phone remembers your password, so you don't need to enter it the next time. Be sure to secure your phone with a password to prevent unauthorized purchases.

2. Managing your downloads

1. Viewing downloaded applications

1. From the Home screen, Swipe up to reveal all your  **Apps** > then find and tap on  **Play Store**
2. Tap the **Profile icon**  > **Manage apps & device** > **Manage**

In the list of the free and paid applications that opens, you can tap an application to rate it, uninstall it, request a refund, and more.

2. Updating an application

You can update downloaded applications.

1. From the Home screen, Swipe up to reveal all your  **Apps** > then find and tap on  **Play Store**.
2. Tap the **Profile icon**  > **Manage apps & device** > **Updates available** 

3. Uninstalling an application

You can uninstall applications from Google Play Store.

You can also uninstall downloaded applications from the Settings.

1. From the Home screen, Swipe up to reveal all your  **Apps** > then find and tap on **Settings** 
2. Tap **Apps & notifications**  > tap "**SEE ALL APPS.**"
3. Scroll until the Application that wants to be uninstalled is found.
4. Tap the Application and tap  **UNINSTALL**
The application is uninstalled. You can install the application again at any time. If you paid to buy the application, you will not be charged again.

Web

Chrome™

Search for information or browse web pages using the Chrome web browser. To access the internet, you must have an active data or Wi-Fi connection.

1. Opening Chrome

1. From the Home screen, Swipe up to reveal all your  **Apps** > then find and tap on  **Chrome**.
 - When you open the Browser, the default homepage is displayed. If you have used the browser recently, your most recently viewed webpage is displayed.
 - The browser also opens when you select a web link in other applications, like email or text messaging.

2. Accessing a webpage or searching the web

1. From the Home screen, Swipe up to reveal all your  **Apps** > then find and tap on  **Chrome**.
2. Tap the URL field on top of the screen.
3. Enter the URL of a webpage or search term and tap 
 - As you type, suggestions of web pages and key words will appear on the screen. Tap a suggestion to go directly to that webpage or view search results.

3. Using Browser options

1. Stopping page loading
While webpage is loading, tap  **Option** >  **Stop**. Or tap on the left of the URL field.
2. Reload the current page
Tap  **Option** >  **Reload**.
3. Finding the text on the current page
 1. While viewing any web pages, tap  **Option** >  **Find in page**.
 2. Enter the search term.
 - As you type, matching characters will be highlighted. Tap $\wedge$ or $\vee$ to scroll to the previous or next matching term.
4. Sharing a webpage
 1. While viewing any web pages, tap  **Option** > **Share page**.
 2. Tap an application to send the URL. The application opens with the URL you've entered.

4. Downloading files

You can download images, files, and applications from web pages. All downloaded files are saved to the local storage or the microSD card.

1. Tap and hold an image, a link or a file you want to download.
 2. Tap the desired action (**Save image**, **View image**, or **Set as wallpaper**).
1. Navigating between webpages
 - Press  **Back** to return to the previous web pages. Or tap  **Option** > **Forward**  if you pressed  **Back** by accident.

2. Switching between Browser windows

1. From any web pages, tap  **Option** > **Bookmarks** > tap  **HISTORY**.

NOTE

You can open as many windows as you want at any given time.

5. Using bookmarks

Browser bookmarks are stored shortcuts which allow you to quickly access webpages without having to type in its full address.

1. Bookmarking a webpage

1. While viewing webpages, tap  **Option** > tap  **Save to bookmarks**.
2. Edit the name or location if needed > tap **OK**.

2. Opening a bookmark

1. When viewing any webpages, tap  **Option** > **Bookmarks**.
2. Tap a bookmark to open it.
 - If you prefer to open the webpages in a new window, tap and hold the bookmark and tap **Open in new tab**.

3. Editing a bookmark

1. From any webpages, tap  **Option** > **Bookmarks**.
2. Tap on the bookmark that you want to edit.
3. Tap  **Option** and then **Edit**
4. Edit the name and/or location, tap  when done.

5. Deleting a bookmark

1. From any webpages, tap  **Option** > **Bookmarks**.

2. Tap  on the right of the bookmark to delete > Tap **Delete**

6. Browser settings

Customize your browser settings to optimize your browsing experience.

1. From the Home screen, Swipe up to reveal all your  **Apps** > then find and tap on  **Chrome**.
2. Tap  **Option** >  **Settings**.

General settings	Set home page	Select the home page
	Form auto-fill	Fill out web forms with a single touch
	Auto-fill text	Set up text to auto-fill in web forms
Privacy & Security	Clear cache	Tap it you can clear locally cached content and databases
	Clear history	You can clear the browser navigation history
	Show security warning	If you tap it, it will show warning if there's a problem with a site's security
	Accept cookies	Allow sites to save and read cookie data
	Clear all cookie data	Delete all cookie data
	Remember form data	Remember what you enter in form fields

Privacy & Security	Clear form data	Delete all the information the browser remembered
	Enable location	Allow sites to request access to your location
	Clear location access	Delete location access for all websites
	Remember passwords	Save your passwords for some webpages that require you to sign in.
	Clear passwords	Delete all saved passwords
	Force enable zoom	Override a website's request to control zoom behavior
Accessibility settings	Text Size	Text scaling, Zoom on double-tap and Minimum font size
	Inverted Screen Rendering	Making the black becomes white and vice versa
Advanced settings	Set search engine	You can choose Google, Yahoo, Bing, etc. to browse the web
	Open in background	Tap to open new tabs behind the current tab
	Enable JavaScript	Allow JavaScript to run on web pages.
	Website settings	Set for individual websites.
	Reset to default	Restore default settings
Bandwidth management	Search result preloading	Allow browser to preload high confidence search results in the background
Bandwidth management	Load images	Display images on web pages

Labs settings	Fullscreen	Use full screen mode to hide the status bar
	Slide Tab Transitions	Swipe from the edge to reveal the next/previous tab in the list

YouTube

YouTube is Google's online video streaming service for viewing, discovering, and sharing videos.

1. Opening and signing into YouTube

1. Signing into YouTube

You can discover and watch YouTube videos without a YouTube account, but if you want to take advantage of many YouTube features, you must sign into your YouTube account.

1. From the Home screen, Swipe up to reveal all your



Apps > then find and tap on  **YouTube**.

2. Tap **Option** > **Sign in**

The first time you use a YouTube feature that requires an account, you're prompted to sign in. Create a new account or enter your YouTube sign in information if you already have an account. For more information about YouTube accounts, visit YouTube on the web.

2. Finding videos

1. Browsing videos by category

1. From the Home screen, Swipe up to reveal all your



Apps > then find and tap on  **YouTube**.

2. Tap YouTube Trending

3. Tap a category in the scrolling list.

- Tap the current time filter setting at the top of the category screen to change the time period and reduce the number of videos listed.
- Tap **Most viewed**, **Top rated**, **Most discussed** or **Top favorite**.

2. Searching for videos

1. From the Home screen, Swipe up to reveal all your  **Apps** > then find and tap on  **YouTube**.
2. Tap  **Search**.
3. Enter the search criteria > tap  to search.
4. Scroll through the search results and tap a video to watch it.

3. Watching videos

1. From the Home screen, Swipe up to reveal all your  **Apps** > then find and tap on  **YouTube**.
2. Tap a video to begin playback.
 - Tap the video to pause or resume playback.
 - Tap **Info**, **Related videos** or **Comments** to learn more about the video.
 - Rotate your phone to watch the video in full-screen view. You can also double-tap the video to toggle full screen view on and off.

Add to	Watch later	Bookmark the video to watch it later.
	Favorites	Add the video to your Favorites.
	New playlist	Add your new playlist.
Share	Share the video via  Bluetooth ,  Gmail ,  Messaging ,	

4. Uploading videos

1. To shoot and upload a new video
 1. From the Home screen, Swipe up to reveal all your  **Apps** > then find and tap on  **YouTube**.
 2. Tap  The create window will appear.
 3. Tap **“Upload a video”**, **“Create a Short”** or **“Go Live”**.
 4. To “Upload a video”, Tap , tap on  **Upload a video**
 5. Choose the video from the gallery, add details and

click **Next**. **NEXT**

6. Select if the video is made for kids or not and click **UPLOAD** **UPLOAD**

7. Sharing videos

1. From the Home screen, Swipe up to reveal all your  **Apps** > then find and tap on  **YouTube**.
2. Tap a video to play.
3. Tap  **Share**.
4. Tap the application you want to use to share the video.

8. YouTube settings

You can change the following settings for YouTube on your phone.

1. From the Home screen, Swipe up to reveal all your  **Apps** > then find and tap on  **YouTube**.
2. Tap  **Profile icon** >  **Settings**.

General settings	High quality on mobile	Check if you prefer to watch videos in high resolution by default when connected to mobile networks. Watch videos in standard mode to reduce startup time and data use. This setting has no effect if you are connected to a Wi-Fi network, where videos are always shown in higher resolution.
	Caption font size	Set the preferred text size when viewing video captions.
	Uploads	Specify network preferences for uploads.

Search settings	Clear search history	Remove previous YouTube video search results.
	SafeSearch filtering	Select if you want Google SafeSearch filtering to block some results when you search for videos. Settings are: Block no search results (Don't filter), only explicit or offensive videos (Moderate), or both explicit and offensive text and videos (Strict)
Preloading	Preload subscriptions	Enable preload to fetch videos in advance while on Wi-Fi and charging, so you can enjoy watching them later on slow networks
	Preload watch later	
	Help	Open the YouTube Help Center in your phone's Browser.
About	Feedback	Open a YouTube feedback form in your phone's Browser.
	Google Mobile Terms of Service	Display the Google Mobile Terms of Service.
	YouTube Terms of Service	Display the YouTube Terms of Service.
	Google Mobile Privacy Policy	Display the Google Mobile Privacy Policy.
	YouTube Privacy Policy	Display the YouTube Privacy Policy.
	Application version	The YouTube application version number installed on your phone.

Wi-Fi

1. Turning Wi-Fi on and connecting to a wireless network

1. From the Home screen, Swipe up to reveal all your  **Apps** > then find and tap on  **Settings**.
2. Tap  **Network & Internet** >  **Wi-Fi**.
3. Select the **Wi-Fi** check box to turn Wi-Fi on.
4. The network names and security settings of detected Wi-Fi networks are displayed.
5. Tap a Wi-Fi network to connect.
 - If you selected a network that is secured, enter the security key and then tap **Connect**. Depending on the network type and security settings, you may also need to enter more information or choose a security certificate.

2. Wi-Fi Hotspot

You can make your phone a Wi-Fi hotspot that provides portable internet access to other Wi-Fi enabled devices.

1. From the Home screen, Swipe up to reveal all your  **Apps** > then find and tap on  **Settings**.
2. Tap  **Network & Internet** >  **Hotspot & Tethering**.
3. Turn **ON** Mobile Hotspot.
4. Enter the **Wi-Fi name (SSID)** that you want other devices to identify your phone.
5. Enter the **Security** you want. WPA2-Personal or None
6. Enter a unique **Password** (8 characters min), that others will need to access your Wi-Fi hotspot.

Downloads

Images, files and other items you download in Browser, Gmail, is stored on your phone. You can view, manage or delete what you have downloaded.

1. Opening Downloads

1. From the Home screen, Swipe up to reveal all your  **Apps** > then find and tap on  **Files**.
2. Tap  **Downloads**.
 - If you want to delete the downloaded file, just Tap the  **Option** icon next to the file and tap **Move to Trash**.
 - If you want to install the downloaded file, just Tap the  **Option** icon next to the file and tap **Install**.
 - If you want to **Select** the downloaded file, just Tap the  **Option** icon next to the file and tap **Select**. Then click again the  **Option** key and select the desired action.

2. Viewing a file

1. From the Home screen, Swipe up to reveal all your  **Apps** > then find and tap on  **Files**.
2. Tap  **Downloads**.
3. Tap the file that you want to open.



Bluetooth

Using Bluetooth

Bluetooth is a short-range wireless communications technology that devices can use to exchange information over a distance of about 30 feet. The most common Bluetooth devices are headphones, hands-free car kits, keyboards and portable devices, including laptops and cell phones.

1. Turning Bluetooth on or off

1. From the Home screen, Swipe up to reveal all your  **Apps** > tap on **Settings** .
2. Tap  **Connected devices** >  **Bluetooth**
3. Turn **on** or **off** Bluetooth

2. Changing the phone's Bluetooth name

The phone name identifies your phone to other devices.

1. From the Home screen, Swipe up to reveal all your  **Apps** > tap on  **Settings**.
2. Tap  **Connected devices** >  **Bluetooth**.
3. Tap **Device name** > Enter the name for your phone in the dialog box > Tap **RENAME**.

3. Pairing your phone with a Bluetooth device

1. From the Home screen, Swipe up to reveal all your  **Apps** > tap on  **Settings**
2. Tap  **Connected devices**
3. Tap  **Pair new device**
4. A list of nearby Bluetooth devices is displayed. Tap the ID of the device that you want to pair and if asked, enter a passkey such as **0000** or **1234**, Tap **PAIR**. Some Bluetooth devices such as Bluetooth headsets may ask you to allow permit to have access to contacts and call history.

Disconnecting or Un-pairing from a Bluetooth Device

1. Disconnecting a Bluetooth device

1. From the Home screen, Swipe up to reveal all your  **Apps** > then find and tap on  **Settings**.
2. Tap  **Connected devices**.
3. In the **Media devices** section, tap  on the device that you want to disconnect.
4. Tap **Forget**.

2. Un-pairing from a Bluetooth device

You can make your phone forget its pairing connection with another Bluetooth device.

1. From the Home screen, Swipe up to reveal all your  **Apps** > then find and tap on  **Settings**.
2. Tap  **Connected devices**.
3. In the **Media devices** section, tap  on the device that you want to **FORGET**.
4. Tap  **FORGET**.

Connecting to a Bluetooth Headset

1. From the Home screen, Swipe up to reveal all your  **Apps** > then find and tap on  **Settings**.
2. Tap  **Connected devices**.
3. Tap  **Pair new device**
4. A list of nearby Bluetooth devices is displayed. Tap the ID of the headset that you want to pair and if asked, enter a passkey such as **0000** or **1234**, Tap **PAIR**.
Some Bluetooth headsets may ask you to allow permit to have access to contacts and call history.

1. Reconnecting a headset

1. Turn the headset on.
2. From the Home screen, Swipe up to reveal all your  **Apps** > then find and tap on  **Settings**.
3. Tap  **Connected devices**.
4. In the **Media devices** section, tap  on the device that you want to **CONNECT**.
5. Tap **CONNECT**.

Sending and Receiving Information Using Bluetooth

You can use Bluetooth to transfer information between your phone and another Bluetooth-enabled device such as a phone or laptop computer. You can send the following types of information, depending on the device you are sending to:

- Images and videos
- Contacts
- Audio files

To send files, your phone must have a microSD card installed.

NOTE The first time you transfer information between your phone and another device, you need to enter or confirm a security passcode. Your phone and the other device are then paired, and you will not need to exchange passcodes to transfer information in the future.

1. On your phone, open the application that contains the item you want to send.
2. Choose the file that you want to send by long pressing it.
3. Tap  **Share**
4. A pop-up window will open. On “**SHARE TO APPS**” Tap on **More** A new pop-up window will open. If you are sharing to any Android OS Tap on  **NEARBY**. If you are sharing to iOS or older versions of Android Tap on  **Bluetooth**.
5. When **NEARBY** is Tapped, it will begin to search for near devices. Tap the device that you want to share the file to.
6. As soon as the other device presses **Accept**, the transfer will initiate.

Receiving information from another device

Your device is capable of receiving a wide variety of file types with Bluetooth, including photos, music tracks, and documents such as PDFs

To receive files from another device, your phone must have space in its local storage or a microSD card installed.

1. From the Home screen, Swipe up to reveal all your



Apps > then find and tap on  **Settings**.

2. Tap  **Connected devices**.

3. Tap **Connection preferences**

4. Under **Connection preferences** Tap **Bluetooth**

5. If Bluetooth isn't turned on, turn it on.

 
6. Press the  Back arrow at the top of the display.

7. On **Connection preferences**, tap  **Nearby Share**

8. Turn on  **Nearby Share**.

9. If a Bluetooth authorization request is displayed on your phone, enter the same passcode on both your phone and the other device, or confirm the auto-generated passcode.

10. When your phone receives a nearby file transfer request notification, a pop-up notification will be displayed.

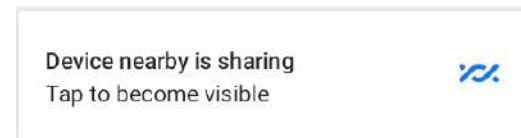

11. Tap the pop-up notification to become visible.
12. Another pop-up notification will inform that another device with the name “XXXX” and the PIN “1111” is sharing a file.
13. Tap **ACCEPT** to initiate the transfer

Entertainment

1. Camera/Camcorder

1. You can take pictures and shoot videos with Camera/Camcorder.
2. Photos and videos captured with the camera will be stored on the internal memory.

2. Opening Camera

 
1. From the Home screen, Swipe up to reveal all your  **Apps** > then find and tap on  **Camera**.
2. Or, when in Camcorder mode, tap to choose change to camera. 

3. Taking a picture

1. From the Home screen, Swipe up to reveal all your  **Apps** > then find and tap on  **Camera**.
2. Frame your subject on screen and try to be as still as possible.
3. Tap . The picture taken will be displayed as a thumbnail in the lower left corner.
4. Tap the thumbnail to view, share, or work with your pictures.

4. Camera fast menu

1. When in Camera mode, Camera settings are displayed on screen. Before taking the photo, you can adjust your camera settings or leave the controls in automatic mode.
2. From the Home screen, Swipe up to reveal all your  **Apps** > then find and tap on  **Camera**
3. Tap  > to open the floating menu.

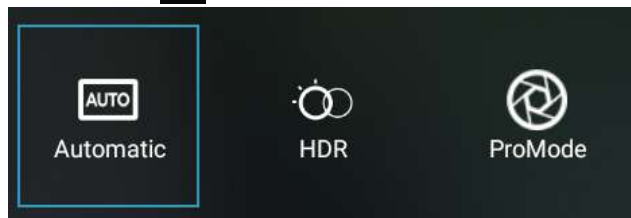

5. Camera settings

1. When in Camera mode, Camera settings are displayed on screen. Before taking the photo, you can adjust your camera settings or leave the controls in automatic mode.

2. From the Home screen, Swipe up to reveal all your  **Apps** > then find and tap on  **Camera**.
3. Tap  > to open the floating pop-up. At the bottom of the screen, tap  **settings**.
4. Tap the setting you want to change

General		GPS Location	On or Off
		Face Detection	On or Off
		Storage	Phone or SD Card
Still Camera		Countdown timer	On or Off
		Continuous Shot	On or Off
		Picture Size	1, 1.5, 2, 3, 5MP, QVGA, CIF, VGA, 720x480, WVGA, SVGA, HD720, WXGA, HD1080
		Picture Quality	Low, Standard, High
		Exposure	-2, -1.5, -1, -0.5, 0, +0.5, +1, +1.5, +2
		White Balance	Auto, Incandescent, Fluorescent, Daylight, Cloudy
		Shutter Sound	On or Off

6. Video Settings

1. From the Home screen, Swipe up to reveal all your  **Apps** > then find and tap on  **Camera**.
2. Tap  > to open the floating pop-up. At the bottom of the screen, tap  **settings**.
3. Tap the Video setting you want to change.


Video Camera		Video quality	QVGA, CIF, VGA, SD480p, HD720P, HD1080P
		Video duration	30 sec (MMS), 10 min, 30 min, no limit
		Noise duration	Off, Fast, High Quality
		Video encoder	H264 (Only choice)
		Audio Encoder	AAC, AMRNB
		Video Rotation	0, 90, 180, 270
System		Time lapse	Off and from 0.5 seconds to 24 hours
		Restore defaults	Camera settings will be restored to default settings

Tools

Clock

1. Opening the Clock

 1. From the Home screen, Swipe up to reveal all your  **Apps** > then find and tap on  **Clock**.
 - The Clock application opens and displays the date, time and other useful information.
 - Tap  **Set alarm** to set alarm.

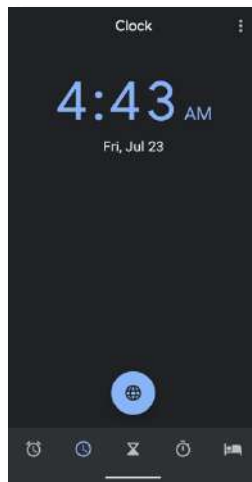

2. Managing Alarms

1. Adding a new alarm
 1. From the Home screen, Swipe up to reveal all your  **Apps** > then find and tap on  **Clock**.
 2. Tap  **Set alarm** >  **Add alarm**.
 3. To change the alarm time, scroll up and down to type the number. Then toggle AM/PM > **Set**.
 4. Check the checkbox, '**Turn alarm on**'.

5. Edit **Turn alarm on**, **Time**, **Repeat**, **Ringtone**, **Vibrate** and **Label** > **Ok**.

2. Editing an alarm

1. From the Home screen, Swipe up to reveal all your  **Apps** > then find and tap on  **Clock**.
2. Tap  > Tap an existing alarm.
3. Turn the alarm on or off by checking or un-checking the checkbox, '**Turn alarm on**'. In the alarm list, set alarms are underlined in green.
4. Edit **Time**, **Repeat**, **Ringtone**, **Vibrate** and **Label** > **Done**. Or tap **Delete** to remove the alarm > **OK**.


3. Changing alarm settings

1. From the Home screen, Swipe up to reveal all your  **Apps** > then find and tap on  **Clock**
2. Tap  > tap  **Option** > **Settings**.

Alarm in silent mode	Check to play alarms even when the phone is in silent mode.
Alarm volume	Set the volume of alarms.
Snooze duration	Set how long Clock waits before playing an alarm again.
Auto-silence	Alarm will silence after 10 minutes
Volume button	Set the side button behavior for alarms.
Set default ringtone	Set ringtone default

4. Stopping an alarm

 
1. When the alarm sounds, tap **Dismiss** to stop the alarm.
2. Tap **Snooze** to repeat the alarm after a specified length of time.

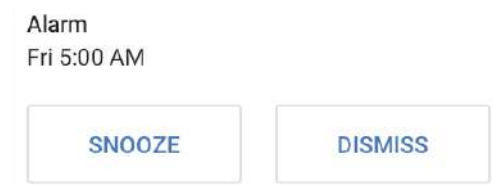

Calculator

1. Using Calculator

 1. From the Home screen, Swipe up to reveal all your  **Apps** > then find and tap on  **Calculator**.
2. Enter numbers and arithmetic operators.
3. Tap  **Option** > **Advanced panel**.
4. Tap and hold the Calculator's display to open a text editing menu. You can cut, copy, and select text for use in Calculator or other Applications.
5. Tap **Clear history** to delete the last number or operator you entered. Tap and hold **DELETE** to delete everything in the display.

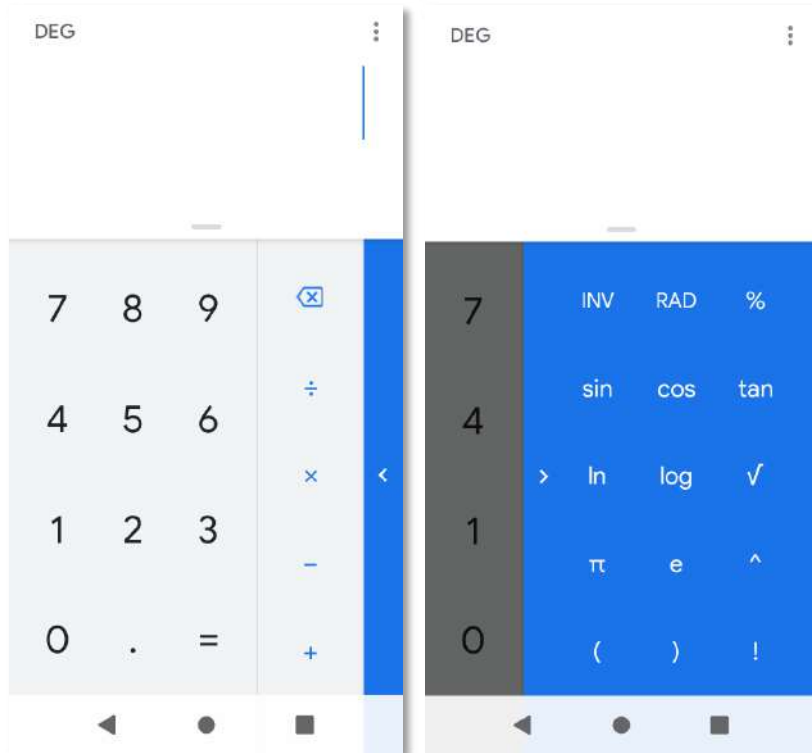

Settings

Settings on Your Phone

Control and customize phone settings on the Settings screen.

From the Home screen, Swipe up to reveal all your

 **Apps** > then find and tap on  **Settings**.

Network & Internet

Wi-Fi  Wi-Fi On / Off.
Set up and manage Wi-Fi networks. For details about working with these settings, see "Wi-Fi".

Mobile Network  The settings include Data enable, Data roaming, Access Point Names and also, you can select network operator

Airplane Mode  Airplane mode On / Off.
Check to turn off all the phone's radios that transmit voice or data.

Hotspot & Tethering  Mobile Hotspot ON/Off.
Share your phone internet connection via Wi-Fi, USB or Bluetooth

Data Saver  Use Data Saver On / Off.
Use to help reduce data usage.

VPN  Tap  Advanced to find VPN settings.
Tap + to add.

Private DNS  Tap  Advanced to find Private DNS.
You can select private DNS mode. By default is in AUTO.

Sound

Media Volume  Set the volume for Media. This can be Streaming videos, Movies, Music or Short video clips.

Call Volume  Set the volume for phone calls

Ring & Notifications Volume  Set the volume for Ringtones and notifications related sounds.

Alarm Volume  Set the volume for Alarm related sounds

Vibrate for calls Will vibrate when receiving a phone call. You can choose for Never vibrate, Always vibrate or Vibrate first then ring gradually.

Do not disturb Mutes all calls, alerts and notifications. You can customize which type of sounds can go through Do not disturb is activated.

Media Media On / Off.
Show media player in Quick settings.
Show media player for an extended period to easily resume playback.

Shortcut to prevent ringing Prevent ringing On / Off.
Press power & volume up together to (Vibrate or Mute options)

Default alarm sound Choose the default alarm sound from the different sounds. You can add your own alarm sound by tapping +

Dial pad tones Dial pad tones On / Off

Screen locking sound Screen locking sound On / Off

Charging sound Charging sound On / Off

Touch sounds Touching sounds On / Off

Touch Vibration Touch vibration On / Off.
Haptic feedback for tap, keyboard and more.

Display

Brightness level Adjust the brightness level of the screen (In percentage)

Dark theme	On / Off: Dark theme uses a black background to help keep battery alive longer. Dark theme applies to the Android system user interface (UI) and supported apps. Colors don't change in media.
Night Light	Night lights tints your screen amber. This makes it easier to look at your screen or read in dim light, and may help you fall asleep more easily.
Adaptive brightness	On / Off: Your screen brightness will automatically adjust to your environment and activities. You can move the slider manually to help adaptive brightness learn your preferences.
Wallpaper	You can choose any wallpaper from your Gallery, Photos or Wallpaper section.
Screen timeout	Adjust the delay before the screen automatically turns off. It can be from 15 seconds to 30 minutes.
Auto rotate screen	On / Off On will rotate the screen automatically when the device is turned from vertical to horizontal.
Font Size	Four steps, from small to Large. Make the text on screen smaller or larger.
Screen Saver	Choose Clock, Colors or Photos as a screen saver. Four options to start the screen saver.
Lock screen	Options of what to show and when to show when the device is on lock screen

Apps & notifications

Recently opened apps Shows the apps that were opened recently.

Conversations Conversations is a new section dedicated to notifications that come in from chat apps like Android messages and others.

Notifications Notification history: Show recent and snoozed notifications. You can turn On / Off

Screen time You can set daily timers for any app installed in the device.

Default apps Show which apps are set as defaults.

Permission manager This is where you can set permissions for any app to access your data

Wireless emergency alerts These are notifications (Free) delivered to your device as part of a public safety system provided by authorized senders. Designed for imminent threats to safety or missing persons.

Special app access Offers the user a view to understand what apps have full access as well as other permissions such as device admin apps, modify system settings, notification access, etc.



Connected devices

Connected devices

This is the menu where the user can pair bluetooth devices, connect printers, send and receive files via Bluetooth and enable Nearby share.

Pair new device Tap to setup bluetooth devices

Previously connected devices

Here will display the list of connected devices

Connection preferences

This is the menu where you can turn On or Off Bluetooth, change the name of the device as well as setup printers, show received files via Bluetooth and control the Nearby Share feature.

Bluetooth

Connection preferences

Printing

Files received via Bluetooth

Nearby Share



Battery

Apps are running normally

The system will inform if an app is using too much battery and actions you can take.

Battery Saver

You can turn On / Off to extend battery life.

Set a schedule

Turn off when charged Off / On
When On, Battery Saver turns off when your phone reaches 90% of charge or more.

Battery manager

Use Battery manager Off / On
Detect automatically when apps drain battery, giving you the option to restrict these apps.

Battery percentage

Battery percentage On Off
Show your device battery percentage in the status bar

Last full charge

Show when was the last full charge of the device.

Screen usage since full charge

Shows the amount of screen usage since the device full charge.



Storage

You can see the phone and SD card storage space

Manage storage

Opens the files app and lets you have a deeper control of the installed files.

Photos & videos

Shows the accumulated size of all photos & video files on the system.

Music & Audio

Shows the accumulated size of all Music & Audio files on the system.

Games

Shows the accumulated size of all games installed on the device

Movie & TV apps

Shows the accumulated size of all Movies and TV apps on the device.

Other apps

Shows the accumulated size of all the apps installed on the device

Files

Shows the accumulated size of other files in the device

System

Shows the accumulated size of the operating system



Digital Wellbeing tools

Your Digital Wellbeing tools

Manage how you spend time on your Android phone. New ways to find balance for you and your family.

Dashboard

Control your screen time, set timers for your apps.

Focus mode

Turn on this feature to turn off interruptions, it can be for any app installed in the phone. You can set up a schedule.

Reduce interruptions

Manage notifications

Do not disturb

Show icon in the app list On / Off

Parental controls

Setup Family link parental controls for your family.

Accessibility

Screen Readers Select to Speak Select to Speak Off / On
When Select to Speak is on, you can tap specific items on your screen to hear them read aloud.

TalkBack TalkBack Off / On
When TalkBack is On, it provides spoken feedback so that you can use your device without looking at the screen. Talkback is intended for situations or people who have difficulty seeing the screen.

Preferred engine Google TTS Options

Text-to-speech output

Language Choose which language to use.

Speech rate Choose the speed of speech

Pitch Choose the pitch of speech

Display

Font Size Four size fonts, from small to Large.

Display Size Two sizes of display size. The default option is the largest size.

Dark Theme

Dark Theme On / Off (Default is Off)

Magnification

Magnification On / Off (Default is Off)

Color correction

Color correction On / Off (Default is Off)

Color inversion

Color inversion On / Off (Default is Off)

Large mouse pointer

Large mouse pointer On / Off (Default is Off)

Remove animations

Remove animations On / Off (Default is Off)

Accessibility Menu

The Accessibility Menu provides a large on-screen menu to control your phone. You can lock your phone, control volume and brightness, take screenshots, and more.

Switch Access

Switch Access lets you interact with your Android device using one or more switches instead of the touchscreen.

Autoclick (Dwell Timing)

Autoclick (Dwell timing)
Autoclick works with a connected mouse. You can set the mouse cursor to click automatically when the cursor stops moving for a certain amount of time.

Power button ends call

Power button ends call On / Off (default is Off)

Interaction controls

Auto-rotate screen

Auto-rotate screen On / Off (Default is On)

Touch & Hold Delay

Short, Medium and Long options.

Time to take action

Choose how long to show messages that ask you to take action, but are visible only temporarily. Not all apps support this setting.

Vibration & Haptic strenght

Ring Vibration (On / Off)
Notification vibration (On / Off)
Touch feedback (On / Off)

System navigation

Choose which type of navigation you want to have to operate your device. There are two options: Gesture Navigation or 3-button navigation. (Default is 3-button navigation)

Audio & On-screen text

Mono Audio

Combine channels when playing audio On / Off

Audio Balance

Balance the audio of your device for devices with two speakers or more.

Caption preferences

Show captions On / Off (For supported apps only)
Caption size and Style
Language

Experimental

High Contrast text

High contrast text On / Off (Default is Off)

Location

Use location	Use location On / Off If Off, Google Maps or any GPS base app will not work.
Recent location request	This section will show apps that have requested location services recently.
Apps access to location	Apps with permission can access the device location. You can control which apps can have access all the time. Or, which apps are just allowed only while in use.
Wi-Fi & Bluetooth scanning	If switched On, even if Wi-Fi and Bluetooth radios are off, apps are allowed to scan at any time for Wi-Fi networks or Bluetooth nearby devices. This can be used to improve location-based features and services.
Emergency Location Service	On / Off (default is on)
Google Location Accuracy	On / Off (default is on)
Google Location History	On / Off (default is on)
Google Location Sharing	On / Off (default is on)
Network Data Analytics	Disabled by default.

Privacy

Permission manager	Control app access to your data	
Show passwords	Display characters briefly as you type On / Off	
Notifications on lock screen	Show all notification content on the lock screen or Don't show notifications at all.	
Autofill with Google	On / Off With a single tap, fill in passwords, addresses and credit card that are saved to your Google Account	
Advanced	Google location history	Saves where you go with your device
Advanced	Activity controls	Choose the activities and info you allow Google to save
Ads	Advertising ID and personalization	Reset advertising ID Opt out of Ads personalization (On / Off) default is Off
	Usage & diagnostics	Share data to help improve Android (On / Off) default is Off

Security

Security status	Google Play protect	Google Play protect regularly checks your apps and device for harmful behavior. You will be notified of any security risk found
	Security update	Notifies you the date of the last security update and tapped, checks if there is any update.
	Find My Device	Find my device helps you locate this device remotely. It also helps you keep your data safe if the device is lost.
Device security	Google play system update	Notifies you the data of the last update and if tapped checks if there is any update.
	Screen lock	User choose the type of security for the screen lock. It can be: None, Swipe, Pattern, PIN or Password
	Smart lock	Smart lock keeps your device unlocked when it's safe with you. This is possible, by recognizing signals like when your device is in your pocket or near your home.
Device admin apps	Find my device	On / Off Allow Find My Device to lock or erase a lost device.
SIM card lock	Lock SIM card	This feature if turned On, will lock the SIM card and will require a PIN to use the phone.
Encryption and credentials	Encryption	Encrypt phone (Phone is encrypted by default)
Credential Storage	Storage type	Hardware-backed
Trusted credentials	Display trusted CA certificates	If tapped, it will show all the trusted CA certificates
Clear credentials	Remove all certificates	Remove all the contents (Cancel or OK)
Advanced	Trust agents	Displays the trusted agents
App pinning	App pinning On / Off App pinning allows you to keep the current app in view until you unpin it. This feature can be used, for example, to let a trusted friend play specific game.	

Accounts

In this menu is where you can add any Google, Facebook, Twitter, Exchange, personal email or Google Duo accounts.

Accounts for owner	Lists all the accounts previously setup from the user for this device.
Add account	Tapping the plus letter, the system will let you add an account. You can add Gmail, Facebook, Twitter, Exchange, personal emails or Duo accounts.
Automatically sync app data	On / On Let apps refresh data automatically (Default is On)

Google

Manage your Google Account	You can change your settings for the Google app, including settings for voice search, past searches, SafeSearch, and notifications. Some Google app settings are based on your device settings, like dark theme.
Covid-19 support	To turn on Covid-19 Exposure Notifications, add first an available region
Services on this device	Shows all the services on the device such as Ads, Autofill, Backup, Devices & Sharing, Find My Device, Mobile data & Messaging, Parental controls, Set up & restore, and Settings for Google apps.

Languages & Input	Languages		Choose the language or languages that you want your device to use	
	Keyboards	On-Screen keyboard	Gboard and Google voice typing. Here you can configure your keyboard and Google voice typing. You can also add more keyboards by typing the Add button.	
		Physical keyboard	You can connect a physical keyboard	
	Advanced	Tools	Spell checker	Use spell checker On / Off
			Spell Checker	Ask Languages and choose the default spell checker.
Autofill service			Use Google autofill services	
Personal dictionary			You can add any words in the user dictionary	
Pointer speed			You can modify the speed of any pointer when using a bluetooth mouse.	
Text-to-speech output		Preferred engine	Google TTS services Speech Services by Google	
		Language	Which language to use for the TTS service	
		Speech rate	Choose the speed of speech	
		Pitch	Choose the pitch of speech	
Multiple users		Multiple users	On / Off You can share your phone by adding new users. Each user has a personal space on your phone for custom Home screens, accounts, apps, settings, and more.	
System update		System update	When tapped, the system will check if there is any system update available for your device. It will display the version of your software, the date of the last Android security update and the last successful check for update.	

Gestures	Quickly open camera		To quickly open camera, press the power button twice. Works from any screen.
	System navigation	Gesture or 3-button navigation	Choose which type of navigation you want to have to operate your device. There are two options: Gesture Navigation or 3-button navigation. (Default is 3-button navigation)
Date & Time	Prevent ringing	Vibrate or Mute	On / Off Turn On prevent ringing and choose Vibrate or Mute to stop the device from ringing.
	Power Menu	Show device controls	On / Off Turn On to access controls for connected devices, hold the Power button.
	Use network-provided time		On / Off Turn On for the device to obtain the date & time automatically
	Use network-provided time zone		On / Off Turn On for the device to obtain the Time zone automatically
Backup	Time format	Use locale default	On / Off Use the region to display the local time format
		Use 24-hour format	On / Off Turn On if you want the time to be displayed in 24-hour format
		Backup up to Google Drive	On / Off If turned On, Device will backup app data, calendar, call history, contacts, device settings, photos
Advanced	Reset options	Reset Wi-Fi, mobile & Bluetooth	If tapped "RESET SETTINGS" the device will reset all network settings, including: Wi-Fi, Mobile data and Bluetooth.
		Reset app preferences	If tapped "RESET APPS" the device will reset all preferences for disabled apps, disabled app notifications, default applications for actions, background data restrictions for apps and any permission restrictions. But you will not lose any app data.
		Erase all data (Factory reset)	If tapped "Erase all data" the device will erase all data from the phone's internal storage, including: Your Google account, System and app data and settings, Downloaded apps, Music, Photos, Other user data.



About phone

Device name	The device name shows the name of the phone as its knows in the market. In this case is Schok Volt SV55.	
Phone number	The phone number tied to the SIM card is displayed on this section	
Help & Guide	The phone quick guide will be displayed on this section	
Emergency information	In this section you can add your name, address, blood type, allergies, medications, organ donor, medical notes. Also, you can add an emergency contact..	
Legal information	By tapping on any of the following topics, the device will show the legal information such as patents and trademarks included in the system:	
	Third-party licenses Google legal Google Play system update licenses System WebView licenses Wallpapers	
SIM status	Network	The device will display the current cellular carrier.
	Phone number on SIM	The device will display the phone number paired with the SIM card.
	Mobile network state	The device will display the current network state. Connected when the SIM card and device is connected to the network.
	Service state	The device will display if the SIM card is in service.
	Signal strength	It will show in dBm the signal strength of the device versus the network
	Mobile voice network type	The device will display if its connected to 3G or 4G
	Mobile data network type	The device will display if its connected to a 3G or a 4G network


Device Unlock		The device is network locked. To inquire about your device's unlock eligibility, please get in touch with your cellular carrier, or tap CONTINUE on the display.
Model	Model name	The device name shows the name of the phone as its knows in the market. In this case is Schok Volt SV55.
	Serial number	Shows the device serial number.
	Hardware version	Shows the device hardware version.
IMEI		Shows the device IMEI number
FCC ID		Shows the device FCC ID
Android Version	Android Version	Shows the device Android version
	Android security update	Shows the device Android security update
	Google Play system update	Shows the device Google Play system update
	Baseband version	Shows the device baseband version
	Kernel version	Shows the device Kernel version
	Build number	Shows the device build number
IP address		Shows the device IP address
Wi-Fi MAC address		To see the Wi-Fi MAC Address please choose the current connected Wi-Fi network. (Device will create a randomized MAC address)
Device Wi-Fi MAC address		Shows the device real MAC address
Bluetooth address		Shows the device Bluetooth address
Up time		Shows the time that the device has been on since last restart
Build number		Shows the device IP address

Firmware update

NOTE:

- Backup all your information prior to do a firmware update.
- Make sure the device is powered on with a fully charged battery.
- Never turn off the device during the firmware update.
- During the updating period, the device will reboot TWO times. Do not operate the device until the update is completed

 1. From the Home screen, Swipe up to reveal all your  **Apps** > then find and tap on  **Settings**.
2. From  **Settings**, scroll down to  **System**.
3. Tap  **Advanced** >  **System update**
4. Tap  **Check for update**
5. If there is a firmware update, click **Update**

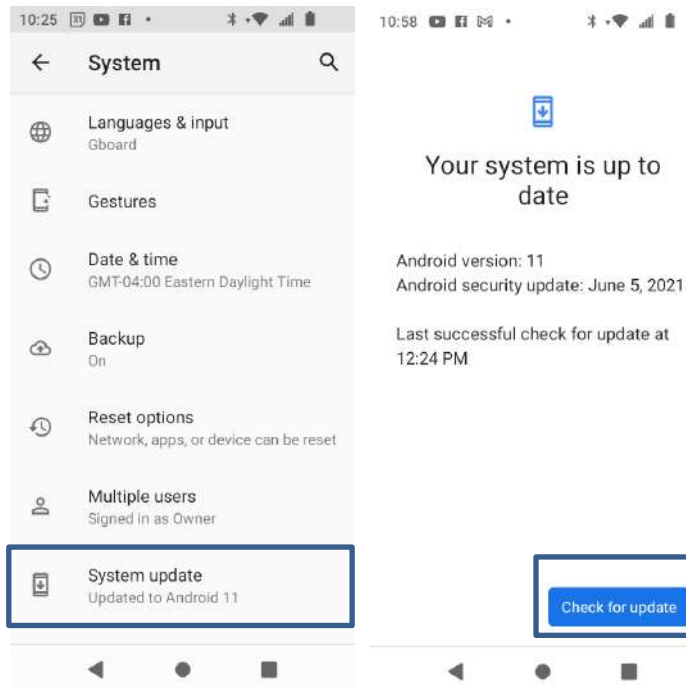

NEED SOME HELP?

Just log in at **assurancewireless.com** where you can find answers to your FAQs, check your account, change your settings, add money to your account, and much more.

You can also connect with us on **Facebook** or call **1-888-321-5880**.

©2021 Schok LLC. All rights reserved. SV5520210801ENG