 


**cusimax**

**Hot Plate**

**Instruction Manual**

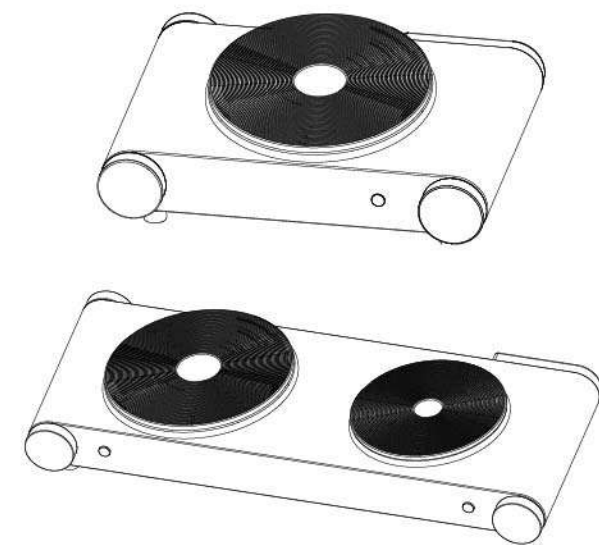

CMHP-B101 & CMHP-B201

**CONTENTS**

Cusimax recommends safety first .....	1-2
Know your Cusimax product.....	3
Operating your Cusimax product .....	4
Care & cleaning .....	5

**Cusimax Recommends Safety First**

At Cusimax we are very safety conscious. We design and manufacture consumer products with the safety of you, our valued customer, foremost in mind. In addition we ask that you exercise a degree of care when using any electrical appliance and adhere to the following precautions.

READ ALL INSTRUCTIONS BEFORE USE AND SAVE FOR FUTURE REFERENCE.

- Read the manual carefully before using the appliance.
- Remove and safely discard any packaging material and promotional labels before using the appliance for the first time.
- To eliminate a choking hazard for young children, remove and safely discard the protective cover fitted to the power plug of this appliance.
- The appliance operates at very high temperatures. Extreme caution should be exercised during operation. Do not touch hot surfaces.
- The temperature of accessible surfaces will be high when the appliance is operating and for some time of use.
- The appliance is not intended to be operated by means of an external timer or separate remote control system.
- Do not use under curtains or near flammable items. Keep clear of walls for good circulation and to prevent heat damage.
- Always use the appliance on a dry, level, heat resistant surface.
- Do not let the power cord hang over the edge of a table or counter, or touch hot surfaces or become knotted.
- Do not place this appliance on or near a hot gas or electric stove, or where it could touch a heated appliance.
- Do not place metallic objects such as knives, forks, spoons and lids on the appliance surface as they can become very hot.
- Always turn off at the power outlet and then remove plug before attempting to move the appliance or when not in use or when storing or cleaning.
- Keep the appliance clean. Follow the cleaning instructions provided in this book.

**IMPORTANT SAFEGUARDS FOR ALL ELECTRICAL APPLIANCES**

- Fully unwind the power cord before use.
- To protect against electric shock do not immerse the power cord, power plug or appliance in water or any other liquid.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- It is recommended to regularly inspect the appliance. To avoid a hazard do not use

**Cusimax Recommends Safety First**

the appliance if power cord, power plug or appliance becomes damaged in any way. Return appliance to the nearest authorized service facility for examination, repair or adjustment.

- This appliance is for household use only. Do not use this appliance for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors. Misuse may cause injury.
- Warning! Always keep in mind that the appliance, after being switched off will continue to radiate residual heat.
- Warning! Do not use the appliance within reach of young children.
- For first time operation, there will be some smoke or smell. It is normal.

 
 
**Know your Cusimax Product**

1. Temperature and power control knob
2. ON/OFF Heating indicator
3. Cast iron plate

Specifications:

Model	CMHP-B101
Power supply	120V 60Hz
Power	1500W

Model	CMHP-B201
Power supply	120V 60Hz
Power	900W+900W

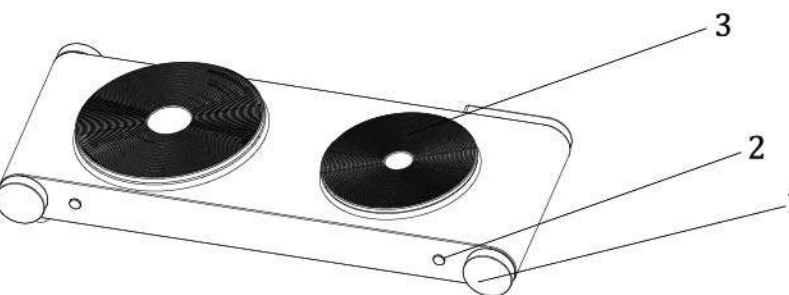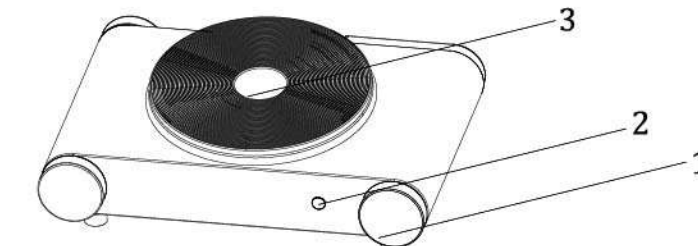

**Operating your Cusimax Product**

**BEFORE FIRST USE**

1. Remove and safely discard any packaging material and promotional labels before using the appliance for the first time.
2. Wipe the appliance with a soft damp cloth and dry thoroughly.
3. Place the appliance on a dry, level heat resistant surface.
4. Completely unwind power cord and insert power cord into a 120V power outlet. Switch on at the power point.
5. Place a saucepan, in which the food will be cooked, on the appliance.
6. Select the desired temperature setting using the temperature control knob.

The temperature settings are adjustable and can be changed at any time during the cooking.

**NOTE:**

The "heating" indicator light will illuminate when the appliance is preheating and cooking. The heating light may cycle on and off during operation. This cycling is normal and indicates that the correct temperature is being maintained.

**NOTE:**

When turned on for the first time, the appliance may give off vapours for up to 15 minutes. This is due to the protective substances on the heating elements. There is no need for concern and the vapours will dissipate with use.

**NOTE:**

To achieve optimum performance, ensure the diameter of the cooking pot or pan is no larger than the diameter of the appliance.

To switch the appliance off, turn the temperature control knob to the OFF position and turn the power off at the power outlet and unplug power cord.

**WARNING!**

Fully unwind power cord before use. Do not allow power cord to come in contact with the appliance. Do not move the appliance until it is completely cooled down.

**WARNING!**

Always keep in mind that the appliance will continue to radiate residual heat after being switched off.

**WARNING!**

For more efficient performance it is recommended to use a lid when boiling water.

**Care & Cleaning**

**BEFORE CLEANING**

Before cleaning, turn the temperature control knob to the OFF position, turn off at the power outlet and then unplug. Ensure the appliance has completely cooled down before cleaning.

**CLEANING**

- To clean the heating surface, wipe with a damp cloth. A multi purpose spray cleaner may be used.
- If necessary, the exterior of the unit may be wiped with a slightly damp cloth using a mild detergent.
- Do not use abrasives, harsh cleaning solutions or metal scourer pads as continued use will scratch the appliance and make subsequent cleaning more difficult.

**STORAGE**

- Before storage, turn the temperature control knob to the OFF position, turn off at the power outlet and then unplug.
- Ensure the appliance is completely cooled, clean and dry. Store the appliance upright on the bench or in a convenient cupboard.
- Do not place anything on top of the appliance during storage.

**WARNING!**

Do not immerse the appliance or power cord and plug in water or any other liquid.