

OVENTE®

NON-STICK ELECTRIC

SANDWICH MAKER

GPS401 SERIES



Before use, please read this manual thoroughly and save for future reference.

ovente.com

NON-STICK ELECTRIC SANDWICH MAKER

GPS401 SERIES

TABLE OF CONTENTS

IMPORTANT SAFEGUARDS	3
PARTS & FEATURES	5
USING YOUR SANDWICH MAKER	6
CARE & MAINTENANCE	7



IMPORTANT SAFEGUARDS

When using this Sandwich Maker, basic safety precautions should always be followed, including:

- ❗ Before connecting the appliance, check whether the voltage indicated at the bottom of the sandwich maker corresponds to the local mains voltage.
- ❗ DO NOT operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or has been damaged in any manner. If the mains cord is damaged, please contact Customer Support on **1-855-926-2626** immediately.
- ❗ To protect against electrical hazards, DO NOT immerse the cord, plugs, or the appliance itself in water or other liquids.
- ❗ DO NOT let the cord hang over the edge of a table or counter, and do not let it touch hot surfaces.
- ❗ Regularly check the mains cord to see whether it is still in a safe condition.
- ❗ Do not operate high-voltage appliance on the same circuit overload.
- ❗ Turn the switch off before connecting or disconnecting the plug from the power outlet.
- ❗ Unplug from outlet when not in use and before cleaning.
- ❗ Do not place on or near hot gas, an electric burner, or in a heated oven.
- ❗ This sandwich maker should always be used on a dry, level, heat-resistant surface.
- ❗ Close supervision is necessary when the appliance is used near children.
- ❗ This appliance is not intended to be used by persons (including children) with reduced physical, sensory and mental capabilities. This appliance is not for persons with a lack of experience and knowledge, unless they have been given supervision or instructions concerning the use of the appliance by a person responsible for their safety.
- ❗ The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- ❗ This appliance is not intended for deep frying. Do not pour oil or grease on the non-stick plates, as it may cause fire damage.



IMPORTANT SAFEGUARDS

When using this Sandwich Maker, basic safety precautions should always be followed, including:

- ❗ DO NOT touch hot surfaces. Use handles.
- ❗ DO NOT move the unit when it is still hot.
- ❗ Extreme caution must be used when moving an appliance containing hot food.
- ❗ When in use, keep the sandwich maker away from flammable materials, including furniture and curtains.
- ❗ Do not attempt to dislodge food when the appliance is still plugged into the wall outlet.
- ❗ DO NOT leave unattended while in use.
- ❗ The sandwich maker is not intended to be operated with an external timer or separate remote-control system.
- ❗ Do not use outdoors or for purposes other than intended use.
- ❗ **CAUTION:** This appliance generates heat during use. Proper precautions must be taken to prevent the risk of burns, fires, or other damage to property caused by touching the appliance while in use or during cooling.

POLARIZED PLUG: This appliance has a polarized plug (one blade is wider than the other). This plug is intended to fit into a polarized outlet only. If the plug does not fit fully into the outlet, reverse the plug and try again. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

CAUTION: A short power-supply cord is provided to reduce the risk of personal injury resulting from becoming entangled in or tripping over a longer cord. Extensions are available from local hardware stores and may be used to make the cord longer. If an extension cord is required, special care and caution are necessary: (1) The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, (2) the extension cord should be a grounding 3-wire cord, and (3) the extension cord should be arranged, so that it will not drape over the countertop or tabletop where it can be pulled by children or tripped over unintentionally.



PARTS & FEATURES



INDICATOR LIGHTS

Red light means unit is powered on; green light lets you know plates are ready for use

750-WATT HEATING ELEMENT

For fast and easy sandwich-making



COOL-TOUCH HANDLE

Secures grip and protects hand from heat or injuries

NON-STICK PLATES

Make mouth-watering sandwiches at any time of the day

ANTI-SKID FEET

Provide extra safety and stability



USING YOUR SANDWICH MAKER

WARNING: DURING COOKING, ONLY TOUCH THE COOL-TOUCH HANDLES.

NOTE: On first use, you may notice smoke. This is normal due to the initial heating of the internal components.

- 1** Wipe the non-stick cooking plates with a damp cloth or sponge.
- 2** When you first plug in the sandwich maker, the red light will illuminate to let you know the unit is on. Once the green light illuminates, the sandwich maker is ready for use. Note that during cooking, the green indicator light will cycle on and off to maintain the correct temperature.
- 3** For a crispy, golden-brown sandwich spread a thin layer of butter or margarine on the outward-facing slices.
- 4** Lay one buttered slice facing downwards on the lower cooking plate. Add your filling and cover with the second slice of bread with the buttered side facing the upper cooking plate. Note: Although there is room for two sandwiches, you can toast only one sandwich if needed.

- 5** For optimal results, the filling should be placed well within the sandwich slices.
- 6** Lower the upper cooking plate carefully onto the bread until the sandwich maker is tightly clamped.
- 7** After 2-3 minutes lift the cool-touch handle to check whether the toasted sandwich is sufficiently brown. The cooking time required to obtain crisp, golden-brown sandwiches depends on the type of bread, fillings, and your taste.
- 8** Once cooked, use a non-metallic utensil to remove the toasted sandwich. Do not use sharp or abrasive kitchen utensils to cut your sandwich while it is on the non-stick plates.
- 9** After use, unplug the sandwich maker from the wall outlet, and allow it to cool completely before cleaning or storing.



CARE & MAINTENANCE

- After use, unplug the sandwich maker from the wall outlet and allow it to cool completely.
- Wipe the cooking plates with a sponge or cloth dampened in warm, soapy water.
- For stubborn grease, apply a small amount of cooking oil and leave it on for several minutes. Remove with a paper towel. Wipe non-stick plates with a damp cloth.
- Do not use abrasive or metal utensils.
- Wipe exterior surfaces with a damp cloth.
- Do not immerse the appliance in water or any other liquids.



ELECTRICAL REQUIREMENTS

Voltage: 120V

Hertz: 60Hz

Wattage: 750W



OVENTE WARRANTY

LIMITED ONE (1) YEAR WARRANTY

At Ovente, we aim to make your life easier by producing top-quality housewares, designed with you in mind. We have pledged to uphold all our offerings to the highest standards, and we back all our sandwich makers with a one-(1) year warranty from the date of purchase from an authorized retailer. This warranty covers defects in workmanship and materials. It does not include damage due to abuse, misuse, commercial use, accidents or natural wear and tear. In case of replacement, shipping and handling fees may apply.

LIMITATIONS

The warranty stated above is the only warranty applicable to this product. Other expressed or implied warranties are hereby disclaimed. No verbal or written information given by the Manufacturer, its agents or employees shall create a guarantee or in any way increase the scope and duration of this warranty. Repair or replacement as provided under this warranty is the exclusive remedy of the consumer. The manufacturer shall not be liable for incidental or consequential damages resulting from the use of this product. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited to the applicable warranty period set forth above except to the extent prohibited by law. Proof of purchase may be required to validate the order. Promotional items may not be covered under any warranty. Consumer rights may vary from state to state.

For product support email support@ovente.com or call **1-855-926-2626**.

Visit us at ovente.com



[Facebook.com/ovente](https://www.facebook.com/ovente)



[@oventeTweets](https://twitter.com/oventeTweets)



[@Ovente](https://www.instagram.com/Ovente)



[youtube.com/ovente](https://www.youtube.com/ovente)

ovente.com