



onnTM



Universal Remote
Model: ONB13AV004

PRODUCT GUIDE

Table of Contents

Introduction	2
Battery Installation.....	3
Care and Maintenance	3
Button Functions	4
Programming Your Remote	6
Direct Code Entry	6
Auto Code Search	8
Controlling Combo Devices	9
Master Volume Feature	10
Reset to Factory Settings.....	11
Troubleshooting	12
FCC Statement.....	13
Remote Code Section	14

Congratulations on your purchase of the ONN Universal Remote. This remote is capable of operating thousands of audio/video devices including TVs, DVD players, cable, satellite receivers, and more!

IMPORTANT:
SAVE THIS MANUAL AND CODE LIST FOR FUTURE REFERENCE

QR Code

Scan the QR code to view our helpful demonstration video for programming your ONN remote.



Scan this to view remote
setup video

Mira a ver el video de
instalación remota

<http://www.myonnremote.com>

Battery Installation

Your universal remote requires two (2) AAA Alkaline batteries (not included).

To Install the Batteries:

1. Remove the battery compartment cover by sliding the cover down.
2. Match the (+) and (-) marks on the batteries to the (+) and (-) marks inside the battery compartment, then insert two (2) AAA Alkaline batteries. Be sure to use fresh batteries.
3. Slide the battery compartment cover back into place.

Note: *If your remote stops operating properly, replace the batteries with new ones. The remote will retain the codes you have programmed for up to 10 minutes after the batteries are removed.*

Battery Precautions:

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (Ni-Cd, Ni-MH, etc.) batteries.
- Always remove old, weak or worn-out batteries promptly and recycle or dispose of them in accordance with local and national regulations.

Care and Maintenance

- Keep the remote away from moisture. If it gets wet, dry it immediately.
- Use and store the remote at normal household temperatures.
- Use a soft, damp cloth to clean the remote.
- If the remote is not going to be used for a long period of time, remove the batteries from the remote.
- Handle the remote with care.

Button Functions

TV, CBL/SAT, DVD/ VCR, AUX
Selects the device to control.

Red Indicator Light when any button is pressed.

ON•OFF Turns the device On or Off.

EXIT Exits On-Screen Menus.

 
MUTE Turns off the TV sound while the picture remains. In **SHIFT** mode **OK** Selects menu items for the device you are controlling.

INPUT Selects the video inputs from available viewing sources.

NUMBERS
Enter numbers for direct channel selection.

DOT: Used to select digital channels, for example: 4.1, 9.2.

RECORD, PLAY STOP, REWIND, FAST FORWARD, PAUSE

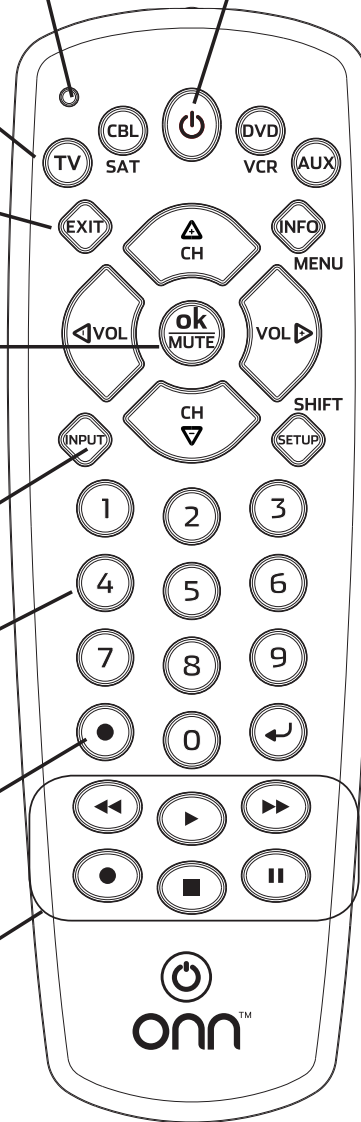

Button Functions, cont.

INFO displays/selects on-screen channel information, etc.

MENU displays the Menu on the TV and other devices. Use the **SHIFT** button to access this feature.

VOLUME UP/DOWN

Changes the volume level of the device, normally the TV.

CHANNEL UP/DOWN

Changes the channels. In **SHIFT** mode, these buttons navigate on-screen cursors and are used to make selections.

SETUP button is used to program the remote.

SHIFT is the alternative function of this button.

 
Use the **SHIFT** button to access the Menu and Navigation functions of your device. To enter the **SHIFT** mode press this button once.

To exit the shift mode, press the **SHIFT** button again.

NOTE: The red indicator light will blink when the remote is in SHIFT mode.

ENTER

For some TV models, the **ENTER** button is used after a channel number is entered to immediately change to the selected channel.

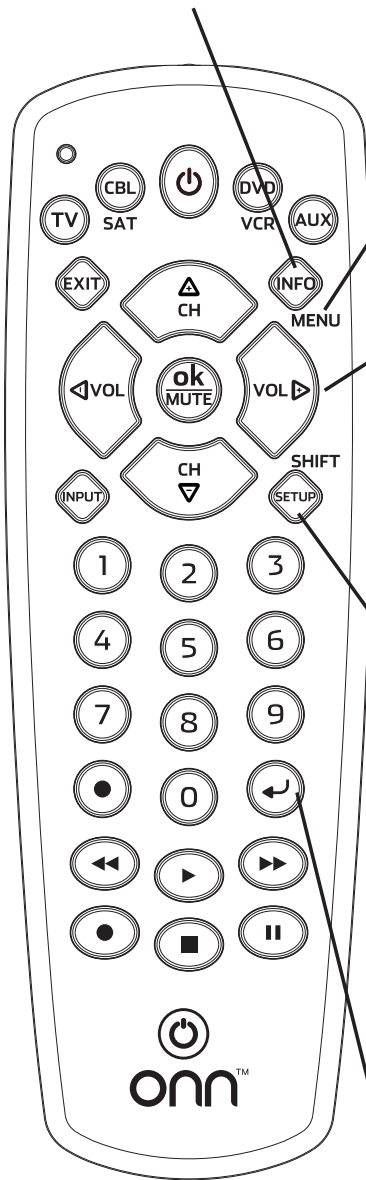


Programming Your Remote

Your ONN universal remote control is designed to control up to 4 different audio/video devices such as TV, DVD, VCR, satellite, cable and audio using only one remote. To use this remote, you will need to program it to control the devices of your choice. There are two ways to program the remote - direct code entry or auto code search.

Direct Code Entry (Recommended)

 1. Locate the Remote Code List provided in this manual. Find the **DEVICE CATEGORY** you wish to program (for example **TV, DVD, SAT, AUX**) and then find the **BRAND** of that device. Circle all the codes under that brand. Example: For a GE TV, locate the TV code section then circle all of the GE TV codes.
2. Manually turn on the device you wish to control.
3. Press and hold the **SETUP** button until the red indicator light stays on (approximately 2 seconds) and then release the **SETUP** button.
4. Press and release the desired device button on the remote (**TV, DVD, SAT, AUX**). The red indicator will blink once and then remain on.
5. Enter the first 4-digit code previously found in the code list using the number buttons on the remote. If the code entered is a valid code, the red indicator light will turn off. If the code entered is not a valid code, the red indicator light will flash and remain on allowing you to re-enter the code.

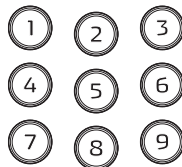

Note: If no buttons are pressed for 35 seconds, the remote will exit the *SETUP* mode and you will have to

Programming Your Remote

start over.



6. Point the remote at the device. Press the **POWER** button—if the device turns off, no further programming is required for that device. If the device does not turn off, return to step 3 and use the next code found in the code list. Continue this process until a code for your device is found.

To view a helpful demonstration video for programming your ONN remote, see QR code on page 2 of this manual.

Programming Notes

- If your device does not respond to the remote after trying all codes listed or your brand is not listed in the code list, use the Auto Code Search method to program your remote.
- Sometimes the first code that “works” with your device may operate only a few functions of your device. There may be another code in the code list that performs more functions. Try other codes from the code list for more functionality.
- You can use any device button to control other devices in your home entertainment system. For example, you can use the **AUX** device button to control an audio receiver or a DVD, VCR, satellite, etc.
- For combination devices, you may have to enter a code for each device. For example, for a VCR/DVD device, you may have to enter a code for the DVD under the **DVD** button and enter a code for the VCR using a different device button on the remote.
- Write down the code found to operate your device for future reference.

Auto Code Search

The Auto Code Search searches automatically through all of the codes stored in this remote. Read all the following steps prior to starting the auto search as you will need to be prepared to lock-in the proper code when found.



1. Manually turn on the device you wish to control.
2. Press and hold the **SETUP** button until the red indicator light stays on (approximately 4 seconds) and then release the button.
3. Press and release the desired device button on the remote (**TV**, **DVD**, **SAT**, **AUX**). The red indicator will blink once and then remain on.
4. Point the remote at the device and press and release the **POWER** button (for TV) or **PLAY** button (for DVD, VCR, etc.) to start the search. The red indicator will flash (approximately every 2 seconds) as the remote searches. **Note:** *The remote must be pointed at the device for the duration of this search.*
5. Place your finger on the **#1** button so you are prepared to lock-in the code.
6. When the device shuts off or begins playing, press the **#1** button to lock-in the code. The red indicator light will turn off. **Note:** *You have approximately two seconds after the device shuts off or begins playing to lock-in the code.*
7. Point the remote at the device and check to see if the remote operates the device as desired. If it does, no further programming is required for that device. If it does not, return to step 2 and start the auto search.

Programming Your Remote

To view a helpful demonstration video for programming your ONN remote, see QR code on page 2 of this manual.

Programming Notes

- This process may take several minutes as the remote contains many codes.
- The **SETUP** button can be used during the search process to reverse the direction of the search of the remote codes. For example, if you miss the code for your device and the remote is continuing to search (as indicated by the blinking red light), press the **SETUP** button and the code search will reverse direction and return to the code.
- When using the Auto Code Search programming method, the device button corresponding to the type of device you want to control must be selected (for example, the **TV** device button must be selected in step 3 if you want to control a TV, the **DVD/VCR** device button for a DVD player, etc.)
- Sometimes the first code that “works” with your device may operate only a few functions of your device. There may be another code in the code list that performs more functions. Continue the code search as directed above until the best code is found.

Controlling Combo Devices

Some Combo devices (e.g. TV/VCR, TV/DVD, DVD/VCR, etc.) will require you to setup up two different Mode buttons to control both parts of the Combo device. For example, if you have a TV/DVD Combo, you might need to set up one code under the **TV** button to control the TV part AND a separate code (under any other Mode button) to control the DVD part.

Master Volume Feature

Master Volume Feature

The Master Volume Feature allows you to select a single device (TV or audio receiver) that the volume control always controls. For example, the remote can be in TV mode while the volume buttons control the volume on your audio receiver instead of your TV.

Enabling the Master Volume Feature



1. Press and hold the **SETUP** button until the red indicator stays on (approximately 4 seconds) and then release the button.



2. Press and release desired device button (**TV, DVD, SAT, AUX**) for the device you wish to setup to control the volume.



3. Press and release the **MUTE** button.



4. Press and release the **VOL +** button. The red indicator will blink twice and then go off.

To test the feature put the remote in another mode such as the TV mode if you programmed the audio receiver to be the Master Volume Device. Point the remote at the audio receiver, press and hold either the **VOL +** or the **VOL -** button. If the audio receiver volume changes then the remote is programmed correctly. If the TV volume changes and not the audio receiver, you will have to repeat the steps above and test again.

Disabling the Master Volume Feature



1. Press and hold the **SETUP** button until the red indicator stays on (approximately 4 seconds) and then release the button.

Master Volume Feature, cont.



2. Press and release the device button (**TV, DVD, SAT, AUX**) which is programmed to control the Master Volume Feature.



3. Press and release the **MUTE** button.



4. Press and release the **VOL - button**. The red indicator light will blink twice and go off.

To make sure the Master Volume Feature is disabled, put the remote in TV mode if you programmed the audio receiver to be the Master Volume Device. Point the remote at the TV and press a volume button. If the volume changes on the TV, the feature is disabled. If the volume on the audio receiver changes, and not the TV, you will have to repeat the steps above and test again.

Reset to Factory Settings



1. Press and hold the **SETUP** button until the red indicator stays on (approximately 4 seconds) and then release the button.



2. Press and release the **OK** button.



3. Press and release the number **#0** button. The red indicator light will flash twice.

Remote does not operate your device.

- Make sure the batteries are fresh and installed correctly.
- Aim the remote directly at your device, and make sure that there are no obstructions between the remote and device.
- Make sure you select the appropriate device on the remote you wish to control, for example, TV for TV, DVD for DVD, etc.
- Try programming the remote with a different code. See Direct Code Entry section.
- Remote may not be compatible with your device.

Remote does not operate some features of your device.

- Sometimes a particular code might operate a few features but not all. Try programming remote with a different code from the code list. See Direct Code Entry section.
- Remote may not be able to operate all features of your device or button names may be different than that of your original remotes.

Remote Code is not available for a combo device (e.g. TV/VCR, TV/DVD)

- Some Combo devices (e.g. TV/VCR, TV/DVD, DVD/VCR, etc.) will require you to set up two different Mode buttons to control both parts of the Combo device. For example, if you have a TV/DVD Combo, you might need to set up one code under the TV button to control the TV part AND a separate code (under any other Mode button) to control the DVD part.

BEFORE YOU RETURN THIS PRODUCT TO THE STORE, PLEASE VISIT THE WEBSITE www.myOnnRemote.com FOR FURTHER ASSISTANCE; Or, contact us at 1-800-654-8483 between 7:30AM—5:00PM CST.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Distributed by Wal-Mart Stores, Inc.
Bentonville, AR 72716
MADE IN CHINA

Code List – Lista de Códigos

TV

Abex0401, 4021
Acer3291, 4001
Acme0471
ADA0461
ADC1431, 1661
Admiral0371, 0681, 1441, 1661, 4991
Advent3261, 0581
.....0631, 0871, 2131, 2891, 4931
Adventura0151
Aiko1011, 4321
Aiwa0411
.....0651, 0931, 1411, 4731, 4801
Akai3215
.....3111, 0331, 0351, 0781, 1901
.....4141, 4151, 4461, 5141, 5171
Alleron1711
Amark1441
Ames1275
Amtron2191
AMW0645, 0825
ANABA1375
Anam National0271
.....1941, 2151, 2191, 2331, 3431
AOC0001, 0011, 0251, 0391
.....0611, 0891, 1221, 4221, 4261
Apex0045, 0191, 0245
.....0375, 0425, 0431, 0671, 1025
.....1105, 1891, 2911, 4841, 5111
Archer1441
Aspect1271
Audiovox2191, 2451, 4031, 4051, 4521
Aurora3061
Axion0881
Bang&Olufsen1591
Belcor0001
Bell&Howell1261, 1421, 1661, 1691, 3421
BenQ1741, 1761, 2221, 3871
Bluesky3511, 3921
Bradford2191
Broksonic0211, 0371, 0851, 1631, 4951
Brokwood0001
Candle0001, 0151, 0961, 1221
Capehart0391, 4221
CCE3721
Celebrity1901
Celera0191
Centrios1361
Centurion1221
Cetomer0001, 1631, 2901, 2961
Cetronic1941
Changhong0191, 1891, 4841
Chimei3071
Cineral3511, 4321
Citizen0001, 0351
.....0371, 0961, 1011, 1221, 1311
.....1381, 1661, 1941, 2191, 4321
Clairtone0011
Classic0191, 1891, 1941, 4841
CLP0061
CLP Classic0001, 0041, 0161
COBY3351, 2511, 2521
.....2531, 2541, 2551, 5091, 5191
Color voice1431
Coloryme0001, 1221, 1431
Concerto0001, 1221
Concierge1771, 1781
Contec0011, 1911, 1941, 2191
Cornea1471
Craig1941, 2191
Crosley1961
Crown1941, 2191
CTX1441
Curtis Mathes5351
.....5371, 0001, 0261, 0351, 1191
.....1221, 1261, 1311, 1421, 1551
.....1661, 1691, 3421, 4011, 4941
CXC1941, 2191
Cybervision3511
Daewoo0001
.....0221, 0251, 0591, 0721, 0831
.....0971, 1011, 1081, 1221, 1231
.....1251, 1431, 1501, 1521, 1551
.....1561, 1941, 2181, 4321, 4681
Daytron0001, 1221

Dell0981
.....1401, 2041, 3441, 3601, 3811
Diamond Vision1211
.....1611, 2001, 4771, 4811
Digimate4301
Digistar0381, 0581, 0871, 1061
.....2451, 2471, 3811, 3881, 3901
Dimensia1421, 1691, 3421
Dish Network5491
Disney0371, 1101
Distar3231
Dukane1271, 1981
Dumont0001, 1771, 1781
Durabrand0371, 0861
.....0921, 1381, 2271, 2291, 5121
Dynasty1941
Dynex5311, 3141, 3161, 0371, 2891
Electroband0001, 1901
Electrohome0001, 1221, 1921, 2151, 3431
Elektra1661
Element5361, 5411, 2401, 4111
Elite Video0901
Emerson5341, 2761, 5221, 5231, 0001
.....0021, 0031, 0041, 0271, 0281
.....0291, 0371, 0441, 0451, 0691
.....0701, 0731, 0741, 0851, 0931
.....1221, 1251, 1261, 1371, 1381
.....1451, 1461, 1551, 1611, 1631
.....1681, 1701, 1711, 1931, 1941
.....2171, 2191, 2361, 3451, 4701
.....4731, 4751, 4761, 4831, 4911
Envision5401
.....0001, 0071, 1221, 3751, 4261
ESA1381
Fisher1161, 1261
.....1531, 1581, 1911, 3481, 5001
Fluid2401, 2421, 2431
Fujitsu0901, 1711, 4241, 4341
Funai0701, 0931, 1381
.....1711, 1941, 2191, 4731, 4761
Futuretec1941, 2191
Gateway0501
GE0001, 0041, 0051, 0141
.....0261, 0361, 0791, 0811, 1221
.....1421, 1691, 1921, 1951, 2111
.....2151, 3421, 3431, 4011, 4921
Gibralter0001, 1771, 1781
Gold Star0001, 0251, 0611, 0761, 0931
.....1181, 1221, 1501, 1911, 4731
GPX4701
Gradiente0001, 2291, 3661, 3951, 3961
Grundy1711, 2191
Guestvision1861
Gvision4871
Haier0671
.....0861, 0921, 1741, 3831, 4851
Hallmark0001, 1221
Hannspree5451, 5461, 5291
Harvard2191
Hauppauge3791
Hello Kitty5391
HP3491, 4881
Hisense5331, 4671, 0671
.....2081, 2211, 3671, 4381, 4391
Hitachi3341
.....0001, 0841, 0931, 1041, 1221
.....1271, 1341, 1371, 1481, 1661
.....1721, 1751, 1801, 1911, 1981
.....2051, 3621, 4121, 4331, 4731
Hyundai4651
ILO3215
.....1141, 1381, 1971, 2391, 2481
.....3691, 4231, 5031, 5141, 5171
IMA2191
Infinity1171, 1961, 4791
InFocus3421
Initial2481, 4231, 4821, 5031, 5041
Insignia0371, 0581, 0701, 0871
.....0921, 1241, 1381, 2241, 2271
.....2891, 2921, 3761, 3841, 4371
.....4721, 4761, 5051, 5061, 5181
Integra1841
Inteq1771, 1781
ISymphony3041
Janeil0151

Code List – Lista de Códigos

JBL.....	1961		2771, 2781, 2791, 5151, 5161
JC Penney.....	0001, 0051, 0251, 0261	Oncommand.....	1861, 3991
.....	0351, 0791, 0811, 0961, 1221	Onking.....	1941
.....	1311, 1421, 1451, 1691, 1911	Onkyo.....	3101
.....	1921, 1951, 3421, 3451, 4011	Onwa.....	1941, 2191
JCB.....	1901	Optimus.....	0201, 0401, 1571
Jensen.....	0001, 1221, 2271		1881, 3551, 4021, 4691, 5201
JVC.....	5281, 0311, 0481, 0771, 0901	Optoma.....	3121, 2441
.....	0941, 1281, 1481, 1801, 1911	Optonica.....	0341, 1441
.....	2381, 2751, 4121, 4201, 5071	Orion.....	0281, 0371, 1771, 1781
Kawasaki.....	4741	Panasonic National.....	5481, 3381, 3401
Kawasho.....	0001, 1221, 1901		0051, 0201, 0951, 1091, 1491
Kaypani.....	0391, 4221		1571, 1651, 1831, 1881, 1961
KEC.....	2191, 1941		2151, 2711, 2801, 3431, 3551
Kenwood.....	0001, 1221		3771, 4691, 4781, 4861, 5201
KLH.....	0191	Philco.....	0001, 0251, 0321, 0961
Kloss Novabeam.....	0151, 1021		1021, 1221, 1671, 1801, 1961
Kogi.....	4871		2151, 2321, 2941, 3431, 3931
Konka.....	5441, 0471, 0521	Philips.....	3031, 3131, 3151
.....	0751, 1241, 1671, 2121, 2191		3171, 3371, 3391, 0181, 0001
.....	2241, 2371, 4621, 4901, 4971		0161, 0321, 0421, 0541, 0661
KTV.....	0011, 1491, 1681, 1941, 2191		0701, 0791, 0911, 0961, 1021
Kurazai.....	1661		1151, 1171, 1381, 1391, 1601
KVWorld.....	2931		1741, 1801, 1961, 2151, 2321
Lasonic.....	1211, 1611, 4811		3431, 3541, 3591, 3861, 3911
Legend.....	0581		3971, 3981, 4191, 4761, 4791
LG.....	5501, 5511	Philips Magnavox.....	0181, 0681, 0911, 1171
.....	3001, 3021, 3091, 3221, 3281		1961, 2321, 3591, 4791, 4991
.....	3311, 5271, 0001, 0131, 0251	Pilot.....	0001
.....	0611, 0761, 0931, 1181, 1221	Pioneer.....	0001, 0401, 1221, 1371
.....	1471, 1501, 1911, 3811, 4731		1511, 1841, 1981, 4021, 4661
Liquidvideo.....	0881, 1111	PIVA.....	2411, 5021
Lodgenet.....	1421	Planar.....	4251
.....	1661, 1691, 2091, 3421, 4091	Polaroid.....	0191
Loewe.....	1871, 1961		0581, 1241, 2081, 2271, 2311
Logik.....	1421, 1661, 1691, 3421		2401, 2451, 3741, 4631, 5131
Luce.....	0301	Portland.....	0001
Luxman.....	0001, 1221		0251, 1011, 1081, 1221, 1551
Lxi.....	0001, 0261, 0811	Precision.....	0621
.....	0931, 1221, 1261, 1311, 1421	Price Club.....	0351
.....	1691, 1961, 3421, 4011, 4731	Prima.....	3011
Magnasonic.....	1711		0381, 0581, 0631, 0871, 2451
Magnavox.....	0001	Princeton Graphics.....	1301, 1441
.....	0321, 0681, 0701, 0961, 1021	Prism.....	0051
.....	1171, 1221, 1801, 1961, 2321	Proscan.....	0261, 0811, 1421
.....	4191, 4641, 4761, 4791, 4991		1691, 2061, 2301, 3421, 4011
Majestic.....	1421, 1661, 1691, 3421	Proton.....	0001, 0391, 0641, 1221
Manhattan.....	5381		1911, 2231, 4211, 4221, 4271
Marantz.....	0001, 1221, 1841, 1961	Protron.....	3731, 4301
Maxent.....	3361, 0501	Proview.....	2401, 2421, 2431
Medion.....	1101, 1141, 2351	Pulsar.....	0001, 1771, 1781
Megatron.....	0001, 1221, 1271	Pyle.....	3331
Mei.....	0011	Quasar.....	0051, 0201, 1091
Memorex.....	0001, 0211, 0371, 1161, 1221		1491, 1571, 1831, 1881, 1961
.....	1261, 1421, 1631, 1661, 1691		2151, 3431, 3551, 4691, 5201
.....	1711, 2401, 3421, 4251, 5001	Radio Shack.....	0001, 0141, 0341, 0931
MGA.....	0001, 0251, 1221		1001, 1221, 1261, 1421, 1571
.....	1581, 1711, 1801, 1911, 1921		1691, 1701, 1911, 1941, 2111
Midland.....	0051, 0261		2191, 3421, 3551, 4731, 4921
.....	0811, 1691, 1771, 1781, 4011	RCA.....	0001, 0051, 0091
Mintek.....	4231		0141, 0251, 0261, 0361, 0551
Minutz.....	1951		0811, 0891, 1001, 1131, 1221
Misakai.....	1381		1331, 1371, 1421, 1521, 1691
Mitsubishi.....	3271, 0001, 0251, 1221, 1581		1851, 1921, 2011, 2061, 2111
.....	1711, 1801, 1811, 1921, 2701		2151, 2251, 2301, 2851, 2951
Monivision.....	0491		3421, 3431, 3571, 4011, 4921
Montgomery Ward.....	1421, 1661, 1691, 3421	Realistic.....	0001, 0141
Moteva.....	1261, 3661		0341, 0931, 1001, 1221, 1261
Motorola.....	1441, 2151, 3431		1421, 1571, 1691, 1701, 1911
MTC.....	0001		1941, 2191, 3421, 3551, 4731
.....	0011, 0251, 0351, 1221, 1311	Rhapsody.....	0011
Multitech.....	2191	Runco.....	1771, 1781, 1841
Multivision.....	0081	Sampo.....	0001, 0121
Myron&Davis.....	2101		0391, 0501, 1221, 1911, 4221
NAD.....	0001, 0401, 1221, 1311, 4021	Samsung.....	5471, 5521, 3301, 3321
NEC.....	0001, 0251, 0341, 1221, 1431		2741, 2961, 0331, 0001, 0101
.....	1801, 1841, 2151, 3431, 4401		0251, 0261, 0351, 0531, 0571
Net TV.....	0121, 0501		0711, 0781, 1191, 1221, 1311
Nexstech.....	0871, 1201		1501, 1911, 2071, 2141, 2721
Nikei.....	1941		3471, 3561, 4011, 4941, 4961
Nikko.....	0001, 1011, 1221, 4321	Samsux.....	1221
Niko.....	3581	Samtron.....	0351
Norcent.....	0511, 0671, 2181	Sansui.....	5551, 0211, 0371, 1631
NTC.....	1011, 4321	Santeca.....	0171
Olevia.....	3081, 2431	Sanyo.....	2981, 2991, 3051

Code List – Lista de Códigos

.....5251, 2871, 5241, 5261, 0001
.....0801, 1051, 1161, 1261, 1531
.....1581, 1911, 2881, 3481, 5001
Sceptre.....3521, 4071, 5111
Scotch.....0001, 1221
Scott.....3215, 0001, 0021, 0281
.....1221, 1711, 1941, 2191, 5141
Sears.....0001, 0211, 0261
.....0351, 0701, 0811, 1221, 1261
.....1291, 1311, 1381, 1421, 1531
.....1581, 1691, 1711, 1911, 1961
.....2021, 3421, 3481, 4011, 4761
Selectron.....2471, 2491, 2501
Semp.....3611
Sharp.....5421, 3181, 3191, 3201
.....2731, 0001, 0341, 0461, 0681
.....0691, 1221, 1291, 1441, 2031
.....2201, 2261, 3461, 4751, 4991
Shogun.....0001
Signature.....1421, 1661, 1691, 2171, 3421
Signet.....2811, 2821, 2861
Simpson.....0961
Sonic.....0011
Sony.....5321
.....1071, 1641, 1731, 1901, 2161
.....2741, 3531, 3891, 4101, 4981
Soundesign.....0001
.....0961, 1221, 1711, 1941, 2191
Sova.....3631, 4431
Soyo.....4611, 5101
Spectra.....1611
Spectravisión.....2341
Squareview.....1381
SSS.....0001, 1941, 2191
Star Sight.....0061
Starlite.....2191
Superscan.....0701, 1291, 2021, 4761
Supersonic.....0241, 4701
Supra.....0001, 1991
Supremacy.....0151
Supreme.....1901
SVA.....0671, 2101
Sylvania.....0001, 0321
.....0371, 0701, 0931, 0961, 1021
.....1221, 1381, 1801, 1821, 1961
.....2321, 2761, 3701, 4731, 4761
Symphonic.....0021, 0701
.....0931, 1381, 2191, 4731, 4761
Syntax.....2431, 5151, 5161
Tandy.....1441
Tatung.....1141, 1741, 2151, 3431
TCL.....2851, 0091, 1421
.....1691, 1851, 2011, 2061, 2111
.....2301, 3421, 3431, 3571, 4921
Technics.....0051
Techwood.....0001, 0051, 1221
Teknika.....0001, 0151, 0251
.....0351, 0961, 1011, 1221, 1311
.....1421, 1571, 1661, 1691, 1711
.....1911, 1941, 2191, 3421, 3551
Telecaption.....0821
Telerent.....1421, 1661, 1691, 3421
Tera.....0001, 0641
Tevion.....1141
TMK.....0001, 1221
Toshiba.....5531, 3211, 1311
.....0211, 0231, 0341, 0351, 0821
.....1121, 1191, 1261, 1351, 1541
.....1571, 1621, 1801, 1841, 1911
.....2691, 3551, 4891, 4941, 5081
Trutech.....2461, 3821, 4551
Universal.....0791, 1951
Venturer.....3781
Victor.....1481, 4121
Videocon.....4061
Vidtech.....0001, 0251, 1221
View Sonic.....5301
.....0501, 1981, 3751, 3801, 4281
Viking.....0151
Viore.....5431, 2831, 2841, 3681
Visteon.....3411
Vizio.....5561, 5571, 5581, 5591
.....5601, 5611, 5621, 5631, 5641
.....5651, 5661, 5671, 5681, 5691
.....5701, 5711, 2901, 1471, 1741

.....2021, 3651, 3741, 3851, 4081
Wards.....0001, 0021
.....0251, 0321, 0341, 0791, 0961
.....1021, 1221, 1321, 1421, 1661
.....1691, 1711, 1951, 1961, 3421
Westinghouse.....3241, 3251
.....0111, 1901, 2281, 3711, 3851
White-Westinghouse.....0601, 0931, 1081
.....1501, 1521, 1551, 3641, 4731
Yamaha.....0001, 0251, 1221, 1571, 3551
Zenith.....5281, 5271, 0001
.....0061, 0131, 0371, 0681, 0691
.....0931, 0941, 0991, 1011, 1031
.....1081, 1171, 1181, 1191, 1221
.....1251, 1271, 1471, 1631, 1661
.....1751, 1771, 1781, 1791, 2171
.....2291, 3501, 4201, 4321, 4731
.....4751, 4791, 4941, 4991, 5211

TV/VCR COMBOS

Admiral.....0302, 1682
Aiwa.....0312, 0432, 0752
Akai.....0032, 1592
Broksonic.....(0851 & 0462)
.....(0851 & 0892), 0942, 1631
Curtis mathes.....0652, 1522
Daewoo.....(1081 & 0762)
.....(1251 & 0082), 1092
Diamond vision.....(2001 & 0422)
Durabrand.....(2291 & 0182)
Electrohome.....0032, 1592
Emerson.....(0851 & 0462), (0851 & 0892)
.....(1251 & 0082), 0032, 0192
.....0232, 0312, 0332, 0432, 0942
.....1092, 1172, 1432, 1592, 1631
Fisher.....0602, 1712
Funai.....0312, 0432
GE.....1152, 1482
Goldstar.....0312, 0432, 1181
Gradiente.....(2291 & 0182)
Hitachi.....0312, 0432
Infinity.....0622
JVC.....0452, 4201
LG.....0312, 0432, 1181
LXI.....0312, 0432
Magnavox.....0302, 0412, 0622, 1682
Memorex.....0602, 0942, 1631, 1712
Mitsubishi.....0032, 1592
Optimus.....1722, 0122, 1062, 1762
Panasonic.....1722, 0122, 1062, 1762
Philips.....0412, 0622
Philips Magnavox.....0302, 0622, 1682
Quasar.....1722, 0122, 1062
Radio Shack.....0312, 0432, 1152, 1482
RCA.....(1691 & 0242), 1152, 1482
Realistic.....0312, 0432
Samsung.....0652, 1522, 1535, 2141
Sansui.....0942, 1631
Sanyo.....0602, 1712
Sharp.....1682, 0302, 0332
Sony.....0972, 1292, 1652
Sylvania.....0312, 0432
Symphonic.....0312, 0432
Toshiba.....0652, 0902, 1402, 1522
White westinghouse.....(1081 & 0762)
.....0312, 0432
Zenith.....(1081 & 0762)
.....(1251 & 0082), (2291 & 0182)
.....0302, 0312, 0332, 0432
.....0452, 0622, 0652, 0942, 1092
.....1181, 1522, 1631, 1682, 4201

TV/DVD COMBOS

Advent.....1515
Akai.....(3215 & 3285), 4461
Apex.....(0191 & 1245)
Audiovox.....(4031 & 4481)
.....(4051 & 1135), 4521
Axion.....(0881 & 1335)
Broksonic.....0015, 0211
Coby.....3475
Changhong.....(0191 & 1245)

Code List – Lista de Códigos

Classic.....(0191 & 1245)
 Daewoo.....(1561 & 0065)
 Diamond Vision.....(1611 & 0855)
(2001 & 0422), 0455
 Durabrand.....(2291 & 3885), 0205
 Emerson.....0412, 0445
 Funai.....0412, 0445
 GPX.....0135
 Haier.....0315, 1257
 Ilo.....(3215 & 3285), 1945
 Initial.....0994, 1945, 2735
 Insignia.....(1241 & 0285), (2891 & 3335)
0412, 0445, 2805, 2815, 3305
 JVC.....1685, 3015
 Kawasaki.....0325
 Konka.....1425, 1605
 Lasonic.....(1611 & 0855)
 Liquidvideo.....(0881 & 1335)
 Magnavox.....0412, 0445
 Maxent.....3361
 Memorex.....0015, 0211
 Nexxtech.....1201, 2005
 Panasonic.....0552, 0595, 1195, 1346, 3401
 Philips.....3371
(1381 & 0702), 0412, 0445, 0795
 Piva.....1805
 Samsung.....1535
 Sansui.....0015, 0211
 Sears.....0015, 0211
 Sharp.....(1291 & 3115)
 Sova.....(3631 & 4431)
 Supersonic.....0135
 Sylvania.....(1381 & 0702), 0412, 0445
 Symphonic.....0412, 0445
 Toshiba.....0015, 0115, 0211, 3075
 Trutech.....4551
 Westinghouse.....(3711 & 2865)

SAT/CBL

ABC.....0004, 0074, 0134
0464, 0594, 0784, 0794, 1034
 ADB.....1933
 Adelphia.....1404
2023, 0514, 0574, 0744, 1523
 ADTH.....1393
 Akai.....1323, 1303
 Allegro.....0054, 0114
 Americast.....1594, 0254
 Amino.....2063
 Amplica.....0103
 Antronix.....0264, 0334
 Archer.....0264, 0334, 0404, 0474, 1044
 Arris Gateway.....1274
 Astro.....1273
 AT&T.....1963
2093, 0844, 1272, 0514, 0674
 Bell.....1963, 5491, 2073, 0173
2083, 2103, 0433, 0903, 0984
 Bell Expressvu.....0073
0173, 0343, 0433, 0903
 Bell South.....0254
 Bendbroadband.....1244
 Bright House.....1394, 0694
 Buckeye.....1233
 Cable One.....1384
 Cabletenna.....0264
 Cableview.....0264
 Cablevision.....1434
1404, 0514, 0654, 0694, 1523
 Cebride.....1374
 Century.....0474, 1723
 Cetomer.....0723, 1153
 Channel Master.....0283, 0393, 0483
 Chapparral.....0573, 0653
 Charter.....1304, 1404, 0824
1523, 0514, 0664, 0684, 0714
 Charter Communications.....1274
 Charter Digital.....1264
 Cheyenne.....0653
 Cisco.....1444
1444, 1464, 1474, 1484, 1494
 Citizen.....0474
 Clearmax.....1024

Cogeco.....1294, 0514
 Color Voice.....0534, 0604
 Comcast.....1544, 1554
1283, 0824, 1404, 0514, 0684
 Comtronics.....0014, 0084
 Contec.....0144, 1054
 Coolsat.....1733, 1913
 Cox.....0514, 0824
1324, 1334, 1364, 1404, 1444
1454, 1464, 1474, 1484, 1494
 Cox Digital Cable.....1404, 0514, 0734
 Digital Music Express.....0044
 Digital Stream.....1203, 1194
 Digiwav.....1953, 1923
 Director.....0514
 DirecTV.....1504, 1514, 0203, 0213, 0233
0303, 0333, 0353, 0443, 0523
0553, 0623, 0703, 0793, 0803
0853, 0873, 0983, 0993, 1073
1083, 1093, 1103, 1113, 1123
1133, 1143, 1153, 1163, 1173
1183, 1193, 1353, 1443, 1513
1533, 1773, 1783, 1793, 1893
 Dish Network.....2073
2083, 1613, 0073, 0173, 0343
0403, 0433, 0493, 0603, 0783
0903, 1003, 1013, 1023, 1033
1043, 1053, 1063, 1503, 1683
 Dishpro.....0073
0403, 0493, 0603, 1503, 1683
 Drake.....0023, 0293, 0733
 Dreambox.....2113, 2123, 1553
 DX Antenna.....0383, 0753
 Eastern.....0214
 Echosphere.....0433
 Echostar.....0903
0073, 0173, 0343, 0403, 0433
0493, 0603, 0783, 1503, 1683
 Emtec.....4411, 4441
 Entone.....2043, 2053
 Everquest.....0014
 Expressvu.....0073, 0173, 0343, 0433, 0903
 Fortec Star.....0083
0183, 0263, 0373, 0463, 0473
 Fujitsu.....0673, 0763
 Garrard.....0474
 GC Electronics.....0334
 GE.....0384, 0874, 0333
0543, 0643, 0723, 0793, 0803
0873, 1073, 1083, 1373, 1383
 Gemini.....0123, 0204, 0344
 General Instrument(GI).....0013
0004, 0093, 0163
0193, 0323, 0453, 0633, 0833
0893, 0953, 0963, 1573, 1583
1603, 0044, 0074, 0314, 0374
0464, 0514, 0594, 0634, 0784
0794, 0814, 0884, 0894, 1034
 Geosatpro.....2003
 Globecast.....0003, 1004
 Go Video.....1883
 Gold Star.....0924
 Hamlin.....0414, 0464, 0484, 0544, 0784
 Hitachi.....0594, 0303
0443, 0523, 0623, 1103, 1153
 HNS.....1153
 Hughes.....0593, 1343
 Hughes Network.....0303
0443, 0523, 0563, 0593
0703, 1093, 1103, 1153, 1343
 Humax.....1505
 Illico.....1354, 1404, 1523
 ILO.....1035
 Insight.....1284, 1314
 Jasco.....0474
 Jerrold.....0004, 0074, 0194
0314, 0324, 0444, 0464, 0514
0594, 0784, 0794, 0814, 1034
 JVC.....1145, 0433, 0783
 Kenwood.....0413
 Knology.....1424, 1344, 1284, 1564
 LG.....2925, 0303, 1103, 1153
 Liteon.....1035
 Luxor.....0503, 1653
 Macom.....0613

Code List – Lista de Códigos

Magnavox.....	0203, 0533, 0783, 0094, 1064	Star Sight.....	0244, 0863
Mediacom.....	1284, 1584	Star Trak.....	0423, 0184
Medion.....	1035	Starchoice.....	0163
Memorex.....	0154		0323, 0633, 1563, 1573, 1583
Microyal.....	1423	Starcom.....	0314, 0464, 0784
Mitsubishi.....	1534, 0303, 0443	Stargate.....	0014
.....	0523, 0623, 1093, 1103, 1153	STS.....	0383, 0583, 0663
Motorola.....	0453, 1573	Super Guide.....	0513
.....	1593, 1603, 1863, 0004, 0074	Sylvania.....	1903
.....	0194, 0314, 0374, 0514, 0594	Tandy.....	0434, 0974
.....	0634, 0684, 0794, 0814, 0824	Televue.....	0014
.....	0844, 0884, 0894, 0914, 1034	Telsat.....	1723
Movie Time.....	0224, 1074	Telus.....	1943
Moxi.....	1274	Texscan.....	0364
NEOSTAT.....	1413	Thomson.....	0803, 1753
NET.....	1543, 1713	Time Warner.....	1254, 1424, 1404
Norstat.....	0683		0514, 0694, 0724, 0824, 1523
Novaplex.....	0834, 0854	Tivax.....	1293
Nowtv.....	1473	Tivo.....	0092, 0252, 0353, 0982, 1052
NSC.....	0224, 1074		1162, 1492, 1502, 1505, 1542
OAK.....	0144, 0354, 1054		1745, 1223, 0704, 0754, 0764
Omegasat.....	1983	Tocom.....	0004
Onkyo.....	1243		0444, 0504, 0634, 0934, 1034
Orasat.....	1973	Toshiba.....	1735, 1745
Orion.....	1523		3325, 0154, 0063, 0143, 0303
Pace.....	1363		0443, 0523, 0623, 0713, 0743
.....	0053, 0133, 1593, 1673, 0904		0973, 1093, 1103, 1133, 1153
Panasonic.....	0545, 1272, 0304, 0394, 0954	TV86.....	0224, 1074
.....	1014, 0213, 0223, 0243, 1353	TVA.....	1703
Pansat.....	1993, 0033, 0883, 1403	Ultimate TV.....	0333, 0553, 0873
Paragon.....	0154, 0284	Uniden.....	0693, 0823, 0863
Philips.....	0092, 0252, 1052, 1163, 1492	Unika.....	0264, 0334, 0474
.....	1502, 1542, 0094, 0344, 0424	United.....	1663
.....	0474, 0494, 0554, 1064, 1084	United Cable.....	0464, 0784
.....	1094, 1104, 0203, 0303, 0443	Universal.....	0054, 0264, 0334
.....	0523, 0533, 0623, 0703, 0783		0404, 0474, 0564, 0944, 1044
.....	1093, 1103, 1153, 1633, 1753	Verizon.....	2033, 1404, 0514
Philips Magnavox.....	0203		1283, 0174, 0684, 0824, 1523
.....	0533, 0783, 0064, 0104	Video Cipher II.....	0023
Pinnacle.....	1493, 1823, 1833	Video Tech.....	0454
Pioneer.....	1404, 0532, 0985, 2855	Videotron.....	1404, 1574, 1523
.....	1853, 0024, 0274, 0614, 0924	Videoway.....	0034
Polaroid.....	4561	Viewsat.....	1803
Primestar.....	1253, 0323, 0633, 1563, 1573	Viewstar.....	0084, 0094
Prosat.....	0813, 1333		0224, 0434, 0974, 1064, 1074
Proscan.....	0333, 0643, 0723	Visionetics.....	1483
.....	0803, 0873, 1073, 1083, 1383	Visiontec.....	1693
Pulsar.....	0154	Voom.....	2971
Quasar.....	0154	V-Tech.....	1813
Radio Shack.....	0064, 0104, 0114, 0964	Web TV.....	0113, 0783
RCA.....	0244, 0394	Zenith.....	0114
.....	0474, 1014, 1083, 0333, 0363		0154, 0474, 0524, 0584, 0624
.....	0543, 0643, 0723, 0793, 0803		0644, 0023, 0123, 0153, 0253
.....	0873, 1073, 1373, 1383, 1873		0293, 0313, 0733, 1173, 1593
RCN.....	0514, 0824	Zenith Network.....	0254
Realistic.....	0334, 0273, 0843, 1643	Zinwell.....	2013
Regal.....	0544		
Regency.....	0214		
Rembrandt.....	0594		
ReplayTV.....	1272		
Rogers.....	1344, 0174, 1523		
Runco.....	0154		
Samsonic.....	1433		
Samsung.....	4451, 1213		
.....	0043, 0233, 0853, 1113, 1123		
.....	1143, 1763, 0014, 0024, 0924		
Scientific Atlanta.....	1324		
.....	1334, 1364, 1404, 1414, 1444		
.....	1454, 1464, 1474, 1484, 1494		
.....	0124, 0134, 0164, 0234, 0294		
.....	0574, 0714, 0804, 0834, 0864		
Seiki.....	1263		
Sharp.....	1853		
Shaw.....	1524, 0514		
Sierra I II III.....	0653		
Signal.....	0014		
Signature.....	0594		
Sky Network.....	0053, 0133, 1363, 1593, 1673		
.....	1743, 1753, 1773, 1783, 1793		
SL Marx.....	0014		
Sonic Blue.....	1272		
Sony.....	1162, 1302, 2865, 2985, 3055		
.....	0113, 0353, 0553, 0773, 1893		
Sprucer.....	0394, 1014		
Standard.....	0364		

HDTV Set Top Boxes

Apex.....	2911
Charter.....	0174, 1523
Directv Models.....	0703
.....	0983, 1443, 1513, 1533
GE HDSTB.....	0874
Go Video Hdt100.....	2631
Hitachi 61hdx98b.....	1103, 2661
Hughes Hird E8.....	0303
.....	1103, 1153, 2591, 2651, 2661
Hughes Htl HD.....	0303
.....	1103, 1153, 2591, 2651, 2661
Insignia.....	2921
KWorld SA290QE.....	2931
LG HTL HD.....	0303
.....	1103, 1153, 2591, 2651, 2661
LG LSS 3200a.....	0303
.....	1103, 1153, 2591, 2651, 2661
Mitsubishi SRHD 400.....	1103, 2661
Mitsubishi SRHD 500.....	1103, 2661
Mitsubishi SR HD5.....	1103, 2661
Motorola HDT100.....	2601
Motorola HRT100.....	2601
Philco TB100HH9.....	2941
Philips DSHD800R.....	1103, 2661
Pioneer SH-D505.....	2561

Code List – Lista de Códigos

Proscan PSHD105.....	0803, 2581
RCA DTA800B1	2951
RCA DTC-100.....	0803, 2581
RCA DTC-210.....	0803, 2581
RCA HD65W20.....	2611
RCA PSHD105	0803, 2581
Samsung SIR-T165.....	1143, 2671
Samsung SIR-T351	1143, 2671
Samsung SIR-TS160.....	1123, 2621
Samsung SIR-TS360.....	1123, 2621
Sony SATHD100.....	2681
Sony SATHD200.....	2681
Sony SATHD300.....	2681
Sylvania 6900DTD	2641, 2941
Toshiba DST3100	0303, 1153, 2591, 2651
Toshiba DW65x91	0303, 1153, 2591, 2651
Toshiba DST3000	0303, 1153, 2591
Venturer	1164
Zenith DTV1080.....	1173, 2571
Zenith HDSTAT420	1173, 2571
Zenith HDSTAT520	1173, 2571

DTV

Access HD.....	1234
Airlink101.....	1174
Alpha Digital	1234
Amtc.....	1234
Apex.....	1114
Artec.....	1224
Cadence.....	1214
Channel Master	1204
Coship	1214
Digitalstream.....	1194
Dish Network.....	0073
Echostar	0073
GE.....	0874
Goodmind.....	0874
Gridlink	1144
iNet Access	1234
Insignia	1184
Kingbox	1224
Lasonic	1144
Magnavox.....	2941
Microgem	1154
Philco.....	2941
RCA.....	1083
Sansonic.....	1144
Skardin	1174
Sunkey.....	1134
Tivax	1234
Venturer	1164
Winegard	1164
Zenith.....	1184
Zentech	1174
Zinwell	1124

STREAMING MEDIA

Apple	5541, 4295
Asus.....	1684
Dlink.....	1614, 1724
HP.....	1624
Iomega.....	1744
LG.....	1714
Magnavox.....	1704
Netgear.....	1604, 4475
Niveus.....	1634
Philips	1654
Popcorn Hour.....	1664
RCA.....	1694
Roku	4395, 4355
Seagate	1674
Sling Media.....	1644
Vudu.....	1734
WD.....	4345, 4265
X-Box.....	4245, 4255

DVD

Acesonic.....	3135
Advent	1515
Afreedy	0575
Aiwa.....	0035, 0195, 0235, 3285, 3565

Allegro	3725, 3885
Ames.....	1275
AMW.....	0645, 0825
Anaba	1375
Apex	0045, 0245
.....	0375, 0425, 0615, 0845, 0945
.....	0965, 1025, 1065, 1105, 1235
.....	1245, 1405, 1675, 3825, 3895
Aspire	1695
Astar	3525
A-Trend.....	1585
Audiovox.....	1335, 3585, 3625
Axion.....	1335
B&K	0885
Blaupunkt	1105, 3895
Blue Sky	0215, 0245, 3155
Blue-Ray.....	2795, 2965, 2995, 3315
.....	3685, 3695, 3705, 3885, 3905
Body Sonic.....	0575
Bose	4455, 4465, 1475, 3955
Boss	1325
Boston Acoustic.....	3245
Britania	3675
Broksonic	0015, 0695, 1525, 3495
Cavs	2745
Centrios.....	0955, 1335, 1365, 1755, 1765
.....	1785, 1795, 1845, 1875, 1895
.....	1935, 1975, 2015, 3945, 3965
Cetomer.....	0075
Changhong.....	1245
Cine Vision.....	0205, 3885
Citech	2065
Citizen.....	2065
Classic.....	1245, 1275, 1965
COBY	3835, 0085, 0245, 0475
.....	0485, 0505, 0675, 0835, 2085
.....	2095, 2105, 2115, 2125, 2155
.....	2655, 2885, 3145, 3265, 3475
Concept.....	1105, 3895
Conia	0245
Contel	2915
Criterion.....	0785
Curtis International	0835, 1005, 2885
Curtis Mathes	4185
Cyber Home	4155, 0175, 1015, 1585, 2045
Cyber Vision	3595
Cytron.....	0435, 0725
Daewoo	0065, 0345, 1115, 1285, 1385
Denon	1075, 1265, 3315
Denzel.....	0765
Desay.....	0865
Diamond Vision	0465, 0855, 1485, 3755
Digitrex	0245
Digix.....	0125
Disney.....	0795, 3815
Drive	3535
Dual	0005
.....	0435, 0515, 0605, 0765, 3035
Durabrand.....	0205, 0435, 0955, 2685, 2935
.....	3515, 3525, 3885, 3925, 3945
DVD 2000	1415
Dynex	4235, 2455, 2255
Eigervision	3615
Element.....	4305
Elta.....	0055, 0235
Emerson	0205, 0445, 0795, 0975
.....	1185, 3745, 3815, 3855, 3885
Esa.....	0515
Escient.....	2845
Fahrenheit.....	1205
Fisher	0405, 2645
Funai.....	0445, 0795, 3745, 3815, 3855
GE.....	0915, 1105, 3895
Gold Star	0205, 3885
Go Video.....	0075, 0255
.....	0415, 0565, 0665, 1275
.....	1315, 1385, 1495, 3735, 3765
GPX	0135, 0495
Gradiente.....	0215, 3635, 3645
Greenhill	1105, 3895
Haaz	1295, 1465
Haier	0315, 4015
Harman/Kardon	0585
HD-DVD.....	2795, 2835, 2965
.....	3685, 3695, 3705, 3885, 3905

Code List – Lista de Códigos

Helios.....	2275		2855, 2895, 2975, 3695, 3905
Hello Kitty	4195	Piva.....	1805
Hitachi	0025, 0545	Polaroid	0185
.....	0565, 0765, 0925, 1245, 3765		0685, 1025, 1485, 3665, 3825
Hiteker	0245	Polk Audio	4105
Humax	1505		0735, 0745, 1395, 2945, 3795
ILO	1035, 1945, 3285	Portland	0235, 1545
Infinity	0575	Power Acoustik	3575
Initial	1105, 1945, 2735, 3895, 3935	Proline.....	0215
Insignia	4205	Proscan	0915, 1135
.....	2365, 0975, 0205, 0285, 0445	Prosonic	0485
.....	0725, 1105, 1335, 1945, 2195	Protron.....	0305
.....	2805, 2815, 2915, 3305, 3335	Pyle.....	2515, 1155
.....	3745, 3785, 3815, 3885, 3895	Radio Shack	0955
Integra	1435		0995, 1165, 1645, 2905, 3945
IRT	2885	RCA	2465, 0215
ISymphony	2525		0915, 0955, 1105, 1135, 1165
JBL	0585		1645, 2755, 2905, 3895, 3945
JVC	2385, 2535	Regent.....	1345, 3925
.....	0155, 0395, 0755, 1145, 1685	Reoc	1295
.....	2025, 2945, 3015, 3795, 3805	RIO	0205, 3885
Jwin	0275, 1065, 1655, 3275	RJ Technology	1825, 2715
Kawasaki	0325, 0955, 3945	Rosen	1175, 3035
Kenwood	0935, 1075	Rotel	0395
Kiss	0765	Saba	0995
KLH.....	0375, 0465, 1105, 3895	Sampo	0575
Konka	0285, 1085, 1255, 1425, 1605	Samsung	4125, 2285, 2325, 2345
Koss.....	0215, 0725		2485, 4095, 0075, 0255, 0565
KXD	0085, 2885		1305, 1535, 1725, 2185, 2725
Lasonic	0855, 1295, 2825		2995, 3085, 3555, 3765, 3865
Lenoxx.....	0235, 1345, 3515, 3525	Sansui.....	0015, 0695, 3495
LG	4285, 2335	Sanyo	2495, 0095, 0405, 2205, 2215
.....	2555, 2565, 2635, 0205, 0635		2225, 2235, 2245, 2645, 3945
.....	1565, 2925, 3785, 3885, 3915	Sears	0015, 0445, 3495, 3745
Linn.....	1635, 2955	Seg	0765
Liquid Video.....	1335	Selectron	1855, 1885, 1915
Liteon.....	0805, 1035, 1495, 1575, 1905		1955, 1995, 2035, 2075, 2875
Magnavox	2425, 4105, 0975	Semp	0725
.....	0105, 0295, 0445, 0735, 0745	Sensory Science.....	1495
.....	1045, 1055, 1225, 1395, 2945	Sharp	4115
.....	3025, 3715, 3745, 3795, 3815		4315, 4325, 4335, 2315, 2445
Marantz.....	4105, 0205, 0735, 0745		0555, 0625, 0815, 2795, 3115
.....	1395, 1615, 2945, 3795, 3885	Sherwood	4225, 0225
Maxent.....	1665, 1685, 3015	Shinco	1105, 3895
Medion.....	0435	Shinsonic.....	1105, 3895
.....	0455, 1035, 1325, 1665, 3755	Sonic Blue	0665
Memorex	2375	Sony	4165
.....	0435, 1925, 2755, 3125, 3495		4275, 2305, 0365, 0535, 0715
Meridian	0735, 3795		0725, 0895, 0905, 2165, 2865
Microsoft	0915, 3255		2985, 3055, 3685, 3825, 3995
Microvision	1325	Soundstorm	1155, 1325
Mintek.....	1105, 3895	Sova	3545
Mitsubishi	2585, 1415, 3895	Spectroni	2575
Mustek.....	1275	Sungale.....	0675, 1715
Myron&Davis	1555	Superscan	0445, 3745
NAD	0205, 1625, 3295, 3885	Supersonic	0135
Nakamichi.....	1445	SV2000	0445, 3745
NEC	3885	SVA	0245, 0815
Nesa	1105, 1555, 3895	Sylvania	4215, 2405, 0445
Nexxtech	0125, 0145, 0335, 0515, 0725		0795, 3745, 3815, 3855, 3875
.....	0955, 1025, 1545, 1755, 1765	Symphonic	0445
.....	1785, 1815, 1835, 2005, 2055		0795, 0975, 3745, 3815, 3855
.....	2915, 3505, 3825, 3945, 3965	Tascam	0395
Norcent.....	0305, 0485, 0655, 0835, 1575	TCL	2435
Onkyo	2355	Teac	0025, 0955, 1245, 3885, 3945
.....	2505, 0355, 1435, 3795, 3985	Technics.....	1075
Optimus.....	0025, 1245, 2975	Techwood	1625, 1985, 2945, 3845
Orion.....	0015, 3495	Terapin.....	1705
Oritron.....	0215, 1935	Tevion	0435, 0605
Pacific.....	0435		0725, 0785, 1125, 1295, 1465
Panasonic	4175	Theta Digital	0025, 1245
.....	2395, 2595, 2605, 0165, 0385	Tivo	0985, 1505
.....	0545, 0595, 1075, 1195, 1215	Toshiba	4145, 2295, 2475
.....	2965, 3105, 3775, 3975, 4005		2545, 0015, 0115, 0735, 1735
Philco.....	3605		1745, 2135, 2145, 2175, 2835
Philips	2415		3065, 3075, 3325, 3495, 3795
.....	2615, 2625, 4105, 0745, 0105	Tredex.....	1355
.....	0265, 0445, 0735, 0795, 1045	Trutech.....	1385, 2045, 3655
.....	1055, 1225, 1395, 1615, 2665	United	0955, 3945
.....	2705, 2765, 2775, 2945, 3165	Venturer	0955, 3065, 3945
.....	3705, 3715, 3745, 3795, 3815	Vizio	4135, 4405
Philips Magnavox	4105, 0735, 0745		4415, 4425, 4435, 4445, 2265
.....	1055, 1225, 1615, 2945, 3795	Westinghouse	2865
Pioneer	0025, 0525, 0705, 0875, 0985	Wharfedale	0575, 1455
.....	1245, 1595, 1775, 2675, 2695	White Westinghouse.....	0795, 3815

Code List – Lista de Códigos

X-Box.....4245, 4255, 0915
 Xenius.....0725
 Yamaha.....4105, 0745, 1055, 1075
1095, 1225, 2785, 2945, 3005
 Yamakawa.....0765, 0775, 1865
 Zenith.....0205, 0635, 3785, 3795, 3885

Blu-Ray-DVD

Denon4035
 Dynex4235
 HP.....4085
 Insignia4205, 0975, 2635
 JVC.....2385
 LG.....4285, 2635, 2335
 Magnavox.....2425
 Memorex2375
 Onkyo2355
 Oppo.....4365, 4375, 4385, 4045
 Panasonic4175, 2395
 Philips.....2415
 Pioneer4055
 Samsung4125, 2325, 2345, 4095
 Sharp4115, 2315
 Sherwood4225, 4065
 Sony4165, 4275, 2305
 Sylvania4215, 2405
 TCL.....2435
 Toshiba2295
 Vizio4135, 4025
 Yamaha.....4075

DVD-R

Apex0845
 Aspire1695
 Astar2885
 Broksonic0695
 Centrios1365, 1935, 1975
 Coby2885
 Cyberhome.....1015
 Emerson1612
 Funai.....0412
 Go-Video1275, 1315, 1495
 Hitachi0545, 0925
 Humax1505
 Ilo1035
 Insignia0562
 JVC.....1145, 2025
 KXD2885
 LG.....0562
 Liteon.....0805, 1035, 1495
 Magnavox.....1055, 1225, 3025
 Medion.....1035, 1665
 Memorex1925, 3125
 Mustek.....1275
 Oritron.....1935
 Panasonic.....0545
 Philips.....1055, 1225, 2705, 3165
 Philips-Magnavox.....1055, 1225
 Pioneer0985, 2695, 2855
 Polaroid0185
 RCA0915
 Samsung1305, 4451
 Sanyo0095
 Selectron1955
 Sharp0625
 Sony2865, 2985, 3055
 Sylvania1612, 1672
 Symphonic1612
 Toshiba0682, 1735, 3325
 Trutech.....2045
 Yamaha.....1055, 1225
 Zenith.....0562

DVD/VCR COMBOS

Allegro(3885 & 0182)
 Apex0852, 1025
 Broksonic0015, 0211, 0695
 Cinevision(0205 & 0182)
 Daewoo1385
 Diamond Vision0422, 0455
 Durabrand.....(0205 & 0182)
 Emerson(0702 & 0312)

.....0412, 0432, 0445, 0795
 Fisher.....(0405 & 0472)
 Funai.....(0702 & 0312)
0412, 0432, 0445, 0795
 Go-Video0255
0402, 0415, 0542, 0565, 1385
 Hitachi(0925 & 0432)
 Insignia(0205 & 0182), 0562
 JVC0692, 0755, 1145, 2025
 LG.....0562, 0635
 Liteon.....1905
 Magnavox.....(0105 & 1642)
0342, 0412, 0445, 1045
 Medion.....0422, 0455
 Nexxtech(0486 & 0492)
0852, 0955, 1025, 2055
 Panasonic.....0552, 0595
 Philips.....(0105 & 1642)
0342, 0412, 0445, 1045, 1372
 Pioneer1775, 2695
 Polaroid0852, 1025
 RCA(0915 & 0162)
 Rio(0205 & 0182)
 Samsung0255, 1662, 1725
 Sansui.....0015, 0211, 0695
 Sanyo(0405 & 0472)
 Sears0015, 0211
 Sony0832
 Sylvania(0702 & 0312)
(0702 & 1392), 0312, 0412
0432, 0445, 0795, 1612, 1672
 Symphonic(0702 & 0312)
(1612 & 1392), 0312
0412, 0432, 0445, 0795, 0975
 Techwood1602, 1985
 Toshiba0115, 0682, 0735, 3075
 Trutech.....1385
 White Westinghouse.....(0795 & 0432)
 Zenith.....(0205 & 0182)

VCR

Accele.....0102
 Admiral0302, 1682
 Adventura0992
 Aiko.....0082, 1092
 Aiwa.....0182, 0312, 0432, 0752, 0992
 Akai.....0312
1362, 0032, 0432, 0502, 0582
0712, 0872, 0982, 1212, 1592
 Allegro0182
0452, 0792, 1182, 1732, 4201
 American High.....1112
 Apex0852
 Asha.....0102
 AT & T1272
 Audio Dynamics0012, 0392, 0522, 0532
 Audiovox.....0182
 Beaumark0102
 Bell & Howell0602, 1712
 Broksonic0132, 0211
0322, 0442, 0462, 0572, 0695
0772, 0892, 0942, 1562, 1631
 Calix.....0182
 Candle0012
0022, 0102, 0182, 0882, 1082
 Cannon0162, 0802, 1112
 Canon0162, 1112, 1552
 Capehart.....0792
 Carver0482
 CCE0082, 0362, 0372, 1092
 Cine Vision.....0182, 1732
 Citizen.....0012, 0022, 0082
0102, 0182, 0882, 1082, 1092
 Colortyme.....0012
 Colt0362, 0372
 Craig0102, 0182, 0362, 0372, 0592
 Curtis Mathes0012, 0082
0102, 0162, 0312, 0432, 0482
0652, 0732, 1112, 1472, 1522
 Cybernex0102
 Daewoo0022, 0082, 0762, 0882, 0892
0992, 1082, 1092, 1385, 1472
 DBX0012, 0392

Code List – Lista de Códigos

Denon	0222		0392, 0522, 0532, 0602, 0732
Diamond Vision	0422		0772, 1012, 1122, 1212, 1712
Dimensia	0162	Nexxtech	0486, 0492, 0842, 0852, 2055
Durabrand	0182, 1732	Nikko	0182
Dynatech	0312, 0432, 0992	Noblex	0102
Electrohome	0032, 0182, 1592	Olympus	1112
Electrophonic	0182	Onkyo	1382
Emerson	0032, 0082, 0102, 0182, 0192	Optimus	0102, 0122, 0182, 0302, 0722
.....	0232, 0312, 0322, 0332, 0412		1042, 1062, 1262, 1682, 1722
.....	0432, 0442, 0462, 0602, 0702	Optonica	0102, 0932
.....	0732, 0742, 0752, 0772, 0882	Orion	0322, 0942, 1562, 1631
.....	0892, 0912, 0922, 0942, 0952	Panasonic(National)	0122, 0162, 0552, 1062
.....	0982, 0992, 1012, 1032, 1092		1112, 1262, 1272, 1642, 1722
.....	1102, 1112, 1172, 1192, 1422	Pentax	0012, 0812, 1142
.....	1432, 1562, 1592, 1631, 1712	Philco	0162, 0172, 0482, 1112
Fisher	0012	Philips	1352, 1372, 0092, 0105
.....	0042, 0052, 0472, 0482, 0592		0252, 0342, 0412, 0482, 0622
.....	0602, 1202, 1442, 1712, 2645		0672, 1052, 1112, 1282, 1642
Fuji	0712, 1112	Philips Magnavox	0302, 0482, 0622, 1682
Funai	0312, 0412, 0432, 0702, 0992	Pilot	0182
Garrard	0992	Pioneer	0222, 0392
GE	0102, 0162, 0242, 0612		0522, 0532, 0812, 1242, 2695
.....	1022, 1112, 1152, 1482, 1702	Polaroid	0852
Gold Star	0012, 0182	Portland	0022, 1082
.....	0312, 0432, 0792, 1181, 1632	Proscan	0162, 0642
Go Video	0102, 0255, 0272, 0292, 0402	Protec	0362, 0372
.....	0542, 0662, 1385, 1532, 1692	Pulsar	0792
Gradiente	0182, 0992	Quarter	0602, 1712
Harley-Davidson	0992	Quartz	0602, 1712
Harman/Kardon	0012, 0032, 1592	Quasar	0122, 0162
Harwood	0362, 0372		1062, 1112, 1262, 1642, 1722
Headquarter	0432	Radio Shack	0032, 0042
.....	0512, 0602, 1142, 1212, 1712		0102, 0162, 0182, 0302, 0312
HL-Q	0592		0432, 0502, 0592, 0602, 0722
Hitachi	0312		0932, 0992, 1042, 1112, 1152
.....	0512, 0812, 0925, 1142, 1212		1262, 1482, 1592, 1682, 1712
Infinity	0622	Radix	0182
Insignia	0182, 0562, 1732	Randex	0182
Instant Replay	0312, 0432, 1112	RCA	0062, 0102, 0162
Inteq	0182		0182, 0212, 0242, 0352, 0582
JC Penney	0012, 0102, 0162, 0182		0612, 0642, 0782, 0812, 0915
.....	0392, 0522, 0532, 0602, 0812		1022, 1112, 1132, 1142, 1152
.....	1112, 1142, 1212, 1242, 1712		1222, 1452, 1482, 1572, 1702
JCL	1112	Realistic	0032, 0042, 0102, 0162
Jensen	0812, 1212		0182, 0302, 0312, 0432, 0502
JVC	0012		0592, 0602, 0932, 0992, 1042
.....	0392, 0452, 0522, 0532, 0602		1112, 1262, 1592, 1682, 1712
.....	0692, 1212, 1712, 2025, 4201	ReplayTV	1272
Kenwood	0012, 0392	Ricoh	1252
.....	0522, 0532, 0602, 1212, 1712	Rio	0182, 0282, 1732
KLH	0362, 0372	Runco	0792
Kodak	0182, 1112	Samsung	0102
LG	0312, 0432, 0562, 0792, 1181		0255, 0292, 0502, 0652, 0812
Liteon	1905		0872, 0882, 1522, 1535, 1662
Lloyd	0312, 0432, 0992	Samtron	1692
Logik	0362, 0372	Sanky	0302, 0792, 1682
LXI	0182, 0312, 0432	Sansui	0132, 0211
Magnavox	0105		0322, 0392, 0522, 0532, 0572
.....	0142, 0162, 0172, 0302, 0312		0695, 0942, 1212, 1562, 1631
.....	0342, 0412, 0432, 0482, 0622	Sanyo	0052, 0102
.....	0792, 0862, 1112, 1642, 1682		0472, 0592, 0602, 1072, 1322
Magnin	0102		1332, 1342, 1442, 1712, 2645
Marantz	0012	Scott	0442, 0462, 0882
.....	0392, 0482, 0522, 0532, 0602		0892, 0922, 1032, 1192, 1422
.....	0772, 0802, 1112, 1552, 1712	Sears	0042, 0132, 0182, 0211, 0412
Marta	0182		0482, 0592, 0602, 0812, 1112
Matsushita	1112		1142, 1202, 1242, 1262, 1712
Medion	0422	Sharp	0032
MEI	1112		0302, 0312, 0332, 0432, 0932
Memorex	0052, 0102		0962, 1042, 1082, 1592, 1682
.....	0182, 0302, 0312, 0432, 0482	Shintom	0362, 0372
.....	0502, 0592, 0602, 0792, 0942		0522, 0712, 0812, 1252, 1512
.....	0992, 1112, 1631, 1682, 1712	Shogun	0102
MGA	0032, 0922, 1592	Signature	0312, 0432
MGN Technology	0102	Singer	0362, 0372, 1112
Midland	0612	Sonic Blue	1272
Minolta	0812, 1142	Sony	0072, 0112, 0262, 0382
Mitsubishi	0032, 0202, 0392, 0522		0712, 0822, 0832, 0972, 1006
.....	0532, 0632, 0812, 0922, 1592		1162, 1232, 1252, 1582, 1652
Montgomery Ward	1162, 0302, 0932	STS	0812, 1112, 1142
Motorola	1742, 0302, 1112, 1682	Superscan	0412
MTC	0102, 0312, 0432, 0992	Sylvania	0162, 0312
Multitech	0102, 0312		0412, 0432, 0482, 0702, 0922
.....	0362, 0372, 0432, 0612, 0992		0992, 1112, 1392, 1612, 1672
NEC	0012	Symphonic	0312, 0412

Code List – Lista de Códigos

.....0432, 0702, 0992, 1392, 1612
Tandy0312, 0432, 0602, 1712
Tashiko0182
Tatung1212
Teac0312, 0432, 0992, 1212
Technics1112
Techwood1602
Teknika0182
.....0232, 0312, 0432, 0992, 1112
Tivo1052, 1162
TMK0102, 0732, 1012
Toshiba0042
.....0152, 0482, 0652, 0682, 0812
.....0882, 0902, 0922, 1002, 1032
.....1312, 1402, 1412, 1522, 3075
Totevision0102, 0182
Trutech1385
Unitech0102
Vector Research0012
.....0392, 0522, 0532, 0882
Victor0392, 0522, 0532
Video Concepts0012, 0032
.....0392, 0522, 0532, 0882, 1592
Videosonic0102
Wards0032, 0102, 0162, 0182, 0302
.....0312, 0362, 0372, 0432, 0592
.....0812, 0882, 0932, 0992, 1032
.....1112, 1142, 1462, 1592, 1682
White Westinghouse 0312, 0432, 0702, 0762
XR-10000362, 0372, 0992, 1112
Yamaha0012, 0392, 0522, 0532, 1212
Zenith0082, 0182, 0302, 0312
.....0332, 0392, 0432, 0452, 0512
.....0522, 0532, 0622, 0652, 0662
.....0712, 0762, 0792, 0942, 1072
.....1092, 1181, 1182, 1252, 1522
.....1532, 1631, 1682, 1732, 4201

LASER DISC

Denon0222
Pioneer0222
Proscan0642
RCA0642
Sanyo1072
Sony1006, 1232
Zenith1072, 1232

CD

ADC0517, 1277
Adcom0027, 0777
Aiwa0357, 0966, 0987, 1007
Akai0167, 0377, 0757
Audio Technica0117
California Audio Labs0257
Captronic0527, 1623
Carver0197, 0207, 0317, 0417
Casio0397
Centrios1097
Citizen0277
Coby1287
Curtis Mathes0397
Denon0637
Emerson0777, 1017
Fisher0127, 0217
.....0317, 0327, 0457, 1137, 1157
Genexxa0427, 0577, 1017
Goldstar0687
Harmon Kardon0647, 0797
Hitachi0427
Inkel0787
Insignia1526
JC Penny0397, 0657
JVC0897, 1056, 1107
Kenwood0137, 0367, 0467, 0497
.....0537, 1016, 1027, 1147, 1167
Krell0207
Kyocera0517, 1277
Luxman0227, 0337, 0477, 0587
LXI0397
Magnavox0207, 0737, 0837
Marantz0207, 0437, 0547, 0947
MCS0397, 0657

MGA0797
Mission0207
Mitsubishi0797, 0907
NAD0766, 0827, 1026, 1087
Nakamichi0007, 0877, 1037
NEC0657
Nexxtech0097, 0487, 0536
.....0576, 0607, 0617, 0666, 0727
.....0856, 0887, 0916, 0967, 1217
Nikko0117, 0217, 1017
NSM0207
Onkyo0147
.....0237, 0816, 0867, 0937, 1177
Optimus0057, 0317
.....0347, 0387, 0417, 0427, 0447
.....0537, 0557, 0667, 0776, 0857
Panasonic0257
.....0696, 0707, 0747, 0997, 1077
Philips0197, 0207, 0837
Pioneer0057, 0307, 0407, 0427
.....0577, 0717, 0807, 0917, 1227
Proton0207
Quasar0257
Radio Shack0107, 0247, 0267
.....0307, 0417, 0507, 0717, 1227
RCA0087, 0107
.....0187, 0307, 0317, 0717, 0777
.....1047, 1067, 1117, 1207, 1227
Realistic0317, 0347, 0427, 0527
.....0547, 0557, 0777, 1017, 1623
Rotel0207
SAE0207
Samsung0847, 1396
Sansui0017, 0047, 0207, 1067
Sanyo0157, 0177
.....0317, 0457, 0957, 1127, 1197
Scott0777, 1017
Sears0397, 0537, 0547
Sharp0537, 0547
Sherwood0247
.....0447, 0547, 0606, 0627, 0787
Shure0657
Sony0077, 0357, 0737, 0977
STS0517, 1277
Sylvania0207
Symphonic0567
Teac0217, 0297, 0547, 0557
.....0567, 0646, 0677, 0817, 1187
Technics0257, 0696, 0747, 0997, 1077
Theta Digital0837
Toshiba0766, 0827
Victor0897
Yamaha0037, 0117, 0287, 0927, 1057
Zenith0067, 0217, 0516
.....0597, 0656, 0697, 0716, 0767

AUDIO

Aiwa0586
.....0726, 0846, 0966, 1296, 1386
Apex0425
Apple Ipod0186
Bose0886, 1237, 1606
Carver0197
Centrios1116, 1217, 1546, 1552, 1566
Citizen0277
Criterion0785
Delphi0376
Denon0316, 0976, 1046, 1136
Duraband1476
Fisher0026, 0826
Gold Star0216
Harman/Kardon0016, 0436
Insignia0725
Ipod0066
JVC0566, 0676, 1056
JWL1126
Kenwood0246, 0426, 0497
.....0616, 0956, 1016, 1416, 1596
Koda1552
Koss0215
Magnavox0026, 0206, 0226, 0295, 1266
Marantz0036, 0437
Mitsubishi0366

Code List – Lista de Códigos

NAD	0496, 0766, 1026	Apex	0425
Nelson	1217	Bose	4455, 0886, 1475
NEO	0076	Boston Acoustic	3245
Nexxtech	0487, 0536, 0576, 0666	Centrios	0486, 0955, 1116, 1785, 1845
.....	0725, 0856, 0916, 1116, 1217	Classic	1965
Norcent	0835	Criterion	0785
Onkyo	1186, 1246, 1256	Durabrand	3885, 0205
.....	0116, 0816, 0936, 0996, 1376		0486, 0955, 1476, 2685, 2935
Optimus	0006, 0317, 0386, 0387, 0506	Dynex	0038
.....	0776, 0896, 1036, 1446, 1486	Emerson	1185
Panasonic	1206, 1236, 0056	Insignia	0725
.....	0126, 0686, 0746, 0796, 0876	JVC	0155
.....	1066, 1096, 1346, 1436, 1466	KLH	0465
Philips	1196, 0026, 0036	Koss	0215
.....	0197, 0265, 1066, 1266, 1576	Lenoxx	1345
Pioneer	0266, 0356	LG	4285, 1463, 1565
.....	0407, 0476, 0776, 0896, 1106	Magnavox	(0105 & 1266), (2945 & 1266)
.....	1406, 1446, 1496, 1506, 2675		0206, 0295, 0745, 1045
Radio Shack	0006	Myron & Davis	1555
.....	0166, 0176, 0236, 0247, 0266	NESA	1555
.....	0356, 0476, 0507, 0626, 1036	Nexxtech	0486, 0725, 0955, 1116, 1785
.....	1316, 1406, 1446, 1486, 1506	Norcent	0835
RCA	0146, 0176, 0196, 0266, 0276	Onkyo	0048, 0058, 0355, 1376
.....	0326, 0356, 0476, 0486, 0626	Panasonic	0165, 1466
.....	0736, 0786, 0866, 0906, 0986	Philips	(0105 & 1266)
.....	1165, 1207, 1276, 1286, 1306		(2665 & 1266), (2945 & 1576)
.....	1316, 1326, 1336, 1406, 1506		0206, 0265, 1045, 2765
Realistic	0946	Pioneer	(2675 & 1496), 0525, 0875, 2895
Regent	1476	Radio Shack	(0003 & 1316)
Rio	3885, 0286		0085, 0275, 0486
Saba	0995		0626, 0955, 0995, 1165, 1645
Samsung	0075	RCA	(0003 & 1316)
Sanyo	0157, 1156, 1166, 1176		0486, 0626, 0955, 1165, 1645
Scott	0396	Regent	1345, 1476
Sharp	1616	Rio	(0205 & 0286)
.....	1626, 1216, 0556, 0756, 1267	Saba	0995
Sherwood	0236, 0247, 0466, 0606	Samsung	0075, 1535, 2725
Sirius	1247, 1267	Selectron	1885, 2075
Skyfi	0076	Sony	0365, 1426
Sony	1226, 0046	Techwood	1602, 1985
.....	0106, 0136, 0256, 0296, 0406	Tevion	0785
.....	0416, 0526, 0546, 0636, 1006	Zenith	(0205 & 0286)
.....	1076, 1086, 1426, 1456, 1586		
TAO	0076		
Teac	0156, 0297, 0306, 0346, 0646		
Technics	0056, 0126, 0686		
.....	0696, 0796, 1066, 1096, 1436		
Tevion	0785		
Venturer	0086		
Vizio	1636, 1646		
Wonder	1566		
XM Radio	0076, 0376		
Yamaha	0076, 0287		
.....	0336, 0446, 0456, 0596, 0706		
.....	0806, 0836, 0926, 1146, 1536		
Zenith	3885		
.....	0026, 0067, 0096, 0216, 0217		
.....	0286, 0506, 0516, 0656, 0716		

HOME AUTOMATION

GE Homeminder	0008
Lutron	1516
X10 Home Automation	0018
X10 NEC	0028
Vizio	0068

MEDIA CENTER PC

MCE	3255
Microsoft	3255
Vista	3255

HTIB

(HOME THEATER IN A BOX)

Aiwa	(0586 & 0035)
Amw	0825

TV/VCR/DVD COMBO

Broksonic	1525
Diamond Vision	(2001 & 0422), 0455
Magnavox	0445, 0412
Panasonic	0595, 0552
Philips	0445, 0412
Samsung	1535
Sears	0445, 0412
Superscan	0445, 0412
Sylvania	0445, 0412
Toshiba	0115, 3075

Model:

ONB13AV0047252

Manual Version 1

Updated: 03/28/14