


RCA

THOMSON

U
S
E
R
M
A
N
U
A
L

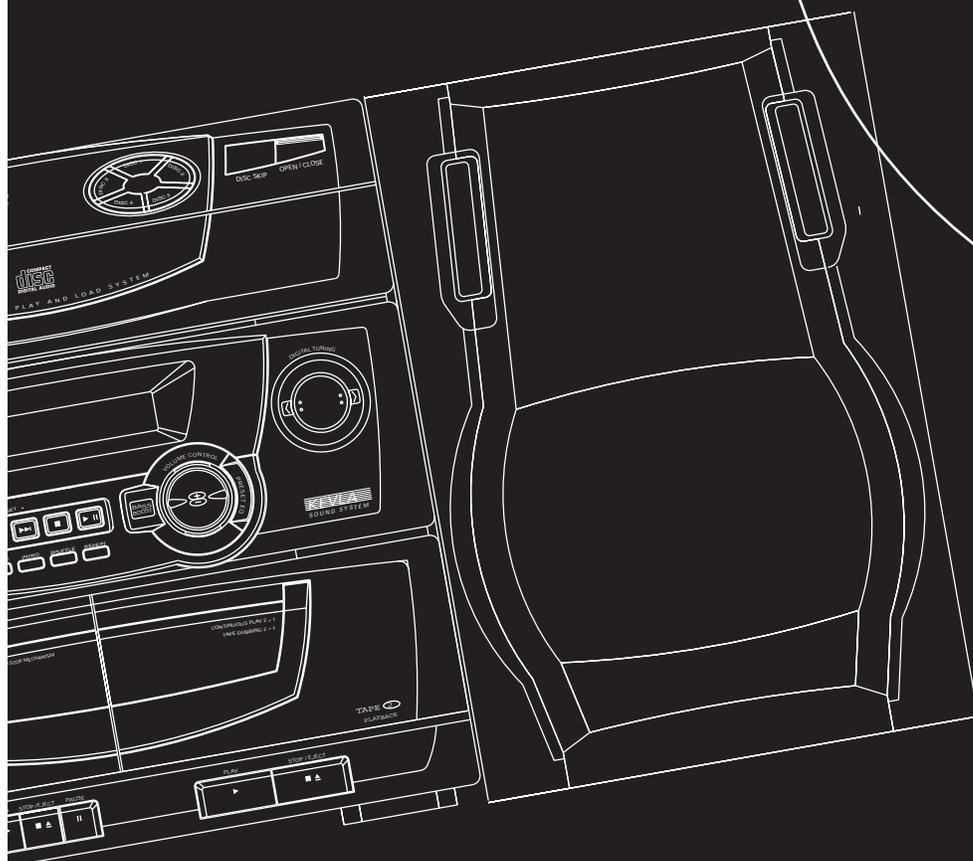

RS1285/RS1287/RS1289

RS3287

VTC D350/VTC D850/VTC D855

FCC Information

RCA Information

This device generates and uses radio frequency (RF) energy, and if not installed and used properly, this equipment may cause interference to radio and television reception.

This product complies with DHHS Rules 21 CFR Subchapter J. Applicable at the date of manufacture. This equipment has been type tested and found to comply with the specifications in Subpart J of Part 15 of FCC Rules. These rules are designed to provide reasonable protection against radio and television interference in a residential installation. However, there is no guarantee that interference will not occur in particular installations.

If this equipment does cause interference to radio or television reception (which you can determine by turning the equipment off and on), try to correct the interference by one or more of the following measures:

- Reorient the receiving antenna (that is, the antenna for the radio or television that is "receiving" the interference).
- Move the unit away from the equipment that is receiving interference.
- Plug the unit into a different wall outlet so that the unit and the equipment receiving interference are on different branch circuits.


If these measures do not eliminate the interference, please consult your dealer or an experienced radio/television technician for additional suggestions.

Also, the Federal Communications Commission has prepared a helpful booklet, "How To Identify and Resolve Radio TV Interference Problems." This booklet is available from the U.S. Government Printing Office, Washington, DC 20402. Please specify stock number 004-000-00345-4 when ordering copies.

WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

For Your Safety

The AC power plug is polarized (one blade is wider than the other) and only fits into AC power outlets one way. If the plug won't go into the outlet completely, turn the plug over and try to insert it the other way. If it still won't fit, contact a qualified electrician to change the outlet, or use a different one. Do not attempt to bypass this safety feature.

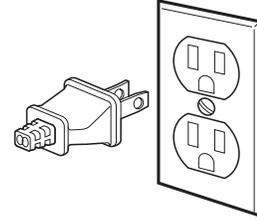

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

For Your Records

In the event that service should be required, you may need both the model number and the serial number. In the space below, record the date and place of purchase, and the serial number:

Model No.
Remote Control No.
Date of Purchase
Place of Purchase
Serial No.

Service Information

This product should be serviced only by those specially trained in appropriate servicing techniques. For instructions on how to obtain service, refer to the warranty included in this Guide.

 THE LIGHTNING FLASH AND ARROW-HEAD WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF "DANGEROUS VOLTAGE" INSIDE THE PRODUCT.	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.	 THE EXCLAMATION POINT WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF IMPORTANT INSTRUCTIONS ACCOMPANYING THE PRODUCT.
SEE MARKING ON BOTTOM / BACK OF PRODUCT		

CONTENTS

GB

FCC Information

Installation2

Controls & Indicators ..3

- CD Player3
- Tuner3
- Tape Player4
- Remote Control4

Display5

- Showing the Demonstration5
- Display Clock/Clock5
- Setting the Time5
- Setting the Timer5
- Activating the Timer5
- Adjusting the Display
Brightness5
- Sleep mode5

Sound Features6

- Using Preset Equalizer Curves
.....6
- Creating a Custom Curve
.....6
- Boosting the Bass6
- Muting Audio6

CD Player6

- Loading Discs6
- Playing Discs8
- Shuffling the Play Order ..6
- Sampling Tracks6
- Repeating the Play Order ..6
- Setting Up a CD program ..7
- Playing a Program List7
- Displaying the Program list
.....7
- Deleting a Track from a
Program List7
- Skipping a Disk7
- Searching through a CD ...7

Tuner8

- Tuning to a Station8
- Using Presets8
- Setting Presets8
- Suppressing Stereo Signal
.....8
- Radio Data System (RDS)

-9
- Tuning to an RDS Station
.....9
- Displaying RDS Station
Information9
- Searching by Program
Type (PTY)9

Tape Player9

-9
- Playing a Tape9
- Recording9
- From Tuner9
- From CD9
- Tape to Tape9
- From an Auxiliary Input ...9

Troubleshooting Tips10

Maintenance10

- Cleaning10
- CD Player10
- Tape Player10

More Information ...11

US Warranty12


Canadian Warranty ...13

RS1285/ RS1287/ RS1289
RS3287
VTCD350/ VTCD850
VTCD855

INSTALLATION


GB

RS1285/ VTCD350

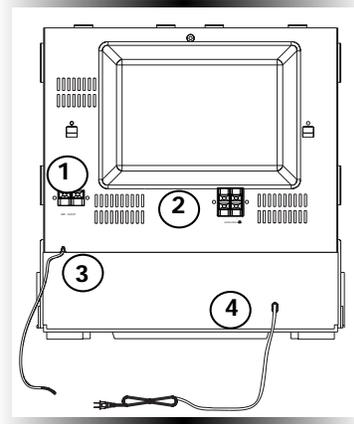


1. AM Loop Antenna Connector
2. Main Speaker Jacks
3. FM Antenna
4. Power Cord

RS1287/ RS1289/ RS3287

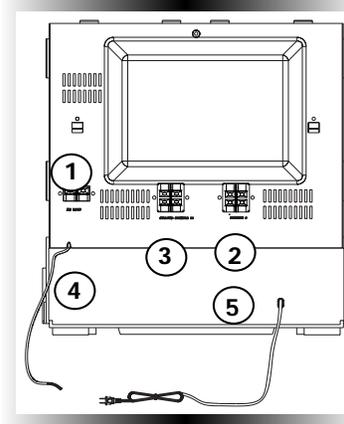



1. AM Loop Antenna Connector
2. Main Speaker Jacks
3. Surround Speaker Jacks
4. FM Antenna
5. Power Cord

VTCD850/ VTCD855

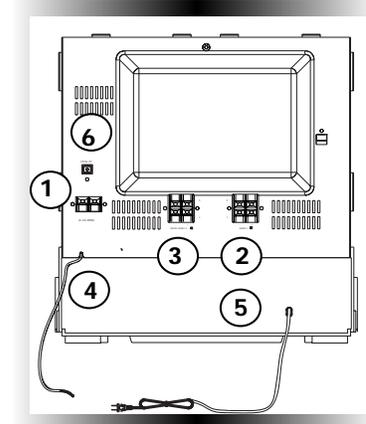

1. AM Loop Antenna Connector
2. Main Speaker Jacks
3. Surround Speaker Jacks
4. FM Antenna
5. Power Cord
6. Optical Output

To ensure sufficient ventilation, keep the spacings shown below free from other surfaces:

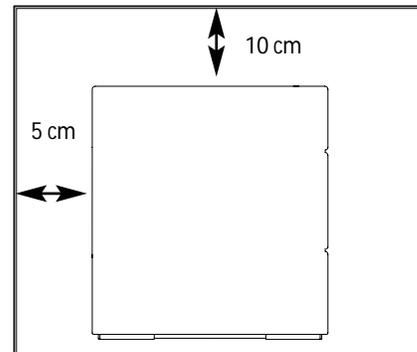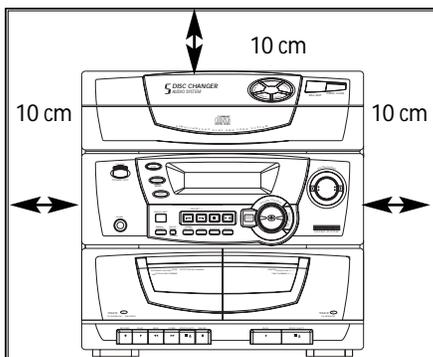

CONTROLS & INDICATORS

GB

CD Player

OPEN/CLOSE — Opens or closes the disc tray.

DISC 1 - DISC 5 — Selects disc 1, 2, 3, 4, or 5

DISC SKIP — Skips to the next CD in the tray

POWER/ECO — Turns power on or off (STANDBY mode). Hold in STANDBY mode to enter ECO (power saving) mode.

PHONES — Jack for connecting headphone

CD — Selects the CD player

TUNER — Selects the tuner/ frequency band

TAPE — Selects the tape player

PROG/SET — Enters CD program mode/ tuner preset station mode

DEMO/DIMMER — Turns the feature demonstration on or off (DEMO/DIMMER for RCA models, RDS DEMO/DIMMER for Thomson models)



STOP — Stops CD playback and clears programmed tracks



SKIP FORWARD/ PRE-SET UP — Increments tuner preset station, CD track or numerical values



SKIP BACKWARD/ PRE-SET DOWN — Decrements tuner preset station, CD track or numerical values



PLAY/PAUSE — Plays or pauses CD

FM STEREO/ CLOCK — Toggles between FM stereo/ mono and shows clock time.

TIMER — Enters timer setting mode and turns the mode on/off

INTRO — Turns INTRO mode on or off to play the first 10 seconds of each track. (RDSTIME/INTRO on Thomson models)

SHUFFLE — Turns SHUFFLE mode

on or off to play CDs randomly. (PTY/MIX for Thomson series)


REPEAT — Turns REPEAT mode on or off to repeat a track, a disc, or all discs

BASS BOOST — Turns bass boost among different bass boost levels

PRESET EQ — Toggles among FLAT, JAZZ, ROCK, POP & CUSTOM mode.

VOLUME — Increases/ decreases volume.

DIGITAL TUNING — Searches up/down frequency to next station

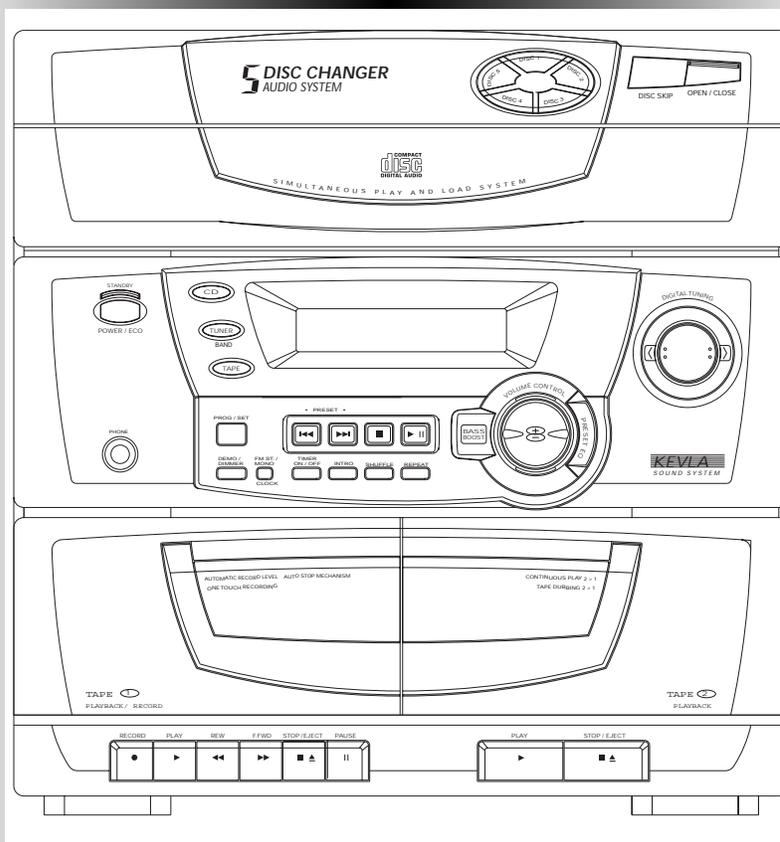

CONTROLS & INDICATORS

GB



Tip: In **STANDBY** mode (press **POWER** off), the system displays the time. Press **POWER** to turn the system on in the previously used mode. Press **CD**, **TAPE**, **TUNER**, or **AUX** to select the corresponding mode. Look at the display icons to identify the current mode.

Tape Player

Tape 1:

	RECORD
	PLAY
	REWIND
	FAST-FORWARD
	STOP/EJECT
	PAUSE

Tape 2:

	PLAY
	STOP/EJECT

Remote Control

POWER — Turns system on/off (**STANDBY** mode)

TUNER — Selects tuner

CD — Selects CD player

TAPE — Selects tape player

MUTE — Mutes volume

VOL+ or VOL- — Increases/

decreases volume

EQ PRESET — Selects equalizer

presets

PLAY — Plays current CD

STOP — Stops playing CD

TRACK/ + — Increments CD

track; searches CD

- / TRACK — Decrements CD

track; searches CD

DISC SKIP

— Skips to next CD

REPEAT — (**REPEAT/RDS** —

Thomson models) Repeats a

track, CD, or all CDs. When

the radio is active, displays

RDS information.

PAUSE — Pauses the CD or tape (logical decks)

SHUFFLE (MIX/PTY SEARCH — Thomson models)

— Turns on/off random listening

BASS B. — Turns on or off Bass Boost

SLEEP — Press to select the time interval in

minute before the unit turns off.



DEMO — Selects dimmer levers and activates

demo display when keep pressing for 2 seconds

PRESET UP/DOWN — Selects next/ previous preset

station

AUX & RECORD — do not function in this unit

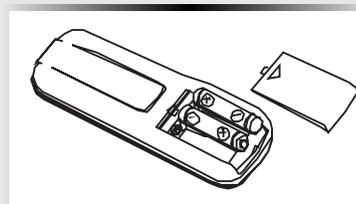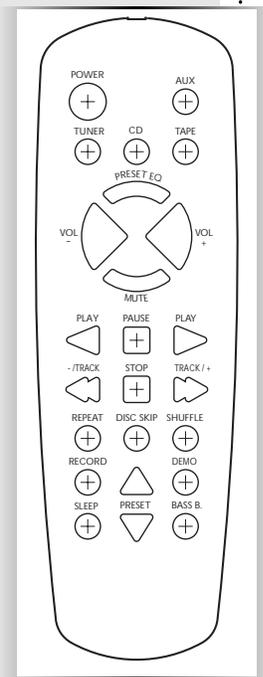



Showing the Demonstration

Not operational in TUNER mode for Thomson models.

Press **DEMO/DIMMER** to turn on/off demonstration mode. The demonstration scrolls through all display operations.

DISPLAY CLOCK/CLOCK Setting the Time

1. Press **CLOCK** until the time flashes on the display (12-hour clock for RCS, 24-hour clock for Thomson).
2. Press **TUNING UP** or **DOWN** to set the hour and then press **PRESET UP/ DOWN** to shift to minute digits.
3. Press **TUNING UP** or **DOWN** to set the minute.
4. Press **SET** to save settings and **STOP** to quit setting.

Note: When system is ON, you can press **CLOCK** to display the current time for about 2 seconds.

Setting the Timer

1. Press **TIMER** until the **ON**, **OF** or **VOL** flashes on the display (**ON** - timer on time, **OF** - timer off time, **VOL**- volume) (12-hour clock for RCA, 24-hour clock for Thomson).
2. For setting time (**ON** & **OF**), press **TUNING UP** or **DOWN** to set the hour and then press **PRESET UP/DOWN** to shift to minute digits.
3. Press **TUNING UP** or **DOWN** to set the minute.
4. For setting volume, press **VOLUME**.
5. Press **SET** to save settings and **STOP** to quit setting.

Activating the Timer

Press and release **TIMER** to turn on/off the alarm. The alarm is active when the clock icon indicator is lit. Note: if real time clock is not set, timer cannot be activated.


Adjusting the Display Brightness

DIM 2

1. Press and hold **DEMO/DIMMER** for more than 2 seconds.
2. While the dimmer is displayed, press **DEMO/DIMMER** to select the desired level (**DIMM 1 - 3**).

Sleep Mode

You can select the time interval in minute before the unit turn off automatically. Press **SLEEP** on the remote to select among 15, 30, 45, 60, 90 & 120 minutes.

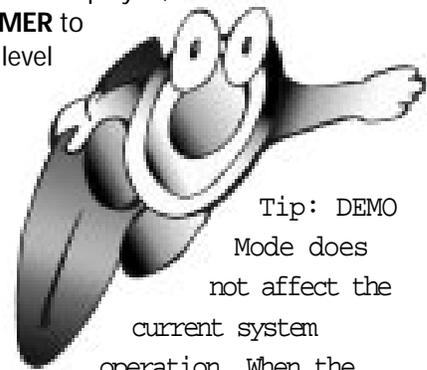

Tip: DEMO Mode does not affect the current system operation. When the system is initially plugged in, DEMO mode is activated.

Sound Features

GB Using Preset Equalizer Curves

PRESET EQ are toggles for preset equalizer levels. Press to toggle among them. The display momentarily shows the selection.

POP

JAZZ

ROCK

FLAT

CUSTOM

Creating a Custom Curve

1. Press **PRESET EQ** to select **CUSTOM** mode.

MID + 0 0

2. While "**CUSTOM**" is displayed, press **PRESET UP** or **DOWN** repeatedly to cycle among displayed bass-, mid-, and treble - range levels.

3. While **BAS**, **MID**, or **TRE** is displayed, adjust **VOLUME** to set the associated gain between -10 - +10.

Boosting the Bass

Press **BASS BOOST** to turn on/off boosting the bass frequency.

Muting Audio

Press **MUTE** on the remote to cut the sound.

MUTE



Tip: While playing a CD, press and hold **SKIP-FORWARD** or **BACKWARD** for more than 2 seconds to search through the CD.

CD PLAYER



Loading Discs

1. Press **CD** to select **CD** mode.
2. Press **OPEN/CLOSE** to open the drawer.
3. Insert up to five discs with label face up. (Press **DISC SKIP** to rotate the disc carrier.)
4. Press **OPEN/CLOSE** to close the drawer. Lights the loaded discs.

Playing Discs

Press **PLAY/PAUSE** to begin or pause play, and **STOP** to stop play.
Select a specific disc by pressing **DISC 1 - DISC 5**.

Press **SKIP FORWARD/ BACKWARD** to select a specific track.

Play and load simultaneously by:

1. Press **OPEN/CLOSE** to open the tray. While a CD is playing
2. Load/change discs for available trays by pressing **DISC SKIP**.
3. Press **OPEN/CLOSE** to close the tray.

Shuffling the Play Order

Press **SHUFFLE** to turn on/off the playing of tracks in random order. (**PTY/MIX** for Thomson models.)

Sampling Tracks

Press **INTRO** to play the first 10 seconds of each track on the current disc, all discs in the tray, or turn **INTRO** mode off.

Repeating the Play Order

Press **REPEAT** to repeat the current track, current disc, all discs, or turn **REPEAT** mode off.

Setting Up a CD Program

You can program the CD player to play up to any 32 tracks on the CDs in the tray.

1. While the CD player is stopped, press **SET** to enter




PROGRAM mode. The system displays the next available program number: "-- P:01,"

with "--" flashing, prompts you for the first track

in the program list.

2. Press **SKIP FORWARD/BACKWARD** to select a track (press **DISC SKIP** or **DISK 1 - DISK 5** to select a track from a different disc).

3. Immediately press **SET** to assign the selected track to the program number. After 3 seconds, you are prompted for the next track in the program list.

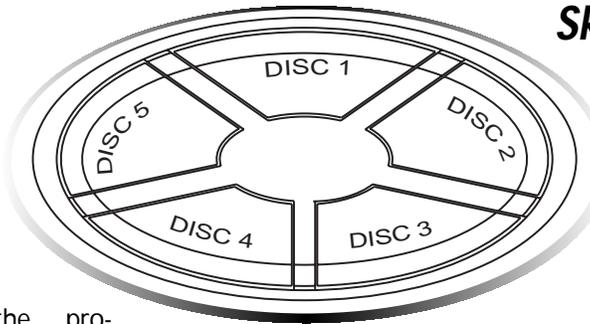

Deleting a Track from a Program List

While in **PROGRAM** mode, display the programmed track to be deleted (press **SET** if necessary to cycle through the list) and immediately press **STOP**. To clear the whole programmed list, press and hold **STOP** for 5 seconds. The system displays the message **CLEAR**.

Skipping a Disk

Press **DISC SKIP**.

Searching Through a CD

Press and hold **SKIP FORWARD/BACKWARD** to search through a CD as it is playing.

Playing a Program List


While in **PROGRAM** mode, press **PLAY**.

Displaying the Program List

1. While the CD player is stopped, press **SET** to enter **PROGRAM** mode.
2. Press **SET** repeatedly to list each track assignment in the program list.



Tip: You can create a program of up to 32 tracks.

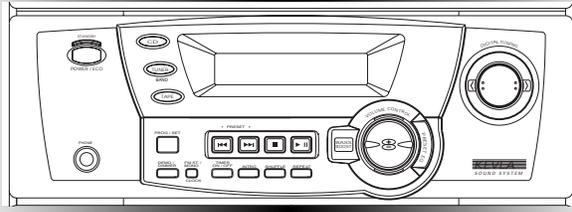

(AMPR, FMPR, or LWPR.)

4. If a different program location is preferred, press **PRESET UP/ DOWN** to move to the desired preset number (1-32).
5. Press **SET** to store the selected frequency at that preset.

1. Press **TUNER** to select the radio.
2. Press **TUNER** to select the next radio band.
Choices are:
AM/FM (RCA models)
FM/MW/LW, RDS (Thomson models)
The tuner can be either TUNE or PRESET mode.
When in PRESET mode, the PROG light is on.

Tip: Your audio system has 32 preset stations.

Tuning to a Station

Press **TUNING UP/ DOWN** to select frequencies.

87.50 MHz

Using Presets

Press **TUNING UP/ DOWN** to access the previous or next preset station. The display first shows the preset program number and after a few seconds, the frequency and then the preset program number again. (FMPR:01 is FM preset 1)

Auto Preset Programming

Press and hold **TUNER** button for 2 second to scan stations in the selected band. The stations will then stored as preset channels. Maximum 32 stations can be stored. Beware of your preset channels being erased accidentally because the scanning and storing process is automatic upon pressing **TUNER** button. You can stop the automatic scan by pressing **TUNER** button, but the erased stations cannot be recovered.


FMPR:01

Setting Presets

1. Press **TUNING UP/ DOWN** to access the desired frequency.
2. Press the **SET** button once.
3. The most recently accessed program location will be displayed together with a blinking program icon

Suppressing Stereo Signal

Press **FM STEREO** to toggle between FM mono and stereo for stereo FM stations.

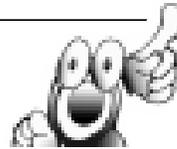

Tip: Press **DIGITAL TUNING UP/ DOWN** for more than 1 second to automatically tune up/down the band for the next station.

