 
 


# Rise Roma

## ASSEMBLY MANUAL

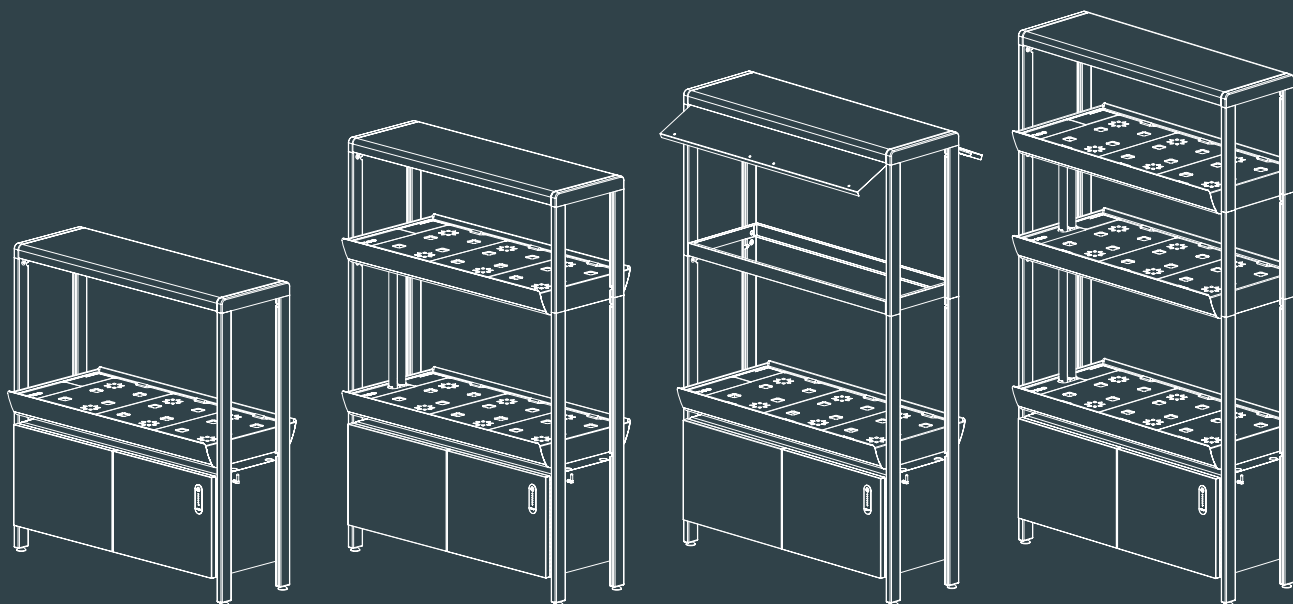


The Roma has a few different configurations.

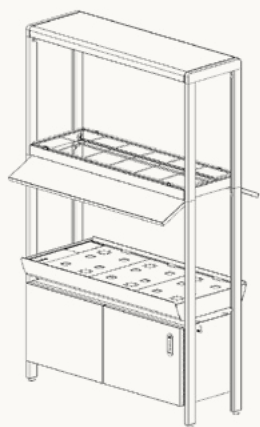

1



2

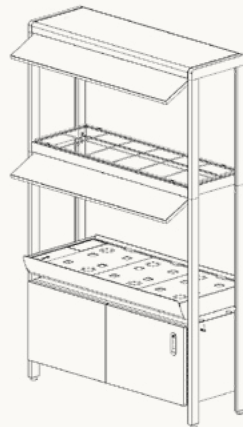

3



4

This manual is for configuration #1




**The Rise Roma is an extension for a base (single-level) Rise Garden.**



**Do not use in conjunction with any other Rise Garden extensions (double- or triple-level).**




If starting from an assembled single-level garden, follow these instructions from step 1.

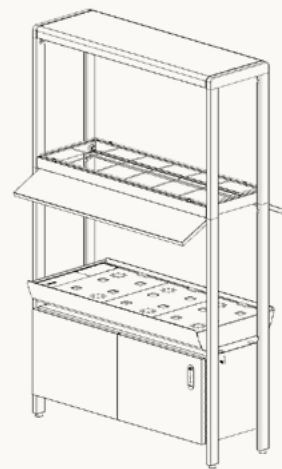

## Roma Manual



If you are building a fresh garden, follow the base manual. When prompted to add extensions, return here. Skip to step 3.


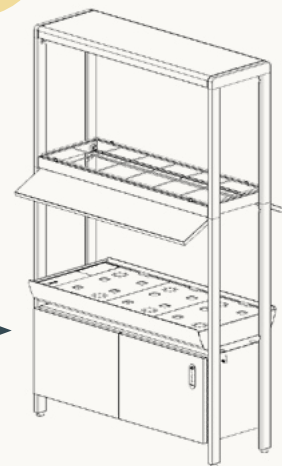


## Base Manual

## Roma Manual

# 01

## Disconnect power

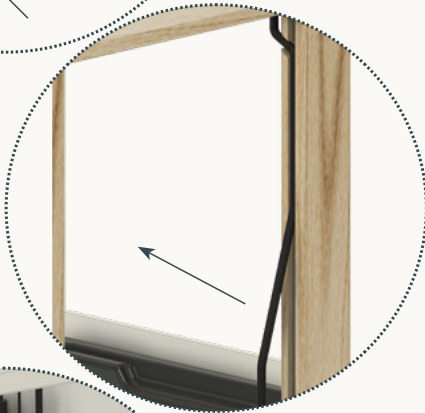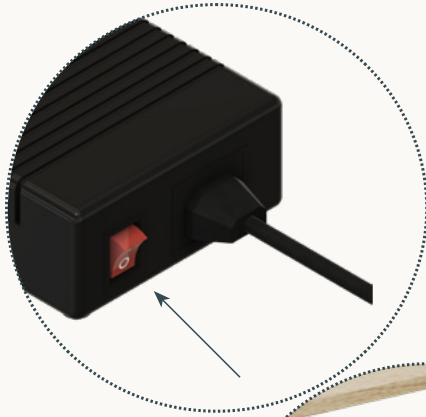

Something missing? Contact us at [support.risegardens.com](mailto:support.risegardens.com)



If building a garden from scratch, skip this page.

a.

Disconnect garden from power by flipping switch on **power supply** or by unplugging **power supply** from wall.

b.

Remove **top shelf** cable from the protective channel in **upright**.

c.

Unscrew **top shelf** cable connector from **control box**. Remove cable from **cabinet**.

## 02


### Remove Top Shelf



If building a garden from scratch, skip this page.


a.

Remove **screw** from each (4) corner of **top shelf** using **allen wrench**.

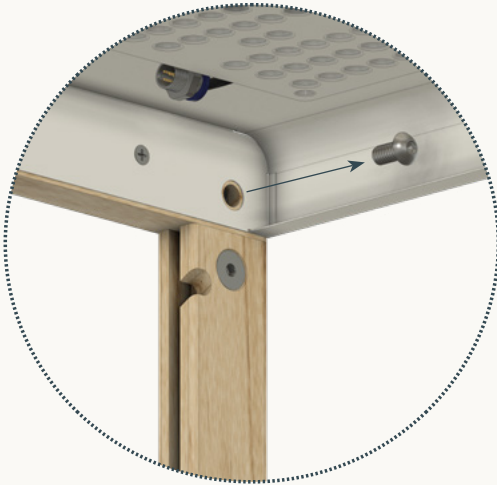


b.

Gently lift **top shelf** off of **uprights** and set aside.

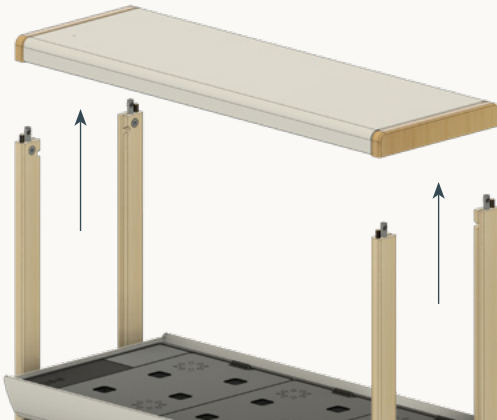


# O3


## Unpack Roma Extension

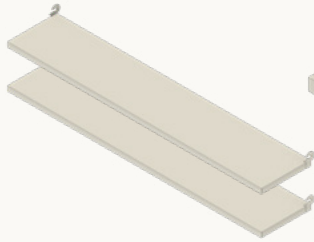

Light bar  
(2)

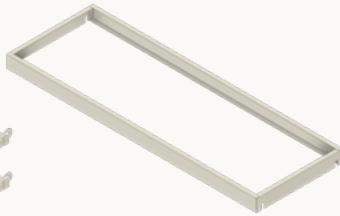


Roma frame

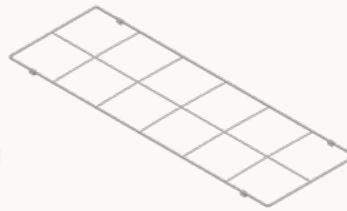

Frame trellis



Roma upright  
extensions  
(left/right)

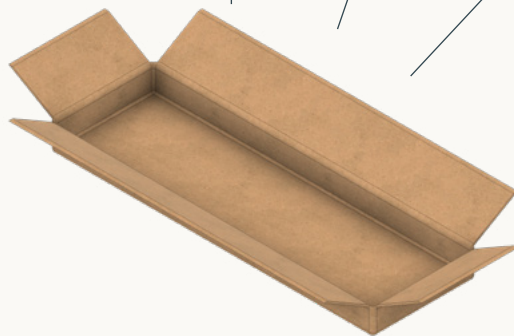

Roma hardware kit



Roma tip-prevention  
cables  
(set aside)



Allen wrench  
(3/16")




Screw  
(4x)

Something missing? Contact us at [support.risegardens.com](mailto:support.risegardens.com)

# O4

## Extend Uprights

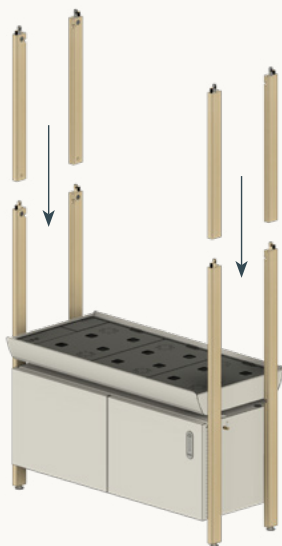



a.

Align the dowels and grooves of each (4) **Roma upright extension** with **upright**, then lower **Roma upright extension** onto **upright**.

b.

Fasten each (4) **Roma upright extension** with a **screw**. Leave about an 1/8" gap.

Do not tighten yet.

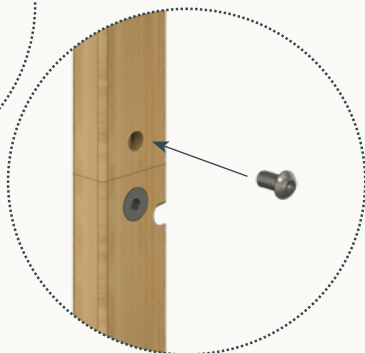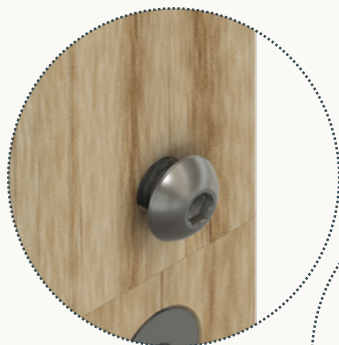


Something missing? Contact us at [support.risegardens.com](mailto:support.risegardens.com)






# 05

## Install Frame

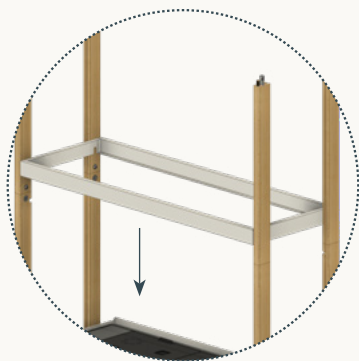

a.

Lower **frame** onto each (4) **screw**.  
Do not tighten yet.

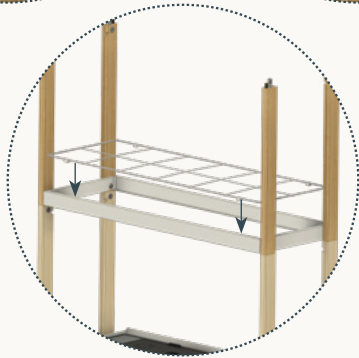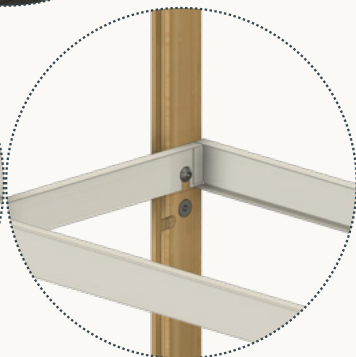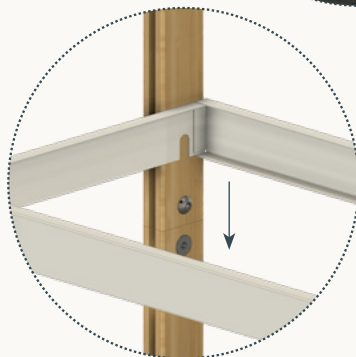


b.

**Frame trellis** attaches magnetically  
to **frame**.

Something missing? Contact us at [support.risegardens.com](mailto:support.risegardens.com)

# 06

## Add Light Bars to Frame

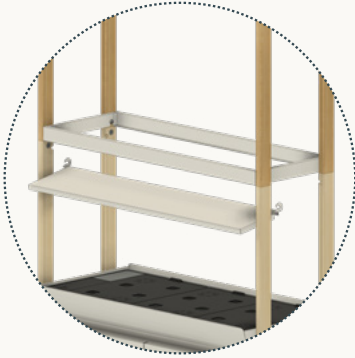

a.

Align the slot on each side of **light bar** with an untightened **screw**.

b.

Pull **light bar** forwards, over (2) **screws**.





c.

Let **light bar** engage fully with both (2) **screws**, and tighten.

**Note:** bottom of light bar hook rests on top of frame edge.


d.

Repeat for second **light bar**.

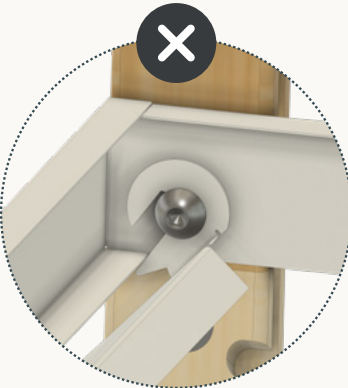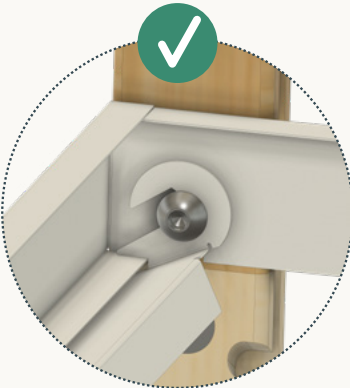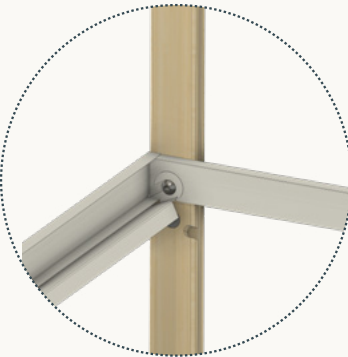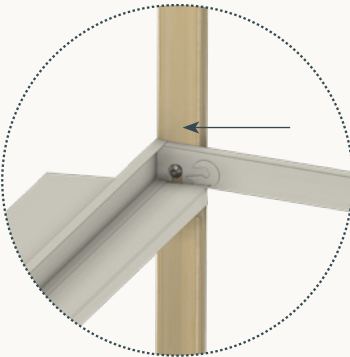

# 07

## Add Top Shelf

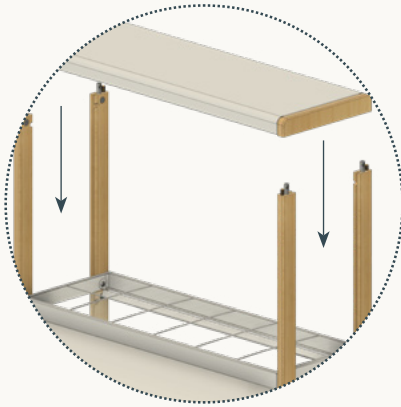

a.

Align **top shelf** with dowels and lower onto **uprights**.

Ensure that cable is on the right-hand side.




b.

Install a **screw** into the underside of each (4) corner of **top shelf**.

Something missing? Contact us at [support.risegardens.com](mailto:support.risegardens.com)


# 08

## Route Cables to Control Box

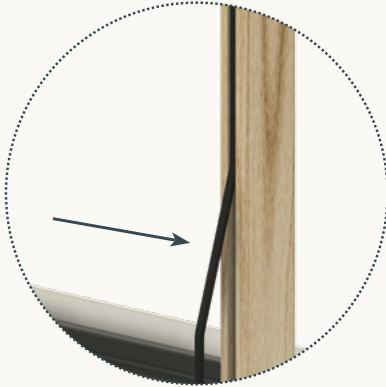


a.

Tuck cable from **top shelf** and each **light bar** into **uprights**.

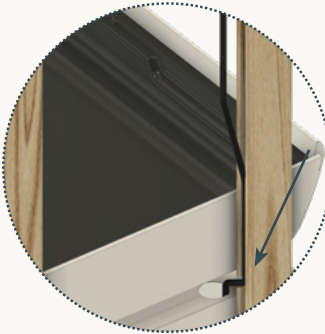

b.

Feed cables into the **cabinet**.

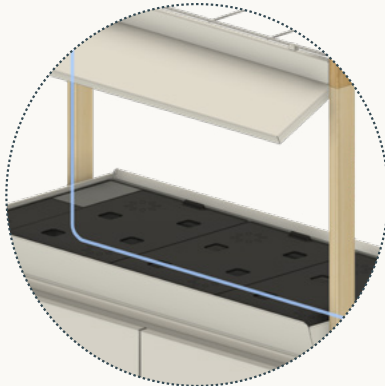

**Note:** cable from one light bar will need to travel across the top of the cabinet from the left to right side.




**If extending an assembled single-level garden, you have already done the next few steps. Skip to step 15.**




**If you are building a fresh garden, continue.**

# 09

## Connect Tubing to Pump

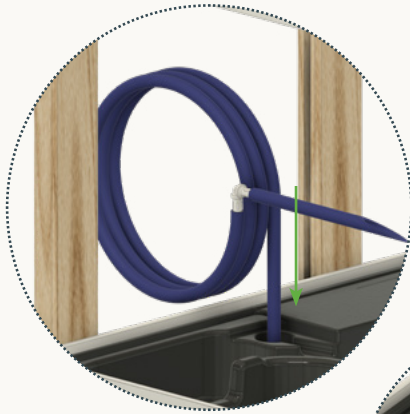


Back hole

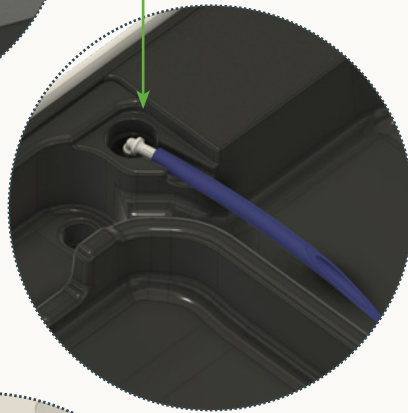

a.

Uncoil **tubing** and feed into the raised hole on top **water tray** until the short segment rests in groove.

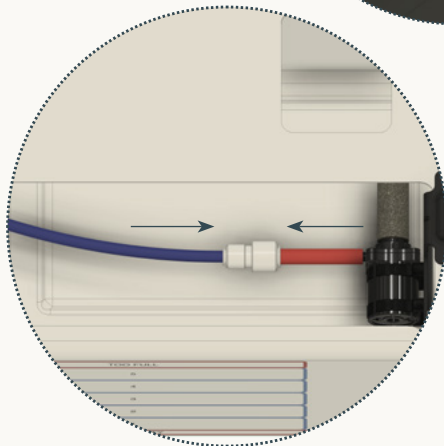


b.


The end of **tubing** should now be in **water tank**. Connect **tubing** to **pump coupler**. Push firmly.

# 10

## Unpack Tray Lids and Service Doors

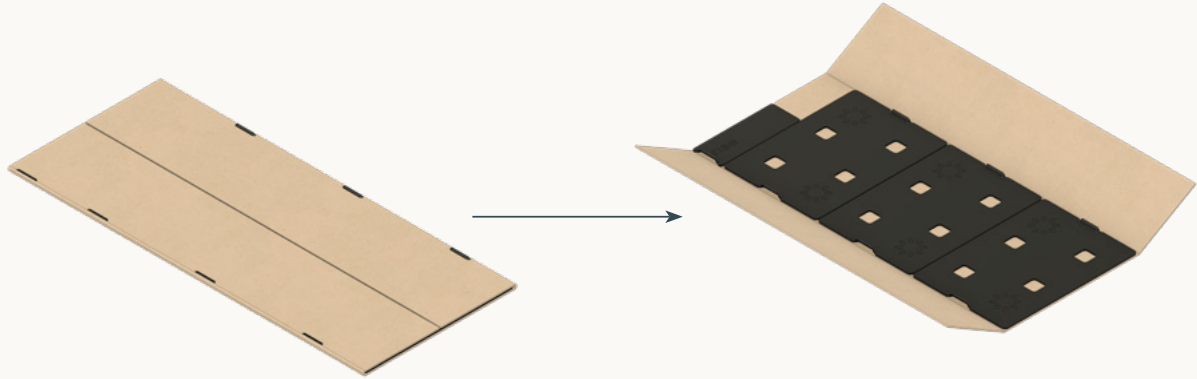

Base box C

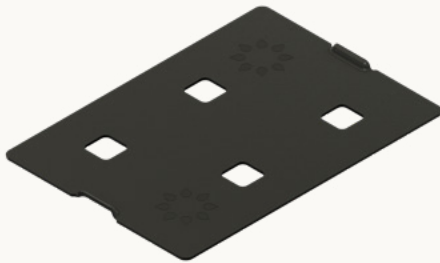

Tray lid




Service door

Something missing? Contact us at [support.risegardens.com](https://support.risegardens.com)


# 11

## Cover Water Tray

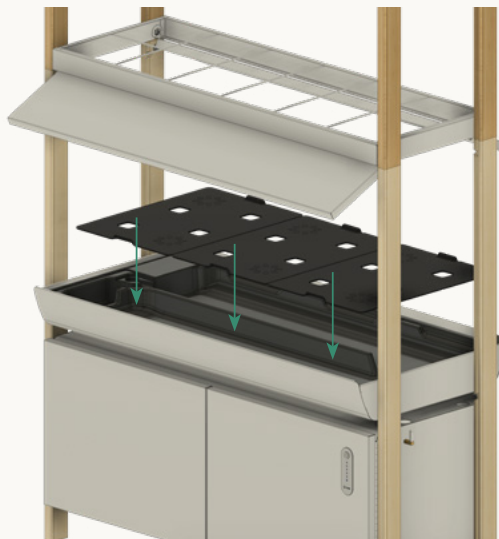

a.

Place **tray lids** on top of **water tray**.

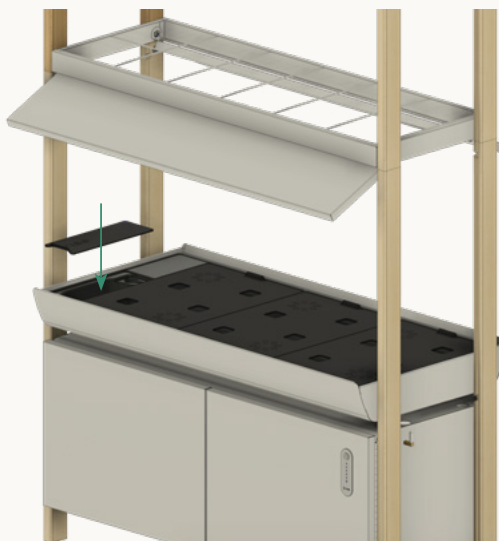

b.

Place **service door** on left side.



# 12


## Unpack Power Supply



Base box E



AC cable

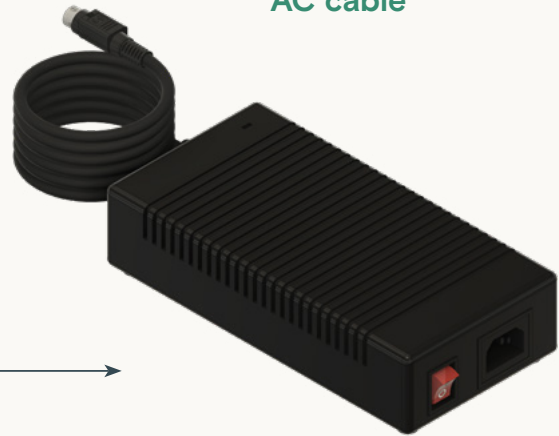

Power supply


a.

Plug **AC cable** into **power supply**.

Something missing? Contact us at [support.risegardens.com](https://support.risegardens.com)

# 13

## Antenna and Power

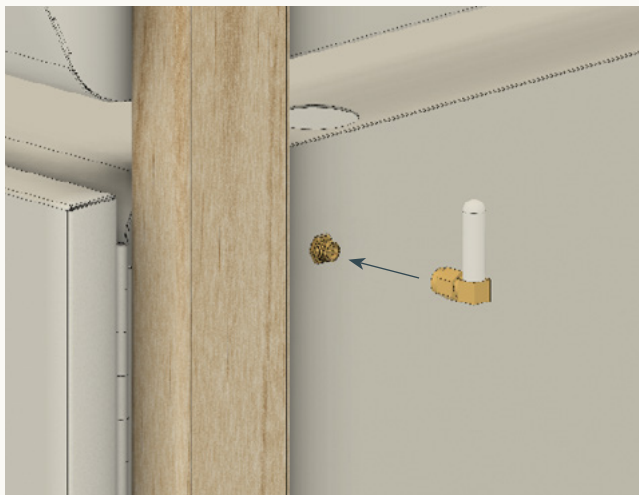

a.

Screw **antenna** from hardware kit onto the connector on the right exterior side of **cabinet**.



b.

Route power cable out the hole in the back-right corner of **cabinet** floor, and connect to **power supply**. Do not connect the **power supply** to the wall, yet.

Place **power supply** outside of **cabinet**, vent-side-up, in an area with unrestricted airflow.

# 14

## Identify Control Box




Lights connect to the three rear-most **plugs**.

By default, one **socket** is uncapped. To plug in an additional levels of lights, unscrew **caps**.

**Note:** All connectors are keyed, if plug does not fit initially, gently rotate plug until keys line up and plug is able to be inserted into the socket. Do not force plug as this may break or bend connector.

Keep unused sockets capped.

Pump plugs in here.

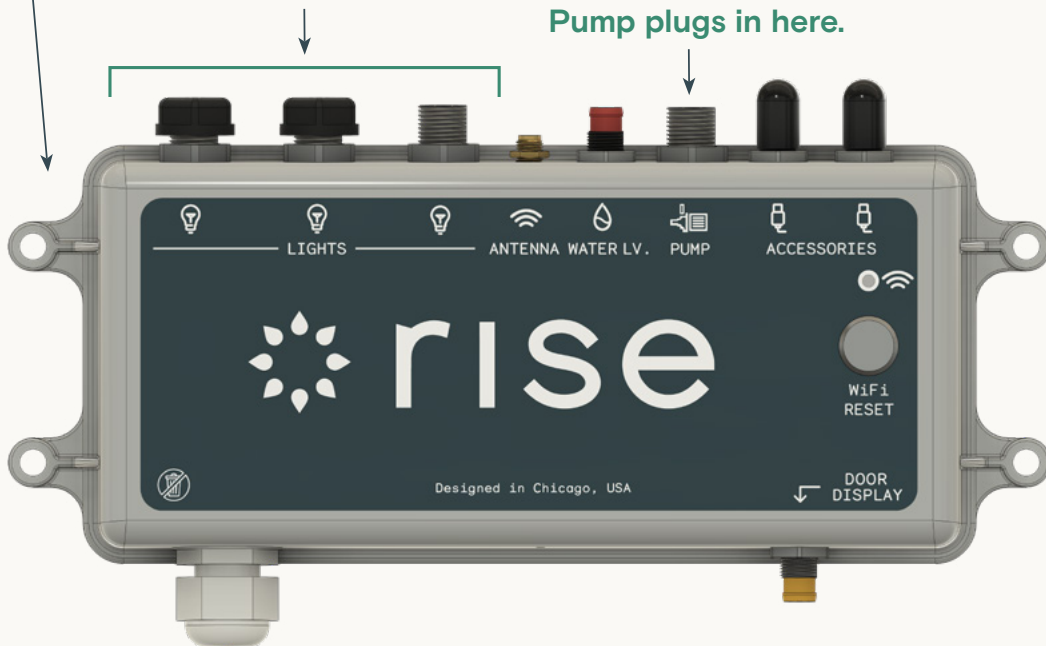

# 15

## Plug in electronics



a.

Plug cable from the **top shelf** into **control box** and screw in to secure.

**Note: All connectors are keyed, if plug does not fit initially, gently rotate plug until keys line up and plug is able to be inserted into the socket. Do not force plug as this may break or bend connector.**



b.

Connect additional light cable(s) from **light bars**.

Use included wraps to bundle excess cable.




c.

Plug cable from **pump** into **control box** and screw to secure.

# 16

## Tip-prevention Kit (optional)

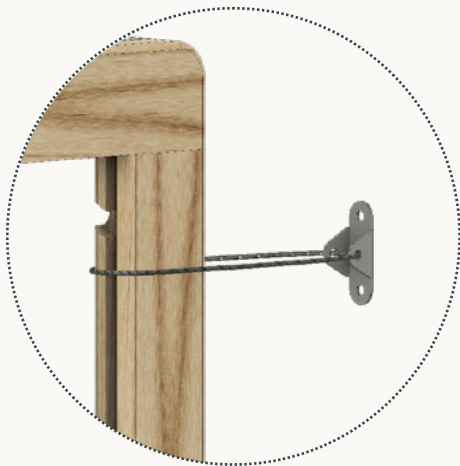


Apply on both sides of the garden.



A kit with two straps is provided in the base to secure the garden to residential wall studs.

The Roma garden requires longer straps, provided with the Roma extension.

If the Roma strap has loops, use the included pin to secure with the bracket provided with the base garden.

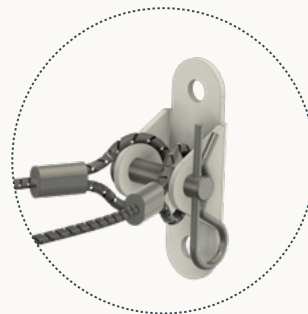

To use the kits, loop the metal cable around each rear **upright**, just under the **top shelf**.



Position the garden such that the cable is not loose.

If a stud is not accessible, use an anchor appropriate to your wall material and rated for at least 25lbs.

# 17

## Powering on

Water tank

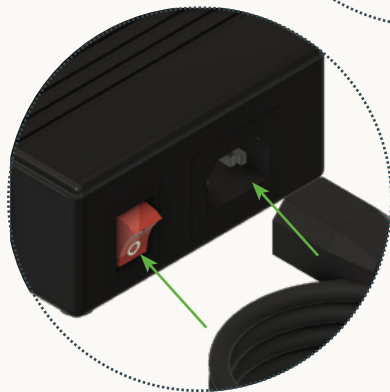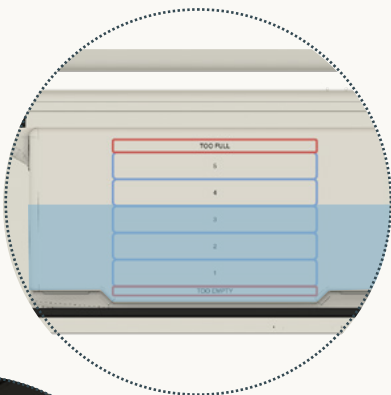

Power supply

Control box



Fill the water tank about halfway.

Connect the **power supply** to a power source, and flip the power switch on the **power supply**. Always unplug the **power supply** before plugging or unplugging any electronics.

The lights should turn on and the **pump** should start running.

The **control box** should have a solid red light, indicating it is ready to connect via the Rise Gardens App.

Monitor the garden for a few minutes to ensure there are no leaks.

Check out our quick-start guide to get growing!




Issues?  
Scan for  
troubleshooting  
information

# For other configurations...



 Light bars can mount  
on light shelf.

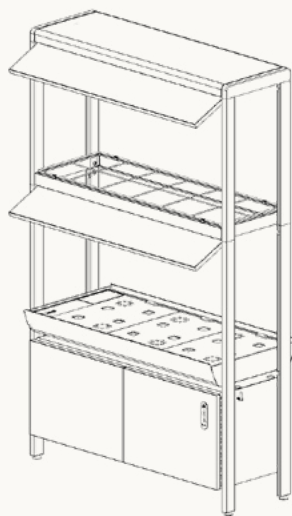

Light bars can each  
mount on either the  
front or the back.



Omit upright  
extensions for short,  
hungry plants.

Something missing? Contact us at [support.risegardens.com](mailto:support.risegardens.com)



# Warranty and returns

## Limited Warranty Policy – Indoor Gardens

All our Indoor Gardens come with a 3-year warranty for hardware components and 1-year warranty on electronic components against defects in workmanship and materials.

To be eligible for a warranty replacement you must have proof of purchase (order number or email confirming purchase) and be the original owner of the Indoor Garden.

Damage or equipment failure due to normal wear and tear, improper or negligent assembly, maintenance, accident, abuse, improper or abnormal use, and relocation is not covered under the warranty.



Scan to  
activate  
warranty

## Return Policy – Indoor Gardens

If you find yourself unsatisfied with your purchase, you have 90 days from the time of delivery to return your purchase, unless your garden was purchased as part of a promotion stipulating that all sales are final. To be eligible for the return of a product other than a Garden, your item must be unused and in the same condition that you received it. Perishable goods such as seed pods & nutrients are not eligible for return. Please reach out to our Support Team for any return inquiry at [support.risegardens.com](mailto:support.risegardens.com).

To complete any return, we require a receipt or proof of purchase. All items must be returned in original packaging. If you do not have original packaging, you will need to purchase it from Rise Gardens.

For returns not related to a warranty claim, customers are responsible for the return shipping cost. The cost of shipping labels and packaging kits provided by Rise Gardens will be deducted from your refund. Any eligible refund will be issued only once the returned item is received by Rise Gardens.





Follow us!



@risegardens

[risegardens.com](http://risegardens.com)