



Programming instruction for the BRIGHTSTAR remote BR100B

New Feature! Never Lose Code!

This remote is preprogrammed to operate the following brands with no set-up:

Most: GE, LG, Magnavox, Panasonic, Philips, Quasar, RCA, Vizio and Zenith.

If you have one of these brands of TVs, just put batteries in and you are done.

If not, please follow the programming instructions below.

Please note that if you reprogram this remote it will only operate the one brand you reprogrammed it for.

Reprogramming your Remote

1. Manually turn on the TV.
2. Press and hold the SET-UP key until the LED blinks and remains on, then release the button.
3. Find your 3-digit code from the code table and enter it. After the code is entered the indicator light will turn off and you are done.

NOTE: If the LED blinked rapidly when you entered the code you may have entered an invalid code; recheck the code list and try again. Also if volume and channel functions do not work then you do not have an exact code match and please try another code.

4. Enter your code here for reference

To return to Factory Setting (Pre-programmed for a specific brand)

1. Press SETUP and hold until LED stays on.
2. Press CC

Reprogramming your Remote using code search.

If the code for your TV is not listed or you cannot get the TV to respond try the following:

1. Turn on the TV.
2. Press and hold the SET-UP key until the LED blinks and remains on, then release the button.
3. Press the channel [CH+] up button slowly over and over again (60 or more times) **until the channel changes**. The LED will blink and then stay lit. If you bypass the code just press CH+ to go backward through the library until the TV changes channels. Pressing CH+ changes direction to forward again.
4. Now press ENTER to lock in the code.

Code identification

1. Turn on the TV.
2. Press and hold the SET-UP key until the LED blinks and remains on.
3. Press the SET-UP key again and release.
4. Now press each number key slowly from 0 to 9 and when the light blinks that is the first digit of your code. To find the next digit repeat step 4 again and when the light blinks you have found the second digit. Repeat one more time to get the third digit.

Sleep mode

This remote has an internal timer so even if your TV does not have sleep feature, it will work.

1. Turn on the TV.
2. Press Sleep, if Sleep Timer message appears on TV screen then select amount of time by repeatedly pressing Sleep key. You are done.

NOTE: If after pressing Sleep no display is observed on TV follow steps 3-6.

3. Press and hold the sleep key until the light blinks and stays on. Then release the key.
4. Choose the time between 01 and 99 minutes (two-digit number). The LED will blink and remain off. The timer is now set.
5. The remote must be left pointing toward the TV so it can send the signal to shut the TV when the time elapses. (Obviously, the signal cannot be blocked by anything or it will not work.)
6. To deactivate sleep mode either press the power key or press and hold the sleep key

Admiral 500, 614, 902, 615, 610, 501
 Advent 911, 932, 933, 614, 303, 201, 301, 909, 919, 920, 934, 082, 109
 Aiko 900
 Akai 601, 903, 922, 027, 038, 039, 041, 117
 AOC 079, 601, 617, 103, 076, 077, 078, 080
 Apex 000, 618, 604
 Aspect 606
 Audiovox 100, 901, 900, 101, 015, 016
 Belcor 617
 Bell&Howell 620, 611
 Bradford 901
 Brockwood 617
 Broksonic 902, 614
 Candle 601, 619
 Celebrity 605
 Celera 092, 094
 Changhong 618
 Citizen 903, 601, 619, 900, 614
 Clairtone 103
 Concerto 619
 Contec 901, 103
 Craig 901
 Crosley 303, 301
 Crown 901
 Curtis Mathes 400, 301, 620, 100, 500, 903, 044, 621, 606, 619, 611, 603, 102, 402, 401, 405
 CXC 901
 Daewoo 100, 617, 900, 101
 Daytron 617
 Dumont 700, 617
 Durabrand 902, 901, 201, 614, 615, 914, 918
 Dynex 614, 085, 086, 109, 110, 112, 620, 903, 619, 910
 Electrobond 605, 103
 Electrohome 614
 Element 112, 113, 114, 115, 116
 Emerson 620, 902, 022, 614, 901, 200, 201, 607, 617, 615, 602, 103, 101, 930, 903, 112
 Envision 079, 601, 076, 077, 078, 080
 ESA 901, 201, 601, 903
 Fisher 620, 801
 Fujitsu 615, 300
 Funai 901, 615, 022, 201
 Futuretec 901
 GE 400, 202, 100, 200, 607, 608, 802, 402, 401, 405, 042
 GFM 201, 022
 Gibraltar 700, 601, 617
 GoldStar 601, 607, 617, 619
 Grundy 901, 615
 Haier 914, 918, 043, 045, 092, 093, 094, 095, 096, 097
 Hallmark 607
 Hannspree 080
 Harvard 901
 HCL 020 (bed 1), 021 (bed 2)
 Hisense 112, 614, 902
 Hitachi 606, 619, 611, 005, 916, 060
 HP 075
 ILO 921, 925, 609, 201, 059
 Infinity 301
 Infocus 400
 Inteq 700
 Insignia 614, 303, 201, 301, 909, 919, 920, 934, 081, 082, 083, 084, 085, 086, 108, 109, 110, 111, 112, 117, 620, 903, 619, 910, 930
 JBL 301, 000, 604, 618
 JCB 605
 JC Penny 400, 609, 202, 903, 601, 607, 608, 617, 800, 402, 405
 JVC 701
 KEC 901
 Kenwood 601, 617
 KLH 618
 KTV 901, 601, 103
 Kolin 023, 024, 025, 026
 Konka 904, 001, 304, 002, 003, 041, 083, 117
 LG 619, 910, 700
 Logik 611
 Luxman 619
 LXI 400, 301, 620, 609, 607, 402
 Magnavox 301, 302, 303, 601, 615, 617, 803, 078, 905, 906, 907, 908, 909, 011, 034, 035, 036, 037, 040, 046, 047, 048
 Majestic 611
 Marantz 301, 601
 Matsushita 004
 Megatron 607, 606
 MEI 103
 Memorex 118, 620, 004, 614, 104, 095, 607, 615, 611, 700, 303, 201, 301, 909, 919, 920, 934, 006, 012
 MGA 104, 601, 607, 617, 500
 Midland 400, 700, 202, 402

Millrock 018
 Minutz 608
 Misakai 201
 Mitsubishi 500, 104, 607, 617, 601
 Motorola 500, 802
 MTC 903, 601, 617, 619, 103
 Multitech 901
 NAD 609, 607, 603
 NEC 601, 617, 619
 Nikko 601, 607, 900
 Norcent 078, 079
 Noshi 800
 NTC 900
 Olevia 923, 023, 024, 025, 026
 Onwa 901
 Optimus 620, 004, 603
 Optonica 500, 610
 Orion 902, 614, 615, 109
 Panasonic 004, 202, 802, 610, 301, 302, 303, 055, 056
 PDI 007, 008, 009, 010
 Philco 301, 614, 601, 606, 617
 Philips 301, 302, 303, 601, 615, 617, 803, 078, 905, 906, 907, 908, 909, 011, 034, 035, 036, 037, 040, 046, 047, 048
 Pilot 601, 617
 Pioneer 603, 600
 Polaroid 400, 910, 913, 915, 917, 920, 012, 013, 028, 029, 030, 031, 032, 033, 041, 083, 084, 109, 113, 117
 Portland 617, 900
 Prima 085
 Prism 202
 Proscan 400, 402, 074, 085, 112
 Proton 607, 102
 Proview 112, 113, 114, 115, 115, 116
 Pulsar 700, 617
 Quasar 004, 202, 610, 802
 RadioShack 400, 620, 610, 901, 621, 607, 617, 619, 402
 Realistic 620, 610, 901, 601, 607, 617, 619
 RCA 400, 617, 800, 612, 600, 402, 403, 401, 404, 405, 623, 042, 112, 074
 Rhapsody 103
 Roomconx 614, 615, 902, 924
 Runco 700, 601, 616
 Sampo 601
 Samsung 930, 903, 601, 607, 617, 619
 Sansui 614, 902, 615, 109
 Sanyo 620, 801, 931
 Scotch 607
 Scott 902, 901, 607, 617, 615
 Sears 400, 301, 620, 609, 607, 615, 622, 801, 201, 402
 Sharp 500, 610, 501, 929
 Sharp (LCD) 912, 929
 Shogun 617
 Signature 611
 Simpson 803
 Sony 605
 Soundesign 901, 607, 615
 Sovo 061, 062, 063, 064, 065, 066, 067, 068, 069, 070, 071, 072, 073
 Squareview 201
 SSS 901, 617
 Starlite 901
 Superscan 201, 500, 912, 929
 Supreme 605
 Sylvania 301, 601, 022, 201, 901
 Symphonic 901, 201, 022
 Syntax 023, 024, 025, 026
 Tandy 500
 Tatung 802
 Technics 004, 202
 Techwood 202, 619
 Teknika 301, 901, 104, 605, 617, 615, 619, 611, 900
 TMK 607, 619, 602
 Toshiba 609, 903, 613, 910, 619, 058, 620
 Trutech 101, 201, 617, 900, 015, 016, 017
 Venturer 015, 016
 Victor 701
 Vidtech 607, 617
 Viewsonic 087, 088, 089, 090, 091, 098, 099, 105, 106, 107, 019
 Viore 903
 Vivitek 058
 Vizio 927, 011, 013, 014
 Wards 301, 610, 601, 607, 608, 617, 615, 619, 611
 Westinghouse 926, 928, 049, 050, 051, 052, 053, 054
 White Westinghouse 614, 101, 605
 Yamaha 601, 617
 X2-GEN 057
 Zenith 700, 614, 611, 900, 619, 910