

CARE & MAINTENANCE

Cleaning

After every use, remove the filter and discard used coffee grounds.

**WARNING:** To avoid breakage, handle decanter with care. Glass will break as a result of impact. Avoid hitting faucet or other hard surfaces when hand washing.

Storage

1.

Remove the wooden sleeve and separate it from the sleeve tie. Wipe the sleeve and sleeve tie with a wet cloth, then dry with another cloth before placing back on the decanter.
2.

Hand wash the glass decanter, measuring scoop, and filter with hot, soapy water. Use a mild soap. **Do not** use abrasive cleaners.
3.

Wipe with damp cloth to remove superficial stains.
4.

Make sure the wooden sleeve is completely dry before placing back on glass decanter.
- Store the coffee maker in a safe place, or in its box.
- **Do not** store glass decanter in a place where it may fall, be bumped, or knocked over. Glass may shatter. Store out of reach of children and pets.
- Keep glass decanter in protective wrap for storage.

**Note:** You can also wash the filter and glass decanter in a dishwasher. The wooden sleeve and tie are **not** dishwasher-safe. **Only** the filter and glass decanter are dishwasher-safe. Remove the wooden sleeve and tie before putting in a dishwasher. The measuring scoop is **top-rack** dishwasher-safe only.

WARRANTY INFORMATION

Product	Original 8-Cup Pour-Over Coffee Maker
Model	CO148-CM
For your own reference, we strongly recommend that you record your order ID and date of purchase.	
Date of Purchase	
Order ID	

TERMS & POLICY

Arovast Corporation ("Arovast") warrants this product to the original purchaser to be free from defects in material and workmanship, under normal use and conditions, for a period of 2 years from the date of original purchase.

Arovast agrees, at our option during the warranty period, to repair any defect in material or workmanship or furnish an equal product in exchange without charge, subject to verification of the defect or malfunction and proof of the date of purchase.

There is no other express warranty. This warranty does not apply:

- If the product has been modified from its original condition;

• If the product has not been used in accordance with directions and instructions in the user manual;

• To damages or defects caused by accident, abuse, misuse or improper or inadequate maintenance;

• To damages or defects caused by service or repair of the product performed by an unauthorized service provider or by anyone other than Arovast;

• To damages or defects occurring during commercial use, rental use, or any use for which the product is not intended;

• To damages or defects exceeding the cost of the product.

Arovast will not be liable for indirect, incidental, or consequential damages in connection with the use of the product covered by this warranty.

This warranty extends only to the original consumer purchaser of the product and is not transferable to any subsequent owner of the product regardless of whether the product is transferred during the specified term of the warranty.

This warranty does not extend to products purchased from unauthorized sellers. Arovast's warranty extends only to products purchased from authorized sellers that are subject to Arovast's quality controls and have agreed to follow its quality controls.

All implied warranties are limited to the period of this limited warranty.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

If you discover that your product is defective within the specified warranty period, please contact Customer Support via **support@cosori.com**. **DO NOT** dispose of your product before contacting us. Once our Customer Support Team has approved your request, please return the product with a copy of the invoice and order ID.

Every Cosori product automatically includes a 2-year warranty. To make the customer support process quick and easy, register your product online at **www.cosori.com/warranty**.

This warranty is made by:

Arovast Corporation  
1202 N. Miller St., Suite A  
Anaheim, CA 92806

CUSTOMER SUPPORT

If you have any questions or concerns about your new product, please contact our helpful Customer Support Team.

**Arovast Corporation**  
1202 N. Miller St., Suite A  
Anaheim, CA 92806

**Support Hours**  
Monday–Friday  
9:00 am–5:00 pm PST/PDT

**Email:** support@cosori.com  
**Toll-Free:** (888) 402-1684

\*Please have your invoice and order ID ready before contacting Customer Support.

A2-01.05\_D\_21L13\_us

COSORI

User Manual

Original 8-Cup Pour-Over Coffee Maker

Model: CO148-CM



Questions or Concerns?

support@cosori.com | (888) 402-1684  
Mon–Fri, 9:00 am–5:00 pm PST/PDT

Package Contents

- 1 x Stainless Steel Filter
- 1 x Glass Decanter
- 1 x Wooden Sleeve
- 1 x Measuring Scoop
- 1 x User Manual

Specifications

Capacity	8 coffee cups / 34 fl oz / 1 L
Filter Material	304 Stainless Steel
Decanter Material	High Borosilicate Glass
Measuring Scoop Size	1 US tbsp / ~7 g


IMPORTANT SAFEGUARDS

Follow basic safety precautions when using your coffee maker. Read all instructions.

- Do not touch hot surfaces, such as the surface of the filled glass decanter. Use wooden sleeve.
- Do not set the decanter on a wet surface. It may slip, spill hot liquid, or fall.
- Do not clean with steel wool pads, abrasive cleaners, or any other materials that may scratch the decanter.
- WARNING: Danger of scalding. Be careful when handling hot water. Decanter is heavy when filled and glass may be hot.
- Household use only.
- Do not use the decanter if it is cracked, scratched, or chipped.
- Check for cracks or damage before using, especially if there are signs of leakage.
- Do not use the decanter with a worn wooden sleeve or without the sleeve properly attached.

SAVE THESE INSTRUCTIONS

GETTING TO KNOW YOUR POUR-OVER COFFEE MAKER

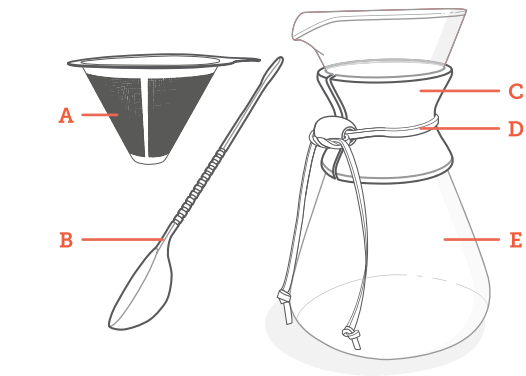

- A. Filter
- B. Measuring Scoop
- C. Sleeve
- D. Sleeve Tie
- E. Decanter

- Note:
- The filter is precision-etched, permanent, double-layered, and made with 304 grade stainless steel. Micro mesh prevents grounds from getting into the coffee.
  - The decanter is high borosilicate glass for high heat resistance.

BREWING COFFEE

Note: This process should take about 5 minutes.

- Place the filter into the mouth of the glass decanter.
- Add medium coarse ground coffee to the filter. The ratio of coffee grounds to hot water is 1 level measuring scoop (~7 g) of coffee to 4 fl oz / 118 mL water. We recommend using freshly ground coffee. Adjust the amount of coffee or water according to taste. Shake gently to level the grounds.
- Pour water over coffee grounds using a slow spiral motion, starting in the middle of the filter. Pour just enough water to saturate the grounds.
- Wait 30–45 seconds.
- Pour water over coffee grounds again, starting on the outer rim of the filter, using a slow spiral motion. If water reaches the top of the filter, stop and let it settle to the halfway point, then begin pouring again until you have the desired amount of coffee.
- When finished, remove the filter and discard the used coffee grounds. Enjoy!

Note: This spiral motion is to create “turbulence” in the coffee grounds, allowing the particles in the coffee to separate and release flavor.

Note: The water will cause the grounds to puff up, which is called “blooming”. Some roasts will bloom more than others.

- Tips:
- Use a conical burr coffee grinder to ensure consistent grinding and better extraction for a full-bodied cup of coffee.
  - Use fresh, filtered water at the optimal brewing temperature of 195°–205°F / 91°–96°C.
  - Use a kettle with a gooseneck spout to help control water distribution and saturation.
  - To keep your coffee warm, you can place the filled decanter directly on a glass stove top or gas flame, both at LOW heat **only**. The decanter must be filled. If the decanter is empty, never place it on a heating element.