

CHEFMAN®


2-Slice

DIGITAL TOASTER

USER GUIDE

- Safety Instructions
- Features
- Operating Instructions
- Toasting Tips
- Cleaning and Maintenance
- Troubleshooting FAQs
- Notes
- Terms and Conditions
- Warranty Registration

RJ31-SS-V2-D

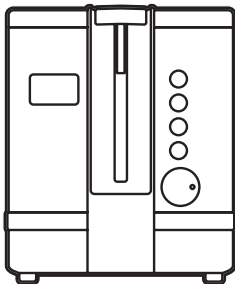

COOKING FORWARD™

Welcome!

Whether this is your first Chefman® appliance or you're already part of our family, we're happy to be in the kitchen with you! We have a feeling your new Digital Toaster will become your go-to favorite for everything from breakfast staples to late-night cravings. With its 1 ½-inch extra-wide slots, you can easily toast everything from bread, English muffins, and frozen waffles to bagels and challah to golden-brown perfection. Its shade selector features seven options, so you can toast your food exactly the way you like, then watch as the digital timer counts down to your perfect slice. Plus, the toaster's brushed stainless-steel and compact design rightly earns it a prime spot on the countertop. We know you're excited to get toasting, but please take a few minutes to read our directions, safety instructions, and warranty information.

From our kitchen to yours,
The Chefman® Team



READ ALL INSTRUCTIONS BEFORE USE

For your safety and continued enjoyment of this product, always read the instruction manual before using.

CONTENTS

- 1 Safety Instructions
- 5 Features
- 6 Operating Instructions
- 10 Toasting Tips
- 11 Cleaning and Maintenance
- 12 Troubleshooting FAQs
- 13 Notes
- 16 Terms and Conditions
- 19 Warranty Registration

SAFETY INSTRUCTIONS

IMPORTANT SAFEGUARDS

WARNING: When using electrical appliances, especially when children are present, basic safety precautions should always be followed to reduce the risk of fire, electrical shock, and/or injury, including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock, do not immerse cord or plugs into water or other liquid.
4. Close supervision is necessary when this toaster is used by or near children.
5. Unplug from the outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate the Digital Toaster with a damaged cord or plug, or after it malfunctions or has been damaged in any manner. Should this occur, contact Chefman® Customer Support.
7. The use of accessory attachments not recommended by Chefman® may cause injuries.

SAFETY INSTRUCTIONS

IMPORTANT SAFEGUARDS

8. Do not let the cord hang over the edge of a table or counter or touch hot surfaces.
9. Do not place on or near a hot gas or electric burner, or in a heated oven.
10. To disconnect, turn any control to "off," then remove the plug from the wall outlet.
11. Do not use the Digital Toaster for other than intended use.
12. Oversize foods, metal foil packages, or utensils must not be inserted in the toaster as they may involve a risk of fire or electrical shock.
13. A fire may occur if the toaster is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
14. Do not attempt to dislodge food when the toaster is plugged in.

SAVE THESE INSTRUCTIONS.

SAFETY INSTRUCTIONS

IMPORTANT SAFEGUARDS

WARNING: This appliance has a polarized plug (one blade is wider than the other). This plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way or force it into the outlet. This could result in injury or electrical shock.

SHORT-CORD INSTRUCTIONS

A short power-supply cord is provided to reduce the hazards of entanglement or tripping over a longer cord. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use. If a longer detachable power-supply extension cord is used:

1. The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance.
2. The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

SAFETY INSTRUCTIONS

IMPORTANT SAFEGUARDS

POWER-CORD SAFETY TIPS

1. Never pull or yank on the cord or the appliance.
2. To insert the plug, grasp it firmly and guide it into the outlet.
3. To disconnect the appliance, grasp the plug and remove it from the outlet.
4. Before each use, inspect the power cord for cuts and/or abrasion marks. If any are found, contact Chefman® Customer Support for assistance.
5. Never wrap the cord tightly around the appliance, as this could place undue stress on the cord where it enters the appliance and cause it to fray and break.

DO NOT OPERATE THE APPLIANCE IF THE POWER CORD SHOWS ANY DAMAGE OR IF THE APPLIANCE WORKS INTERMITTENTLY OR STOPS WORKING ENTIRELY.

*California Proposition 65:
(Applicable for California Residents only)*




WARNING:
Cancer and Reproductive Harm -
www.P65Warnings.ca.gov.



Do not place appliance on a stovetop or any other heatable surface, even if stovetop is not on. Doing so is a fire hazard.

FEATURES

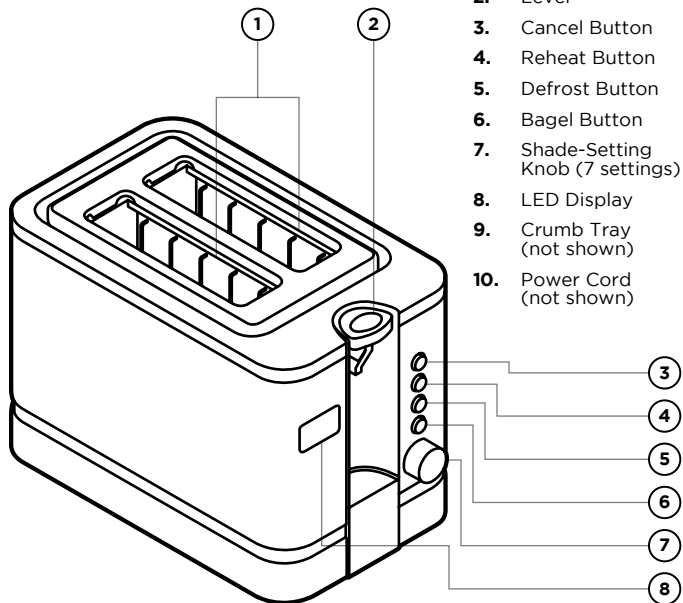

OPERATING INSTRUCTIONS

BEFORE FIRST USE

1. Remove all packing materials and stickers from inside and outside of the toaster.
2. Gently wipe down the exterior with a damp cloth or paper towel.
WARNING: Never immerse the toaster or its plug in water or any other liquid. It is NOT dishwasher-safe.
3. Read all instructions and follow them carefully.

HOW TO USE

With your Digital Toaster, you can select the toasting mode and shade setting just the way you like it, then watch as the timer counts down to your perfect piece of toast.

1. Ensure the crumb tray is pushed all the way in (see Cleaning and Maintenance, p. 11). Plug in the Digital Toaster to put it in standby mode.
2. Turn the shade-setting knob to the desired setting (see chart, p. 8). The selected setting will appear on the LED display. The higher the number, the darker and crisper the results.
3. Put your desired food into the toasting slots. **NOTE:** Use only bread products and products designed for toasters, such as toaster pastries.
4. For simple toasting, press the lever all the way down to start. The timer will appear on the display and begin counting down.

OPERATING INSTRUCTIONS

5. If using the REHEAT, DEFROST, or BAGEL settings (see p. 8 and 9 for more information on those functions), push the lever all the way down, and then press one of those buttons. **NOTE:** Each button will illuminate when pressed.
6. When toasting is done, the Digital Toaster will automatically pop the food up for retrieval and return to standby mode. If the REHEAT, DEFROST, or BAGEL button was selected, the food will also pop up, and the unit will return to standby mode. **CAUTION:** Beware of hot surfaces when removing food from the toaster.
7. Lift the lever up above the ready position to raise the food higher for easier retrieval. **WARNING:** Never use metal utensils to remove food from the toaster.
8. To stop or check on your food at any time, press the CANCEL button. You can also simply push the lever up to cancel the toast cycle.
9. After 20 minutes of inactivity in standby mode, the unit will enter sleep mode, where the LED display and all function buttons are off. Pressing any button or adjusting the dial will return it to standby mode.
10. If the lever is pushed down while the unit is in sleep mode, the unit will begin toasting using the previously set shade.

OPERATING INSTRUCTIONS

SHADE SELECTOR TIMES

The chart below illustrates how long the Digital Toaster will run on each shade setting.

Shade	Toast Time (minutes/seconds)	Bagel Time (minutes/seconds)
1	1:30	2:30
2	2:00	3:00
3	2:30	3:30
4	3:10	4:10
5	3:40	4:40
6	4:10	5:10
7	4:40	5:40

SPECIAL SETTINGS AND FEATURES

The Digital Toaster has 4 modes available at the push of a button as well as a special safety feature that automatically kicks in if food gets stuck in the toaster.

- **REHEAT:** Use to warm toasted or cooled bread. May also be used to warm toaster pastries. This button, regardless of what shade setting is selected, will activate the Digital Toaster for 30 seconds.

OPERATING INSTRUCTIONS

- **DEFROST:** Use for frozen foods like bread and waffles. This button defrosts and toasts simultaneously by increasing the toasting time by 10%.
- **BAGEL:** Use for bagels or English muffins. For best results, insert cut bagels or English muffins into the toaster with the cut side facing out. This setting is designed to toast ONLY one side of the bread. In BAGEL mode, only the outward elements within the toasting slots heat up.
- **CANCEL:** Use to stop toasting at any time. When the button is pressed, food will automatically pop up.

Anti-Jam Function: Your Digital Toaster is equipped with an anti-jam function. If food gets stuck in the Toaster, the unit will power off, the LED screen will display “Err,” and the CANCEL button will flash on and off. Once the food is removed, the unit will return to standby mode.

TOASTING TIPS

Do not put buttered bread or pastries with frostings into the toaster. This could create a fire hazard.

Never force food into the slots. Food should lower smoothly when the lever is pressed down, or it could get stuck.

Load bagels with cut sides facing out, since only the outward elements within the toasting slots heat up during BAGEL mode.

Lower your shade selection when toasting a single slice. The Digital Toaster is designed to heat the entire toasting chamber for two slices. When toasting a single slice, adjust the shade-setting knob lower than you usually would to avoid overbrowning.

Adjust shade selection higher for fresh bread. Moisture in bread slows down toasting. For very fresh or moist bread, adjust the shade-setting knob higher than usual. For drier bread, adjust the knob downward.

Make quick and easy croutons. Toast your desired bread on a higher setting, then crumble over salad or soup.

Choose thicker slices of gluten-free bread to toast. Store-bought gluten-free breads tend to be thin and crumble easily, making it difficult to evenly toast and keep in one piece. When shopping for gluten-free breads to toast, choose thicker slices with sturdier crusts.

CLEANING AND MAINTENANCE

Your Digital Toaster requires very little maintenance, just the regular removal of crumbs.

1. Unplug the toaster and cool completely.
2. When the toaster is completely cool, wipe the exterior down with a damp cloth or paper towel to remove any fingerprints or smudges.
3. Remove and clean the crumb tray periodically to avoid buildup:
 - Once the toaster is unplugged and fully cool, press the crumb tray at the bottom back of the toaster. It will then partially pop out so you can pull it out.
 - Use a sponge and warm, soapy water to wash. The crumb tray is NOT dishwasher-safe.
 - Dry the crumb tray completely.
 - Be sure to push the crumb tray all the way back inside the bottom of the toaster before next use.

TROUBLESHOOTING FAQs

• **Why won't the toaster turn on?**

Check that the toaster is plugged in. If it is, make sure that the power cord is not visibly damaged in any way and that the power outlet being used is working. If the power cord is damaged in any way, do not use the toaster. Contact Chefman® Customer Support for assistance.

• **My food is not burned, but a burning smell is coming from the toaster.**

This can be caused by burning crumbs that have collected in the crumb tray. Let the toaster cool completely, then turn upside down and gently shake over a trash bin to remove any excess crumbs. Follow the Cleaning and Maintenance instructions (see p. 11) on cleaning the crumb tray frequently to prevent a buildup of excess crumbs.

• **My bread has fallen apart and crumbled inside the toaster.**

How do I remove it?

Never insert metal utensils or forks into the toaster. Unplug the toaster and turn it upside down over the sink. If the entire piece does not come out, raise and lower the lever a few times.

• **My bread is stuck inside the toaster and lifting the lever does not raise it. How do I remove it?**

Never insert metal utensils or forks into the toaster. Unplug the toaster and allow to cool, then gently use wooden or plastic tongs or chopsticks to help remove the stuck food. To prevent this problem, use thinner bread slices, and never force slices into the slots when items are too thick.

NOTES

NOTES

NOTES

TERMS AND CONDITIONS

Limited Warranty

RJ Brands, LLC d/b/a Chefman® offers a limited 1-year Warranty (the “Warranty”) available on sales through authorized distributors and retailers only. Please note that this Warranty becomes valid from the date of initial retail purchase and that the Warranty is non-transferable and applies only to the original purchaser.

This Warranty is void without proof of purchase within the United States and Canada. Please be aware that this Warranty supersedes all other warranties and constitutes the entire agreement between the consumer and Chefman®. Any changes to the Terms and Conditions of this Warranty must be in writing, signed by a representative of Chefman®. No other party has the right or ability to alter or change the Terms and Conditions of this Warranty.

We may ask you to please submit, via email, photos and/or video of the issue you are experiencing. This is to help us better assess the matter and possibly offer a quick fix. Photos and/or video may also be required to determine warranty eligibility.

We encourage you to register your product. Registering can make the Warranty process easier and can keep you informed of any updates or recalls on your product. To register, follow the directions on the Chefman® Warranty Registration page in the Chefman® User Guide. Please retain your proof of purchase even after registering. In the event that you do not have proof of your purchase date, we may declare your Warranty void or we may, at our sole discretion, apply the date of manufacture as the purchase date for purposes of this Warranty.

TERMS AND CONDITIONS

Limited Warranty

WHAT THE WARRANTY COVERS

- **Manufacturer Defects**

Chefman® products are warranted against defects in material and workmanship, under normal household use, for a period of 1 year from the date of purchase when used in accordance with the directions listed in the Chefman® User Guide. If your product does not work as it should, please contact Customer Support at support@chefman.com so that we may assist you.

THIS WARRANTY DOES NOT COVER

- **Misuse**

Damage that occurs from neglectful or improper use of products, including, but not limited to, damage that occurs as a result of usage with incompatible voltage, regardless of whether the product was used with a converter or adapter. See Safety Instructions in the Chefman® User Guide for information on proper use of product;

- **Poor Maintenance**

General lack of proper care. We encourage you to take care of your Chefman® products so that you may continue to enjoy them. Please see Cleaning and Maintenance directions in the Chefman® User Guide for information on proper maintenance;

TERMS AND CONDITIONS

Limited Warranty

- **Commercial Use**

Damage that occurs from commercial use;

- **Altered Products**

Damage that occurs from alterations or modifications by any entity other than Chefman® such as the removal of the rating label affixed to the product;

- **Catastrophic Events**


Damage that occurs from fire, floods, or natural disasters; or

- **Loss of Interest**

Claims of loss of interest or enjoyment.

CHEFMAN® WARRANTY REGISTRATION

What do I need to register my product?

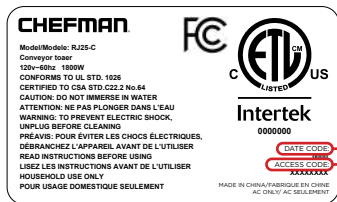

NOTE: Label depicted here is an example.

- Contact Information
- Model Number
- Proof of Purchase (online confirmation, receipt, gift receipt)
- Date Code
- Access Code

How do I register my product?

All you need to do is fill out a simple Chefman® registration form. You can easily access the form in one of the two ways listed below:

1. Visit chefman.com/register.
2. Scan the QR code to access site:



CHEFMAN® WARRANTY REGISTRATION

For product information

Please visit us at Chefman.com.

EXCEPT WHERE SUCH LIABILITY IS REQUIRED BY LAW, THIS WARRANTY DOES NOT COVER, AND CHEFMAN® SHALL NOT BE LIABLE FOR, INCIDENTAL, INDIRECT, SPECIAL, OR CONSEQUENTIAL DAMAGES, INCLUDING WITHOUT LIMITATION, DAMAGE TO, OR LOSS OF USE OF THE PRODUCT, OR LOST SALES OR PROFITS OR DELAY OR FAILURE TO PERFORM THIS WARRANTY OBLIGATION. THE REMEDIES PROVIDED HEREIN ARE THE EXCLUSIVE REMEDIES UNDER THIS WARRANTY, WHETHER BASED ON CONTRACT, TORT OR OTHERWISE.

Chefman® is a registered trademark of RJ BRANDS, LLC.
Cooking Forward™ is a trademark of RJ BRANDS, LLC.
Intertek® is a registered trademark of Intertek Group, PLC.

CHEFMAN®



CHEFMAN.COM | @MYCHEFMAN

©CHEFMAN 2021