



*recipes  
inside!*



# DVTS501

# CLEAR VIEW TOASTER

Instruction Manual | Recipe Guide







# CLEAR VIEW **TOASTER**

|                                |       |
|--------------------------------|-------|
| Important Safeguards.....      | 4-7   |
| Parts and Features .....       | 8-9   |
| Using Your Toaster.....        | 11-13 |
| Cleaning and Maintenance ..... | 14    |
| Tips and Tricks .....          | 16    |
| Recipe Ideas.....              | 17    |
| Notes .....                    | 20-21 |
| Customer Service .....         | 22    |
| Warranty .....                 | 23    |

  
*the dash team!*

## IMPORTANT SAFEGUARDS

# IMPORTANT SAFEGUARDS: PLEASE READ AND SAVE THIS INSTRUCTION AND CARE MANUAL.

When using electrical appliances, basic safety precautions should be followed, including:

- Please read and save this instruction and care manual.
- Remove all bags and packaging from appliance prior to use.
- Never leave Toaster unattended while in use.
- Make sure the appliance is cleaned thoroughly before using.
- For maintenance questions other than cleaning, please contact StoreBound directly at 1-800-898-6970 from 9AM - 9PM PST Monday - Friday or by email at support@bydash.com.
- Warning: hot surfaces. Do not touch hot surfaces. Use handles or knobs.
- Close supervision is necessary when appliance is used by or near children.
- Do not operate this appliance with a damaged cord, damaged plug, after the appliance malfunctions, is dropped, or damaged in any manner. Return your Clear View Toaster to the nearest authorized service facility for examination, repair, electrical, or mechanical adjustment.
- Do not place appliance on or near a hot gas burner, hot electric burner, or in a heated oven.
- Never operate the Toaster without its proper accessories.
- Do not use the appliance if any of the parts are damaged.
- Do not place the cord, plug, or unit near water or other liquids.
- To protect against electric shock, do not immerse the appliance, plug, or cord in water or any other liquid.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they are provided with supervision and instruction concerning use of the appliance by a person responsible for their safety.
- Do not place utensils, fingers, or other foreign objects inside the Toaster while in use as this may result in fire, electric shock, or injury.
- Do not use appliance for other than its intended use.
- Always be sure to turn off and unplug the appliance prior to assembly, disassembly, cleaning, and storage.
- Do not let the cord hang over the edge of tables or counters.
- Do not attempt to dislodge food when the Toaster is plugged in. Unplug and allow the appliance to cool down completely before proceeding.
- Do not use attachments that are not recommended by the appliance manufacturer, as this may result in fire, electric shock, or personal injury.
- Only plug your appliance into a power outlet of the correct voltage (A.C. only) as marked on the appliance.
- Warning: always unplug appliance from outlet when not in use and before cleaning to prevent the risk of electric shock. Allow to cool before putting on or taking off parts.

## IMPORTANT SAFEGUARDS

- Do not let the power cord touch hot surfaces as the cord may become damaged by the heat.
- Do not use appliance outdoors or for commercial purposes.
- Make sure the appliance is off first before unplugging from outlet.
- Do not use the appliance for defrosting food other than bread and waffles.
- If the Carriage Lever is stuck while the Toaster is on, immediately unplug the appliance and let it cool down before emptying and cleaning. If the problem persists, discontinue use of the appliance.
- Do not place wet foods inside the Toaster.
- Oversized foods, utensils, or metal foil packages must not be inserted into the Toaster as this may result in fire or electric shock.
- Do not place food in the Toaster that has been covered with butter, jelly, frosting or other condiments as this may result in fire, smoke, or jamming of the appliance.
- A fire may occur if the Toaster is covered or touching flammable materials, such as curtains, draperies, walls, and the like, when in operation.
- StoreBound shall not accept liability for damages caused by improper use of the appliance.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not completely fit in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
- A short power supply cord is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord. An extension cords is available and may be used if care is exercised in their use. If an extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance. The extension cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.
- When heating toaster pastries, always use the lightest toast color setting.

**IMPORTANT SAFEGUARDS: PLEASE READ AND SAVE THIS INSTRUCTION AND CARE MANUAL.**

## GARANTIES IMPORTANTES

# GARANTIES IMPORTANTES: VEUILLEZ LIRE ET CONSERVER CE MODE D'EMPLOI ET D'ENTRETIEN

Lors de l'utilisation d'appareils électriques, des précautions élémentaires de sécurité doivent être respectées, notamment:

- Veuillez lire et conserver ce manuel d'instructions et d'entretien.
- Retirez tous les sacs et emballages de l'appareil avant de l'utiliser.
- Ne laissez jamais le Grille-pain sans surveillance lorsqu'il est utilisé.
- Assurez-vous de nettoyer soigneusement l'appareil avant de l'utiliser.
- Pour tous travaux d'entretien autre que le nettoyage, veuillez contacter StoreBound directement au 1-800-898-6970, de 9h à 21h HNE du lundi au vendredi, ou par courriel à [support@bydash.com](mailto:support@bydash.com).
- Avertissement : surfaces chaudes. Ne touchez pas les surfaces chaudes.
- Utilisez des poignées ou des boutons.
- Une étroite surveillance est nécessaire lorsqu'un appareil est utilisé par ou à proximité d'enfants.
- N'utilisez pas l'appareil si le câble ou la fiche sont endommagés, après un dysfonctionnement ou une chute ou encore un dommage quelconque de l'appareil. Retournez votre grille-pain Clear View au centre de service agréé le plus proche pour examen, réparation, réglage électrique ou mécanique.
- Évitez de placer l'appareil sur ou près d'un chauffage électrique ou au gaz chaud, ou dans un four chauffé.
- N'utilisez jamais le Grille-pain sans ses accessoires appropriés.
- N'utilisez pas l'appareil si l'une de ses pièces est endommagée.
- Ne placez pas le câble, la fiche ou l'appareil à proximité d'eau ou d'autres liquides.
- Pour éviter tout risque de choc électrique, n'immergez pas le câble, les fiches ou l'appareil dans de l'eau ou tout autre liquide.
- Cet appareil n'est pas conçu pour être utilisé par des personnes (y compris les enfants) dont les capacités physiques, sensorielles ou mentales sont réduites, ou des personnes inexpérimentées ou disposant de connaissances insuffisantes, excepté sous la surveillance d'une personne responsable de leur sécurité qui leur donne des instructions concernant l'utilisation de l'appareil.
- Ne placez pas d'ustensiles, de doigts ou d'autres objets étrangers à l'intérieur du Grille-pain lorsqu'il est utilisé, car cela pourrait provoquer un incendie, un choc électrique ou des blessures.
- N'utilisez pas l'appareil à des fins autres que celles prévues.
- Veillez toujours à éteindre et à débrancher l'appareil avant de le monter, de le démonter, de le nettoyer et de le ranger.
- Ne laissez pas le câble pendre de la table ou d'un comptoir, ou toucher des surfaces chaudes.
- N'essayez pas de déloger les aliments lorsque le Grille-pain est branché. Débranchez l'appareil et laissez-le refroidir complètement avant de continuer.
- Utilisez uniquement des accessoires

# GARANTIES IMPORTANTES

recommandés par le fabricant de l'appareil pour éviter tout risque d'incendie, de décharge électrique ou de blessures.

- Ne branchez votre appareil que dans une prise de courant de la tension correcte (courant alternatif uniquement), comme indiqué sur l'appareil.
- Avertissement : débranchez toujours l'appareil de la prise lorsqu'il n'est pas utilisé et avant de le nettoyer pour éviter tout risque d'électrocution. Laissez refroidir avant d'assembler ou de retirer des pièces.
- Ne laissez pas le câble d'alimentation toucher des surfaces chaudes, car il pourrait être endommagé par la chaleur.
- N'utilisez pas l'appareil à l'extérieur ou à des fins commerciales.
- Assurez-vous d'abord que l'appareil est éteint avant de le débrancher de la prise.
- N'utilisez pas l'appareil pour décongeler des aliments autres que du pain et des gaufres.
- Si le levier du chariot est bloqué alors que le Grille-pain est en marche, débranchez immédiatement l'appareil et laissez-le refroidir avant de le vider et de le nettoyer. Si le problème persiste, cessez d'utiliser l'appareil.
- Ne placez pas d'aliments humides à l'intérieur du Grille-pain.
- Les aliments, les ustensiles ou les paquets de feuilles métalliques surdimensionnés ne doivent pas être insérés dans le grille-pain, car cela pourrait provoquer un incendie ou un choc électrique.
- Ne placez pas dans le Grille-pain des aliments qui ont été recouverts de beurre, de gelée, de glaçage

ou d'autres condiments, car cela pourrait provoquer un incendie, de la fumée ou le blocage de l'appareil.

- Un incendie peut se produire si le Grille-pain est couvert ou touche des matériaux inflammables, tels que des rideaux, des draperies, des murs et autres, lorsqu'il fonctionne.
- StoreBound ne peut être tenu responsable de tout dommage résultant d'un usage abusif de l'appareil.
- Cet appareil a une fiche polarisée (une lame est plus large que l'autre). Pour réduire le risque de décharge électrique, cette fiche est conçue pour ne pouvoir s'insérer dans une prise polarisée que dans un sens. Si la fiche n'entre pas complètement dans la prise, inversez-la. Si elle n'entre toujours pas, contactez un électricien qualifié. N'essayez pas d'altérer la fiche de quelque façon que ce soit.
- Un cordon d'alimentation court est fourni pour réduire les risques d'enchevêtrement ou de trébuchement. Une rallonge peut être utilisée avec prudence. En cas d'utilisation d'une rallonge, la puissance électrique indiquée sur la rallonge doit être au moins aussi grande que la puissance électrique de l'appareil. La rallonge doit être placée de telle sorte qu'elle ne soit pas étalée sur le comptoir ou la desserte, où elle pourrait être tirée par un enfant ou causer un trébuchement.
- Lorsque vous chauffez des pâtisseries pour grille-pain, utilisez toujours le réglage le plus clair pour la couleur des pâtisseries.

## GARANTIES IMPORTANTES: VEUILLEZ LIRE ET CONSERVER CE MODE D'EMPLOI ET D'ENTRETIEN

## PARTS AND FEATURES

Glass Panel

Glass Panel Clamp

Cancel Button

Browning Dial





# USING YOUR TOASTER

## USING YOUR TOASTER

- Remove all packaging material and stickers from your Dash Clear View Toaster.
- Clean the appliance and all of its components prior to assembly and use.
- Make sure loose objects have not fallen inside the Toaster.
- In order to eliminate any manufacturing residues, turn on the Toaster without bread and set the Browning Dial to level 4. The appliance may give off some smoke which is perfectly normal.



# USING YOUR TOASTER

## GETTING STARTED


1. Place the Clear View Toaster on a clean and stable surface. Make sure that no liquids or flammable objects are near the appliance.
2. Place the bread slices in the Toasting Slot. Press the Carriage Lever down until it locks into place to start the heating process. If the handle doesn't lock, check if the appliance is plugged in. The Carriage Lever will not click into place if the toaster is not plugged in.
3. Turn the Browning Dial to the desired level. The higher the number, the more toasted your bread will be. You can stop the toasting process at any time by simply pressing the Cancel Button.
4. Always unplug the appliance after use and let it cool down before cleaning or storing. When storing the Clear View Toaster, wind the power cord around the hooks located on the bottom of the appliance.

**Note:** Never stick your bare hands in the Toaster to remove food.

| TYPE    | DESCRIPTION                                                               |
|---------|---------------------------------------------------------------------------|
| DEFROST | Thoroughly toasts frozen bread with an extended toasting cycle.           |
| REHEAT  | Reheats already toasted bread or toasts bread that is not browned enough. |
| BAGEL   | Toasts bagels by using only one side of the heating element.              |

### BROWNING DIAL

Seven heating levels give you precise toasting results. Simply select your desired browning level from the chart below.

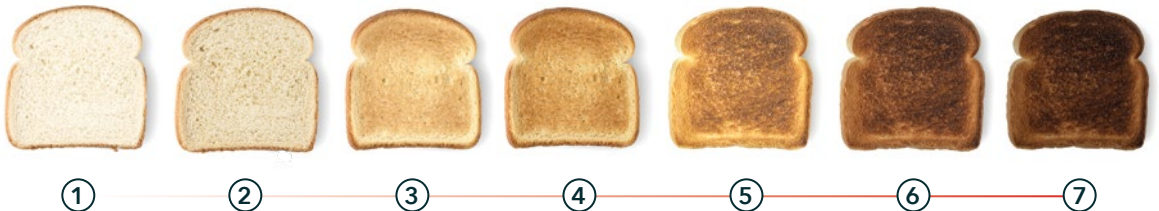

# CLEANING & MAINTENANCE

## CLEANING & MAINTENANCE

DO NOT SUBMERGE the unit in water. Instead, use a damp cloth to wipe down the surface of the Toaster. Clean the Slide-Out Crumb Tray with warm water and mild dish soap. Rinse and dry thoroughly with a lint-free cloth.

**Caution:** Be sure to clean the Slide-Out Crumb Tray regularly to prevent crumbs from accumulating at the bottom of the Toaster.

- Before cleaning your Toaster, unplug the appliance and let it cool down completely.
- Do not use abrasive scrubbers, sponges, or chemical cleaners to clean your appliance as this may damage it. Instead, use a damp cloth to wipe down the surface of your Clear View Toaster.
- When not in use, store your Toaster in a clean, dry place.

## CLEANING THE SLIDE-OUT CRUMB TRAY

- Remove the Slide-Out Crumb Tray located at the bottom of the Toaster by sliding it out from the side.
- Wash the Tray with warm, soapy water. Rinse and dry thoroughly before returning the Tray to its slot.
- To avoid any lingering food odors, remove and clean the Slide-Out Crumb Tray after each use.

## CLEANING THE GLASS PANEL

- Make sure the Slide-Out Crumb Tray is empty. Turn the Toaster upside down or on its side. Gently press the Glass Panel Clamp underneath the Toaster and then slide the Glass Panel out of the Toaster.
- Carefully wash the Glass Panel in warm, soapy water. Rinse and dry thoroughly. Slide the Glass Panel back into its grooves until the Glass Panel Clamp locks into place.



## TIPS & TRICKS



- If the bread is too small to be removed from the Toasting Slot, simply lift the Carriage Lever to raise the Carriage to its uppermost position and then pick up the toasted bread. If you still cannot carefully take out the bread, unplug your Toaster and use thin heat-resistant tongs to remove the bread from the Toasting Slot.
- Do NOT touch the metal parts as they will be hot!
- For pop tarts or frozen waffles, toast as directed.
- ONLY toast food that is meant to be toasted in a slot toaster.
- If the Toaster jams, the bread might be too thick. Remove the bread from the Toaster and slice it thinly.

**NOTE:** If the Carriage Lever does not stay down, the Glass Panel Clamp is not properly inserted all the way in. Make sure the Glass Panel Clamp is fully and securely inserted. See included note for photos.



### **LOX BAGELS**

**toasted bagel, light cream  
cheese, lox, red onion,  
capers, dill**



### **AVOCADO TOAST**

**toasted baguette, mashed  
avocado, diced tomato,  
onion, salt, pepper,  
drizzle of olive oil**



### **STRAWBERRY NUTELLA**

**toasted bread, Nutella,  
sliced strawberries**





## NOTES




# CUSTOMER SUPPORT

**FEEL GOOD  
GUARANTEE™**

Dash values quality and workmanship and stands behind this product with our Feel Good Guarantee™. To learn more about our commitment to quality, visit [bydash.com/feelgood](https://bydash.com/feelgood).

Our customer support teams in the US and Canada are at your service Monday - Friday during the times below.  
Contact us at **1 (800) 898-6970** or **[support@bydash.com](mailto:support@bydash.com)**

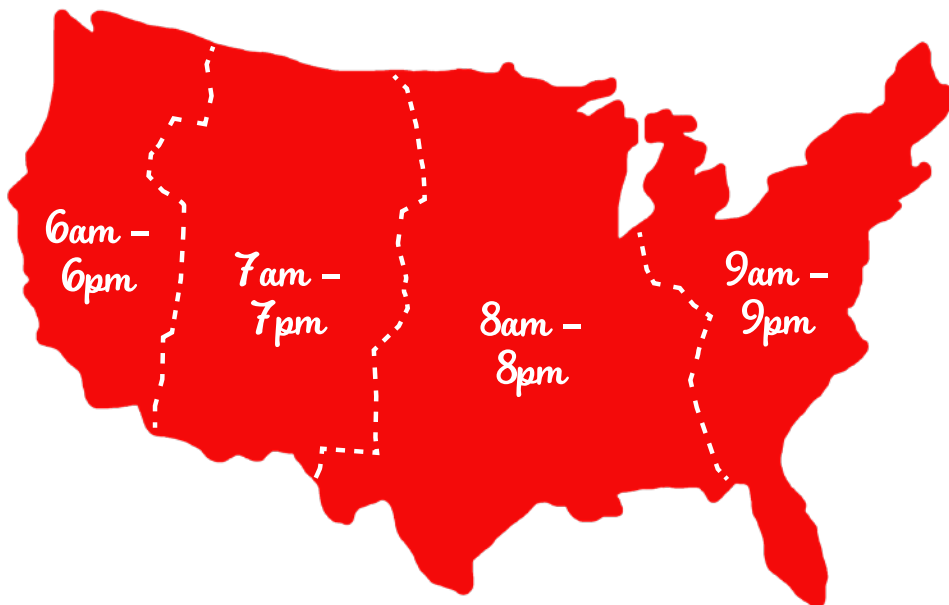

Hey **Hawaii!** You can reach our customer service team from **3AM** to **3PM**.  
And also, **Alaska**, feel free to reach out from **5AM** to **5PM**.

## STOREBOUND, LLC - 1 YEAR LIMITED WARRANTY

Your StoreBound product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of the original purchase when utilized for normal and intended household use. Should any defect covered by the terms of the limited warranty be discovered within one (1) year, StoreBound, LLC will repair or replace the defective part. To process a warranty claim, contact Customer Support at 1-800-898-6970 for further assistance and instruction. A Customer Support agent will assist you by troubleshooting minor problems. If troubleshooting fails to fix the problem, a return authorization will be issued. Proof of purchase indicating the date and place of purchase is required and should accompany the return. You must also include your full name, shipping address, and telephone number. We are unable to ship returns to a PO box. StoreBound will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any or all of the necessary information. Freight costs must be prepaid by the purchaser.

Send all inquiries to [support@bydash.com](mailto:support@bydash.com).

There are no express warranties except as listed above.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER. STOREBOUND SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OR FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT REQUIRED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts. Therefore, the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

Refurbished items or items not purchased through an authorized retailer are not eligible for warranty claims.

## REPAIRS

DANGER! Risk of electric shock! The Dash Clear View Toaster is an electrical appliance.

Do not attempt to repair the appliance yourself under any circumstances.

Contact Customer Support regarding repairs to the appliance.

## TECHNICAL SPECIFICATIONS

Model: DVTS501

Voltage 120V ~ 60Hz

Power Rating 1100W

Stock #: DVTS501\_20170803\_v14



1-800-898-6970 | @bydash | bydash.com