



Hello !

# INNIOASIS G1

## Digital Music Player



# Button & Port Introduction

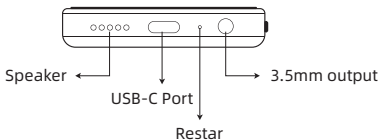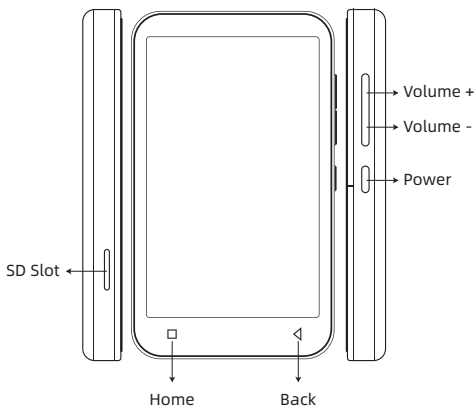

# Button & Port Introduction

## **Power:**

- In shutdown state, press and hold for 3 seconds to turn on.
- In power-on state, long press for 3 seconds to activate the shutdown options: Power off, Restart.
- Short press to turn off / on the screen.

**Volume + / - :** Press + / - to turn up/down the volume.

**USB-C:** Connect type-c cable for charging and file transfer.

**Restart:** Long press for 3 seconds with the pin, the device will be reboot.

**Back:** Click to come back to the previous page.

**Home:** Click to come back to homepage. Long press to open the background process management (Recently used apps), swipe left/right to remove the selected process.

**SD slot:** Expand storage of the device, maximum support 2 TB TF / Micro-SD card.

**3.5mm output:** Connect your headphones or external speakers as audio output.

# How to Transfer Music or Video

## 1. Transfer from your computer:

•For Windows:

- 1) Use the included USB cable to connect the player to your computer. The computer will automatically recognize the device and install the driver. After the installation is successful, Click "My Computer", you will find an MTP device named "G1" in the list of devices and drives, click on it to access the player's internal/external SD card and its folders.
- 2) Copy the downloaded music or videos, e-books and other files from your computer and paste them into the target folder of "G1" device, just like using a normal USB flash drive.

•For MacOS:

- 1) Please download and install the MTP device file transfer software. The recommended software is as follows:  
OpenMTP: <https://openmtp.gane-shrvel.com/>  
MacDroid: <https://www.macdroid.app/>

## How to Transfer Music or Video

- 2) Launch the installed OpenMTP or MacDroid software and follow the prompts to connect the player to the Mac device. You will find the device named "G1" and all its folders in the device list of the software.
- 3) Copy the downloaded music, videos, e-books and other files from the Mac device and paste them into the target folder of the device "G1".

### **2. Transfer from your phone:**

·For Android:


Transfer music or videos from Android smartphone to the player requires the MiniShare app. Please scan the following QR code to download and install MiniShare.



Minishare for Android

## How to Transfer Music or Video

### ① Android phone ⇒ G1 Player

- a. Click the "File transfer" icon on the desktop of the G1 player to open the MiniShare App. And click the  icon in the middle of the window to switch to Send/Receive mode, and then click the "Receive" icon, and the device will start hotspot and pop up a QR code for scanning.
- b. Open the MiniShare app on Android phone, also click the  icon in the middle of the window to switch to Send/Receive mode, and click the "Send" icon, then select the music and videos to be transferred, and click the "Send" button that pops up below. Next, you can find the avatar and name of G1 player in the search radar, click it to establish a connection and start transferring files (If you have set a hotspot password, you will be asked to enter it). If not found in the search radar, you can also click the "Scan QR Code" button below to activate the camera scanning, and scan the QR code of G1 player to establish a connection, and then

## How to Transfer Music or Video

start to transfer files.

### ② Android phone ↔ G1 Player

- a. Click the "File transfer" icon on the desktop of the G1 player to open the MiniShare app. And click the  icon in the middle of the window to switch to Create Group/Join mode, and then click the "Create Group" icon, and the device will start hotspot and pop up a QR code for scanning.
- b. Open the MiniShare app on Android phone, and also click the  icon in the middle of the window to switch to Create Group/Join mode, click the "Join Group" icon. Next, you can find the avatar and name of G1 player in the search radar, click it to establish a connection and start transferring files (If you have set a hotspot password, you will be asked to enter it). If not found in the search radar, you can also click the "Scan QR Code" button below to activate the camera scanning, and scan the QR code of



## How to Transfer Music or Video

G1 player to establish a connection, and then start to transfer files.

*Tips: In the Create Group/Join Group mode, multiple devices are allowed to join the same group to transfer files between each other.*

### •For IOS:


Since IOS is a closed source system, the music stored on the iPhone cannot be transferred directly to the G1 player. You must first export the music to your computer from your iPhone with iTunes or other third-party software (such as iTools), and then transfer to the G1 player from your computer (please refer to the "Transfer from your computer" section).

*\* The pictures and videos in the Photos App can be transferred directly to the G1 player. Please refer to the FAQ section in the "File Transfer" chapter.*

# MUSIC

## 1. Know The Main Window of Music App

Click the Music app on the player's desktop to enter the main window. Here, there are 4 commonly used tabs for you to customize the function menu of the app, and manage songs and playlists. As below:

1)  Including User login, Function menu, Settings, etc.

- **Import Music Via WiFi:** (only applicable to models with WiFi) Import music in batches from your computer and cellphone via WiFi. The player and the sending device must be under the same wifi.

- **Music scan:** Scan music in all folders or specific folders. Different scanning rules can be selected.

- **Equalizer:** Enable or disable equalizer, you can choose Pop, Blues, Classic, Jazz, Rock, Dance, Metal, Voice, Custom, etc.

- **MSEB:** enable/disable MSEB sound adjustment.

- **Plugins:** Add playback plugins.

- **Sleep timer:** Set the sleep time from 0 to 120 minutes, and once the set time is exceeded, it will stop playing music.

# MUSIC

- **Settings:** More setting options can be found here, such as Show lyric, Resume play from last position, Font size, Language, Album cover display, etc.

- **Quick guide:** Guide you to operate the App

- **Exit:** Close and exit the music App

2) 🎵 Manage your songs according to different categories. For example:

- **Title:** Show all local songs, including device internal storage and external SD card. And sort in alphabetical order by default.

- **Folder:** Show all local folders, including the device internal storage and external SD card. You can quickly access the target folder and add songs to the playlist in batches.

*\* If you want to display only the folders containing music, you can enable the "Filter non-music files and folders" item in "Music scan"*


- **Album:** Organize songs by album name

- **Artist:** Organize songs by artist name

- **Genre:** Organize songs by their genre type



# MUSIC


- **Album Artist:** Organize songs by album + artist

3)  Manage all your lists, including:


- **Favourite:** List all songs marked as Favourite.


- **Recently:** List those recently played songs

- **Playlist:** List all playlists you have created. Here you can click  to create a new playlist, or click  to import a playlist.





4)  Quickly search for Tracks, Artists, Albums or Genres.

Moreover, there are more shortcut menus under each song category to meet your different operating needs. For example:

1)  **Shuffle all:** Click “Shuffle all” every time, it will refresh the shuffle sequence.








2)  Click this icon under Title or Folder to activate the selection mode, and then click the check box in front of target files one by one to select it. Next, you can do in the shortcut bar at the bottom:

# MUSIC

-  Enqueue(next track) -- Assign the currently selected song as the next track.
-  Add to playlist -- Add the currently selected song to a specific playlist.
-  Send to -- Unavailable
-  Delete -- Delete the currently selected song












*Note: To activate the selection mode under Album, Artist, Genre, Album Artist, long press any item under it.*

## 3) Long press any item under Title or Folder, you can:

-  Enqueue (next track) -- Assign the currently selected song as the next track.
-  Enqueue (last track) -- Add the current song to the playback sequence.
-  Add to playlist -- Add the current song to the playlist.
-  Properties -- View the details of the current song
-  Delete track -- Delete the current song
-  Show album info -- View the info of the album where the song is located.
-  Send to -- Unavailable



## 2. Know The Music Playing Window

Click the thumbnail bar at the bottom of the main window to access the music playing window. Here, you can view the album cover, lyrics, details (Samplerate, Bits, Bitrate, etc.), and control the playback process. The following are some commonly used keystrokes.


-  -- Switch between the linear progress bar and the circular progress bar
-  -- Shuffle all. Click it to switch to List loop, Loop single, Sequential play.
-  -- List loop
-  -- Loop single
-  -- Sequential play
-  -- Click to switch to the next song
-  -- Click to switch to the previous song
-  /  -- Play/Pause
-  -- View the playlist of the current song.
-  -- Enable shortcut menu: Add to playlist, Equalizer, Show album info, Properties, Obtain lyrics and cover art online

## 3.FAQ


### 1) How to create a playlist?

Click "  New playlist" in the "Playlist" of the list-tab  , then enter the name you want, and click Ok.

### 2) How to add songs to the playlist?


- Add single: Long press the target track, and select "Add to playlist" in the pop-up menu, Next, Select an existing playlist or click "New Playlist" to create a new playlist for store.
- Add in batch: Click this icon  under Title or Folder to activate the selection mode, and then click the check box in front of target files one by one to select it. Next, Then select "Add to playlist" in the bottom toolbar.

### 3) How to view lyrics?

Swipe left in the middle of the playing window to switch between the album cover, lyrics page, and details page. Lyrics come from your local lrc file. If lrc is missing, you can also click the icon  in the upper right corner and select "Obtain lyrics and cover art online" to get.

# MUSIC

4) Added a new music folder or SD card, but the device did not find the music stored in them, How to do?

Please click on the icon  in the main window to select and perform “music scan”.





# VIDEOS


## 1. Know the video management window


Click the Videos app on the player's desktop to enter the folders management window. Here, all folders with videos are displayed. Click any folder to enter the video management window. You can do the following in these 2 windows.


1) Click the icon in the upper left corner, you can get more function menu.

 App Language -- Set the language of the app. Defaults to the system language


 App Theme -- Set the theme of the app, such as the background color of the title bar and window.


 Local Music -- List all local music. You can click to play the song.


 Equalizer -- You can activate/deactivate EQ to choose Normal, Classical, Dance or Custom mode, and adjust bass and virtualizer.


 Video Playlists -- You can create your own video playlist, add videos to it, and specify the playback mode: Repeat All, Shuffle All.


# VIDEOS

 Network Stream -- Enter the URL to play the video, the target website or server support is required.

 Local Network -- Access and play video files on local LAN servers. Requires server support.

 Local Player Settings -- Provide more App settings, such as Decoder, Audio, Subtitle, etc.

2) Click the icon  , you can adjust the view mode, layout and sorting of the folders or videos management windows.




3) Click the icon  in the upper right corner, 3 options are available:

- Refresh -- Refresh the window to show the latest folders and files.
- Create Folder -- Create new folder
- Select -- Click this option to activate the selection window and perform more actions on the selected video, including:
  - i. Check/uncheck of single/multiple videos -- Click the target videos one by one to select them, click again to deselect.

# VIDEOS


- ii. Check/uncheck all videos -- Click the button ✓ in the toolbar to select all, click again to deselect.
- iii. Move selected videos -- Click the button ⇄ on the toolbar to activate the popup window. Next, return to the target folder through the button in the upper left corner, and then click the MOVE HERE button to start moving, or you can click "+ Create New Folder" firstly and then click "MOVE HERE".
- iv. Copy selected videos -- Click the button □ on the toolbar to activate the pop-up window. Next, return to the target folder through the button in the upper left corner, and then click the COPY HERE button to start moving, or you can click "+ Create New Folder" firstly and then click "COPY HERE".
- v. Add selected videos to playlist -- Click the button ≡ in the toolbar to activate the list popup, and then select an existing playlist to add the selected videos to the list. Or click "+Create New Playlist" to generate a new playlist for adding.

# VIDEOS


- vi. Marked selected videos --Click the button  in the toolbar to mark the selected videos as: Last played, New, Finished, None.
- vii. Rename selected video - (only available when 1 video is selected.) Click the button  in the toolbar to rename this videos.
- viii. Delete selected video -- Click the button  in the toolbar to delete the selected videos.

## 2. Know the video playback window

Click the video you want to play in the video management window to enter the playback window. Here, provide you with a lot of shortcut buttons to make you get a better viewing experience.


 Screen Rototion -- Click it to rotate the screen to horizontal or vertical.


**1X** Speed-- Click it, and drag the speed-bar or click "+ / -" to change the playback speed (Min 0.25X, Max 4.0X).

 Background play-- Enable/disable background playback, once enabled, you

# VIDEOS

can access other apps without exiting video playback


 Equalizer-- Enable/disable EQ, you can choose Normal, Classical, Dance, Flat, Folk, Heavy metal, Hip Hop, Jazz, Custom, etc.

 
 Night Mode-- Switch to night mode, click again to return to Normal mode.


 Shuffle -- Switch to shuffle mode.

 Loop -- Switch to loop mode.

 Mute -- Turn off video sound.






 



 Sleep Timer -- Set the sleep time, and the video will automatically stop playing when the set time is reached.



 A-B Repeat -- Click and drag the progress bar to define the time point of A and B, and then the player will automatically repeat the segment between A to B.


 Customise items-- Customize the shortcut functions in the upper right corner and lower right corner. Up to 5 items can be added. The optional items as below.

- **SW** Hardware Acceleration -- Here you can choose the decoder, such as: HW decoder, HW+ decoder, SW decoder

# VIDEOS

-  Playlists -- View the playlist of currently playing videos, you can remove a video from the playlist
-  Audio Track -- Select or disable audio tracks, or open audio tracks in local folders, and set the time of synchronization.
-  Subtitles -- Open a local subtitle file or search for available subtitle files online.
-  Popup Window -- Reduce the playback window to pop-up mode so that you can perform other folder operations at the same time without exiting the playback.
-  Zoom -- Switch the viewing size:  
 100%,  Fit to screen,  Crop,  Stretch.

 /  -- Lock / unlock the operation on the window. once locked, all keys and menus are invalid. Click it again to restore.

 -- Click to switch to the next video; Long press, a pop-up menu will let you choose the playback mode: Loop one, Loop all, Shuffle.

 -- Click to switch to the previous video.

# VIDEOS

▶|| -- Play/Pause

⋮ -- Click this icon in the upper right corner, more menu options will give you more help. such as Display Settings, Aspect Ratio, etc.

In addition, some faster operations are available for reference:

- Swipe up/down on the right side of the playback window to quickly adjust the volume
- Swipe up/down on the left side of the playback window to quickly adjust the brightness
- Swipe left/right in the playback window to rewind or fast forward
- Zoom in or out with GMD gesture controls

## 3. FAQ

1) How to fast forward or rewind?

- ①Press and hold in the playing window and drag the progress bar forward or backward to the target position.
- ②Click the target position you want to play on the progress bar.

# VIDEOS

③Swipe left/right in the playback window.

2) Can I speed up or slow down the playing speed? How to do?

Yes, you can. Click the icon **1X** in middle of the playing window and drag the speed-bar or click "+ / -" to change the playback speed. If the icon is not found, click > to expand the icon set.

3) If shuts down unexpectedly during playing, after restarting, can the player continue to play from where it stopped last time?

Yes it can. It supports resume playback. When you come back again, you will get the prompt "Continue from where you stop START OVER". Unless you select "START OVER", it will resume playback by default.

4) My video has audio tracks in different languages, such as English, Portuguese, can I choose one of them to play.

 

Yes. Please click the icon 🎵 in the playing window, and then select the target audio track in the pop-up window.



# Gallery

## 1. About the page of albums management




 

Click the Gallery app on the player's desktop to enter the page of albums management. Here,

- 1) All folders will be displaying, click to open any folder if needs.
  - 2) The default view is "Albums". If the pictures are grouped by location or time, click the icon ▼ in the menu bar at the top of the window to select the view mode of Locations or Times
  - 3) Click the ⋮ icon in the upper right corner, and click "Select album" to activate the selection menu bar. Then multiple or all albums can be selected to share or delete.
- **Select one or more albums:** Manually touch
  - **Select all albums:** Click the "Select all" option from the ▼ icon at the top of the page.
  - **Deselect:** Click the "Deselect all" option from the ▼ icon at the top of the page.
  - **Sharing:** Click  to share by Bluetooth when folders been selecting.
  - **Delete:** Click the  icon when folders been selecting.


# Gallery


## 2. About the page of pictures management


Click a folder in the page of album management to enter the page of pictures management. All photos in the folder will be displaying here. In this page:

- 1) **View selection** -- Click  at the top of the window, "Filmstrip view" or "Grid view" can be chosen.
- 2) **Slideshow** -- Click  in the upper right corner and click "Slideshow" in the pop-up menu to automatically display photos one by one.
- 3) **Select item** -- Click  in the upper right corner and click "Select item" to activate the selection menu bar. Then multiple or all photos can be selected and edited.
  - Select one or more photos: Manually touch in "Select item" mode.
  - Select all photos: Click the "Select all" from the ▼ icon at the top of the page.
  - Deselect: Click the "Deselect all" from the ▼ icon when all photos been selecting
  - Sharing: Click  to share photos by Bluetooth when photos been selecting.
  - Delete: Click  the icon, and then select


# Gallery

- **Rotate:** Click the  icon, and then select "Rotate left" or "Rotate right" to rotate the photos in batch when photos been selecting.

- **Corp:** Click the  icon, and then select "Corp" for adjust size of photo.

 
- **Set picture as:** Click the  icon, and then select "Set picture as" for a wallpaper.

- **Details:** Click the  icon, and then select "Details" for details information.


4) **Group by** -- Click "Group by" from  in the upper right corner, photos can be grouped by location or time.

## 3. Edit Pictures

Click a picture in the page of pictures management:

- **Share:** Click  to share to other devices by Bluetooth.

- **Delete:** Click the  icon in the upper right corner, and then select "Delete".

- **Edit:** Click the  icon in the lower left corner, or select "Edit" in the upper right menu to open the edit page. Then Style, Color Saturation, Shadow, Exposure, Contrast,

# Gallery

Stretching, Mirroring of the current picture

- **Rotate:** Select "Rotate left" or "Rotate right" in the upper right menu to rotate the current photos.
- **Crop:** Select "Crop" in the upper right menu, then adjust the size of the crop box, click save to crop the current picture
- **Set picture as:** Select "Set picture as" in the upper right menu to set the current picture as wallpaper.
- **Details:** Select "Details" in the upper right menu to view information of the current picture, such as width, Height, Size, Path, Create time. can be modified.

## 4. FAQ

1. How to zoom in or out of pictures?

The player provides GMD gesture control function, which allows image zooming through 2 fingers gesture.

## 1. Know the main interface of Ebook

Click the Ebook app on the player desktop for the first time to enter the main interface, and a pop-up window will show the entrances of 5 modules :

- **Recent list** -- Manage the books you have read recently
- **My Shelf** -- Manage your favorite books
- **My Files** -- Manage your local and network folders
- **Net Library** -- Manage your online library
- **Bookmarks** -- Manage all Bookmarks, Note, Highlight, etc.


## 2. Know the page operation layout


Open a book through the Ebook app for the first time, it will ask you to choose a page operation layout you are used to. There are 11 options in total. It determines the trigger area corresponding to Page up, Page down, Options, Bookmarks on the page when reading. For example, click on the right side of the page to jump to the next page, or click on the middle of the page to pop up the options task bar.


## 3. About Options and Reader bar


In the page operation layout, the options function is usually located in the middle area of the page. So when reading, tap the middle of the page to quickly pop up the Reader bar. When the options is triggered for the first time, the app will pop up a window to let you customize the buttons of the reader bar. You can tick the items you need. Using reader bar, you can get a better reading experience.


 **Screen Orientation** -- Switch to horizontal / vertical screen display


 **Day / Night mode** -- Switch to Day theme / Night theme

 **Speak** -- Activate TTS voice reading (Need voice engine support)


 **Autoscroll** -- Activate automatic scrolling, and no need to turn pages manually


 **Chapters** -- Manage the chapters and bookmarks of the book, through which you can quickly click to access the target chapters or bookmarks.


 **Bookmark** -- Add the current page as a new bookmark.

 
 **Brightness** - Adjust brightness and enable blue-light filter.


 **Font Size** -- Adjust font size.



 **Search** - Search for text in the current book.

 **Allow tilt device to turn page** - Turn on or off the function of turning pages by tilting the device.

 **Visual Options** -- Provide more text and page adjustment options, such as font, font size/color/style, background color, paragraph spacing, line spacing, etc.

 **Control Options** -- More options for page operation and screen control. Such as defining the action of clicking, sliding, long-pressing, etc.

 **Miscellaneous** -- More reading auxiliary settings, such as full screen mode, screen awake, automatic scrolling mode.

 **Options** -- More page adjustment and control options. It is equivalent to the shortcut button of the  menu in the upper right corner of the page.

 **Shutdown** -- Exit Ebook

## 4. FAQ

1. How to select text in the book to copy, annotate, highlight or add special processing?

In the reading page, long press the target text, the app will pop up an option window, you can do:

 -- Add background color to selected text

 -- Underline selected text

 -- Add strikethrough to selected text

 -- Add wavy-underline to selected text

• **Copy** -- Copy selected text


• **Highlight** -- Highlight selected text

• **Note** -- Annotate selected text

• **Wikipedia** -- Jump to Wikipedia to view the selected text.

• **Google** -- Jump to Google to search for the selected text.


*Tips:*

- You can change the range of the selected text by dragging the cursor.
- You can click on the color block to change the preset color.
- To cancel the above text processing, just click the  button in the column.



2. Can I quickly locate a chapter or page of the book?

Yes it is. You can do it in the following ways:

- 1) Click the Options area of the page to trigger the reader bar, and then drag the reading progress bar to the target position, or click < > to jump page by page or chapter by chapter.
- 2) Click the icon  of the Reader bar, and click to select the target chapter or bookmark (if available).

# Recorder

## 1. About the page of recorder

Click the Recorder app on the player's desktop to enter its main operation interface. Here, you can do:

●/|| -- Start/pause recording

■ -- Stop recording. After clicking, you can choose "Discard" or "Save" the current recording.

▶/|| -- Play/pause the current recording

☰ -- Recording list, where the recordings are saved.


Click the ☰ icon in the upper right corner, you can also:

- **Voice quality:** Select "voice quality", you can set it to "High" or "Mid".
- **Recording mode:** Select "Recording mode", you can set the use occasion for recording, such as Normal, Meeting, Lecture.

### 1) How to delete/delete in batch recording files?

Click the ☰ icon to open the recording list, and long-press any recording to activate the check box, check the




# Recorder

recording that needs to be deleted, and then click the  icon below.

# FM Radio


## 1. About the FM Radio.


Click the FM Radio app on the player's desktop to enter its main operation interface. Here, you can do:


 -- Channel list. Save all channels that have been searched. Click the icon  in the upper right corner of its window to refresh the channel list. Click the icon  to the right of each channel to mark it as favorites


 -- Stop the FM Radio

 -- Stop the FM Radio

 -- Manually adjust the frequency to search for channel

 -- Click it to mark the current channel as favorites.

 -- Click it, you can choose Earphone or Speaker as the audio output device. (the wired earphones is still required to be connected as the antenna).

 -- Click it and you can make FM recording. Only 2 options available: Start recording, Saved recording

## 2. FAQ

1) Can I edit the name of my favorite channel.

Yes. When clicking the icon to mark the channel as favorites, click the icon in the popup and select "Rename", then enter a name and save.


# Clock

## 1. About the page of Clock


Click the Clock app on the player's desktop to enter here, 4 clock-related modules will be shown.

### 1) ALARM


① Add a new alarm:

Click the icon  at the bottom of the window, it will jump to the "HH" dial by default, move the hour hand on the dial to the target position with your finger and let go. Then it will automatically jump to the "MM" dial, move the minute hand to the target position in the same way and let go. Then click to select AM or PM, then click "OK".

*\* Click the HH: MM field above the dial to return to readjustment*

*\* If you prefer keyboard input, click the icon  in the lower left.*




② Add Repeat date/Cesium/label for alarm clock

Click the button  under an alarm clock to expand the setting item:


·Repeat -- Check the "Repeat" option, then click on weekdays that do not

# Clock


need to be repeated to uncheck it.

-  Default (Cesium) - Click it, then select the one you like in the pop-up ringtone library.
-  Lable -- Click "Lable" and enter the label text,click "ok". It is usually used to indicate the purpose of alarm clock.
-  Delete - Click it to delete the current alarm clock.


## ③ Enable/Disable alarm clock

Click the button  on the right side of the alarm clock to enable/disable the alarm clock;

## ④ More settings

Click the  icon in the upper right corner of the window, and select "Settings", You can get more alarm settings, such as Style, Home time zone, Alarm volume, Snooze length, etc.

## 2) CLOCK

Here, you can add time zones for multiple cities and make them appear in the window. Click the icon  at the

# Clock

bottom, and then tick the city you want to display.

*Tips: you can find the target city by scrolling the screen or the search button 🔍 .. The time zone list is sorted alphabetically by default. You can also click the icon ⋮ in the upper right corner and select Sort by time.*

## 3) ⏴ TIMER

### ① Add a new timer

- a. Click the number in the numeral dial to set the timer time, and then click ▶ to start.
- b. Click "ADD TIMER" in the timer list to add and run multiple timer.

### ② Label a timer

Click "Label" tag above a timer to add a label to the timer to explain the purpose of the timer.

### ③ Increase the duration of the timer

For a running timer, click the button "+1:00" in middle of the timer to add 1 minute to it each time.

### ④ Pause or Resume timing

Click the button ▶ / ⏸ below to pause the timer or resume it.



# Clock



## ⑤ Reset a timer

For the timer in the paused state, click "RESET" in middle of the timer to return to the initial state and restart the timer.

## ⑥ Delete timer

Click "DELETE" key in the lower left corner to delete the current timer.

## 4) STOPWATCH

① Start / Stop stopwatch: Click the button  /  to start or pause stopwatch.





② Record a point in time: During running, each time you click on "LAP" key in the lower right corner, a time point will be recorded.

③ Reset stopwatch: Click on "RESET" key in the lower left corner of the stopped stopwatch to reset the stopwatch.

# File transfer


 

## 1. Know the main interface of MiniShare


Click the “File transfer” icon on the player’s desktop to run the MiniShare app. This app is mainly used for file transfer between smartphone and G1 player. On the main interface, you can see the following function icons.

- 1)  -- Click the icon in  the upper left corner, you can do in the pop-up window:
  - ① **Edit the device avatar:** Click the icon , and click the “Modify” button, then select “Select from gallery”. Find the target picture in the gallery and click it (If necessary, If necessary, you can adjust the size of the clipping box to select a part of the picture) , and then click the SAVE button in the upper left corner.
  - ② **Edit the device name:** Click the default device name or  on the right side of the avatar, enter new name and click OK

*\*The personalized avatars and names allow you to better identify your device in the search radar.*








# File transfer

- ③ **Name WIFI hotspot:** Click the button  on the right of "Name WiFi hotspot with nickname" under "Settings", you can switch the hotspot name from the default d2b68RGRkZGZk to your device's nickname to better identify your device.
- ④ **Set connection password:** Click the button  on the right of "Set connection password" under "Settings", and enter the 8-character alphanumeric password, then click ok. This makes it necessary for others to enter the password when they want to connect to your device.
- ⑤ **Set default storage:** Click the button  on the right of "Default Storage" under Settings, You can specify internal storage or external storage as the default storage for receiving files.

2)  -- Click the icon in the upper right corner, you can get different menu options:

- ① **Connect to Zapy** -- Guide you how to connect to Android device/Apple device/PC/Windows device

# File transfer

- ② **Set WiFi Options** -- You can set the WiFi type used to establish the connection as WiFi Direct or WiFi Hotspot, and set a password for the hotspot. And you can also choose whether the WiFi channel is 5G or 2.4G.
- 3)  /  -- Click the icon  or  in the middle of the window, you can switch the file transfer mode to Send/Receive (one-way) or Group.
- 4)  -- Click the “ history” button, you can view all historical sending and receiving records.
- 5)  -- Click the“  Local File” button, you can view the photos, videos, and music in the local folder.  
Here, you can also quickly share them with friends follow the steps below.
- ① Click the check-box behind the file to select the photo/video/audio that needs to be shared.
- ② Then click the “Share” button at the bottom of the window, a QR code will pop up and create a Group named after the device name.

# File transfer

③ Next, you have 2 ways to establish a connection to transfer files.

- Scan QR code: For iPhone, please install and open ZapyGo app on your phone and scan the QR code. Then, click "Go to Settings" to jump to the WIFI settings of your iPhone, and set the currently connected WIFI to the hotspot of G1 (If you have set a hotspot password, you will be asked to enter it). Then return to ZapyGo to start transfer; For Android phones, Please install and open MiniShare app on your phone and scan the QR code. The app will automatically start transferring files.
- Join in Group: For Android phones, open MiniShare and click the icon to switch to Group mode, then select "Join Group", you will find the group created by the G1 player in the search radar, click it to join (If you have set a hotspot password, you will be asked to enter it) and start transfer.

# File transfer

## 2. FAQ

### 1. How to get MiniShare or ZapyGo App?

- For Android Cellphone

Please scan the following QR code to download and install MiniShare.



Minishare for Android

- For iPhone

Please search for “Zapy Go” in the App store or scan the following QR code to download and install.

# File transfer



Zapya Go for ipone

*ZapyaGo can only be used to transfer pictures and videos those in the Photos App, not to directly transfer music from iPhone.*

## 2. How to transfer files between cellphones and G1 players?

- For Android:


Please refer to the "Transfer from your phone" topic in the "How to Transfer Music or Video" section.


- For IOS:

### ① **iPhone⇒ G1 Player**

- a. Click the "File transfer" icon on the

# File transfer



desktop of the G1 player to open the MiniShare App. And click the  icon in the middle of the window to switch to Send/Receive mode, and then click the "Receive" icon, and the device will start hotspot and pop up a QR code for scanning.

- b. Open the ZapyGo on iPhone, and also click the  icon in the middle of the window to switch to Send/Receive mode, click the "Send" icon, then select the photos or videos to be transferred, and click the "Send" button that pops up below. Next, click "Scan to connect now" in the pop-up window to activate the camera scanning function, and scan the QR code on G1 player.
- c. According to the pop-up prompt, Click "Go to Settings" to jump to the WIFI settings of your iPhone, and set the currently connected WIFI to the hotspot of G1 (If you have set a hotspot password, you will be asked to enter it). Then return to ZapyGo, and the app will starts uploading files to the player.



# File transfer

## ② iPhone ↔ G1 Player

- a. Click the "File transfer" icon on the desktop of the G1 player to open the MiniShare App. And click the  icon in the middle of the window to switch to Create Group/Join mode, and then click the "Create Group" icon, and the device will start hotspot and pop up a QR code for scanning.
- b. Open the ZapyGo on iPhone, and also click the  icon in the middle of the window to switch to Join mode, click the "Join" icon, Next, click "Scan to connect now" in the pop-up window to activate the camera scanning function, and scan the QR code on G1 player.
- c. According to the pop-up prompt, Click "Go to Settings" to jump to the WIFI settings of your iPhone, and set the currently connected WIFI to the hotspot of G1 (If you have set a hotspot password, you will be asked to enter it). Then return to Zapy Go, The mutual connection is




## **File transfer**

successfully established. In this way, you can either transfer files from iPhone to the player, or transfer files from the player to iPhone.


 

# File Manager

In page of file manager, files have been classified by format, including Music, Videos, Picture, Apks, Document, Zips, Recent, Favorites, All. If a quick check needs, click to Search files.

## Click device storage for files listing view






1. New folder: Click the icon  for create a new folder at listing.
2. Search: Click the icon  for file searching by enter part of the file name.
3. Sort by: Click the icon  Arrange files by Name/Size/Date/Type.

## Multiples folders/files selection and features

1. Multiples folders/files selection: long press the file or folder
  - 1) Selection all / Deselect all: Click icon  right top of the page.
  - 2) Share -- Click the icon  at the bottom of the page share to other devices by MiniShare or Bluetooth when files being selected (folders unable to be sharing by this feature but files).
  - 3) Copy, Cut and Paste -- Click the icon 

# File Manager

/ ✂ at the bottom of the page for copy/cut files when files being selected. Then find the folder where they should paste into, and click "PASTE".

- 4) Delete -- Click the icon  at the bottom of the page when files being selected.
- 5) Rename -- Find the icon  in the lower right corner and click "Rename" to edit the name of the file or folder when a target file or folder being selected.
- 6) Add to Favorites: Find the icon  in the lower right corner and click "Add to Favorites" to add the file or folder to your favorite list when a target file or folder being selected.
- 7) Compress: Find the icon  in the lower right corner and click "Compress" to compress file or folder when file or folder being selected.
- 8) Details: Find the icon  in the lower right corner and click "Details" to review the details of file or folder when file or folder being selected.

# Calendar

In the calendar page, functions provided belows:

- 1) **Switch calendar view:** Click the icon ▼ at the top of the page to switch the view to Day, Week, Month, and Agenda.
- 2) **Add New event:** Click the icon ⋮ in the upper right corner, select "New event", enter the event name, location, time period, time zone, reminder and other information, and then click the "DONE" button. After the event is created, the date related to the event will be marked with overline.
- 3) **Clear events:** Click the icon ⋮ in the upper right corner, select "Clear events", select the account ((default is PC sync) that needs to delete the event, and click "OK". All the events in selected account will be deleted.
- 4) **Search events:** Click the icon ⋮ in the upper right corner, select "Search", and enter the keyword of the event by click 🔍 .

# Other apps

## **Other third-party apps**

Please refer to their website or the help file in the Apps. Including: Spotify, Pandora, Deezer, TIDAL, Apple music, Amazon music, Audible, Amazon kindle, Facebook, Twitter, etc.

# Settings

## 📶 Network & Internet

- Wi-Fi: Wi-Fi connecting selection.
- Data usage: Details for data usage.
- Hotspot & tethering: Sharing Wi-Fi single via USB cable and Bluetooth to other devices.

## 📱 Connected devices

- Bluetooth: Bluetooth connecting selection.
- USB: Use USB to
  - Charge this device
  - Transfer files
  - Transfer photos (PTP)
  - Use device as MIDI.

## 📱 Apps & Notifications

- Recently opened apps: History for running state of apps.
- Notifications: Adjust permissions of app notification showing.
- App permissions: Adjust permissions of app, such as using location, microphone...

# Settings



## Battery

- Charge and usage information of Battery:
  1. Last full charge;
  2. Screen usage since full charge.
- Power management
  - Standby intelligent power saving
  - Battery percentage: Show battery percentage in status bar.
  - Sleep: After (arrange) minutes/seconds of inactivity, screen will be turn off.



## Display

- Brightness level: A control bar for brightness of screen adjustment.
- Night Light: Setting a schedule for night light status and adjust intensity of brightness.
- Wallpaper: Pictures of wallpaper selection.
- Sleep: After (arrange) minutes/seconds of inactivity, screen will be turn off.



# Settings



## Sound

- Media volume: A control bar for Media volume adjustment.
- Alarm volume: A control bar for Alarm volume adjustment.
- Ring volume: A control bar for Ring volume adjustment.
- Do Not Disturb Preferences: Setting app and schedule for do not disturb rules.



## Storage

Display the available space and total space of internal storage and SD card, as well as the occupancy of each App.



## DuraSpeed

Setting permission to allow APPs running in background.



## Security & Location

- Device security: Setting a screen lock by Pattern, PIN, Password

*Warning: When you set a password or PIN, be sure to write down it before you click Confirm.*

*Otherwise, you will not be able to access the device.*

# Settings

## ·Privacy

- Location: Setting permission to allow APPs tracking your location.
- Show passwords: Display characters briefly as you type.



## **Users & Accounts**

Manage accounts of APPs or Device.



## **Accessibility**

### ·Display

- Font size: Adjustment of font size.
- Display size: Adjustment of display size.
- Magnification: Setting an action for function of zoom.
- Color correction: Adjustment of color of screen.
- Color inversion
  - Interaction controls
- Touch & hold delay: short/medium/long can be chosen.
  - Experimental
- High contrast text: on/off

# Settings

## ⓘ System

- Languages & Input: Setting languages and input method.
- Date & Time: Setting time of device.
- Reset locked: Lock the reset option to prevent others from resetting the device
- Reset options: Reset WiFi, Bluetooth, App preferences, even reset to factory settings.
- About device: Detail information of device.

# Common faults and Solutions

## 1. The player can't be charged.

In the off state, when the USB cable is connected for charging, The player will normally light up and display a battery logo and remaining charge.

Troubleshooting:

- 1) Check whether it is caused by poor contact.

In most cases, charging failure is caused by poor contact. You can repeatedly plug and unplug the USB cable to test whether the charging can be resumed. If it can be charged at a certain moment, it indicates that there is poor contact.

- 2) Check whether USB port is damaged

Connect the player to a computer with an available USB port by using a proven USB cable. If the fault persists, it indicates USB port of the player has been damaged.

- 3) Check if the USB cable is damaged.

- You can replace a proven USB cable to connect the player to check whether it can be charged. If it can, it means that the previous cable has been damaged.
- You can also use the USB cable to try to

## Common faults and Solutions

charge other devices, such as cellphones, to check whether it can charge other devices. If not, it means also that the cable has been damaged.

If it is confirmed that both the USB cable and the charging port are normal, it can be determined that it is the fault of the player itself. Please contact after-sales support for replacement or refund.

*Tips: If turned off and not used for a long time (more than 3 months or even longer), the player may not be able to turn on or be charged. This is usually an illusion caused by the device being in an over-discharge protection state, rather than a real failure. In this case, please make sure to charge it for at least 2 hours before trying to turn it on.*

### **2. Nothing happens when the player is connected to computer with USB cable.**

Usually, use a USB cable to connect the player to the computer, an MTP device named G1 will appear in the device and drive list of your computer.

Troubleshooting:

- 1) Check whether it is caused by poor contact. In most cases, such failure is caused by poor contact. You can repeatedly plug

## Common faults and Solutions

and unplug the USB cable to test whether the connection can be resumed.

2) Check whether the USB port is damaged  
Connect the player to a computer with an available USB port by using a proven USB cable. If the fault persists, it means USB port of the player has been damaged

3) Check if the USB cable is damaged.

- You can replace a proven USB cable to connect the player to Check if the connection can be restored. If it can, it means that the previous cable has been damaged.
- You can also try to use the USB cable to connect other devices. If there is also no response, it means also that the USB cable has been damaged.

### **3. FM radio cannot be turned on.**

The FM radio needs to be plugged into a wired headset/headphones as an antenna to turn on. If the headset is plugged in and the fault persists, it is likely that the 3.5mm port is in poor contact. Please replace one headset and try again.

## Common faults and Solutions

### **4. I want to delete some unnecessary apps, how to do it?**

Long press the App you want to delete on the desktop, next click on the "App info" or the icon ⓘ in the pop-up window, then select "UNINSTALL" and "OK."

*Warning:*

- *Deleting the app is irreversible. Unless you reset the device to factory settings. Please be cautious.*
- *Some Android built-in APPs cannot be delete or uninstall, such as music, clock, calculator, etc..*

### **5. How to take screenshots?**

Press and hold the volume down button and the power button at the same time for 2 seconds. You can find your screenshots in Pictures--Screenshots in the device storage.

### **6. How to clear apps running in the background?**

Long press the Home button of the device, and swipe right or left one by one in the pop-up application list to clear the program.

### **7. How to set up parental controls?**

G1 player does not allow the installation of other applications, which has largely prevented children from downloading or installing inappropriate apps at will. For some pre-installed apps, if you mind it and don't want your kids to use them, you can uninstall them first, then go to Settings >> System >> Reset locked and set a password. That way, the reset option will be locked and your kids won't be able to use it to restore apps you uninstalled.



# Specification

Bluetooth version: 4.2

Product Size: 4.3 x 2.4 x 0.4 inch

Weight: 4.5 oz

Screen Size: 4.0 inch

Battery Capacity: 1500mAh

Input: 5V=2A

Charging Time: 70 Minutes

Internal Memory: 2G RAM+16GB ROM

Music Playtime: 35 hours

Video Playtime: 5 hours

Expansion slot: Micro SD/TF Card (up to 1 TB)

Music format: MP3, WAV, FLAC, APE, OGG, M4A, AAC, WMA, MP2

Video format: AVI, MKV, MP4, MPEG, MOV, VOB, WMV, WEBM, DIVX, F4V, FLV, XviD, 3GP

Photos format: JPEG, BMP, GIF

Ebook format: EPUB, TXT, PDF, DOCX, FB2, MOBI

Recording format: ogg

FM Receiving Frequency: 87.5 MHz ~ 108 MHz

## Warning

- >>Do not leave the device in an environment where the temperature is too low or too high (below  $-10^{\circ}\text{C}$  or above  $50^{\circ}\text{C}$ ) for a long time. Extreme temperature environments will cause the device to deform and shorten the service life of the device;
- >>Do not use the equipment under thunder storm weather;
- >>Do not place the device in the water for a long time;
- >>Do not expose the equipment to the sun for a long time.

## FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

## FCC Warning Statement

--Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement.

# Warranty

Thank you for purchasing our products. You will enjoy the following services when using this product.

Warranty period: Within one year from the date of sale.

Warranty scope: Limited to the product host.

Warranty terms:

- ① Within 1 year after purchase, failure or damage caused by product quality problems can be replaced for free or full refund.
- ② Accessories are not included in the warranty, such as usb cable, earphones, etc., but if quality problems occur within 7 days after purchase, they can be replaced for free.
- ③ The following conditions are not covered by the warranty
  - Out of the warranty period.
  - It has been disassembled or repaired privately by the customer.
  - Man-made damage, accidental damage or deformation.
  - Failure caused by installation and use in abnormal environments such as high

# Warranty

temperature, high pressure, and humidity..

- Damage caused by natural disasters such as lightning strikes, floods, and earthquakes.

# Contact us

Email: [innioasis-csc@hotmail.com](mailto:innioasis-csc@hotmail.com)

Online support:

<https://www.facebook.com/innioasis/>



Scan QR Code

We promise to reply you as soon as possible within 24 hours.