



BOLT

-MANUAL-

TABLE OF CONTENTS

Introduction	3
Included in the Box	4
Features and Specs	5
Assembly	6
Operating the Bolt	8
Charging the Battery	10
Unfolding the Bolt	11
Folding the Bolt	12
Safe Riding	13
Care and Maintenance	14
Safety Warnings	15
Warranty	17
Product Registration	18

INTRODUCTION

Congratulations on your new Jetson Bolt! The Bolt is an innovative and fun personal transportation device, ready to take on everyday use. Before your first ride, check whether the wheels are damaged, or parts are loose. If there are any abnormalities, please contact Jetson Customer Support at +1-(888) 976-9904 or email us at help@ridejetson.com.

This product manual can help you understand, use, and maintain your Bolt. In order to avoid danger caused by collisions, falls, and loss of control, please use caution and learn how to ride the Bolt safely. Jetson and authorized dealers cannot be held liable for injury or damage caused from riding the Bolt. Users ride at their own risk.

The rider is responsible for consequences caused by violating warnings or improper operations.

If you want to return this product for any reason, be sure to first call or email us before taking it back to the store so we can assist you.

INCLUDED IN THE BOX



1.	Front Tire	8.	Saddle
2.	Headlight	9.	Taillight
3.	Stem Quick Release	10.	Rear Fender
4.	Stem	11.	Rear Tire
5.	Handlebar	12.	Kickstand
6.	Frame	13.	Foot Rest
7.	Battery	14.	Front Fender

FEATURES AND SPECS

MODEL: BOLT MOTOR: 250W

MOTOR TYPE: HUB

BATTERY: 36V, 5.2 AH LITHIUM ION

CHARGER: 110V - 240V

CHARGE TIME: 3-5 HOURS

WHEEL DIAMETER: 14"

PRODUCT WEIGHT: 34 LBS

WEIGHT LIMIT: 250 LBS

MAX SPEED: 16 MPH

MAX RANGE: 35 MILES

CLIMBING ANGLE: 15°

RECOMMENDED AGE: 13+


FRAME: ALUMINUM ALLOY

PRODUCT DIMENSIONS: L: 40" x W: 20" x H: 37"

ASSEMBLY

The Bolt comes mostly assembled, you will need to attach the Rear Fender and the Foot Rests.

To attach the Rear Fender, remove the screw above the Rear Tire using the provided Allen Key. Then, attach the Rear Fender using the Screw. Make sure the screw is tight and the Rear Fender is secure.

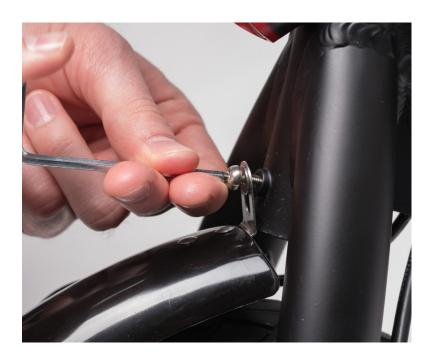



To connect the Foot Rests to the Bolt, place each Foot Rest onto the tube and turn it until it is secure.





OPERATING THE BOLT

TURNING THE BOLT ON AND OFF

To turn the Bolt on, push the Power Switch up to "ON." To turn the Bolt off, push the Power Switch down to "OFF."



BATTERY INDICATOR

The Bolt has a Battery Indicator on the Handlebar. When all four lights are on, the Bolt is fully charged. When only one bar remains, the Bolt needs to be charged.



TURNING THE LIGHTS ON AND OFF

To turn the Headlight and Taillight on, hold down the Horn Button for 3 seconds. Turn off the lights by holding the Horn Button down for 3 seconds again.



CRUISE CONTROL SETTINGS

To use the cruise control feature, press the Cruise Button when you have reached the speed you would like to maintain. Apply the brake to turn off cruise control.



Press to activate cruise control

CHARGING THE BATTERY

Your Bolt comes with a built-in rechargeable lithium ion battery. Always use the provided charger only. Please remember to cover the Charging Port when you are done charging. Before your first ride you must fully charge the Bolt - charge for 6 hours for the first 3 times you use it. For every ride after, charge your Bolt until it is fully charged, and NOT LONGER. Do not leave any chargers plugged in overnight, or leave it plugged in past the charge time.

- 1. Plug one end of the power cord into a grounded AC outlet and the other into the Bolt's Charging Port. The red charging light on the charger unit will turn on.
- 2. The red light will turn green once fully charged. Recharge the Bolt after each use.

(Please note: Always plug the charger into the wall first before the device. If the wall outlet doesn't have power and you plug the charger into the device first, it will light green, even if the battery is not full. So always plug into the wall first to make sure there is power.)

THE CHARGER OFFERS A CHARGING STATUS ON THE TOP OF THE CHARGER:

CHARGING LIGHT RED: Battery is charging.

CHARGING LIGHT GREEN: Charging is complete.

Don't use the Bolt if the battery emits strange odors, overheats, or begins leaking. If the battery does leak, do not touch any leaking materials, as the battery contains dangerous substances. Do not open the battery and do not insert anything into the battery.

Do not charge the battery if it has over-discharged. It should be discarded for your safety. Do not turn on the Bolt while it is charging.

UNFOLDING THE BOLT

Lift the Handlebars up until it is aligned with the Stem. Then, lock the Stem Quick Release.





FOLDING THE BOLT

Unlock the Stem Quick Release and lower the Handlebars slowly so you do not scratch the Frame.





SAFE RIDING

Helmet: Most serious injuries that occur while riding are head injuries. This could be prevented by wearing a helmet.

Before each ride, check whether the Frame, Handlebar, and Saddle are secure, the Fenders are properly aligned, the tire pressure is sufficient, and the brake system works correctly. Make sure you can reach and squeeze the Brake Levers.

Foot Position - While riding the Bolt, keep your feet on the Foot Rests. Do not ride with your feet dangling over the sides. Remain seated while riding the Bolt.

To start riding, turn the Twist Throttle slowly. Get accustomed to the acceleration of the throttle.

Make your turns slowly and cautiously, and give yourself stopping distance. It is recommended you practice your first ride on the Bolt in an open space with no obstacles in your way.

Practice shifting the gears while riding. Only shift gears while in motion. Avoid putting your body weight on the handlebars.

Braking - To come to a stop, squeeze the Brake Levers. Be careful not to squeeze the Brake Levers too fast, as it may cause too sudden a stop or jerking motion.

PLEASE NOTE: Riding, like most sports, involves risk of injury and damage. By choosing to ride the Bolt, the responsibility and all inherent risk is on you. It is crucial that you know, understand, and act according to safety rules.

CARE AND MAINTENANCE

WEIGHT LIMIT

The maximum load is 250 lbs. Going above the maximum weight limit can cause injury or damage the bicycle.

CLEANING THE BOLT

To clean the Bolt carefully wipe with a damp cloth, then dry with a dry cloth. Do not use water to clean the Bolt, as the electrical and electronic systems may get wet, resulting in personal injury or malfunction of the bicycle. Lube the chain every so often to keep it smooth.

BATTERY

- Keep the bike away from fire and excessive heat.
- To avoid damage to the battery, never subject the Bolt to intense physical shock, severe vibration, or impact.
- Protect the bike from water or moisture.
- Never disassemble the bike or its battery.
- If there are any issues with the battery, please contact Jetson Customer Support.

STORAGE

- If you plan on storing the Bolt for a substantial period of time, please make sure you fully charge the battery before storing. The battery should be fully charged once a month after this.
- To protect against dust, cover the Bolt.
- Store the Bolt indoors, in a dry place and at a suitable temperature.
- You should bring the Bolt into a warm environment (above 50 degrees Fahrenheit) for charging.
- Do not leave the Bolt plugged into the charger for long periods of time.

TIRE PRESSURE

The recommended tire pressure is 35-45 psi.

SAFETY WARNINGS

Here are some useful tips to make sure you always have a safe ride:

- Children, the elderly, and pregnant women should not use the Bolt.
- Do not ride after drinking or taking prescription medication.
- Do not carry items when riding.
- Prior to each ride, inspect each part of the Bolt to ensure it has been maintained correctly and is functioning properly.
- Always give way to pedestrians.
- Always comply with local traffic laws and regulations.
- Be alert to things in front and far away from you.
- Make sure your feet are always placed securely on the Foot Rests.
- The Bolt cannot be ridden by two or more people. Only one person can ride at a time.
- When you ride the Bolt along with other cyclists, always keep a safe distance to avoid a collision.
- When turning, be sure to maintain your balance.
- Do not allow distractions when riding, such as answering the phone or engaging in any other activities.
- Avoid riding in the rain or on smooth surfaces such as snow or ice.
- Do not ride on roads with obstacles (such as litter, small stones, etc.).
- Avoid riding in narrow spaces or on steep slopes.
- Avoid riding around flammable gas, steam, liquid, or dust that could cause fire.
- Never operate the product barefooted and keep shoelaces tied.
- Riding with improperly adjusted brakes is dangerous and can result in serious injury or death.
- Applying brakes too hard or too suddenly can lock up a wheel, which could cause you to lose control and fall. Sudden or excessive application of the front brake may pitch the rider over the handlebars, which may result in injury or death.

CALIFORNIA WARNING

This product contains chemicals, including lead, which are known to the state of California to cause cancer, birth defects, and other medical conditions.

MODIFICATIONS

Do not attempt to disassemble, modify, repair, or replace the Bolt or any components of the unit. This will void any warranty, and can lead to malfunctions which may cause injury.

ADDITIONAL OPERATION CAUTIONS

Do not lift the Bolt off the ground while it is in operation and the wheels are in motion. This can result in freely spinning wheels, which may cause injury to yourself or others nearby. Do not jump on or off the Bolt, and do not jump while using it. Always keep your feet firmly planted on the Foot Rests while in operation.

LIMITED 1 YEAR WARRANTY

TO QUALIFY FOR WARRANTY SERVICE:

- 1. You must present a copy of the sales receipt from an approved retail partner.
- 2. This product cannot be used for rental or commercial use.
- 3. This product cannot be used for competition.

LIMITATIONS OF LIABILITY

- This Limited 1 Year Warranty is non-transferable after the product's initial sale.
- No unapproved modifications can be made to the product, its performance or otherwise, in order for this Limited 1 Year Warranty to remain in effect.
- No reimbursement is provided for towing, loss of time, loss of use, inconvenience, incidental or consequential damages.
- Warranty is void if weather related water damage is determined. Owner is responsible for storage and protection from weather.
- Jetson® makes no warranty with respect to products or trade accessories not made by Jetson®, including, but not limited to, motors, tires, wheels, and batteries, such products or trade accessories, such items being subject to the original manufacturer's warranty, if any.
- This Limited 1 Year Warranty does not cover minor surface blemishes, rips, tears, or other cosmetic damages due to normal use, or other intentional or unintentional damage to the product.
- This Limited 1 Year Warranty will not cover any damage which results from the application of improper cleaners, solvents or chemicals to the product, water damage, smoke or soot, or from exposure to saltwater, sea breeze or salt.
- This Limited 1 Year Warranty will not cover any damage which results from aging, such as fading of paint, deterioration of plated surfaces, deterioration of rubber or plastics, or rusting.
- This Limited 1 Year Warranty does not cover improper repair or misdiagnoses of problems.
- This Limited 1 Year Warranty only covers parts due to manufacturer defect.
- Damage due to misuse or neglect, use other than as specified in the Owner's Manual, or use under abnormal conditions are not covered by this Limited 1 Year Warranty.

OWNER'S WARRANTY RESPONSIBILITIES

As the device's owner, you are responsible for the performance of the required maintenance. You may be denied a warranty claim solely because of your failure to ensure the performance of all scheduled maintenance. As the owner, you should be aware that you may be denied your warranty coverage if your device or a part has failed due to abuse, neglect, improper maintenance, or unapproved modifications. For any issue regarding your Jetson® product, call toll free +1-(888) 976-9904 or email help@ridejetson.com.

PRODUCT REGISTRATION

Please complete and mail this card within 10 days of purchase or go to

Complete this form and mail it to:

Attention: Product Registration
Jetson Electric Bikes
1 Rewe Street
Brooklyn, NY 11211

☐ Gift for someone else (child)

How did you hear about the Jetson Bolt?:





BOLT