

 
OVENTE®

ELECTRIC PANINI GRILL

GP0540/GP0620 SERIES



BRUSHED



COPPER



RED



Before use, please read this manual thoroughly and save for future reference.

ovente.com

ELECTRIC PANINI GRILL

GP0540/GP0620 SERIES

TABLE OF CONTENTS

IMPORTANT SAFEGUARDS	• • • • • • • • • •	3
PARTS & FEATURES	• • • • • • • • • •	4
USING YOUR PANINI GRILL	• • • • • • • • • •	5
CARE & MAINTENANCE	• • • • • • • • • •	6



IMPORTANT SAFEGUARDS

When using Panini Grill, basic safety precautions should always be followed, including the following:

- ❗ Read all instructions carefully before using the Panini Grill.
- ❗ Do not touch hot surfaces. Use handles or knobs
- ❗ To protect against electric shock, do not immerse a cord, plug, or Sandwich Maker into water or any other liquid.
- ❗ Close supervision is necessary when any appliance is used by or near children.
- ❗ Do not use the appliance for other uses.
- ❗ Unplug the appliance after using and before cleaning. Allow it to cool before putting on or taking off parts and before cleaning the appliance.
- ❗ Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or electrical or mechanical adjustment.
- ❗ Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- ❗ To reduce the risk of injury, use only the accessory attached if recommended by the appliance manufacturer.
- ❗ Do not use outdoors.
- ❗ Do not let the cord hang over sharp edges of a table or counter, or touch hot surfaces.
- ❗ Do not place on or near a hot gas or electric burner, or in a heated oven.
- ❗ To disconnect, remove the plug from the wall outlet.
- ❗ The appliances are not intended to be operated using an external timer or separate remote-control system.



PARTS & FEATURES

COOL-TOUCH HANDLE

To avoid burns or slippage

2-SANDWICH NON-STICK COATED PLATES

With double-sided contact cooking plates to achieve the grill marks desired, and for fast, even cooking



1000-WATT HEATING ELEMENT

Instantly toasts your favorite paninis; can also be used to grill veggies, burgers, chicken, fish, kebabs or steaks!

 


LED INDICATOR LIGHTS

Easy-to-see lights for convenience

DRIP TRAY

Catches excess fat and grease



ANTI-SKID FEET

For extra safety and stability



LEVER

Opens flat at 180° for double grilling space





USING YOUR PANINI GRILL



BEFORE FIRST USE

- Carefully unpack your Panini Grill. Remove all packaging material.
 - Place the device on a flat, level surface to a 120-volt wall outlet.
 - Wipe off both the cooking plates with a damp cloth so that they are clean and free of any manufacturing oils that may be left on the surface.
 - Wipe the outside of the grill housing with a soft damp cloth. Never immerse the grill, power cord, or plug in water or any other liquid.
 - For first use, plug into the wall socket and heat for 5 minutes. This will burn off any residue from the manufacturing process.
- 1 NOTE: There may be a small amount of smoke or odor during first use. This should go off after the 5-minute burnoff.

TIPS:

- 1 Always preheat before using. Plug the cord into a power outlet while preparing the fillings.
- 2 For soft or liquid sandwich fillings use medium sliced bread, white or brown. If small amounts of filling use toasting bread.

HOW TO MAKE TOASTED SANDWICHES

- Before first using please wipe the surface of the platens with a damp cloth and dry with a cloth, tissue, etc. To obtain an even golden-brown result, you can slightly butter the side of the bread in contact with the plate.
- Fit the plug into the wall socket.
- Close the Sandwich Maker and prepare the sandwich while the toaster is heating.
- When the Sandwich Maker is ready after about 3 mins the temperature indicator light (the green one) will turn off.
NOTE: The green "ready" light will turn on and off as the grill cycles to keep the correct cooking temperature.
- Fully open the Sandwich Maker, and place the sandwich on the bottom half plate.
- Lower the upper cooking plate carefully until the sandwich maker is tightly clamped.
- Your sandwich will be toasted in 2-3 mins or longer to suit your taste. Open the toaster and remove the sandwich using a plastic or wooden spatula. Never use a metal knife as this may damage the non-stick coating.
- Close the lid to preserve the heat until ready to toast the next sandwiches.
- Prepare further sandwiches if required while the one is cooking.
- After use, remove the plug from the wall socket.



CARE & MAINTENANCE

- After using and before cleaning, please remove the sandwich maker plug and wait for it to cool.
- Wipe the inside and edges of the plate with absorbent paper toweling or a soft cloth.
- Pour a little cooking oil onto the plate and wipe off after 5 minutes, when the food has softened.
- Wipe the appearance with a slightly wet cloth to be sure that no oil or grease enters the appliance.
- Do not clean the inside or outside of your maker with any abrasive pad or steel wool as in this way it will damage your Sandwich Maker.



ELECTRICAL REQUIREMENTS

Voltage : 120V
Wattage : 1000W

Hertz: 60Hz



OVENTE WARRANTY

LIMITED ONE (1) YEAR WARRANTY

At Ovente, we aim to make your life easier by producing top-quality housewares, designed with you in mind. We have pledged to uphold all our offerings to the highest standards, and we back all our panini grills with a one-(1) year warranty from the date of purchase from an authorized retailer. This warranty covers defects in workmanship and materials. It does not include damage due to abuse, misuse, commercial use, accidents or natural wear and tear. In case of replacement, shipping and handling fees may apply.

LIMITATIONS

The warranty stated above is the only warranty applicable to this product. Other expressed or implied warranties are hereby disclaimed. No verbal or written information given by the Manufacturer, its agents or employees shall create a guarantee or in any way increase the scope and duration of this warranty. Repair or replacement as provided under this warranty is the exclusive remedy of the consumer. The manufacturer shall not be liable for incidental or consequential damages resulting from the use of this product. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited to the applicable warranty period set forth above except to the extent prohibited by law. Proof of purchase may be required to validate the order. Promotional items may not be covered under any warranty. Consumer rights may vary from state to state.

For product support email support@ovente.com or call 1-855-926-2626.
Visit us at ovente.com



[Facebook.com/ovente](https://www.facebook.com/ovente)



[@oventeTweets](https://twitter.com/oventeTweets)



[@Ovente](https://www.instagram.com/Ovente)



[youtube.com/ovente](https://www.youtube.com/ovente)

ovente.com

OVENTE®

Defining Housewares