

OVENTE®

3-IN-1 GRILL

GPI302 SERIES



Before use, please read this manual thoroughly and save for future reference.

ovente.com

3-IN-1 GRILL WITH INTERCHANGEABLE PLATES

GPI302 SERIES

TABLE OF CONTENTS

IMPORTANT SAFEGUARDS	3
PARTS & FEATURES	4
USING YOUR 3-IN-1 GRILL	5
CARE & MAINTENANCE	7



IMPORTANT SAFEGUARDS

When using this 3-in-1 grill, basic safety precautions should always be followed, including:

- ❗ Before connecting the 3-in-1 grill check whether the voltage indicated on the bottom corresponds to your local mains voltage.
- ❗ DO NOT operate any appliance with a damaged cord or plug or after the grill malfunctions, or has been damaged. Contact Customer Support on **1-855-926-2626** for assistance.
- ❗ To protect against electrical hazards, DO NOT immerse cord, plugs, or the 3-in-1 grill in water or other liquid.
- ❗ DO NOT let cord hang over the edge of a table or counter, or touch hot surfaces.
- ❗ To avoid circuit overload, do not operate another high-voltage appliance on the same circuit.
- ❗ 3-in-1 grill should always be used on a dry, level, heat-resistant surface. Do not leave unattended while in use.
- ❗ Do not touch hot surfaces while the 3-in-1 grill is operating. These can become very hot.
- ❗ Close supervision is necessary when any appliance is used by or near children.
- ❗ The 3-in-1 grill is not intended for persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- ❗ Unplug from outlet when not in use and before cleaning. Allow cooling before putting on or taking off parts, and before cleaning.
- ❗ Do not use outdoors or for purposes other than intended use.

PARTS & FEATURES

COOL-TOUCH HANDLE

For fast, safe use

3 INTERCHANGEABLE NON-STICK PLATES



SANDWICH PLATES

Make delicious sandwiches at any time of the day



WAFFLE PLATES

Make two Belgian-style waffles at a time



GRILL PLATES

Grill meat, chicken, fish or veggies

750-WATT POWER

For faster cooking

ANTI-SKID FEET

For extra safety and stability





USING YOUR 3-IN-1 GRILL



BEFORE FIRST USE

- Carefully unpack your 3-in-1 grill. Remove all packaging materials.
- Place the 3-in-1 grill on a flat, level surface close to a 120-volt wall outlet.
- Wipe off the cooking plates with a damp cloth so that they are clean and free of any manufacturing residue that may be left on the surface.
- Slightly grease the baking plates with a little butter or cooking oil.
- Plug in the 3-in-1 grill and heat up the plates until the green light goes off.

NOTE: When using this 3-in-1 grill for the first time, a fine smoke haze may result. This is normal due to the initial heating of the internal components.

- Close the 3-in-1 grill and plug into a 120-volt A.C. outlet. The red light will illuminate to indicate that the item is working. At the same time, the green light will illuminate to indicate that the item is heating up and will turn off once the 3-in-1 grill is ready for use.
- Prepare the ingredients for your sandwich. For each sandwich you need two slices of bread and a suitable filling.
- To obtain a golden-brown result, you can lightly butter the sides of the bread facing the sandwich plates.
- For optimal results, fillings should be placed well within the sandwich slices.
- Lower the upper cooking plate carefully onto the bread until the 3-in-1 grill is tightly clamped.
- Open the 3-in-1 grill after 2-3 minutes and check whether the toasted sandwich is sufficiently brown. The cooking time required to obtain crisp, brown sandwiches depends on the type of bread, fillings and your personal taste.



USING YOUR 3-IN-1 GRILL

- To avoid scratching the plates, use a non-metallic utensil to remove your toasted sandwich from the 3-in-1 grill. Do not use sharp kitchen utensils.
- To make waffles, simply remove the sandwich plates and insert the waffle plates.
- To grill meat, chicken, fish or veggies simply remove the sandwich or waffle plates and replace them with the grill plates.
- Unplug the 3-in-1 grill from the wall socket after use.

Note: The green ready light will turn on and off as the grill cycles to keep the correct cooking temperature.



CARE & MAINTENANCE

- Unplug the 3-in-1 grill and let it cool down before cleaning.
- Clean the cooking plates with a damp cloth or a sponge. Avoid letting the water run into the 3-in-1 grill.
- The 3-in-1 grill can be stored in a vertical position.

NOTE: Never immerse the 3-in-1 grill in water.



Environmental protection

This product should not be disposed of together with regular domestic waste; it should be taken to an authorized recycler of electrical appliances. By disposing of and recycling domestic waste, you help protect the planet and the people living on it. If you wish to dispose of this item, please do so properly.

ELECTRICAL REQUIREMENTS

Voltage: 120V

Wattage: 750W

Hertz: 50/60Hz



OVENTE WARRANTY

LIMITED ONE (1) YEAR WARRANTY

At Ovente, we aim to make your life easier by producing top-quality housewares, designed with you in mind. We have pledged to uphold all our offerings to the highest standards, and we back all our grills with a one-(1) year warranty from the date of purchase from an authorized retailer. This warranty covers defects in workmanship and materials. It does not include damage due to abuse, misuse, commercial use, accidents or natural wear and tear. In case of replacement, shipping and handling fees may apply.

LIMITATIONS

The warranty stated above is the only warranty applicable to this product. Other expressed or implied warranties are hereby disclaimed. No verbal or written information given by the Manufacturer, its agents or employees shall create a guarantee or in any way increase the scope and duration of this warranty. Repair or replacement as provided under this warranty is the exclusive remedy of the consumer. The manufacturer shall not be liable for incidental or consequential damages resulting from the use of this product. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited to the applicable warranty period set forth above except to the extent prohibited by law. Proof of purchase may be required to validate the order. Promotional items may not be covered under any warranty. Consumer rights may vary from state to state.

For product support email support@ovente.com or call **1-855-926-2626**.

Visit us at ovente.com



[Facebook.com/ovente](https://www.facebook.com/ovente)



[@oventeTweets](https://twitter.com/oventeTweets)



[@Ovente](https://www.instagram.com/Ovente)



[youtube.com/ovente](https://www.youtube.com/ovente)

ovente.com