 


Wireless Digital Display Receiver

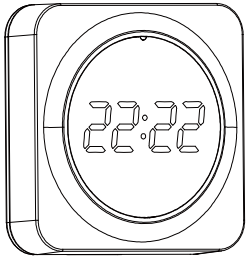

Eastway International (HK) Limited

Product introduction

Wireless digital display receiver adopts advanced wireless receiving technology, integrates up to 31 ringtones, 2-language broadcast and supports LED display 24-hour time. When the call button is triggered, the wireless digital display receiver broadcasts the corresponding number or ringtones and displays the button number. With simple operation and stylish appearance, this receiver is widely used in care institution, nursing home, hospital etc.

Features

- ① Support number call in English and Japanese
- ② 31 ringtones to choose
- ③ 24-hour time display
- ④ 5 adjustable volume levels (0-100dB, including mute)
- ⑤ Up to 99 transmitters can be added
- ⑥ Signal distance: 150m(open space)
- ⑦ Memory function, no loss of accessories, time or set ringtones after power off

01

Operation Guide

• Power on


Plug the receiver into the AC socket(100-240V 50-60Hz), the receiver will make a "drip" sound and the screen displays from 00:00 to 99:99 in sequence, the version number of the current product (lasts for 2S) will be displayed at the end, and then the current time will be displayed. Then the receiver successfully starts up.

Setting


• Time display

Long press the 【△】 key and 【▽】 key at the same time, the receiver "beeps" twice, "hours" starts to blink, then short press the 【△】 key, the hours will be clockwise +1. Long press the 【△】 key to increase the hours clockwise continuously; Press 【▽】 key for hours counterclockwise -1, and long press 【▽】 to continuously reduce the hours counterclockwise. After the setting is complete, press 【🔊】 key "Minutes" to start blinking, and then set it in the above way.

02

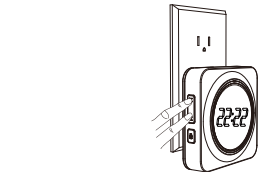

Step 1 : Long press the 【△】 key and 【▽】 key at the same time to set the hours.

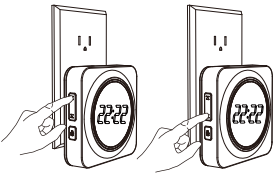

Step 2 : Short press 【△】 or 【▽】 to adjust hours. Long press 【△】 or 【▽】 to adjust hours continuously.

03



Step 3 : Short press 【🔊】 to set minutes. Same operation as hours.

Note: Long press 【△】 and 【▽】 at the same time when adjusting time, or no operation during 20 seconds to quit setting.

04


• Choose receiver ringtones

Short press 【△】 key to switch and play the current selected ringtones in sequence, the number of ringtones displayed increases by 1, long press 【△】 key to continuously switch ringtones clockwise, it will play and display the number of ringtones currently selected after setting.

Short press 【▽】 key to switch and play the current selected ringtones in reverse order, and the number of ringtones displayed decreases by 1. Long press 【▽】 key to continuously switch ringtones counterclockwise, play and display the number of ringtones currently selected after setting.



05

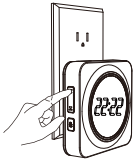

Short press 【△】 to switch the ringtone in order. Long press 【△】 to switch the ringtone continuously.



Short press 【▽】 to switch the ringtone in reverse order. Long press 【▽】 to switch the ringtone in reverse order continuously.

06

• Change the volume levels

Short press 【🔊】 button to set the volume circularly. (4-3-2-1-0-1-2-3-4-3-2-1-0...0 for mute)

Note: The volume of the receiver will automatically change to the maximum when the receiver is powered on again.




Add call buttons

- Add a normal call button (the ring tones can be changed)

07


(Please make sure that the number of the currently set call button ringtone is not 01, 02) Long press 【🔊】 key, the receiver "beeps" to enter the state of adding buttons, and the number of the added buttons is displayed. Trigger the call button, the receiver "beeps" twice, the button number increases by 1, indicating that the current button has been added successfully and you can continue to add other buttons at this time. "Beep" sound indicates the current call button has been added; "beeps" three sounds indicate that the call buttons cannot be added.

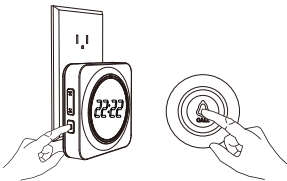

08

• Add a call button with fixed ringtone (Optional)

After selecting a primary fixed ringtone (except 01, 02), long press 【▽】 and 【🔊】 keys at the same time, the receiver "beeps" to enter the adding button state, and displays the number of the button that has not been added at present. Trigger the call button, the receiver "beeps" twice, and the button number increases by 1, indicating that the current button has been added successfully. At this time, you can continue to add other buttons of the same ringtone. "Beep" sound indicates the current call button has been added; "Beeps" three sounds indicate that the call buttons cannot be added. To add the buttons of other different ringtones, press any key or 20 seconds without any operation to exit the adding state, and then follow the above operation.

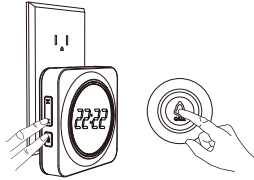


09

Linguistic calling mode

• Japanese calling mode

Press the 【△】 key or 【▽】 key to select the number of the ringtone as 01, indicating Japanese call mode. Trigger the call button (except the button with fixed ringtone), the receiver will display the number and broadcast "XX call" in Japanese.

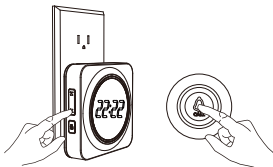


• English calling mode

Press the 【△】 key or 【▽】 key to select the number of the ringtone as 02, indicating English call mode. Trigger the call button (except the button with fixed ringtone), the receiver will display the number and broadcast "XX call" in English.

10

Delete call buttons

Press and hold the 【🔊】 key to enter the adding button state. Press and hold the 【△】 or 【▽】 key to adjust the number of the button to be deleted, and then press and hold the 【🔊】 key again. The receiver "beeps" four times, and the last digit of the number changes from "H" to "-", indicating that the current call button has been deleted (for example, "01H" changes to "01-", indicating that the call button No. 1 has been deleted).

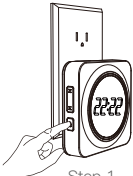

Step 1



Step 2

Step 1: Long press 【🔊】 to enter the adding button state. Step 2: Press the 【△】 key or 【▽】 key to adjust to the target number.

11



Step 3

Step 3: Long press 【🔊】 again to delete the button.


Note:

- 1.Call buttons, fixed ringtone buttons, voice broadcast call buttons can be added 99 pieces in total.
- 2. Trigger the button, the receiver will display the button number and broadcast the corresponding number or ringtone, and automatically return to the standby page 10 seconds later.
- 3. In the adding buttons state, press any key or perform no operation for 20 seconds to exit the adding state.

12

Delete all call buttons and back to factory defaults

Press and hold the 【🔊】 key to power on until the receiver "beeps" ten times slowly and then "beeps" six times faster, and then releases it, the screen will display 00:00-99:99 in sequence, and the current version number will be displayed at the end (for 2S) and then the current time, indicating that all buttons have been deleted, the volume will be restored to the loudest, and the receiver will be restored to factory settings.

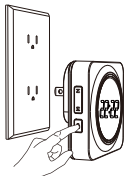

Step 1



Step 2

Step 1: Press and hold the 【🔊】 key in the power off state. Step 2: Plug in the receiver while holding the 【🔊】 key.

13