You can save your time by scanning the QR code to watch a video on how to install and program and reset the lock.



► Instructions for use

Warm tips: Please prepare 1 cross screwdriver and drilling machine before installment. 1. For the new locks just leaving the factory, if the equipment is not bound to a user, the lock can be opened by the keys of 123456+1.

2. In case of unlocking when a user has registered with the lock: Press a password of 6-10 digits + n key to unlock.

3. In case of unlocking, if the battery is running low, "short beep sound" will be prompted for 4 times in a 2-round cycle, and the keyword light will flash. When there is a prompt of battery low, please replace battery in a timely manner, and the door can still be opened

4. Please do not scratch the surface with corrosive or sharp items to prevent the lock surface from being damaged.

5. When the battery is running low or the electric part is out of order, an emergency key can be used to unlock outside, please take good care of the key and keep it in a safe place outdoors.

6. After assembly, the door must be kept in an open state so as to conduct commissioning and initialized parameter setting.

 
7. Operating temperature: -4°F/-20°C~+140°F/+60°C.

▶ Packing list

S/N	Content	Quantity
1	Front lock	1
2	Rear lock	1
3	Lock cylinder(Including key*2)	1
4	Specification	1
5	Installation accessories package	1
6	Opening drawing	1

► Product functional characteristics











AppLoki

 

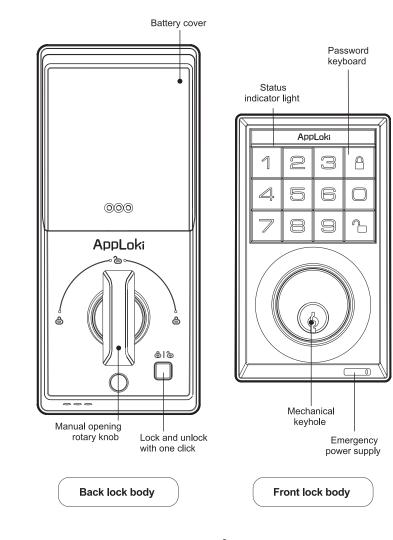

4.1.2 Adjust the paddle to the horizontal UP(UP' face up direction, keep the bump of the

paddle faces upwards and fits into the pick jack of the lock body.

4.1.4 The ironplate is fixed on the inner side of the door

through the connection wire so that the pick is centered.

b. If the door thickness is less than 39mm, one section of the

4.1.5. Adjust the front panel and the iron plate so that they

4.1.6 The connection wire is wound into the slot on the right.

If you feel that the front lock is not fixed, you can remove the

front paneland, a round hole of the iron plate with a diameter

of 20 mm is made on the door body from 77mm above the

center point of the door hole, Then use the standby

connection columnand connectione-column screw(M4*25mm) to reinforce the front lock.

4.1.3 Fix the front panelon the outdoors.


a. The convex stud face outward.

paddle need be cut off.


are upright.

► Schematic Diagram of Product Breakdown



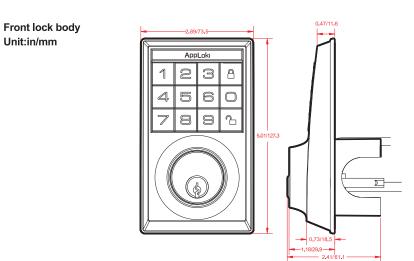


Back lock body Unit:in/mm

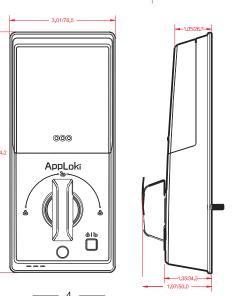

▶ Product specification and how to operate the menu

Name	Content		
Key category	Password and mechanical keys		
Password capacity	3 administrators, and 100 general users		
Power supply	4 AA alkaline batteries		
Tips	Prompt of light and buzzer		
Low voltage alarm	4. 8V		
Antistatic	Exposure+/8KV Air+/15KV		
Standby current	<7OuA		
Dynamic power consumption	<200mA		
Operating enviroment	-4°F/-20°C~+140°F/+60°C		
Operating humidity	0%~95%		
Applicable door thickness	1.38 IN/35 MM - 2.17 IN/55 MM		

► Key and light indication functions

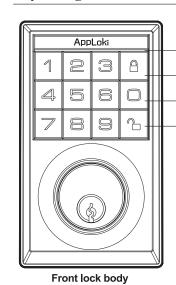

Indication light of red and green state The green light will be lit up Cancel and locking key Number key

Description of "buzzer" prompt note: 1. Short "beep" for once: Button sound; 2. Short "beep" for twice: Operation continues; 3. Short "Beep" for three times: Error reminder; 4.Long "Beep": Operation success reminder;

5. Short "Beep" for four times: Alarm sound:

▶ Installation

Installation 1.Installation Instructions

1.1 While installing and commissioning, please stand in the room all the time.

1.2 While installing the front panel, keep the logo up and pass the connection wire under the lock body, keep the bump of the paddle faces upwards and fits into the lock body. 1.3 After the installation is completed, check whether the password 123456, mechanical

____ 2 ____

key, knob work well or not. 1.4 If it does not work properly, please check whether there has been an error installation or loose power cord connector during installation.

2. Open Hole

Please refer to the open hole drawing, and drill correct holes on the door.

a. The distance between door edge and lock body center can be 60mm or70mm. b. The diameter of the open hole can be 38-54 mm

c. If the diameter of the door open hole is less than 52mm,the front panel block shall be removed.

3.Install Lock Body

3.1 According to the central position of the open hole of the door, adjust the position of the pick jack of the lock body. 3.2 Hold the head of the lock body with your hand.

3.3 Turn the lock tail clockwise or counter- a clockwise, adjust the position of the pick jack of the lock body to 60 mm or 70 mm. is ok or not. 3.5 The mark 'UP' face UP and fit the lock body.

3.6 Twist 2 tapping screws.

4. Install Lock 4.1 Install the Front Panel

4.1.1 Pass the connection wire under the lock body.

Do not pass the connection wire above the lock body.



(O

4.2 Install The Back Panel Connection 4.2.1 Remove the back cover, pass the connection


▶ Installation

Screw(Standby) wire through the back panel, and straighten. 4.2.2 Turn the KNOB to the vertical position and align the pick to the door. 4.2.3 Turn the KNOB to check the latch switch is ok.

4.2.4 Lock 2 back panel screws(M4*35mm)and 1back panel screw(M4 \$25mm), shake the front (M4*6MM)*2 and back panel to ensure the front nd back panel is tight.

4.2.5 The excess wire is hidden in the back cover frame. Install the back cover.

4.2.6 Install 4 AA batteries and the battery cover. If you think the installation is complicated, you can directly scan the QR code to watch the video!

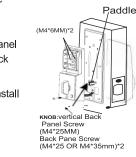

Sump of the Paddle:Upward


Connection Column

▶ Operating process

1. Operation process 1.1 Factory settings


1.1.1 Press and hold the reset button for 3 seconds (prompt "restore factory settings, verify administrator")

1.1.2 Enter the administrator password + " ¹ь " key or enter the solidified password "123234345455" + " ¹ь " key to restore the factory settings directly.

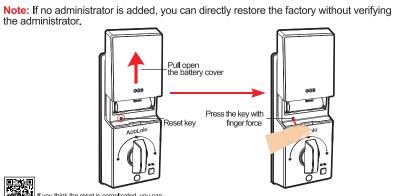

1.2 Setting unlocking direction

When the system is in a state as delivered, initialized setting is carried out for the lock(No users entered), the direction will be automatically set after being power on, long "beep" sound refers to successful setting of the lock direction, when the users are entered, the unlocking direction of lock cannot be automatically set.

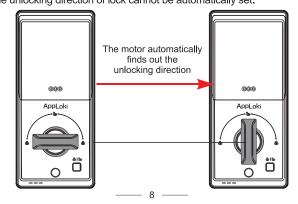

▶ Operating process

1.3 Register No. 1 administrator

1.3.1 Press the reset button (within 2 seconds)

1.3.2 The lock prompts "Add an administrator, please enter a new password"

1.3.3 Enter the same 6-10-digit new password + " ⋅ wey twice, and the system will prompt that the registration is successful.

Note: Numbers 1-3 are administrators.

1.4 Add administrators 2-3 (an administrator password has been registered) 1.4.1 Press the reset button (within 2S)

1.4.2 The lock prompts "add user, verify administrator" 1.4.3 Enter administrator password No. 1 + "

key

1.4.4 After the verification is successful, it prompts "Add an administrator, please enter a

1.4.5 Enter the same 6-10-digit new password + " • " key twice to register the second

1.5 Add users (registered administrators 1-3)

1.5.1 Press the reset button (within 2 seconds)

1.5.2 Prompt "Add user, verify administrator" 1.5.3 Enter any one of administrator passwords 1-3 + "ˆ■" key

1.5.4 After the verification is successful, it prompts "Add user, please enter a new

1.5.5 Enter the same 6-10-digit new password + " • " key twice, that is, the registered user is successful. 1.6 Delete user

1.6.1 In the default state, press the "666+" key 1.6.2 Prompt "delete user, verify administrator"

1.6.3 After the verification is successful, it prompts "Please enter the original password to

1.6.4 Enter the password to be deleted, and if it is correct, it will prompt "delete successfully"

If you think the setting Admin and User Passwords is complicated, you can directly scan the QR code to watch the video! 2.Other operation 2.1 Error tips

The red light will be lit up for 2 seconds, and make a sound of "beep" for three times.

2.2 Prompt for success The green light will be lit up for 2 seconds, and make a sound of long "beep" for once.

____ 9 ___

2.3 Double alarm 2.3.1 Anti-theft alarm

▶ Operating process

When the password is wrongly entered five times, there will be a voice prompt of "beep"

Note: the system will be locked for 3 minute, when the system is locked, , you need to wait for 3 minutes before entering the password again to unlock.

2.3.2 Battery Dead Alarm There will be a "beep" sound for 4 times when unlocking; the keyboard light will flash, at this time, please change the battery in a timely manner.(and the door can still be opened

2.4 Normally-opened functions (the lock is in unlocked status)

2.4.1 Setting of normally-opened functions

Within 3 seconds after unlocking with the password, press the "7", "8" and " ⋅ " keys to open the normally open setting, and you will hear a long "di" sound, indicating that the normally open mode is set successfully.

If you think the setting of the normally open function is complicated, you can directly scan the QR code to watch the video! 2.4.2 Cancel the normally-opened mode

Opening the door with the password or people are inside the door to unlock. 2.5 Automatic locking switch

2.5.1 If there are users, press 777 + " · ■ " key(Lock prompt "automatic lock setting, verify

2.5.2 Enter the administrator password + " `` " key for confirmation.(After successful verification, there will be a long "beep" for once.) 2.5.3 After the verification is successful, the lock prompts "1-off 2-10 seconds 3-20

seconds 4-30 seconds, press the corresponding number key to set the corresponding

777+" • " key----the administrator password + " • " key----1-off 2-10 seconds 3-20 seconds 4-30 seconds---press the corresponding number key to set the corresponding

Note: in the default state, the lock time is automatically locked after 10 seconds.

2.6 Volume setting Press "333+" `∎" key" to switch between high or low sounds.


2.7 Emergency power supply Emergency power supply interface type c equipped on the front bottom side of the smart lock: to unlock the door temporarily by connecting to the emergency power supply

interface with the power bank. After unlocking, please replace the battery inside the lock

____ 10 ____





door opening and closing key inside, and turn the opening and locking lock with motor.

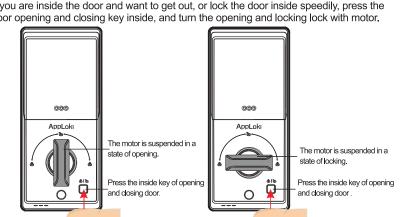

When the system is in a state as delivered, the initialized setting is carried out for the

 Note: when the users are entered, the unlocking direction of lock cannot be automatically set.

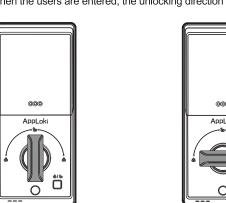



▶ Precautions 1. Prohibit any disassembly at will


danger resulting from this. If you need to disassemble, again, please contact a professional. 2. Choose cleaning method carefully

The product is composed of precise and complex components, please do not disassemble any structures inside to avoid operation abnormalities of the product or other use

Please clean the product with dry cloth, water is prohibited to clean the product to avoid power failure.

3. Measures to cope with battery running low or out of power a. Prompt of battery running low

There will be a "beep" sound for 4 times when unlocking The keyboard light will flash, at this time, please change the battery in a timely manner.

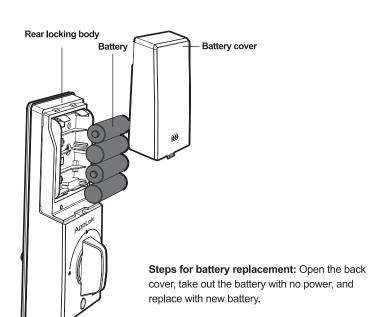

—— 12 ——

You can save your time by scanning the QR code to watch a video on how to install and program and reset the lock.



Warranty card

roduct Inform	ation			The copy kept by customers			
Product model		Purchase date		MM/DD/YY			
Address of ourchase	City		(County)	Provir	nce		
Purchase price		Invoice No.					
Jser name		Telephone		Postal code			
Jser address	City		(County)	Provir	nce		
Product satisfaction degree	Quality performance:						
Application ield	Family□ Office□ Hotel□ Others□						
The first reason	Quality Appearance Function Price Service Word-of-mouth Other						

In order to ensure your benefits to get the "repair, refund and replacement guarantees" ("three guarantees" for short) from our company, please note:

1. When purchasing the product, please fill out the card completely, correctly and truthfully.

2. Please ask for the invoice or voucher at the time of purchase 3. Please take good care of the card, the valid "three guarantees card" and valid purchase voucher are the preconditions to realize your rights of "three guarantees"

4. Please take good care of attachments and information for the items. If there is any good return, you need to return The following situations are not within the scope of quality warranty: 1. Warranty period expiry

Note: 1. The power of interpretation for the content of the card is owned by our company;

suggestion

2. No invoice or voucher at the time of purchase, no valid guarantee voucher, or the counterfeit and shoddy products; 3. Incomplete outer packing at the time of return of products, incomplete accessories, or users disassemble privately 4. Damage resulting from personal factors: Such as break, soaking, fierce hit, use under super high temperature, put beside the high magnetic products for a long time, etc.;

5. Sellers' secondary sales of the product is affected by human causes: The warranty card is altered or the information filled in on the warranty card is inconsistent with the actual items: 7. No product serial number, the product number is damaged and the product identity cannot be proved: 8. Product damage due to natural disasters such as acts of god; 9. Damage due to failure to use and assemble as per


2. Presented gifts are outside of the service range;

3. Only the records filled in by institutions and engineers with the maintenance qualification authorized by our company 4. The service records are just limited to the content stipulated by "three guarantees", for details, please refer to relevant regulations of the state

▶ Operating process

3. Opening and closing the door inside

3.1 One-click opening and locking inside

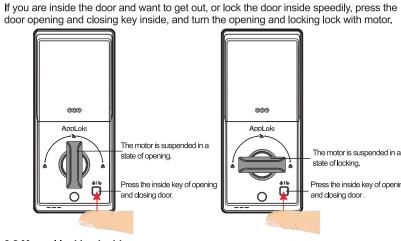

3.2 Manual locking inside

lock(No users entered), the direction will be automatically set after being power on, long"beep" sound refers to successful setting of the lock direction.

