



Instruction:

RET Button

Return (exit); in any interface, press this button to return to the normal display time interface.

POWER Button

In the normal display state, press the power button to control the clock to turn off/on.

MUTE Button

Turn all sounds on or off.

FLASH Button

Jumping seconds(Colon) flashing / not flashing settings.

12/24 Button

Switch between 12-hour mode or 24-hour mode. Clock rings once for 12-hour mode, clock rings 2 times for 24-hour mode.

+ - Button

Manual 8-level brightness adjustment. (If you can't adjust by directly pressing the “+” “-” button, you can press the “DIM” button first and then the “+” “-” button.)


DIM Button

Switch the automatic or manual brightness adjustment mode, press the “DIM” button, one beep is manual adjustment mode, and the two beeps are automatic dimming mode.

NUMBER 0-9 Button

When setting the time, alarm, countdown and other functions, set the value size directly by pressing the number keys. (Like the TV remote control button, input two digits need to be completed quickly within 2 seconds.)

 
T SET Button (Time Setting)

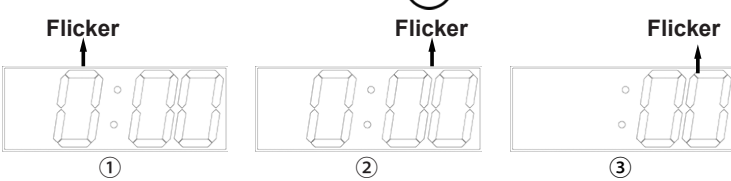

Attention: Press “UP” and “DOWN” button to adjust the value.

- ①Press “T SET” button into the time setting and adjust the hour.
- ②Press the “MODE” button to switch to adjust the minute.
- ③Press the “MODE” button to switch to adjust the seconds.
- ④You can press “RET” button to exit the settings.

 CD SET Button (Countdown)

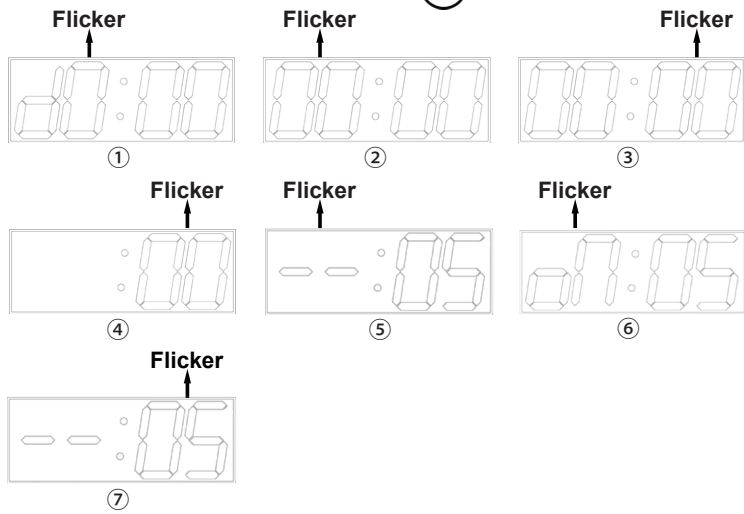

Attention: Press “CD SET” button twice directly into the settings. You can press “RET” button to exit the settings. Press “UP” and “DOWN” button to adjust the value.


- ①Press “CD SET” button twice directly into the settings and adjust the day. (If you don't need to countdown the days, just leave it for 0 00.)
- ②Press “MODE” button to switch to adjust the countdown hour.
- ③Press “MODE” button to switch to adjust the countdown minute.
- ④Press “MODE” button to switch to adjust the countdown seconds.
- ⑤⑥ Press the “MODE” button to switch to adjust the “oN” / “- -”. (Press “UP” and “DOWN” button to control whether memory this countdown.) "oN" is memory,"--" is no memory.
- ⑦ Press “MODE” button to adjust the countdown prompt setting.

Press the “▶||” button to start the countdown.

You can press the " RET " button to exit the setting


Attention: When you want to repeat the countdown you have set, just press the “CD/SET” button twice to set the countdown page and press “▶||” once more to start the countdown.

 DISP Button(Fixed Display)

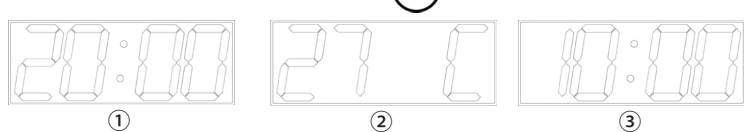

- ①Press “DISP” button to enter the display mode and show the date.
- ②Press “DISP” button to switch to fixed display temperature.
- ③ Press “DISP” button to the loop display.
- ④Press “DISP” button to return fix time display.

 
AL SET Button (Alarm Setting)

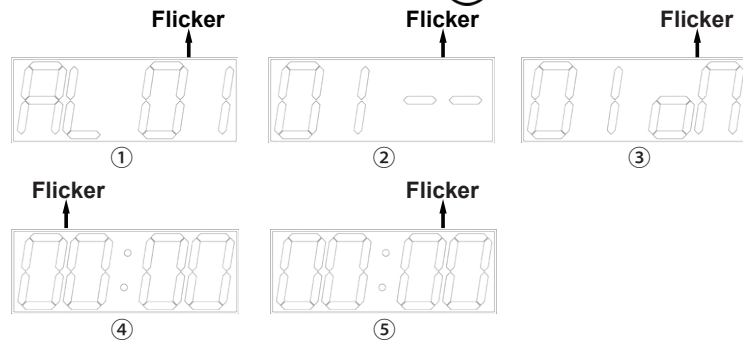

Attention: The “AL 01” is the first group you can set 16 groups in our clock, if you want to set others you can press the “UP” button to change it. Press “UP” and “DOWN” button to adjust the value.


- ①Press “AL SET” button into alarm setting and adjust the “AL 01” (If you don't need other alarm just left it for 01).
 - ②③Press the “MODE” button to switch to adjust “01 oN/ - -”. (Press “UP” and “DOWN” button to control this alarm open or close.) "oN" is open,"--" is close.
 - ④Press “MODE” button to switch to adjust the alarm hour.
 - ⑤ Press “MODE” button to switch to adjust alarm minute.
- You can press the " RET " button to exit the setting.

 ST Button (Sequential)

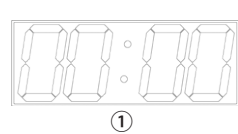

- ①Press the “▶||” button to play and pause. You can press the “RET” button to exit the settings.

 C SET Button (Calendar Setting)

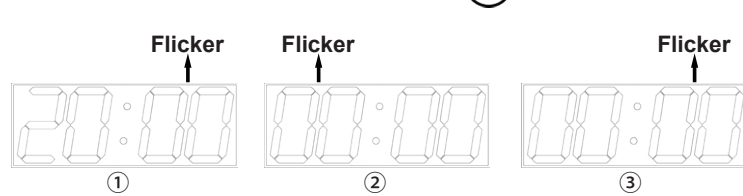


Attention: Press “UP” and “DOWN” button to adjust the value.

- ①Press “C SET” button into the calendar setting and adjust the year.
- ②Press the “MODE” button to switch to adjust the month.
- ③Press the “MODE” button to switch to adjust the day.
- ④You can press “RET” button to exit the settings.

A++ Button

Browse 01-16 alarm.

 °C °F Button (Temperature Mode)

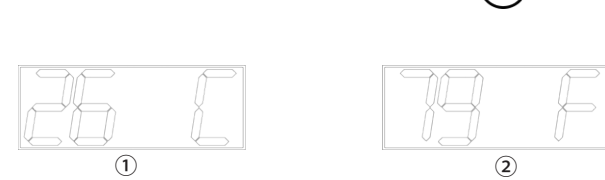

Attention: You can press “RET” button to exit the settings.

- ①Press “C/F” button into the thermometer.
- ②Press “MODE” to switch to Centigrade or Fahrenheit mode.

AL ON/OFF Button

When you have set up the alarm, you can open or close the alarm.

FULL Button

Test the light and sound, press “RET” to exit.

A1~A3 Button

View the corresponding group number alarm. You can check 01-04 alarm clock. If you want to check 01-016 you can continue press “A++” button.

0/φ Button

Press the 0/φ button to switch the time display mode (e.g. 08:30/8:30).

Precautions:

A. If the clock crashes during the running or setting process (the display does not move or displays garbled characters), unplug the power cord, remove the button battery, or replace the power plug and button battery. Load the button battery after normal.

B. This product is a precision timing device. It should avoid severe impact, avoid high temperature, and avoid being placed in a corrosive gas environment to avoid damage. Since this product is an electronic device, it should avoid short circuit of internal circuit caused by liquid immersion, especially corrosive liquids.

Warning: It is strictly forbidden to connect the clock power cable directly to the 110V or 220V mains. Otherwise, the circuit will be burnt due to excessive voltage. In this case, the product is not guaranteed.

