
WIRELESS GAMING KEYBOARD



USER MANUAL

Packing List

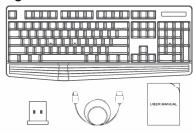

- 1. Keyboard x1
- 3. Charging Cable x1
- 2. USB receiver x1
- 4. User manual x1

Instructions

- 1. Please charge the keyboard when you use it for the first time.
- 2. Take out keyboard and turn on its switch. Put its receiver into computer's USB port.
- 3. Wait for 3 seconds for system to install the drive automatically, and you can use the product after that.
- 4. Turn on the power switch of the keyboard,which should be within 20cm away from the receiver.Press and hold "FN" and "K" keys together to pair again.

-1-

Shortcut key

IJ	FN+F1	Player
□(1)	FN+F2	Volume Down
□)))	FN+F3	Volume Up
8	FN+F4	Mute
	FN+F5	Stop
I	FN+F6	Previous Track
►II	FN+F7	Play / Pause
▶ I	FN+F8	Next Track
\bowtie	FN+F9	Email
合	FN+F10	Homepage
a	FN+F11	Lock keyboard
	FN+F12	Calculator

- 2 -

Backlight Mode Switch

FN+INS	Rainbow Mode
FN+HOME	Single Color Mode with Light On Constantly. Press again to switch the color.
FN+page UP	Dynamic Single Color Mode Press again to switch the color.
FN+DEL	Dynamic RGB Mode.
FN+END	Neon Mode
FN+Page down	Backlight On/Off

Backlight Effect Control

FN+↑	Backlight Brightness Increase	
FN+↓	Backlight Brightness Decrease	
FN+→	Speed Up the Backlight Changing	
FN+←	Speed Down the Backlight Changing	

Correct Disposal Of This Product



Y (Waste Electrical & Electronic Equipment)
This Marking shown on the product or its literature,
indicate that it should not be disposed with other

household wastes at the end of its working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources. Household user should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

- 4 -

Business users should contact their supplier and check the terms and conditions of the purchase contact. This product should not be mixed with other commercial wastes for disposal.

Contact Us

Whatever you need, we're here to help. Just get in touch, and we'll try our best to respond within 24 hours.

After-sales email: csforcustomer@gmail.com

- 5 -

折叠尺寸: 75×100(mm) 展开尺寸: 225×100(mm)

材质及工艺: 80g书纸 四折页 哑油

- 3 -

印刷颜色: 单色双面印刷

FCC Warning

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide

reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed

and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a

particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- · Increase the separation between the equipment and receiver.
- · Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- · Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.