

RC -G008+

UNIVERSAL REMOTE CONTROL LCD/LED TV REMOTE CONTROLLER

How TO SET UP YOUR REMOTE:

● A. Automatic Search


Step.1 Press [MUTE] + [POWER] buttons together ,then the led light is lighting and release it.

Step.2 Press the mute button again, the remote control enters the automatic search mode. if the volume appears on the TV, press the mute key again, the automatic search stops, you can press other keys to test the function.

Step.3 If the function is correct, you can press the power key to exit the search mode, and the current function is saved.

● B. SET UP BY CODE

Step.1 Press [MUTE] + [POWER] buttons together ,then the led light is lighting and release it.

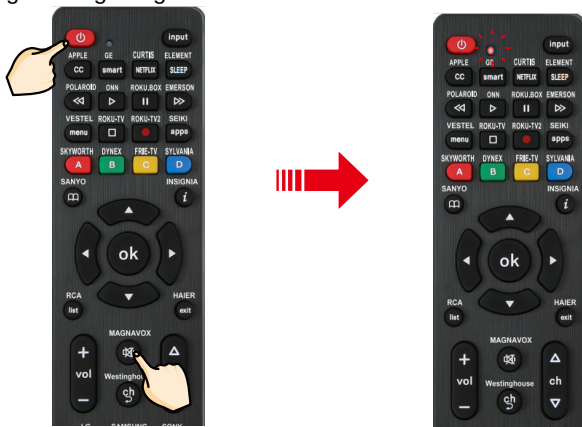

Step.2 Input your 3 digit TV CODE from code list. If the code is right, the LED light will go off. If the code is wrong, the LED light will still be on. If this happens,t to enter the code again as there may have been an error the rst time.


Step.3 Please check the function of Remote . If it doesn't work well, please you can t one of the other codes and repeat the process from step 1.

NOTE: During setting process, If no key is pressed in 10 seconds It will exit automatically.

BRAND	CODE	LIST	TV	BRAND	CODE	LIST	TV	BRAND	CODE	LIST	TV
AIWA	082.083.084.085			HITACHI	009.067			ROKU.TV	190		
AOC	086.087			IMPERIAL	205			ROKU.TV2	191		
APPLE	088			INSIGNIA	018			SAMSUNG	028.002.030.029.031.032		
AVOL	204			JVC	012.077.079.080.081			SANYO	017		
COBY	089.090.091.092.093.094.095.096			LG	023.001.024.025.026.027			SCEPTRE	193.194.195		
CURTIS	097.098.099.100.101.102.103			MAGNAVDI	025.055.056			SEIKI	016		
DAEWOO	104.105.106.107.108.109.110			OLEVIA	60.161.162.163			SHARP	045.007.047.048.049.050 057.056 055.054.053.052.051		
DYNEX	111.112.113			ONN	164			SKYWORTH	196.197		
ELEMENT	114.115.116.117.118.119.120.121 122			OPTIMUS	165.166.167			SONY	033.003.034		
EMERSON	123.124.125.126.127.128.129.130 131.132.133.134.135.136.137			Panasonic	006.042.043.044			SYLVANIA	198.199.200.201.202.203		
FIRE-TV	206			PHILIPS	005.064.038.039.040.041 035.036 037			TCL	011.073.075.074.076		
FUNAI	138.139.140.141.142.143.144.145			POLAROID	168.169.170.171.172.173.174.175 176.177.178			TOSHIBA	059.060.061.062.063.064.065.066		
GE	146.147.148.149.150.151.152.153 154.155.156.157.158.159			PROSCAN	179.180.181.182.183.184.185.186 187.188			VESTEL	015		
HAIER	020			PYLE	189			VIZIO	068.010.069.070.071.072		
HISENSE	013.014.049.050.058.057 056.055 054.053.052.051			RCA	019			WESTINGHOUSE	022		
				ROKU.BOX	192						

● C. Brand Search

Brand key Table

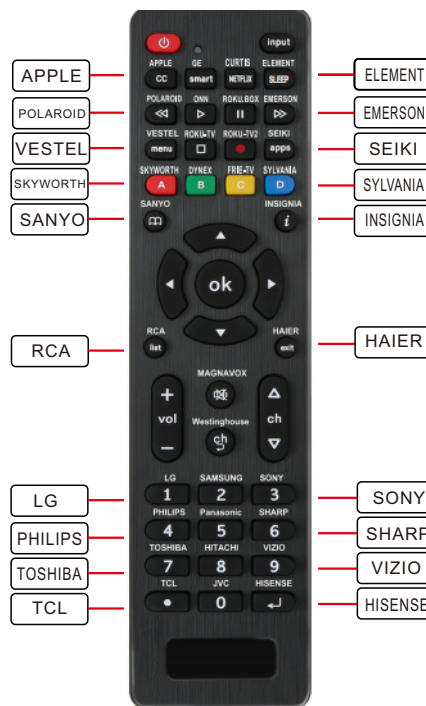

Turn on TV. Press the button of the corresponding brand for 5 sec, the LED f lashes three times, then the setting is completed.



Default Mode :

- Under the default setting, RC-G008 can directly control many brands, include LG/SAMSUNG/SONY/PHILIPS/PANASONIC/SHARP TV.
- Restore to the initial setting, please and hold the [OK] + [0] buttons about 3sec, the LED light will be blink four times, now it is in initial setting.