


USER MANUAL

Kids Tent with Top Window

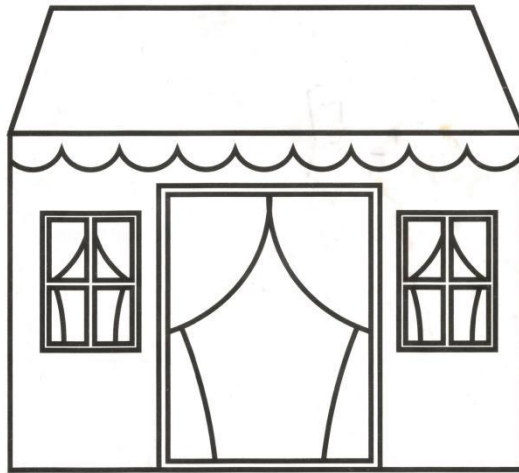


Read all instructions before use of the playhouse.

Keep instructions for future use.

WARNING : Adult Assembly Required.

Note: Keep away from fire

Cover Material: Polyester, the fabric may wrinkle during transportation, we recommend to iron it before use.
Machine Washable, Dry or air dry.

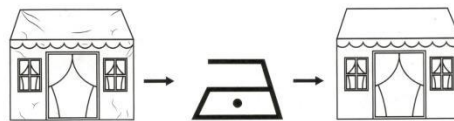

Made in China

 

 
 

PVC Pipe :

	A	x6	A:12.68inchx0.75inch
	B	x8	B:13.46inchx0.75inch
	C	x20	C:15.24inchx0.75inch






Fiberglass: For Door Side - easy to enter the playhouse

	D	x3	D:15.24inchx0.75inch
---	---	----	----------------------

Connector:


	E:90°x2		F:135°x4		G:90°x4		H:2.36inchx0.91inchx2		I:3.15inchx0.91inch x20
---	---------	---	----------	---	---------	---	-----------------------	---	-------------------------

Step 1:

I = Dx3		1pcs
II = Cx3		4pcs
III = Ax3		2pcs
IV = Cx2		4pcs
V = Bx2		4pcs


Step 2:

 Use Pipe Ax3=III, Dx3= I , Cx3=II; Connector G, H, E; to set up the base of the tent, Connector E, Connector H, 5 is for the door side of the tent cover.




Step 3:

Use Pipe Cx2=IV; Connector F to set up the four vertical poles.

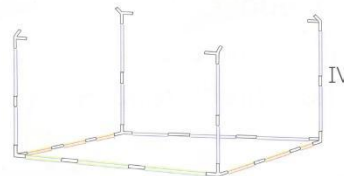


Step 4:

Use Pipe Bx2=V, Cx3=II; Connector E, to set up the roof of the tent.

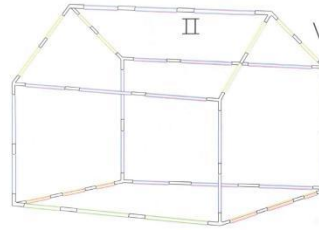


Step 5:

Press to make **every part** tighter connected and make the structure stronger.

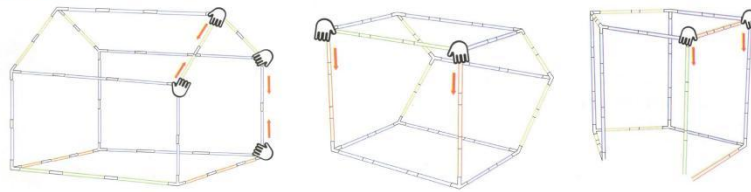

Step 6:

Add Tent cover and mat to complete the play tent.

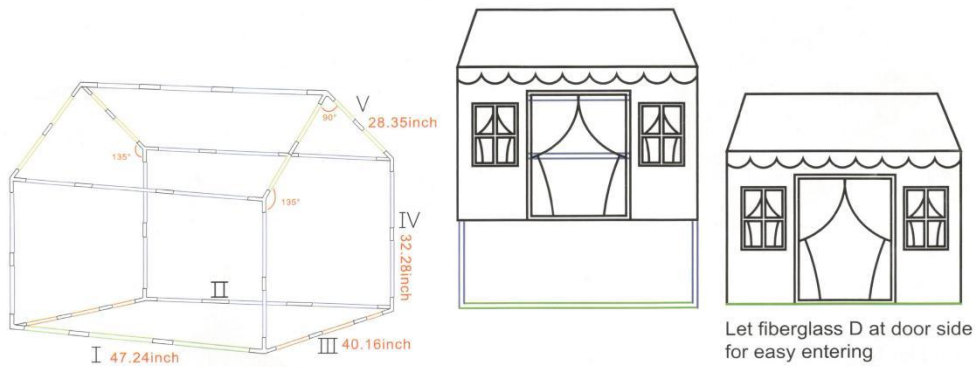

Step 7:

Fasten the velcro on the house cloth cover & mat, to connect cloth with the frame better.

