
Wall Cabinet Instruction Manual

MODEL: W2442-E W2742-E

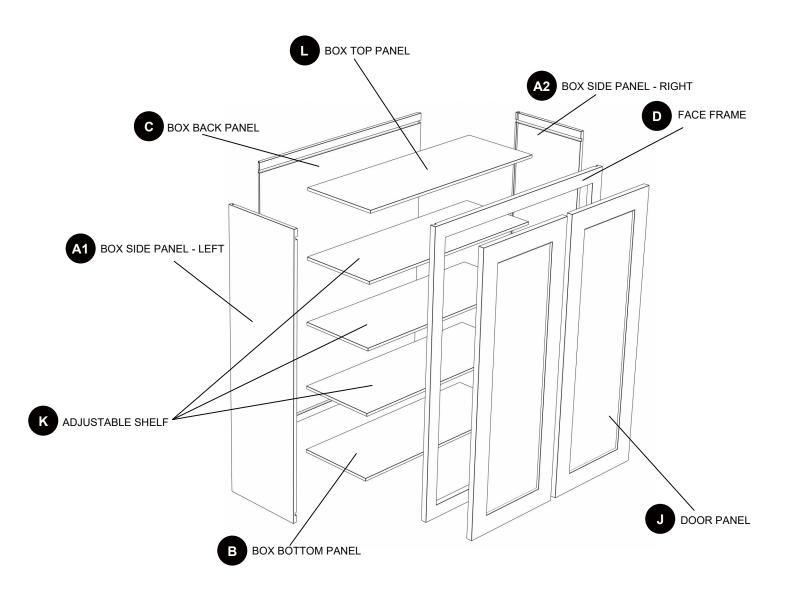

PART	DESCRIPTION
A1	Box side panel - left
A2	Box side panel - right
В	Box bottom panel
С	Box back panel


PART	DESCRIPTION
D	Face frame
J	Door panel
K	Adjustable Shelf
Ĺ	Box top panel


CAUTION

- Be sure to carefully remove all parts from the carton and ensure that there are no damages to any of them.
- The hardware should be kept away from children when unpacking and assembling this product. Two adults are recommended for assembly.
- Follow the instructions in the instruction manual carefully and strictly to ensure that the product is assembled and operates as intended.
- Do not tighten all the screws until all the adjacent parts have been properly connected.
 Please do not throw away extra screws. Please refer to the actual product for the screw hole position.

HARDWARE CONTENTS


Soft- close hinge x 6
Be careful the length of the screws.

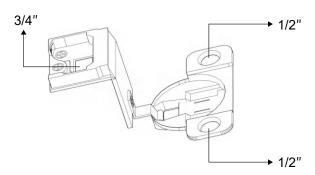

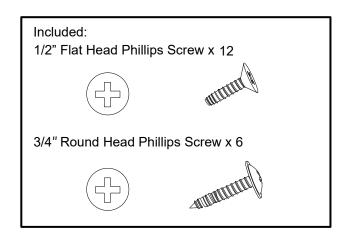


EE Corner brace x 16



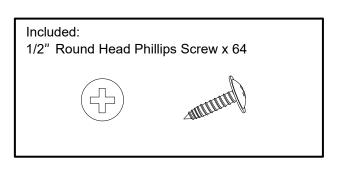


FF Adjustable shelf clip x 12



 




 






TOOLS REQUIRED (NOT INCLUDED)

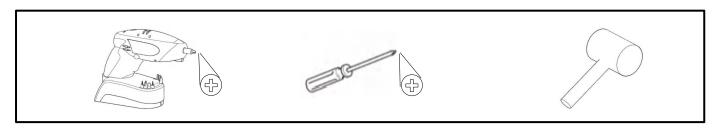



INSTALLATION OVERVIEW

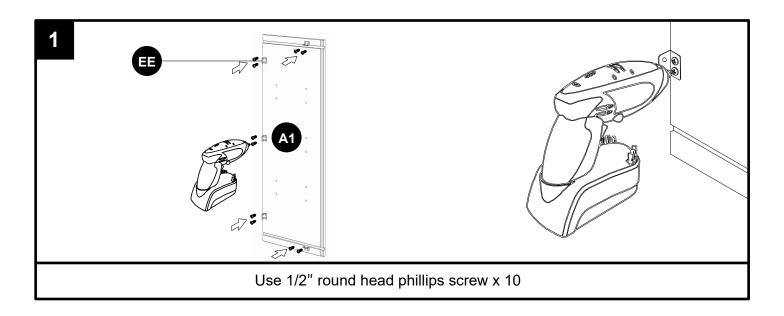


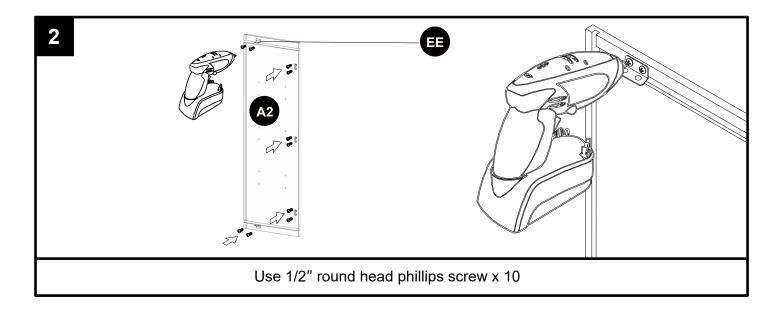


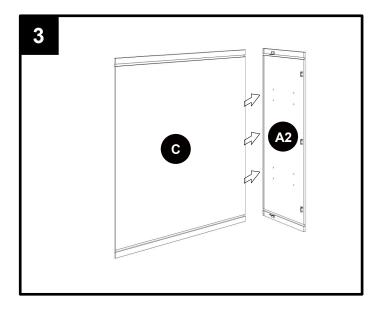


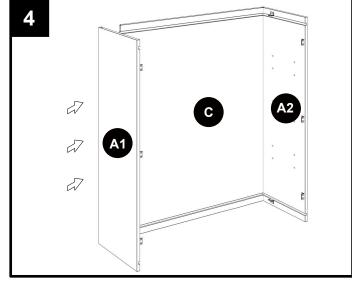


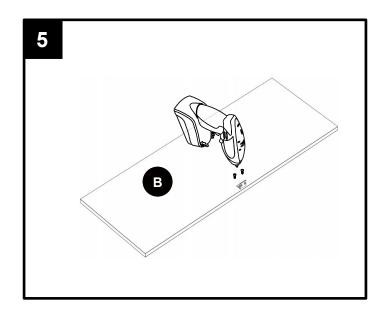


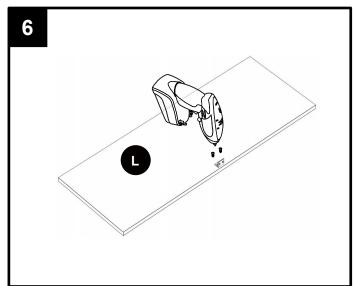


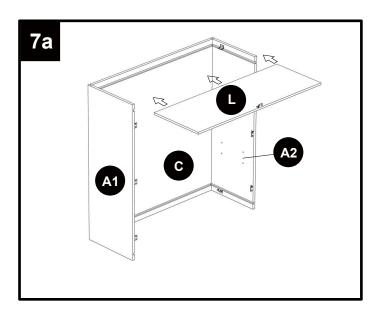


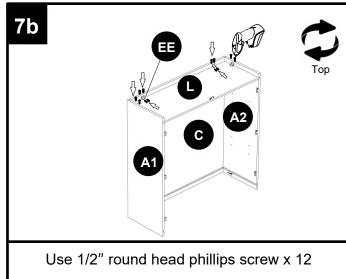


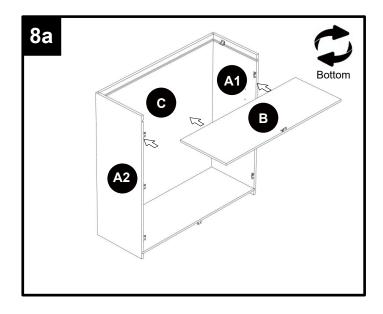


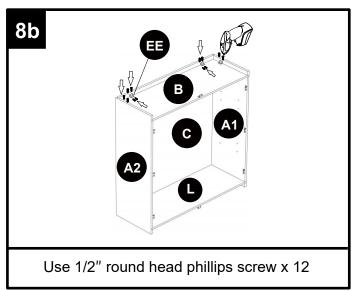


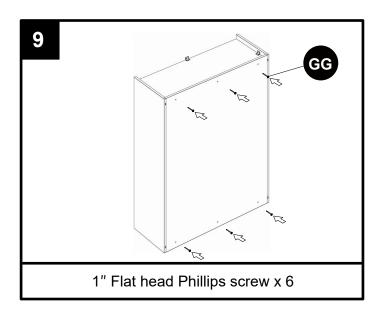


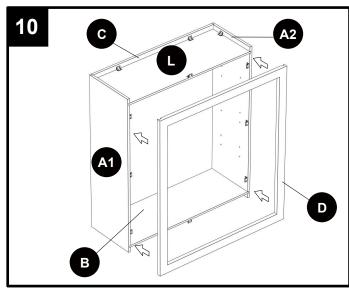


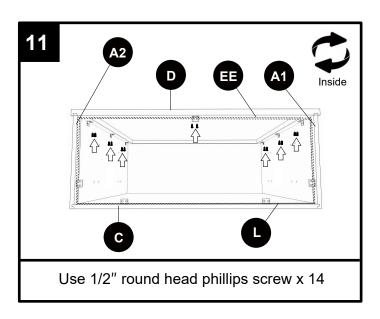


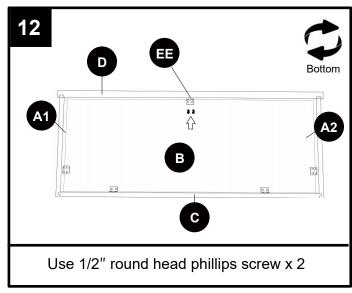


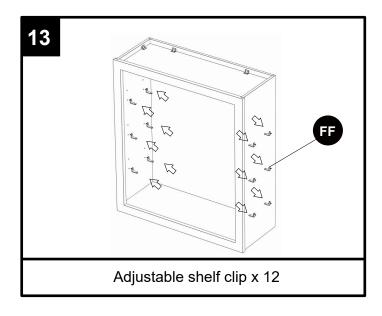


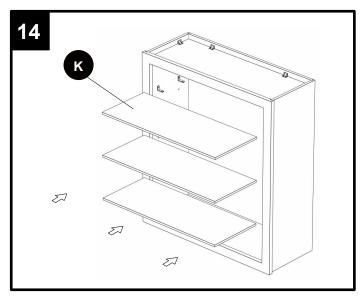

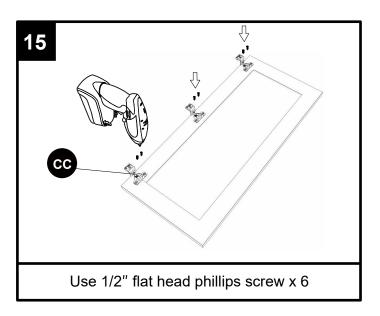


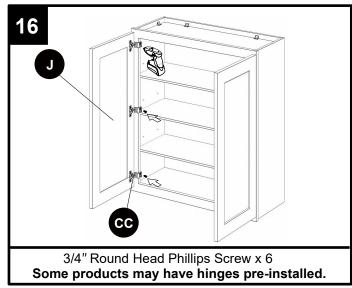


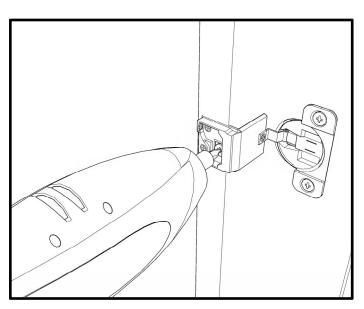

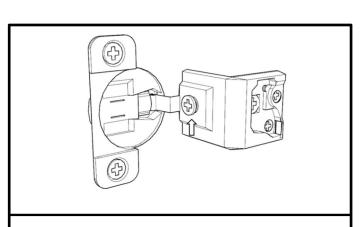

If the door is not level when it is installed, the customer will need to turn the screw clockwise to extend the hinge or counterclockwise to shorten the hinge.

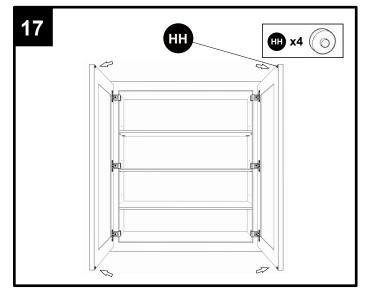

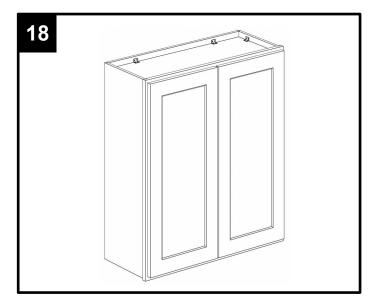

Dear customers,

Thank you for purchasing our product. If you require assistance, please contact the customer service team at the retailer where you purchased the product. The customer service team will be happy to assist you.