










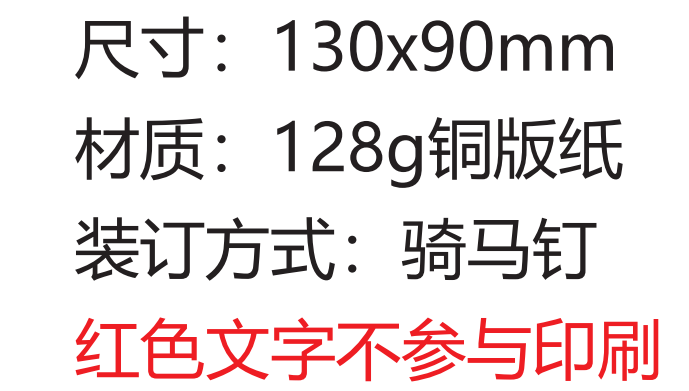


封底背面留白

ing is covered by the microphone pick up the sound output from the speaker. To prevent this problem, first decrease the volume of speaker. do not place the microphone pointed to the speaker and set a suffice distance between the microphone and speaker.

- * The microphone is a sensitive equipment, do not drop, hit or apply shock to it.
- * Do not store the microphone in a place with high temperature or humidity.








hold microphone handle not grille

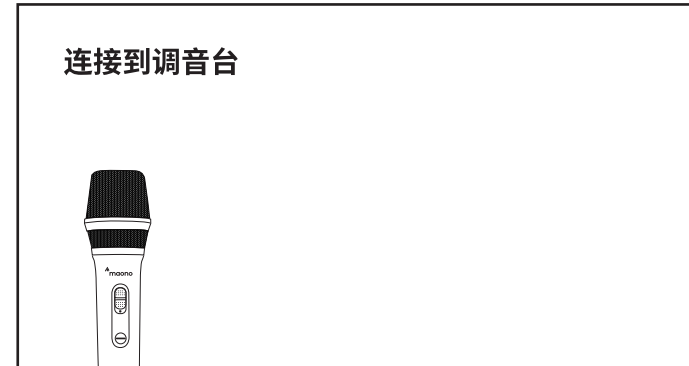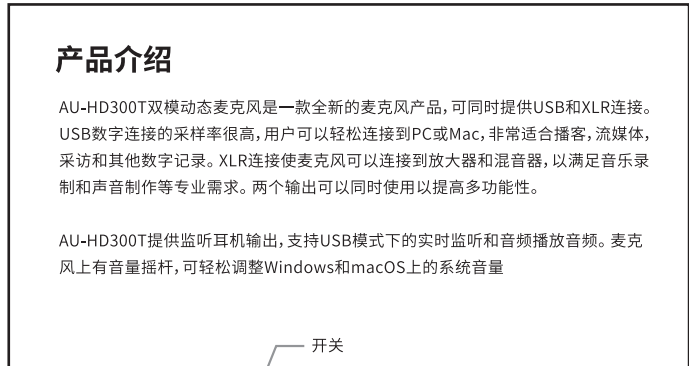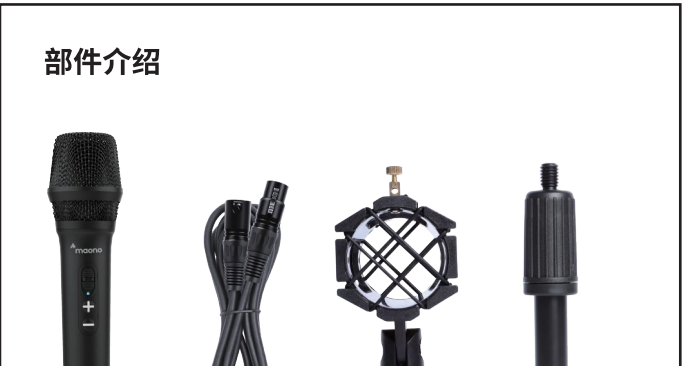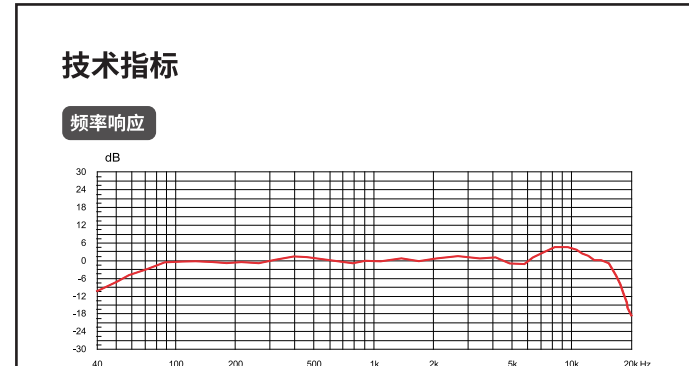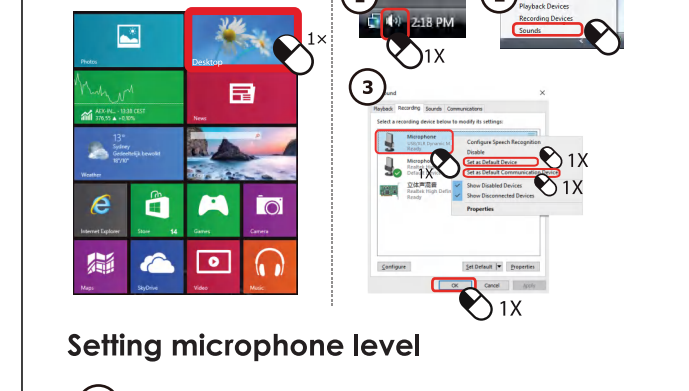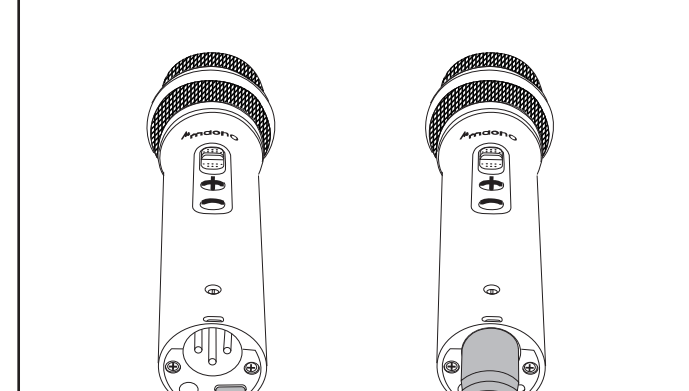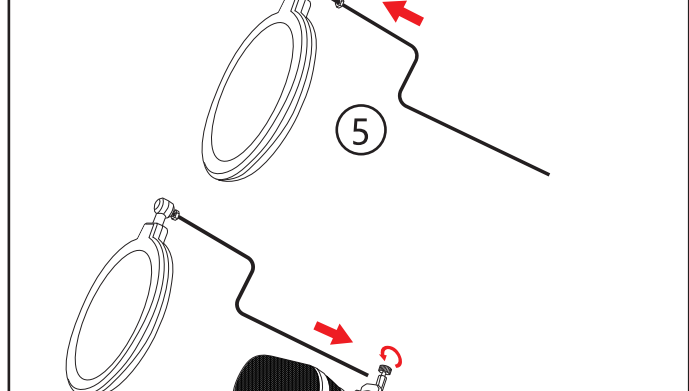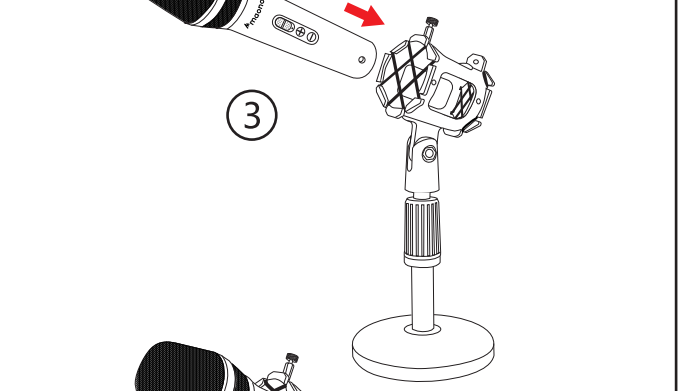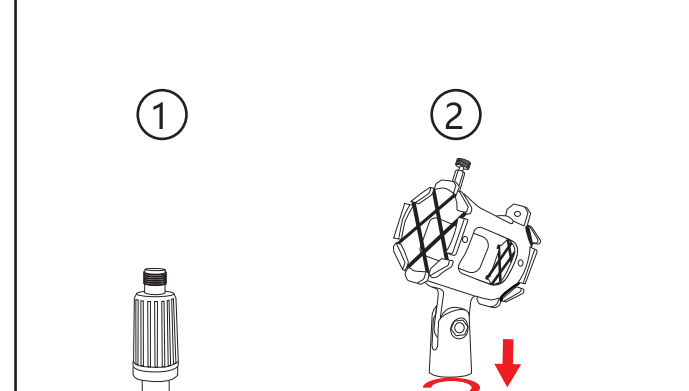

注意事项

如果用手按压耳内风球导致耳内鼓膜受伤，则可能会产生耳鸣声。这个现象叫作由耳内鼓膜受损而产生的声音引起的。为避免此问题，请减小风球摩擦的声音。不要将耳内鼓膜摩擦，并只在耳内鼓膜和风球之间保持足够的距离。

- * 避免过度摩擦风球，请勿摩擦，避免产生其他损伤。
- * 请勿将耳内鼓膜靠近耳朵或眼睛的地方。

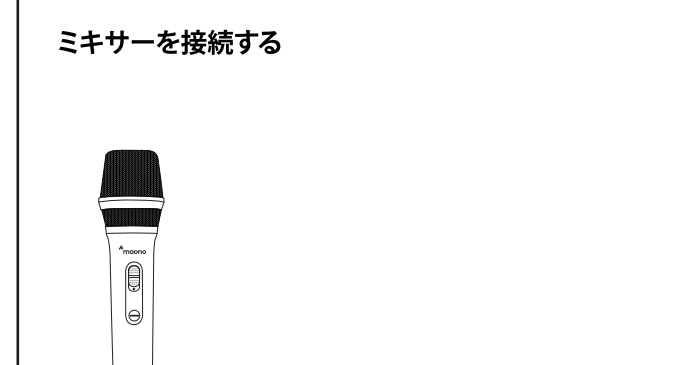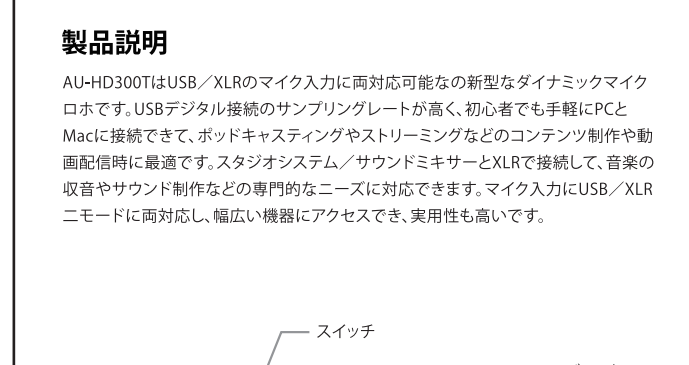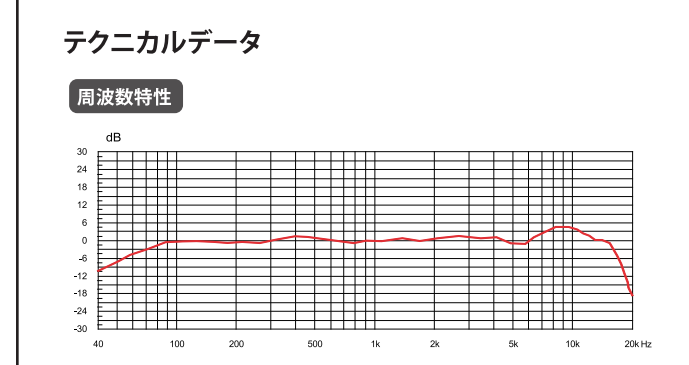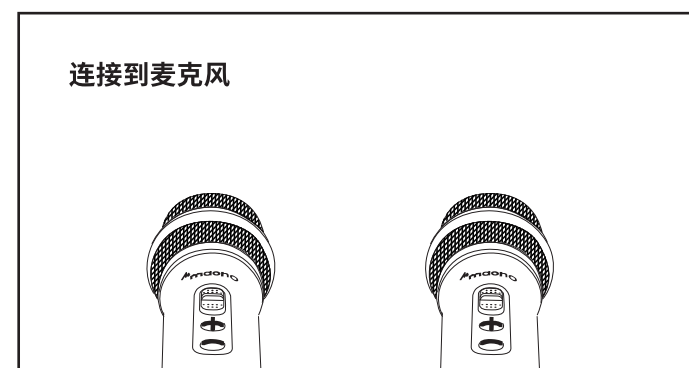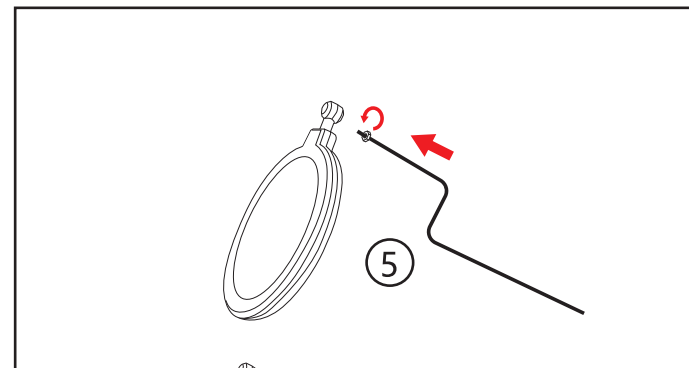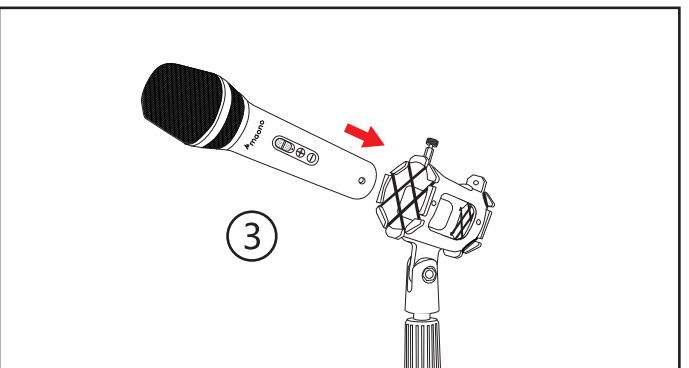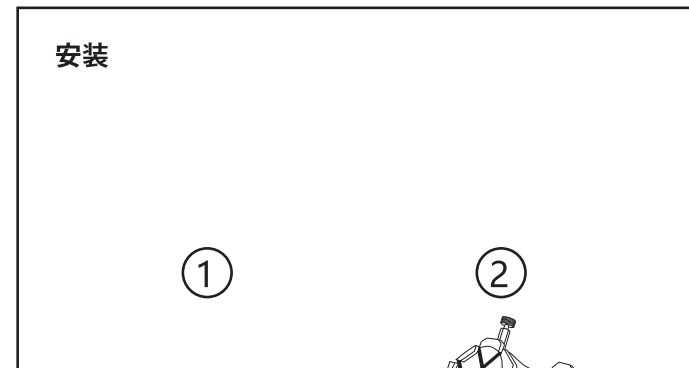

注意事項

手でマイクを握る位置をまちまち、スピーカーに近づけたりすると、ハウリング音が発生することがあります。この現象は、スピーカーから出ている音をマイクが拾ってしまふことによって起こります。この問題を防ぐには、まずスピーカーの音量を下げ、マイクをスピーカーに向けないでください。なるべくマイクとスピーカーの間に十分な距離を保ちます。

- マイクは顔の真ん中よりすくなく、鼻と口の間に、横に握る姿勢をとらないで下さい。
- 長い時間「受持」になる場合は、高度な姿勢保持、腕立て、肩の鍛え付けに留意してください。

