


TECKNET

RGB Gaming keyboard

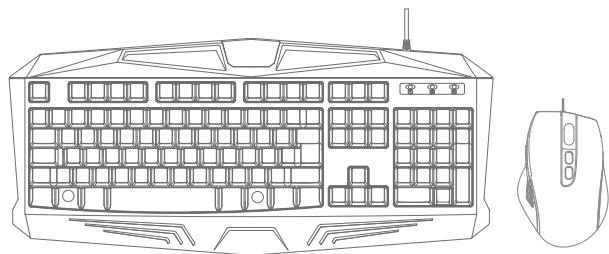

User Manual

UK

Package Contents:



Keyboard Specification:

Number of Keys:	104 keys / 105 keys
Working voltage:	DC 5V
Working current:	240mA
Compatible:	Win XP, Vista, Win7, Win8, Win10

25 keys anti-ghosting:

Q,A,Z,W,S,X,E,D,C,R,F,V,T,G,B,M,Space,Tab, Ctrl-L,Alt-L,Shift-L,1!←→

Keyboard Backlight switch:

1. **【FN+DEL】** Backlight is in the “Marquee Chasing” mode: red, blue and green alternate colours.
2. **【FN+INS】** Backlight is in the “Spectral” mode: RGB colours are slowly and alternately exchanged.
【FN+END】 Backlight is in the “Breathing” mode: turn on breathing and press again to turn off breathing.
3. **【FN+HOME】** Backlight is in the “Always On” mode: 7-colour switch.
4. **【FN+PGUP】** The backlight is mixed and always on: red, blue and green are mixed into 3-Colour “Constant Lighting” mode.
5. **【FN+PGDN】** The backlight is ON / OFF

UK

Keyboard Speed Control:

1. **【FN+←(Left arrow)】** Decrease LED speed
2. **【FN+→(Right arrow)】** Increase LED speed

Keyboard Brightness Control:

1. **【FN+↑(Up arrow)】** , increase LED brightness
2. **【FN+↓(Down arrow)】** , decrease LED brightness

Keyboard WINDOW lock Indicator:

【FN+Win】 , windows lock WIN and MENU keys. Press again unlock

Keyboard Game mode and button customization:


<1> FN + F1 = MEDIA	<7> FN + F7 = Play / Pause
<2> FN + F2 = Volume -	<8> FN + F8 = Next Track
<3> FN + F3 = Volume +	<9> FN + F9 = Mail
<4> FN + F4 = Mute	<10> FN + F10 = Web / Home
<5> FN + F5 = Stop	<11> FN + F11 = Computer
<6> FN + F6 = Prev Track	<12> FN + F12 = Search

Mouse Backlight mode button:

Press Backlight mode button to switch 5 backlighting mode: Colorful streaming, Tail, Neon, breathing, OFF.

UK

Mouse Button Instructions:

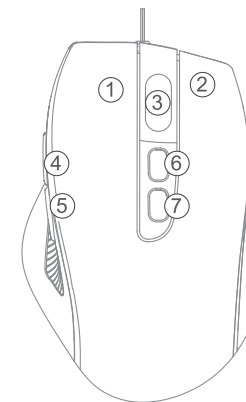

1. Left mouse button.
2. Right mouse button.
3. Middle button.
4. Side button (defaulted to Forward).
5. Side button (defaulted to backward) .
6. DPI button: The mouse switches between the 6 DPI 800 - 1600 - 2400 - 3200 - 4800 - 6400(Default in 1600DPI).
7. Light switch

Mouse FAQ:

1. If the mouse is not responding, please check whether the mouse is plugged correctly in the corresponding computer USB port, or try another USB port.
2. If the cursor is moving slowly, jumping or intermittent, please try another surface. Surfaces that are dark, dirty, not flat, or bright may affect the performance of the mouse. Use of a mouse pad is recommended.

UK

IMPORTANT SAFETY INSTRUCTIONS-CAREFULLY FOLLOW THESE INSTRUCTIONS.



1. SAVE THESE INSTRUCTIONS - This sheet contains important safety and operating instructions.
2. Before using the product, read all instructions and caution markings on the product, accessories and device using our product.
3. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
4. Children should be supervised to ensure that they do not play with the appliance.
5. Keep the product away from fire or explosion may occur.
6. For proper insertion, please observe polarity indicators (+/ -).
7. Remove the batteries if the product is not going to be used for a long period of time.
8. Do not place product in or near inflammable, explosive or hazardous object.
9. Do not place in or near water, rain, excess moisture or extreme heat.
10. Do not operate product with damaged cord or plug.
11. Do not operate product if it has been damaged in any way.
12. Do not disassemble the product. Disassembly may result in a risk of safety hazards.
13. Do not throw or shake the product.
14. To reduce the risk of electric shock, unplug the product from the power supply when not in use or switch off the power supply.

Limited 18-Month warranty

What this warranty covers.

Shenzhen Unichain Technology Co., LTD. (Manufacturer: "Unichain") warrants to the original purchaser of this TeckNet product that the product shall be free of defects in design, assembly, material, or workmanship.



What the period of coverage is.

Unichain warrants the TeckNet product for 18 Months.

What will we do to correct problems?

Unichain will repair or replace, at its option, any defective product free of charge (except for shipping charges for the product).

What is not covered by this warranty?

All above warranties are null and void if the TeckNet product is not provided to Unichain for inspection upon Unichain's request at the sole expense of the purchaser, or if Unichain determines that the TeckNet product has been improperly installed, altered in any way, or tampered with. The TeckNet Product Warranty does not protect against acts of God such as flood, earthquake, lightning, war, vandalism, theft, normal-use wear and tear, erosion, depletion, obsolescence, abuse, damage due to low voltage disturbances (i.e. brownouts or sags), non-authorized program, or system equipment modification or alteration.

How to claim the warranty

Please contact retailers or visit TeckNet website www.tecknet.co.uk for more information.

Disclaimer

Every effort has been made to ensure that the information and procedures in this guide are accurate and complete, no liability can be accepted for any errors or omissions and we reserve the right to make any changes without further notice to any products mentioned herein.

Software Download (MODEL: GM2826)

Multifunctional, advanced setup, light and macro function can be set by software. Please download software through:

<http://www.tecknet.co.uk/support.html>

