

This Is A Manual.

No Foolin', All Coolin'
Portable Air Conditioner

BEFORE FIRST USE:

To prevent any internal damage, it is very important to keep refrigeration units (like this one) upright throughout their journey. Please leave it standing upright and outside the box for **24 HOURS** before plugging it in.

In the event this product malfunctions or customer believes it is defective, the customer should contact Customer Service and retain the defective product pending further instructions. Defective product should be clearly marked or stored where it cannot be used again by mistake. Failure to retain the product may impede Vremi's ability to correct any legitimate problem and may limit the extent to which Vremi may provide recourse.

Important Safety Instructions

1. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
2. Children shall not play with the appliance.
3. Cleaning and user maintenance shall not be made by children without supervision.
4. Disconnect the appliance from its power source during service and when replacing parts.
5. The appliance shall be installed in accordance with national wiring regulations.
6. Warning: before obtaining access to terminals, all supply circuits must be disconnected.
7. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.
8. Disconnect the power supply before cleaning and maintenance.
9. The appliance shall not be installed in the laundry.
10. Please note: Check the nameplate for the type of refrigerant gas used in your appliance.
11. Specific information regarding appliances with refrigerant gas. R410A, R134a, R290 is a refrigerant that complies with European ecological standards; nevertheless, it is recommended not to pierce the cooling circuit of the machine. At the end of its useful life, deliver the appliance to a special waste collection centre for disposal.
12. This hermetically sealed system contains fluorinated greenhouse gases.
13. ENVIRONMENTAL INFORMATION: This unit contains fluorinated greenhouse gases covered by the Kyoto Protocol.
14. The maintenance and disposal operations must be carried out by qualified personnel only. (For more details on the refrigerant, see back cover). GWP(Global Warming Potential): R410A: 2088, R134a: 1430, R290: 3.
15. Do not use this unit for functions other than those described in this instruction manual.
16. If the power cord becomes worn or damaged, the cord should only be replaced by a qualified service technician using genuine replacement parts.
17. Make sure the plug is plugged firmly and completely into the outlet. It can result in the risk of electric shock or fire.
18. Do not plug other appliances into the same outlet, it can result in the risk of electric shock.
19. Do not disassemble or modify the appliance or the power cord, it can result in the risk of electric shock or fire. All other services should be referred to a qualified technician.
20. Do not place the power cord or appliance near a heater, radiator, or other heat source. It can result in the risk of electric shock or fire.
21. This unit is equipped with a cord that has a earthed wire connected to an earthed pin or grounding tab. The plug must be plugged into a socket that is properly installed and earthed. Do not under any circumstances cut or remove the earthed pin or grounding tab from this plug.
22. The unit should be used or store in such a way that it is protected from moisture e.g. condensation, splashed water, etc. Unplug unit immediately if this occurs.
23. Always transport your appliance in a vertical position and place on a stable, level surface during use. If the unit is transported laying on its side it should be stood up and left unplugged for 6 hours.
24. Always use the switch on the control panel or remote control to turn the unit off, and do not start or stop operation by plugging in or unplugging the power cord. It can result in the risk of electric shock.
25. Do not touch the buttons on the control panel with your wet and damp fingers.
26. Do not use hazardous chemicals to clean or come into contact with the unit. To prevent damage to the surface finish, use only a soft cloth to clean the appliance. Do not use wax, thinner, or a strong detergent. Do not use the unit in the presence of inflammable substance or vapour such as alcohol, insecticides, gasoline, etc.

Important Safety Instructions

27. Young children should be supervised to ensure that they do not play with, operate or climb on the appliance.
28. If the appliance is making unusual sounds or is emitting smoke or an unusual odor, unplug it immediately.
29. Do not clean the unit with water. Water can enter the unit and damage the insulation, creating a shock hazard. If water enters the unit, unplug it immediately and contact Customer Service.
30. Utilize two or more people to lift and install the unit.
31. Be sure all accessories are removed from the packing before use.
32. To avoid possible cuts, avoid contacting the metal parts of the appliance when removing or re-installing the filter. It can result in the risk of personal injury.
33. Do not block the air inlet or outlet of the appliance. Reduced air flow will result in poor performance and could damage the unit.
34. Always grasp the plug when plugging in or unplugging the appliance. Never unplug by pulling on the cord. It can result in the risk of electrical shock and damage.
35. Install the appliance on a sturdy, level floor capable of supporting up to 110lbs(50kg). Installation on a weak or unlevel floor can result in the risk of property damage and personal injury.
36. Close all doors and windows to the room for most efficient operation.



FCC Caution

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Important Safety Instructions

IMPORTANT - GROUNDING METHOD

This product is factory equipped with a power supply cord that has a three-pronged grounded plug. It must be plugged into a mating grounding type receptacle in accordance with the National Electrical Code and applicable local codes and ordinances. If the circuit does not have a grounding type receptacle, it is the responsibility and obligation of the customer to exchange the existing receptacle in accordance with the National Electrical Code and applicable local codes and ordinances. The third ground prong should not, under any circumstances, be cut or removed. Never use the cord, the plug or the appliance when they show any sign of damage. Do not use your appliance with an extension cord unless it has been checked and tested by a qualified electrical supplier. Improper connection of the grounding plug can result in risk of fire, electric shock and/or injury to persons associated with the appliance. Check with a qualified service representative if in doubt that the appliance is properly grounded.

ELECTRICAL CONNECTIONS

Before plugging the appliance into the mains socket, check that:

1. The mains power supply corresponds to the value indicated on the rating plate on the back of the appliance.
2. The power socket and electrical circuit are adequate for the appliance.
3. The mains socket matches the plug. If this is not the case, have the plug replaced.
4. The mains socket is adequately earthed. Failure to follow these important safety instructions absolves the manufacturer of all liability.

Important information for correct disposal of the product in accordance with EC Directive 2012/19/EU.



At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service. Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

DISPOSAL

Do not dispose of this product as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.

It is prohibited to dispose of this appliance in domestic household waste.

For disposal, there are several possibilities:

1. The municipality has established collection systems where electronic waste can be disposed free of charge.
2. As old products contain valuable resources, they can be sold to scrap metal dealers.

 
Wild disposal of waste in forests and landscapes endangers your health. Hazardous substances leak into the groundwater and find their way into the food chain.

SAVE THESE INSTRUCTIONS





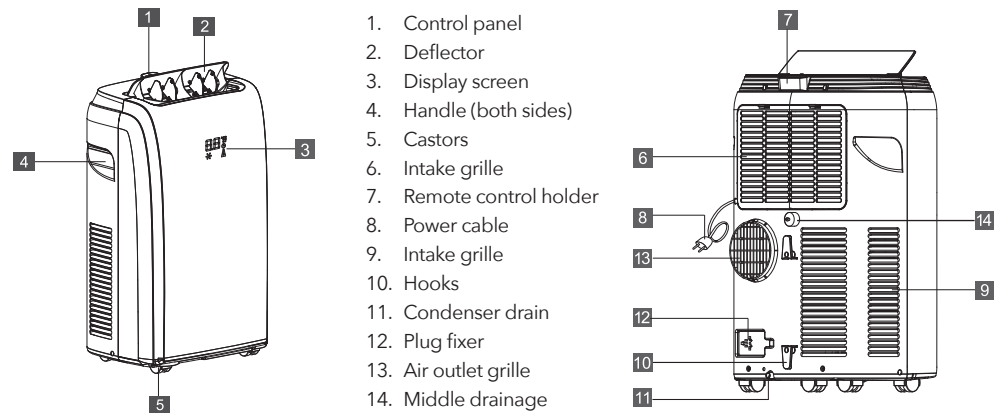

For Household Use Only

Parts Description

DESCRIPTION



ACCESSORIES

Parts	Parts name	Quantity
	Hose inlet Exhaust hose Hose outlet + Protective net	1 set
	Window slider kit	1 set
	Remote Control Battery	1 set
	Drain hose	1 set
	Foam seal	1 set
	4 Bolts (Metal locking screw)	4 PCS

NOTE:
All the illustrations in this manual are for explanatory purposes only. Your appliance may be slightly different.

 
 
 
Installation Instructions

EXHAUSTING HOT AIR

In the Cool Mode the appliance must be placed close to a window or opening so that the warm exhaust air can be ducted outside.



First position unit on a flat floor and make sure there's a minimum of 12" (30cm) clearance around the unit, and is within the vicinity of a single circuit outlet power source.

1. Extend either side of the hose (Fig.1) and screw the hose inlet (Fig.2).
2. Extend the other side of the hose and screw it to the hose outlet (Fig.3).
3. Install the hose inlet into the unit (Fig.4).

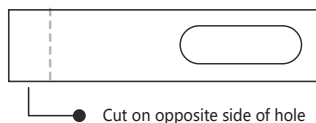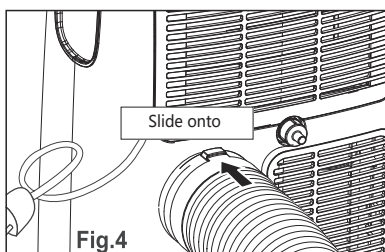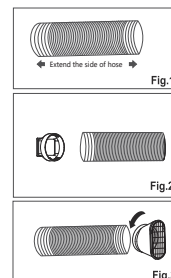

4. Attach the hose outlet into the window slider kit and seal (Fig.5&6).

  Window slider kit has been designed to fit most standard vertical and horizontal window applications. However, it may be necessary for you to modify some aspects of the installation procedures for certain types of windows. The Window slider kit can be fastened with screws.

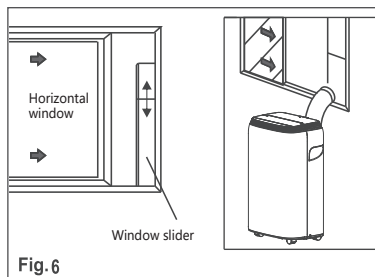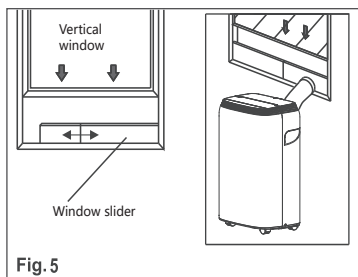

NOTE:

 
If the window opening is less than the minimum length of the window slider kit, cut on opposite side of the hole to fit the window opening. Never cut the hole on Window slider kit.

Operating Instructions

WINDOW SLIDER KIT INSTALLATION

1. Parts:
 - A) Panel (The second panel may not be supplied)
 - B) Panel with one hole
 - C) Panel without hole (may not be supplied)
 - D) Screw to lock window kit in place
2. Assembly:



Slide Panel B and C into Panel A to widow width. When adjusting the window width, make sure that the Window kit assembly is free from gaps and/or air pockets when taking measurements.
3. Lock the holes with screws. Make sure that there are no gaps or air pockets in the Window kit assembly after installation.

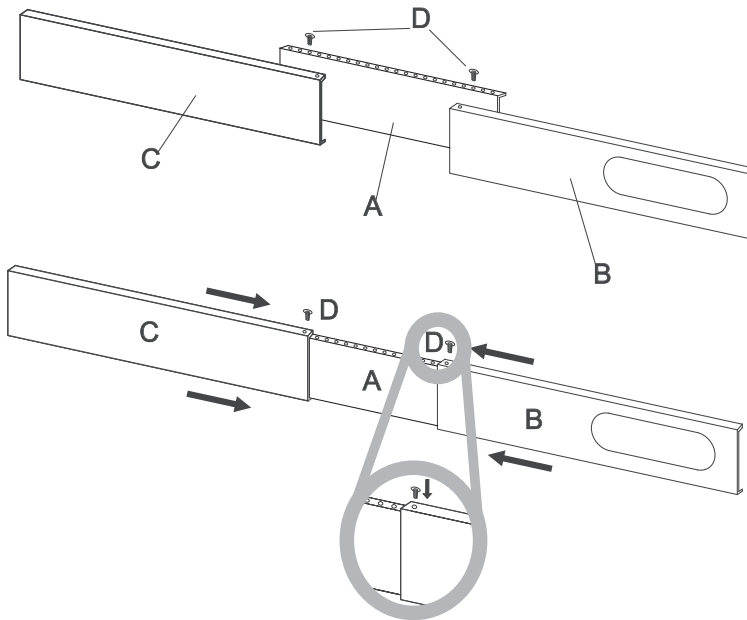

Operating Instructions


LOCATION

  1. The unit should be placed on a firm ground to minimize noise and vibration. For safe and secure positioning, place the unit on a smooth, level floor to support the unit.
2. To move the unit with casters, make sure to move on smooth and flat surfaces. Be careful when moving on carpeted surfaces. Protect floor when moving over wood floors. Do not attempt to move the unit over objects.
3. The unit must be placed within reach of a properly rated grounded socket.
4. Never place any obstacles around the air inlet or outlet of the unit.
5. Allow at least 18 inch (45cm) of free space against the wall to work efficiently.
6. The hose can be extended, but it is the best to keep the length to minimum required. Also make sure that the hose does not have any sharp bends or sags.

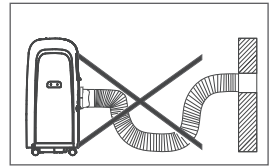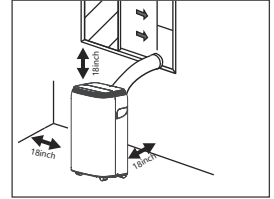


DOUBLE-HUNG SASH/SLIDING CASEMENT WINDOW INSTALLATION

 1. Cut the foam seal (adhesive type) to the proper length and attach it to the window sash.
2. Attach the window slider kit to the window sash. Adjust the length of the window slider kit according to the width of window. The width of the window should be more than 20 inches but less than 53 inches.
3. Cut the foam seal (adhesive type) to the proper length and attach it on the of the window.
4. Close the window securely against the window slider kit.
5. Secure the window slider kit to the window sash.
6. Cut the foam seal to an appropriate length and seal the open gap between the top window frame and outer window frame.

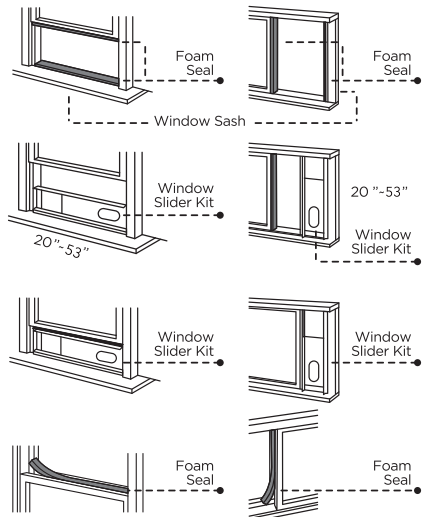


Operating Instructions

 DESCRIPTION OF THE DISPLAY SCREEN

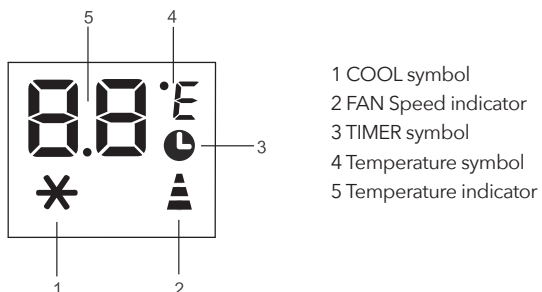


OPERATING FROM THE CONTROL PANEL

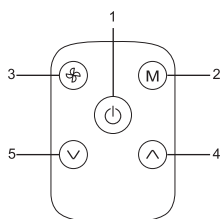 


- 1 ON/OFF button
- 2 MODE button
- 3 FAN button
- 4 INCREASE button
- 5 DECREASE button

TURNING THE APPLIANCE ON

Plug into the mains socket, the appliance is now in standby mode.

Press the  button to turn on the appliance. The last active setting when it was turned off will appear.

 
Never turn the appliance off by unplugging from the mains. Always press the  button, then wait for a few minutes before unplugging. This allows the appliance to perform a cycle of checks to verify operation.

Operating Instructions

COOL MODE

To cool and dehumidify the room, follow the setting below:

1. Press the **M** button a number of times until the ***** symbol appears.
2. Select the target temperature 18°C-32°C (64°F-90°F) by pressing the **^** or **v** button until the desired value is displayed.
3. Select the required fan speed by pressing the **🌀** button.
4. Fan speed can be selected in: High, Med, Low, Auto

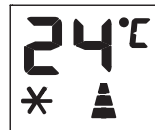

High speed: for maximum fan power



Med speed: reduces noise levels but still maintains a good level of comfort



Low speed: for silent operation



Auto speed: the appliance automatically selects the most suitable fan speed based on the temperature setting.

 
Tips:

The most suitable temperature for the room during the summer varies from 24°C to 27°C (75°F to 81°F). You are recommended, however, not to set the temperature much lower than the outdoor temperature.

FAN MODE

When using the appliance in this mode, the air hose does not need to be attached.

1. Press the **M** button a number of times until the **≡** symbol appears.
2. Select the required fan speed by pressing the **🌀** button.
3. Fan speed can be selected: High, Med, Low

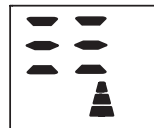

Operating Instructions

DRY MODE

Ideal to reduce room humidity (damp rooms in rainy seasons, etc).

In dry mode, the appliance should be prepared in the same way as for cool mode, with the air exhaust hose attached to enable the moisture to be discharged outside.

To set this mode correctly:


1. Press the **M** button a number of times until the **dh** symbol appears.
2. In this mode, fan speed is selected automatically by the appliance and cannot be set manually.

 


SWING FUNCTION

This function is useful to select the up/down swing of air Delivery.

To set this function correctly:


1. Select the operating mode (cool, dry, fan) as described above.
2. Press the  button several times, the deflector will start or stop swing.

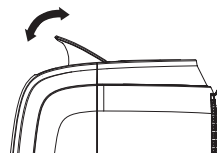

SLEEP FUNCTION

This function is useful during night as it gradually reduces operation of the appliance.

To set this function correctly:

1. Select the cool as described above.
2. Press the  button. The screen light will dim and turn off in about 1 minute.
If you want to check the status, press any of the buttons below. The light will turn off in 5 seconds.

    °C/°F

The appliance operates in the previously selected mode.

When you choose the SLEEP function, the screen will reduce the brightness.

The SLEEP function maintains the room at optimum temperature without excessive fluctuations in either temperature or humidity with silent operation. Fan speed is always at Low.

When in COOL mode, the selected temperature will increase by 1°C (1°F) per hour in a 2 hour period. This new temperature will be maintained for the next 6 hours. Then the appliance turns off.

The SLEEP function can be canceled at any time during operation by pressing the "Sleep", "Mode" or "fan speed" button.

In FAN or DRY mode, SLEEP function cannot be set.

Operating Instructions

SWITCH THE UNIT OF TEMPERATURE

When the appliance is in standby mode, press and hold the **M** button for 20 seconds. Temperature will toggle between °C and °F.

For example: In cool mode, the screen displays as fig.7 will change to fig.8.






Fig.7



Fig.8

SELF-DIAGNOSIS

The appliance has a self diagnosis system to identify a number of malfunctions. Error messages are displayed on the appliance display.

If is displayed	What should I do?
 LOW TEMPERATURE (frost prevention)	The appliance is fitted with a frost protection device to avoid excessive formation of ice. The appliance starts up again automatically when the defrosting process is completed.
 PROBE FAILURE (sensor damaged)	If this is displayed, contact your local authorised service center.
 FULL TANK (safety tank full)	Empty the internal safety tank, following the instructions in the "End of season operations" section.

Operating Instructions

SETTING THE TIMER

Programming start up

1. Turn on the appliance. Choose the mode you want, for example cool, 24°C, high fan speed. Turn off the appliance.
2. Press the ⌚ button, the screen will display 1-24 hours, and the ✖ symbol and 🔊 symbol and 🔌 symbol will flash together. (fig.9)
3. Press several times until the corresponding time is displayed. Wait about 5 seconds, the timer will be active, then only the 🔌 symbol is displayed on screen. (fig.10)
4. Press again the ⌚ button or the 🔌 button, the timer will be canceled, and the 🔌 symbol will disappear from screen.

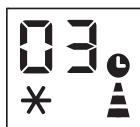 


Fig 9



Fig 10

PROGRAMMING SHUT DOWN

1. When the appliance is running, press the ⌚ button, the screen will display hours, and several symbols are flash together. (fig.11)
2. Press several times until the corresponding time is displayed. Wait about 5 seconds, the timer will be active. then only the 🔌 symbol is displayed on screen. (fig.12)
3. Press again the ⌚ button or the 🔌 button, the timer will be canceled, and the 🔌 symbol will disappear from screen. (fig.13)

 


Fig 11

 


Fig 12

 


Fig 13


Operating Instructions

ABOUT REMOTE CONTROL




	Fan button
	Swing button
	Sleep button
	Increase button
	Decrease button
	On/Off button
	Mode button
	Timer button
	°C/°F switch button

 - Point the remote control at the receiver on the appliance.
- The remote control must be no more than 23 feet (7 meters) away from the appliance (without obstacles between the remote control and the receiver).
- The remote control must be handled with extreme care. Do not drop it or expose it to direct sunlight or sources of heat. If the remote control does not work, take out the battery and put it back again.

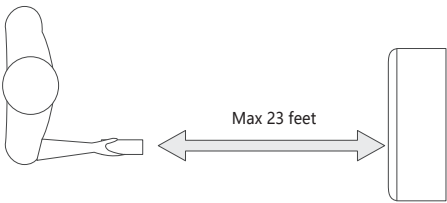

 The remote control function will only come with a battery already installed.
To use the remote control for the first time, remove the transparent insulating strip from the battery housing by gently pulling it out.

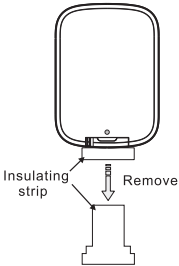


Operating Instructions

REPLACING THE BATTERY

To replace the battery, follow the steps below:

 - 1) Press down the pin and remove the battery cover.
- 2) Replace the battery and reinstall the battery cover into the remote control.

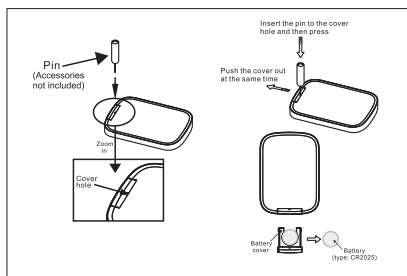

⚠ WARNING Chemical Burn Hazard. Keep batteries away from children.

 
This product contains a lithium button/coin cell battery. If a new or used lithium button/coin cell battery is swallowed or enters the body, it can cause severe internal burns and can lead to death in as little as 2 hours. Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

The cells shall be disposed of properly, including keeping them away from children; Even used cells may cause injury.

TIPS FOR CORRECT USE

To get the best from your appliance, follow these recommendations:

1. Close the windows and doors in the room to be air conditioned (fig.14). When installing the appliance semi-permanently, you should leave a door slightly open (as little as 0.4 inch) for proper ventilation;
2. Protect the room from direct exposure to the sun by partially closing curtains and/or blinds to make the appliance much more economical to run (fig.15);
3. Never rest objects of any kind on the appliance;
4. Do not obstruct the air intake and outlet (fig.16). Leave the grilles free of obstacle;
5. Make sure there are no heat sources in the room;
6. Never use the appliance in very damp rooms (laundries for example).
7. Never use the appliance outdoors.
8. Make sure the appliance is standing on a level surface. if necessary, place the castor locks under the front wheels.

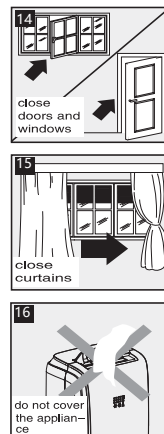

Operating Instructions

 
WATER DRAINAGE METHOD

When there is excess water condensation inside the unit, the appliance stops running and shows "F E" (FULL TANK as mentioned in SELF-DIAGNOSIS). This indicates that the water condensation needs to be drained using the following procedures:

Manual Draining (fig.17)

Water may need to be drained in high humidity areas


1. Unplug the unit from power source.
2. Place a drain pan under the lower drain plug. See diagram.
3. Remove the lower drain plug.
4. Water will drain out and collect in the drain pan (may not be supplied).
5. After the water is drained, replace the lower drain plug firmly.
6. Turn on the unit.

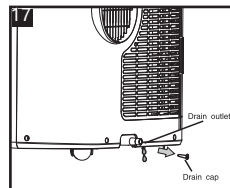

Continuous Draining (fig.18)



While using the unit in dehumidifier mode, continuous drainage is recommended.

 1. Unplug the unit from the power source.
2. Remove the drain plug. While doing this operation some residual water may spill so please have a pan to collect the water.
3. Connect the drain hose (1/2" or 12.7mm, may not be supplied). See diagram.
4. The water can be continuously drained through the hose into a floor drain or bucket.
5. Turn on the unit.

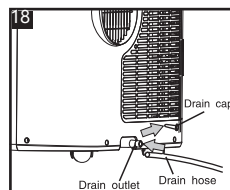

NOTE:

  Make sure that the height of and section of the drain hose should not be higher than that of the drain outlet, or the water tank may not be drained. (fig.19 and fig.20)

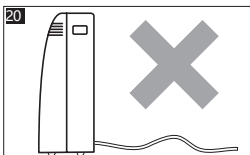
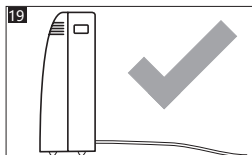


Operating Instructions

MIDDLE DRAINAGE

When unit running in Dry mode, you can choose the way below to drainage.

 
 
1. Unplug the unit from the power source.
2. Remove the drain plug (fig.21). Residual water may spill - have a pan to collect the water.
3. Connect the drain hose (1/2" or 12.7mm, may not be supplied). (fig.22)
4. The water can be continuously drained through the hose into a floor drain or bucket.
5. After draining, turn on the unit.

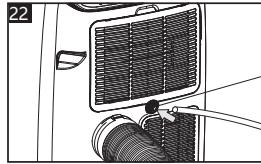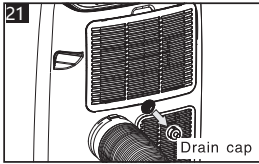


Garden hose or
drainage hose

NOTE:

  Make sure that the height of and section of the drain hose should not be higher than that of the drain outlet, or the water tank may not be drained. (fig.23 and fig.24)

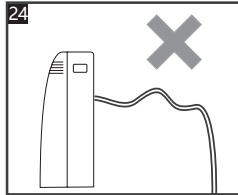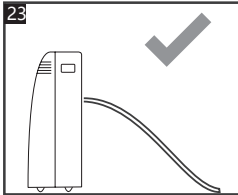

CLEANING

Before cleaning or maintenance, turn the appliance off by pressing the  button on the control panel or remote control, wait for a few minutes then unplug from the mains socket.

CLEANING THE CABINET

 
You should clean the appliance with a slightly damp cloth then dry with a dry cloth.

1. Never wash the appliance with water. It could be dangerous.
2. Never use petrol, alcohol or solvents to clean the appliance.
3. Never spray insecticide liquids or similar.

Cleaning and Maintenance

CLEANING THE AIR FILTERS

To keep your appliance working efficiently, you should clean the filter every week of operation. The evaporator filter can be taken out as shown in fig.25.

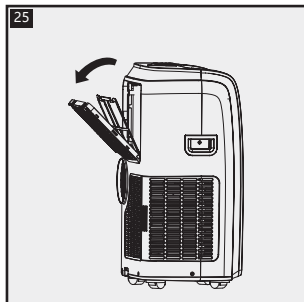

Use a vacuum cleaner to remove dust accumulations from the filter. If it is very dirty, immerse in warm water and rinse a number of times. Water should never be hotter than 40°C (104°F). After washing, leave the filter to dry then attach the Intake grille to the appliance.

 
START-END OF SEASON OPERATIONS

START OF SEASON CHECKS

Make sure the power cable and plug are not damaged and the earth system is efficient. Follow the installation instructions precisely.

END OF SEASON OPERATIONS

To empty the internal circuit completely of water, remove the cap (fig.26). Run off all water into a basin. When all the water has been drained, put the cap back in place. Clean the filter and dry thoroughly before putting back.

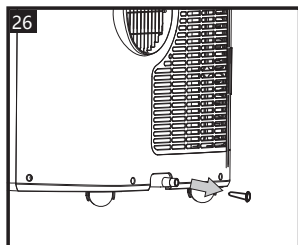

Troubleshooting

LIMIT CONDITIONS

Temperature of room 18°C-35°C (64°F-95°F) (Cooling)

TROUBLESHOOTING

Problem	Cause	Solution
The appliance does not turn on	<ul style="list-style-type: none"> Power supply is off It is not plugged properly into the mains The internal safety device has tripped 	<ul style="list-style-type: none"> Plug into the mains firmly Wait 30 minutes. If the problem persists, contact your service center
The appliance works for a short time only	<ul style="list-style-type: none"> There are bends in the air exhaust hose Something is preventing the air from being discharged 	<ul style="list-style-type: none"> Position the air exhaust hose correctly, keeping it as short and free of curves as possible to avoid bottlenecks Check and remove any obstacles obstructing air discharge
The appliance doesn't cool the room	<ul style="list-style-type: none"> Windows, doors and/or curtains open 	<ul style="list-style-type: none"> Close doors, windows and curtains, bearing in mind the "tips for correct use" given above
	<ul style="list-style-type: none"> There are heat sources in the room (oven, hairdryer, etc) 	<ul style="list-style-type: none"> Move away the heat sources
	<ul style="list-style-type: none"> The air exhaust hose is detached from the appliance 	<ul style="list-style-type: none"> Fit the air exhaust hose in the housing at the back of the appliance
	<ul style="list-style-type: none"> The technical specification of the appliance is not adequate for the room in which it is located 	
During operation, there is an unpleasant smell in the room	<ul style="list-style-type: none"> Air filter clogged 	<ul style="list-style-type: none"> Clean the filter as described above
The appliance does not operate for about three minutes after restarting it	<ul style="list-style-type: none"> The internal compressor safety device prevents the appliance from being restarted until three minutes have elapsed 	<ul style="list-style-type: none"> This is normal.
The following message appears on the display: L E / P F / F E	<ul style="list-style-type: none"> The appliance has a self diagnosis system to identify a number of malfunctions 	<ul style="list-style-type: none"> See the SELF-DIAGNOSIS Chapter

Warranty Information

Vremi offers a 12-month warranty on all of our products purchased new and unused from Vremi LLC or an authorized reseller, with an original proof of purchase and where a defect has arisen, wholly or substantially, as a result of faulty manufacturing, parts or workmanship during the Warranty Period. The warranty does not apply where damage is caused by other factors, including but without limitation: (a) normal wear and tear; (b) abuse, mishandling, accident or failure to follow operating instructions; (c) exposure to liquid or infiltration of foreign particles; (d) servicing or modification of the product other than by Vremi. These are our general terms for the warranty service, but we always urge our customers to reach out to us with any issue, regardless of warranty terms. If you experience an issue with a Vremi product, please contact us at support@vremi.com, and we will do our best to resolve it for you.

Warning

This manual is to be used with all items with the model numbers

VRM050695N

RATING: 115V~/60Hz, 1200 W, 10.7 A
Keep all plastic bags away from children.

Drop Us A Line

 **CHAT WITH US**

vremi.com/chat

 **CALL US**

(646) - 490 - 9904

 **EMAIL US**

support@vremi.com

