



ROCKIN' ROLLER PARTY

ALL-IN-ONE PA SPEAKER



User Manual

Warnings 2

User's General Instructions 4

Features and Functions 5

Specifications 6

Warranty 7

WARNING

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

CAUTION

Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.

CAUTION: These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

CAUTION

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

Précaution : Danger d'explosion si les piles sont remplacées de façon incorrect. Remplacer les piles seulement par le même type de pile ou l'équivalent.

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, Human proximity to the antenna shall not be less than 20cm (8 inches) during normal operation.

UNPACKING

Check that you have all of the following items.

If any item is missing, please contact the customer service hotline for assistance.

The hotline number is printed on the cover page of this user manual.

- Monster Rockin' Roller Party
- AC Power Cable
- Wired Microphone
- Telescoping Tripod Speaker Stand
- User Manual (with Warranty Statement)
- Quick Start Guide

IC Statement:

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

IMPORTANT SAFETY INSTRUCTIONS

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADE CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE. TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOIST.



The lightning flash with arrow-head symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated 'dangerous voltage' within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN

WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK), NO USER SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.




The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

1. **READ INSTRUCTIONS** - All the safety and operating instructions should be read before the product is operated.
2. **RETAIN INSTRUCTIONS** - The safety and operating instructions should be retained for future reference.
3. **HEED WARNINGS** - All warnings on the product and in the operating instructions should be adhered to.
4. **FOLLOW INSTRUCTIONS** - All operating and use instructions should be followed.
5. **CLEANING** - Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Clean only with a dry cloth.
6. **ATTACHMENTS** - Do not use attachments not recommended by the product manufacturer as they may cause hazards.
7. **ACCESSORIES** - Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer instructions, and should use a mounting accessory recommended by the manufacturer. A product and cart combination should be moved care-quick stops, excessive force and uneven surfaces may cause the product and cart combination to overturn.
8. **VENTILATION** - Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product should not be placed in a built-in installation, such as a bookcase or rack, unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
9. **POWER SOURCES** - This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.
10. **GROUNDING OR POLARIZATION** - This product may be equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature: If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
11. **POWER-CORD PROTECTION** - Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point of exit from the product.
12. **NON-USE PERIODS** - The power cord of the product should be unplugged from the outlet when left unused for long periods of time.
13. Do not use this apparatus near water.
14. Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
15. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power - supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
16. Mains plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
17. Battery shall not be exposed to excessive heat such as sunshine, fire or the like.



CONTROLS AND CONNECTIONS

- 1. LED Display
- 2. USB (MP3 Playback) Port
- 3. BT (Bluetooth® Source) Button
- 4. Source Button
- 5. Previous (back arrow) Button
- 6. Next (forward arrow) Button
- 7. Play (/Pause) Button
- 8. Number (Preset) Buttons
- 9. Master Volume Knob
- 10. Microphone 1 Gain Knob
- 11. Microphone 2 Gain Knob
- 12. Microphone 1 Echo Knob
- 13. Microphone 2 Echo Knob
- 14. Microphone 1 (/Instrument) ¼" Input
- 15. Microphone 2 (/Instrument) ¼" Input
- 16. Microphone 1 XLR Input
- 17. Microphone 2 XLR Input
- 18. AC Input
- 19. Repeat Button
- 20. Power (Green) LED Indicator Light
- 21. Bluetooth® (Blue) LED Indicator Light
- 22. Lighting Button
- 23. TWS (Connection) Button
- 24. Bass (Boost) Button
- 25. Bass/Treble Button
- 26. AUX-in (3.5mm)
- 27. Microphone XLR-In
- 28. Microphone XLR-Out
- 29. On/Off Switch

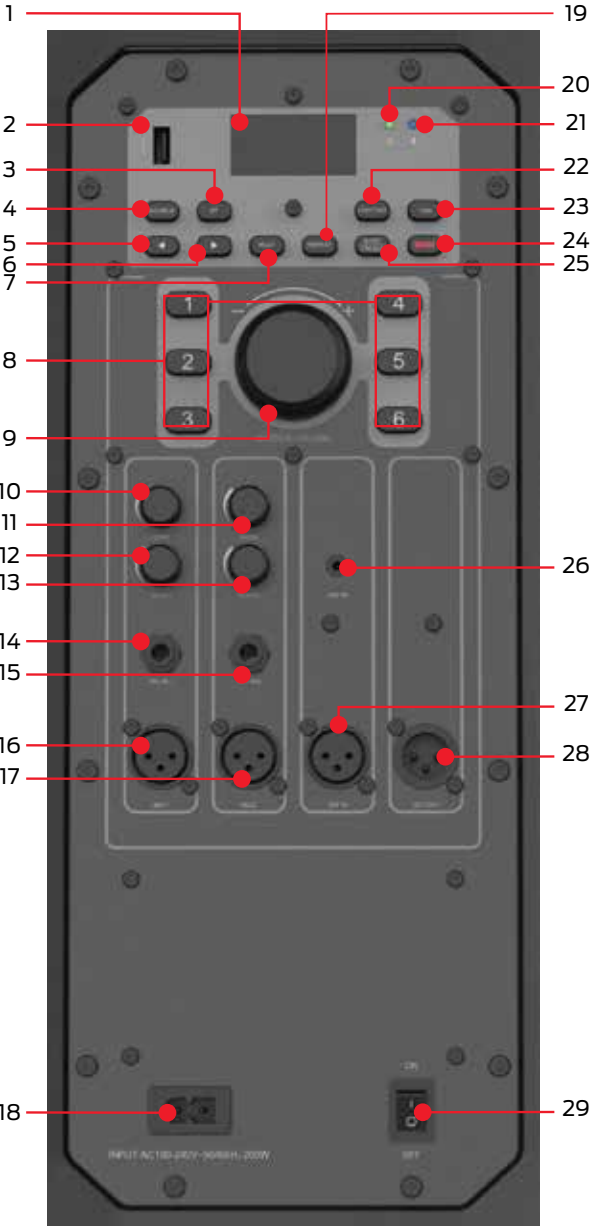

- 30. Segment LED
- 31. Power Icon
- 32. USB Audio Source Icon
- 33. AUX- In Source Icon
- 34. FM Radio Icon
- 35. Bluetooth® Source Icon



Power ON/OFF Switch:

- Toggle switch to ON position:
 1. Green power LED Indicator light and LED Display will power on.
 2. The unit voice prompt will say, "Power on."
 3. Automatically enters into Bluetooth® pairing status
- Toggle switch to OFF position:
 1. All LED Indicators and LED Display will turn off.
 2. The unit voice prompt will say, "Power off," before powering down.

BT (Bluetooth®) Button:

- Switch to Bluetooth® Audio Source:
 1. While in another audio source, press the BT Button to switch to Bluetooth® mode or cycle through audio sources using the source button.
 2. The unit will automatically disconnect from the current device.
- Bluetooth® pair audio device:
 1. Set unit source to Bluetooth®.
 2. Long press BT Button for 2 seconds to enter into pairing status.
 3. Select "MNX6" from your Bluetooth® enabled audio device.
 4. The unit voice prompt will say, "Connected," when successfully paired.
 5. The blue Bluetooth® indicator light will remain on.
 6. If the signal moves out of range the blue Bluetooth® indicator light will blink and disconnect if the connection is not reestablished after 5 minutes.
- Disconnect Bluetooth® audio device connection:
 1. Set unit source to Bluetooth®.
 2. Long press BT Button for 2 seconds to enter into pairing status.
 3. The unit voice prompt will say, "Disconnected."
 4. The blue Bluetooth® LED Indicator light will begin to flash.
 5. Unit will enter pairing status.
 6. The unit voice prompt will say, "Pairing."
- Clear Bluetooth® pairing history:
 1. Set unit source to Bluetooth®.
 2. Long press BT Button for 8 seconds to clear information.
 3. Unit will enter pairing status.
 4. The unit voice prompt will say, "Pairing."
 5. The blue Bluetooth® LED Indicator light will begin to flash.

Play (/Pause) Button:

- Play/Pause Button only works with Bluetooth® source:
 - While audio is playing, press the Play Button to pause playback.
 - While audio is paused, press the Play Button to resume playback.

Master Volume Knob:

- Increase overall volume in playback mode :
 - Default volume level is 10.
 - Rotate master volume knob clockwise. The power LED Indicator blinks when the max level of 32 is reached.
- Decrease overall volume in playback mode:
 - Rotate master volume knob counter-clockwise. The power LED Indicator blinks when the minimum volume level of 0 (mute) is reached.

Microphone Control:

- XLR & ¼" Ports (Mic 1 and Mic 2):
 - Except XLR and ¼" microphones/instrument inputs
 - LED display will show the mic icon when a microphone is plugged-in.
- Gain Knob (Mic 1 and Mic 2):
 - Rotate the gain knob clockwise to increase or counter-clockwise to decrease the level on each channel.
- Echo Effect Knob:
 - Rotate the echo knob clockwise to increase or counter-clockwise to decrease the level on each channel.

Previous & Next (arrow) Buttons:

- FM radio source controls:
 - LED display FM indicator icon will light up in FM mode.
 - Short press the previous or next button to adjust the FM radio frequency shown on LED display.
 - Long press the previous or next button to search for radio stations.
- Bluetooth® source controls:
 - LED display BT indicator icon will light up in Bluetooth® mode.
 - The previous/next buttons will change the audio track.

REPEAT Button:

- This function is only available through the USB mode. Short press the REPEAT button to select one of three status settings:
 1. Repeat ALL (tracks). "ALL" will be shown on the LED display.
 2. Repeat ONE (track). "ONE" will be shown on the LED display.
 3. Repeat OFF. "OFF" will be shown on the LED display.

TWS Button (True Wireless Dual Pairing):

- TWS pairing (make sure both unit A and B are in close proximity to each other):
 1. Long press the TWS button to enter into pairing status. The Bluetooth® indicator LED will alternate flashing blue and red.
 2. Press and hold the TWS button of unit A to enter TWS searching mode while unit B is set to Bluetooth® pairing mode.
 3. The unit A (TX) Bluetooth® indicator LED will light up purple when connected, while the indicator LED for unit B (RX) will be solid red. The unit voice prompt will say, "Synchronized."
- Disconnect TWS:
 1. Short press the TWS button.

1-6 Number Button:

- Equalizer presets available in BT (Bluetooth®), AUX, USB audio sources.
 1. Short press a number (1-6) button to set the preset. The LED display will show the selected equalizer setting: "Eq-1, Eq-2, ... Eq-6."
- Save and select FM Radio station presets.
 1. Short press a number (1-6) button to set the preset station. The LED display will show the selected preset: "P1, P2, ... P6."
 2. Long press a number (1-6) button to save an FM radio station as a preset. The LED display will show the saved preset: "P1, P2, ... P6."

BASS/TREBLE Buttons:

- Bass adjustment in working mode:
 - Press the BASS/TREBLE button once to enter bass level status.
 - The LED display will show the default setting of "b 00."
 - Turn the VOLUME knob clockwise to increase or counter-clockwise to decrease levels between -06 to 06.
- Treble adjustment in working mode:
 - Short press the BASS/TREBLE button twice to enter treble level status.
 - The LED display will show the default setting of "t 00."
 - Turn the VOLUME knob clockwise to increase or counter-clockwise to decrease levels between -06 to 06.

SOURCE Button:

- Short press the SOURCE button to cycle through the different audio sources: BT (Bluetooth®), USB, AUX, FM (radio).

LIGHTING Button:

- Short press the LIGHTING button to cycle through the 15 available light modes. The LED display will indicate mode number: "L01, L02, L03 . . . OFF." Modes included: SWIRL-->DANCE-->FOLLOW-->DYNAMIC-->SPIN-->SPARK-->SUNSET-->MOOD-->PACE-->RED-->GREEN-->BLUE-->AMBER-->PURPLE-->TEAL-->OFF
- Long press the LIGHTING button to turn off the RGB LED lights.

BASS Button:

- Press the button to turn on/off the BASS (boost). The LED will display "b on" or "b off."

XLR Out:

- While in audio sources: AUX-in, BT (Bluetooth®), FM radio, or USB, connect the unit to another active (powered) speaker via the XLR line out.

Technical Specs:

- | | |
|--|-------------------------|
| • 600 Watts RMS Audio Power | • Tweeter: 1" (inch) |
| • Sub-woofer: 15" (inch) | • AC Power 100-240 Volt |
| • Passive Radiators | • THD + Noise: <4.10% |
| • Bluetooth® 5.0 | • S/N Ratio: >65dB |
| • Audio File Supported: .mp3, .wma, .wav | • Max SPL: >99dB |
| • Frequency Response: 3.40Hz–20KHz | • RGB LED Lights |
| • Product Dimensions (L x W x H) Inches: | |
| • Product Dimensions (L x W x H) mm: | |

Limited Warranty

Model: MNX6

This Monster-branded product, marketed as new, in the original carton to the original purchaser ("Product"), is warranted by Russell Distribution Company, LLC against manufacturing defects in materials and workmanship for a limited warranty period of Ninety (90) Days for Labor and One (1) year for Parts. This Limited Warranty is conditioned upon proper use of Product by you, the Purchaser.

This Limited Warranty does not apply to store display products and product sold as a "marked down" special, in "as is" condition, "close outs", "liquidation and clearance sales", "open box", products missing accessories, or no fault found.

Proof of purchase in the form of a Bill of Sale, Receipt or Receipted Invoice is evidence the Product is within the limited warranty period. The Bill of Sale, Receipt or Receipted Invoice must be presented as a pre-condition to obtaining the limited warranty service.

This limited warranty begins on the original date of purchase and is valid only on Products purchased through authorized dealers and used in the United States, and Puerto Rico, by the original Purchaser. To receive warranty service, the Purchaser must first contact us for problem determination and service procedures. The original dated bill of sale, receipt or receipted invoice must be presented upon request as proof of purchase.

We will repair your product or if repairs cannot be made, we will replace it at no charge with the same or similar product. the Product is defective as specified in this limited warranty during the limited warranty period, we may use new or remanufactured parts to repair the Product. All replaced parts and products become our property and must be returned to us. Replacement parts and products assume the remaining original limited warranty, or ninety (90) days, whichever is longer.

Product freight must be prepaid by you, the original Purchaser and shipped in either its original packaging or packaging affording an equal degree of protection. We will not be responsible for or obligated to replace damaged Products.

If the Product is received damaged, it is your responsibility as the consumer to file a claim against the carrier. We will only store the damaged Product for 30 days and reserve the right, in our sole discretion, to dispose of the damaged Product or ship it back to you at your expense after 30 days.

This limited warranty covers manufacturing defects in materials and workmanship encountered in normal, and except to the extent otherwise expressly provided for in this statement, noncommercial use of this Product, and shall not apply to the following, including, but not limited to: Damage which occurs in shipment; delivery and installation; applications and uses for which this Product was not intended; altered Product or serial numbers; cosmetic damage or exterior finish; accidents abuse, neglect, fire, water, lightning or other acts of nature; use of products, equipment, systems, utilities, services, hardware, supplies, accessories, applications, installations, repairs, external wiring or connectors not supplied or authorized by us or the manufacturer, which damage this Product or result in service problems; incorrect electrical line voltage, fluctuations and surges; customer adjustments and failure to follow operating instructions, cleaning, maintenance and environmental instructions that are covered and prescribed in the instruction book; reception problems and distortion related to noise, echo, interference or other signal transmission and delivery problems; burned-in images. Uninterrupted or error-free operation of the Product is not warranted.

THERE ARE NO EXPRESS OR IMPLIED WARRANTIES OTHER THAN THOSE LISTED AND DESCRIBED ABOVE, AND NO WARRANTIES WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL APPLY AFTER THE EXPRESS WARRANTY PERIODS STATED ABOVE, AND NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR CORPORATION WITH RESPECT TO THIS PRODUCT SHALL BE BINDING ON US. REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS LIMITED WARRANTY IS YOUR EXCLUSIVE REMEDY AS THE CONSUMER. WE SHALL NOT BE LIABLE FOR ANY INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT; EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED FOR THE DURATION OF THIS LIMITED WARRANTY. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT, IT IS NONTRANSFERABLE AND STATES YOUR EXCLUSIVE REMEDY.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This limited warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Any provision contained herein which is found contrary to state or local laws shall be deemed null and void and the remaining provisions shall continue in full force and effect.

To obtain warranty service:

Telephone: 800-976-0677



Monster and the Monster logo are registered trademarks of Monster Inc., and its subsidiaries in the U.S. and other countries, used under license. Pure Monster Sound is a trademark of Monster, Inc. and its subsidiaries in the U.S. and other countries, used with permission.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. Other trademarks and trade names are those of their respective owners.

Printed in China

Version: 1.0