 


Automatic Pet Feeder F3 LED

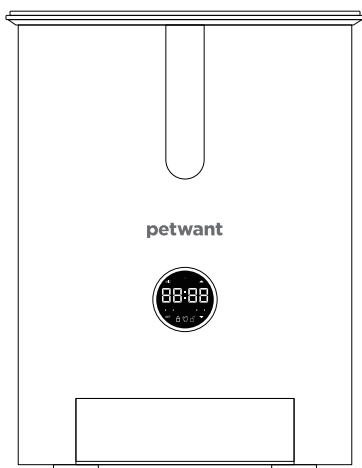

Automatic Feeder
User Guide



Dear Pet Lovers:

Thanks for purchasing our Automatic Pet Feeder.

 
 
We want to walk into the pets life together with you and offer what pets really need.

To have a better user experience, please read the manual carefully and kindly keep it for further reference.


Scan the QR code and follow our
Facebook, through which you would get high
quality after-sales services



Meet Your Automatic Pet Feeder

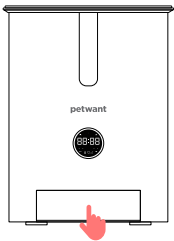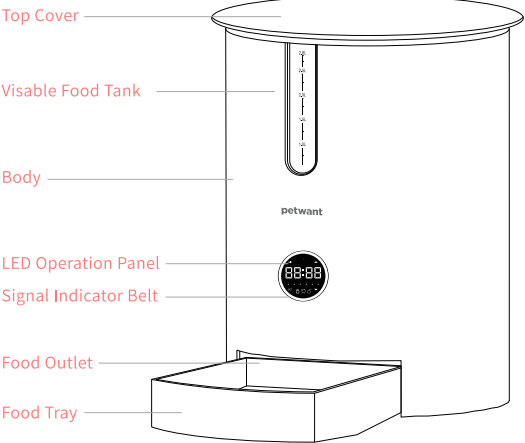


Press here Pop-up/draw back

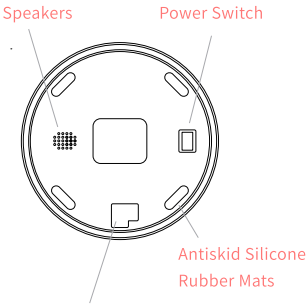 

DC Power Interface

Set Up Your Automatic Pet Feeder

 LED Operation Panel:

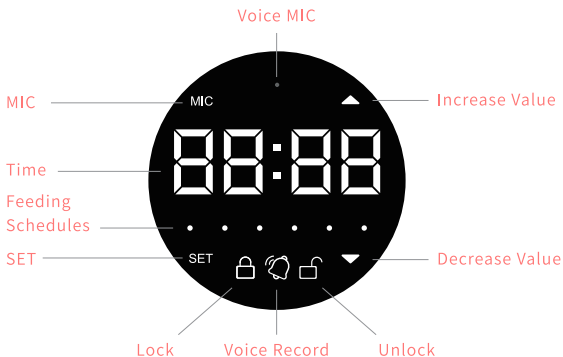


Plug in and switch on, then you can start to set up your automatic pet feeder.

1. Please press "▲" for one second, the feeder will get instant dispense, one portion for once instant feeding.
2. Please press "▲" and "▼" in the same time to unlock the feeder.

Set current time:

 1. Press the "SET" button. The hour digits will flash.
2. Press the "▲" or "▼" buttons to find the current hour and press "SET" again to save.
3. Once hour is saved, the minute digits will flash.
4. Press the "▲" or "▼" button to find the current minute and press "SET" again to save and enter Meal Time Settings.

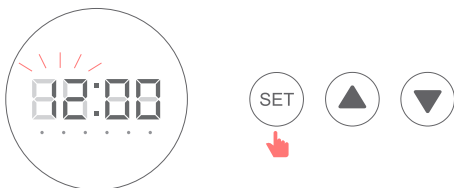

Set Up Your Automatic Pet Feeder

Set first meal time:

1. When hours digits and "•" are flashing, repeat step 1 to set the feeding time.
2. Press "SET" shortly to save the schedule and go to the first meal feeding portion setting.



Set first meal portion:

1. Once the time is set, the unit will enter Meal Time Settings. The LED Screen will display the "P0" and the portion digits will flash.
2. Press the "▲" or "▼" button to set the portion size and press "SET" again to save.

NOTE: Repeat the above operation to complete the 6 meal settings. If you prefer 3 meals per day, you can hold the set button for 1 second to save the meal settings and return to the current time.



Voice Record and Play:

To record a call to your pet at meal time follow these steps.

 
1. Press and hold the "MIC" button.
2. Speak into the Recording Port (small hole by the MIC light) and record your message (up to 10 seconds).
3. Release the "MIC" button when finished recording. The "MIC" will be solid.
4. Press the "MIC" button to listen to the message.



Assembly & Disassembly

ASSEMBLING AND DISASSEMBLING THE FEEDER:


Hold both sides of the food bucket and lift upwards for removal;
The direction of the food bucket gears need to be aligned with the direction of the main body slot. Once aligned, press downward.

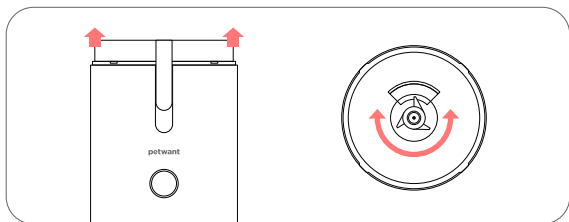

ASSEMBLING THE FOOD TRAY

Hold the feeder slightly backwards and fit the tray into the opening below.
Push it towards the body.

 * The metal tray also lifts out for easy cleaning.

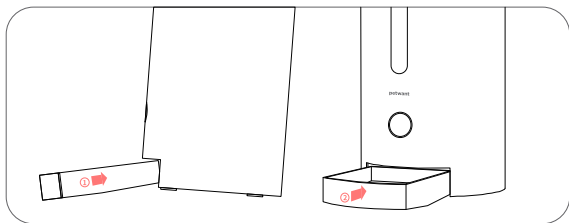

⚠ Cleaning Your Smart Feeder

1. Please turn off and unplug the device before cleaning.
2. Clean the unit with a damp cloth rather than a soaked cloth.
3. The food tray and tank can be removed for cleaning in an automatic dishwasher.
4. The base cannot be immersed in water at any time or it may cause a short circuit of the device.

FAQ

1. Unlocking the Screen:

Please hold "▲", "▼" buttons at the same time for 1.5S to unlock the LED screen. The screen will automatically lock within one minute if you do not lock it manually.

2. Instant Feeding:

Please hold "▲" button for 1 second to have an instant feeding. The feeder will dispense one portion.

3. Lack of Food Notification:

The feeder will not dispense any food when the tank is empty. You only need to refill your feeder with pet food. The feeder will return to normal operation after you have dispensed an instant feeding.

4. How to deal with E2:JA

The feeder won't dispense the food when tray is full. You need to clear the food inside the tray. The feeder will return to normal operation after you dispense an instant feeding.

5. Restore Factory Setting:

Please long touch "MIC" button in time-setting mode (digits flashing) to delete the feeding schedule data.

6. Exit Current Operation:

During the time-setting mode (digits are flashing). Please long hold the "SET" button for 1 second to exit time-setting mode and you will be returned to the current time interface. The program you set will be saved automatically before exiting.

7. Error Notice:

- Food block: White belt will quick flash every 0.6s, [E2:JA] will be shown on the screen.
- Motor Error: White belt will quick flash every 0.2s, [E4:--] will be shown on the screen.

Important Safety Information

Proper safety warning information can avoid potential danger for people and pets. Please read the safety information carefully.

1. Fit for small animals.
2. Do not use outdoors. For indoor (household) only.
3. Do not disassemble the feeder's components except the food tray and food tank.
4. Do not place anything on top of the feeder.
5. Do not install or expose the feeder to a low temperature environment below -20 °C (-68 F).
6. The feeder is suitable for operation by users over 12 years old.
7. Do not disassemble or repair the feeder privately, if there is any malfunction or damage for the feeder, please contact our customer service team.
8. The feeder is suited for 0.2 - 0.6 inch diameter dry pet food. Do not put other things into the feeder except pet food.
9. Please ensure feeder is properly plugged in to ensure adequate power before a long trip.
10. If the plug of this device gets wet, turn off the electricity to the wall outlet, do not unplug. If there is damage around the power cord or adapter, please contact our customer service team.
11. To avoid electric shock, do not place the power cord or plug near water or other liquids, only use power cord that is sold by the manufacturer.
12. Do not immerse the feeder in water at any time, the pet feeder should not be submerged in water at any time, otherwise the electric components will be damaged.
13. Dispose of all packaging materials properly, some components may be packed in poly bags, these bags could cause suffocation; Keep away from children and pets.
14. Examine this appliance after installation, do not plug in if there is water on the power cord or plug. To avoid tipping, please place the device against a wall.
15. This product is for use by pets, any accidents caused by unauthorized usage is invalid. We will not be responsible for unauthorized usage.