

型号: N30 六国语说明书

尺寸: 70X100mm 颜色: 单黑印刷 材质: 128g铜板纸 装钉方式: 骑马钉

版本日期: 2020年11月10日

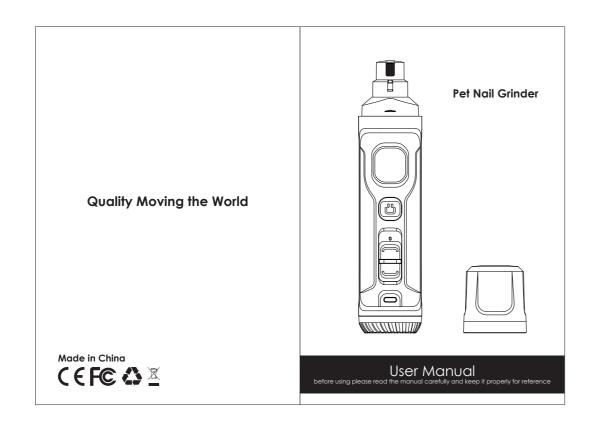

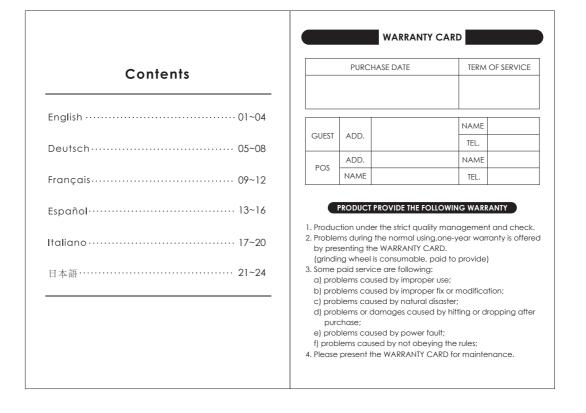

1. Do not tear down the product at random


Do not tear down the product at random.
 Do not clean product by water flush, and keep the unit away from damp situation.
 Do not use any corrosives such as alcohol, gasoline etc. to clean the surface.
 Avoid being charged above 40°C or below 0°C.

 $\ensuremath{^*}$  If the product is not used for a long time, please charge it

once at least every three months.

\* Product becoming hot during use or charging is normal.

Disposal of Battery
The inside is rechargeable battery. Please take the battery
out before discarding it and dispose the battery in an
environment-friendly way.

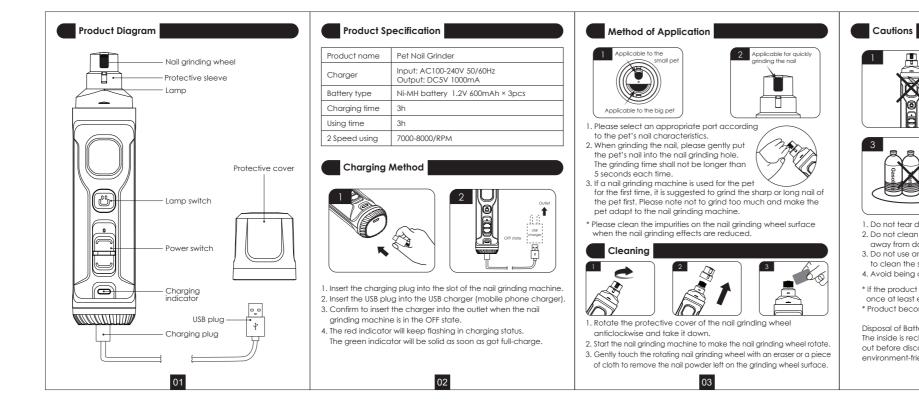

英语