 


English

Instruction Manual

 
X15

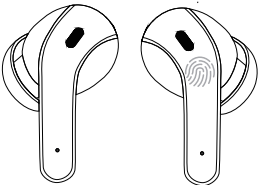

Please read the instructions before use

Before Use

1. Fully charge the earbuds and charging case.

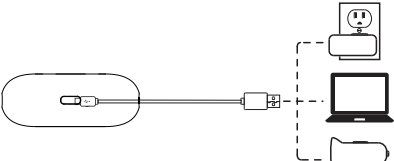


2. Choose the right angle and eartips.



Connect

 ON



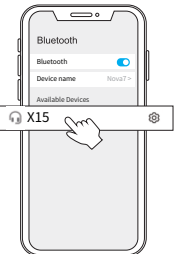

1. Take out the earbuds (Earbuds auto power on)

2. After open the phone Bluetooth, Click the <X15> to Pairing

Reset

1. Delete the BT pairing information on the phone.

2. Take the earbuds into the charging case to charge.

3. Take out the earbuds and wait for 20 seconds.

(If the above operation does not work, please try again)

Operation

L

R

X1

Play /Pause

X2

Switch Song

X3

Adjust Volume

5S

Power on/off (When no connected)

X1

Answer/Hang up

2S

Reject Call

2S

 
Voice Assistant

X1: Click Once

X2: Click 2 times

2S: Press and hold for 2 seconds

Battery Indicator

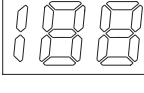

No Power

Full Power

Indicator Light

Pairing

Connected

 
Charging

Flashing

No Light

Red

Charging Contacts

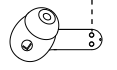

Wipe and dry charging contacts if earbuds can't be charge.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Statement: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio/TV technician for help.