




Children's Digital Camera User Manual

Product Overview

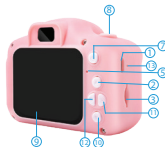

- | | |
|--------------------------|-----------------|
| 1. Micro-USB Port | 10. Down Button |
| 2. Up Button | 11. Mode Button |
| 3. SD Card Slot | 12. Menu Button |
| 4. Speaker | 13. Reset |
| 5. Indicator Light | |
| 6. Lens | |
| 7. Power On/Off Button | |
| 8. Capture/Record Button | |
| 9. Display | |

Need help? Send us an email at: contact@wasserstein-home.com Page 1 - 4

Operational Instructions

Power On/Off

- To power on, press and hold the "⏻" button. The blue light will light up when it is turned on.
- To power off, press the "⏻" button. The blue light will turn off.

Recording Mode

- Short press the "Mode Button" to change to Recording Mode, the resolution of your video and the recording icon will be displayed on the screen of the device.
- Short press the "Capture/Record" button to start recording your video. The indicator light will start flashing.

Photo Mode

- Short press the "Mode Button" to change to Photo Mode, the resolution of your photo and the camera icon will be displayed on the screen of the device.
- Short press the "Capture/Record" button to take a photo. The indicator light will flash once when the photo is taken.

Video/Photo Playback

- Short press the "Mode Button" to change to Video/Photo Playback Mode, the playback icon and your recent photos and videos will be displayed on the screen.
- Short press the "Up" or "Down" button to cycle up or down.
- Short press the "Capture/Record" button to open your photo or video.

Menu Settings

- Short press the "Menu Button" to open the Menu Page.
- Short press the "Up" or "Down" button to choose a setting.
- Short press the "Capture/Record" button to select it.
- Short press the "Power On/Off Button" to exit the Menu Page.

Need help? Send us an email at: contact@wasserstein-home.com Page 2 - 4

USB Mode

- To view your photos or videos on the computer, simply connect the camera to the computer using the Micro-USB port.
- Once connected the computer will automatically recognize the camera.

Charging

- Battery Indicator



Fully Charge



Low Battery



Empty Battery

- The red light indicator will be ON when charging. The light will turn off when the device is fully charged.

Installing the SD Card

- Insert the SD card on the SD card slot located on the side of the camera.
- Make sure the latch of the SD card is facing down to prevent damage.
- Push the SD card into the slot until you hear a click.
- To remove the SD card simply push the SD card until you hear a click and pull out the card.



SD Card Latch

Need help? Send us an email at: contact@wasserstein-home.com Page 3 - 4

Specification

Image Sensor	: GC0308
Display	: Colored Display
Lens	: Fixed Lens, 100 degree angle
Image Format	: JPG, JPEG
Camera Resolution	: 1080P: 1440 x 1080 720P: 1280 x 720 VGA: 640 x 480
TFT Display	: 2.0 inch screen (720 x 320)
Photo Resolution	: 3M, 2M, 1.3M, VGA
Charging Voltage	: DC - 5V

Package Contents

- 1 x Kid Digital Camera
- 1 x 32GB SD Card
- 1 x USB Charging Cable
- 1 x Hand Strap
- 1 x User Manual

Need help? Send us an email at: contact@wasserstein-home.com Page 4 - 4