

Dual-Shot Blaster

USER MANUAL



*For ages 14 years and up.

*Rounds may stain.



DARTWOOD

a WASSERSTEIN brand

WARNING!



Do not point, aim, or shoot the water gel or foam darts towards the eyes or faces of any person or animals. Only use the foam darts and gel shots that are specifically designed for this product. Do not modify bullets, the toy gun, or any components included in this product.



Make sure to always wear goggles when using the Dual-Shot Blaster.

 


This is not a toy. Read instructions before use for important safety information. Do not eat. Keep away from pets.


Safety Precaution

- **CAUTION:** Risk of fire and burns. Do not open, crush, heat above 45° C, or incinerate. Follow manufacturer's instructions.
- Store items in a cool, dry place. Do not submerge the battery or device in water.
- Do not eat. Keep away from pets.
- Do not freeze or modify rounds.
- Do not modify blaster. Do not disassemble the device or battery.
- Do not leave unattended when charging the device.
- When shooting the gel shots, make sure that there are no foam darts already loaded in the gun.
- When shooting the foam darts, make sure there are no gel shots in the gel shot bottle.
- Impact from rounds may cause temporary marks on skin.


In the Box



1 x dual-shot blaster

 

1 x rechargeable
battery pack

 

1 x USB power cord



 
1 x safety goggles



1 x gel-shot-bottle
connector



1 x gel-shot
bottle




10 x suction cup
soft bullet



1 x baggie of
gel-shot bullets

Introduction to Parts

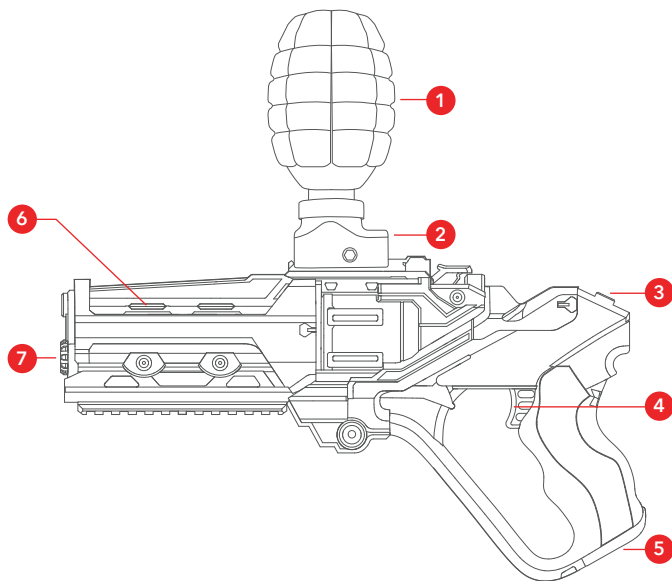


1. bullet bottle
2. gel-shot-bottle connector
3. power switch
4. trigger
5. battery compartment
6. lights
7. nozzle

How to Charge

Note: Before using the Dual-Shot Blaster, please charge the battery for up to 2 hours.





1. Connect the USB cable to the battery pack.
2. Connect the USB to a USB power source, such as a wall plug or a laptop.

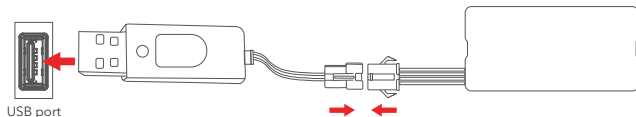

3. When the battery pack is properly connected and the battery pack is charging, the USB connector's indicator light will go on. Once fully charged, the light will go off. Charging time is about 1.5 to 2 hours.
4. The battery pack will become warm when charging, which is normal.
5. Only use the original USB charging cable for charging.
6. When not using Dual-Shot Blaster, turn off the power switch to prevent energy drain and battery damage.




Growing the gel-shot bullets

1. Pour a small amount of the dry gel-shot bullets into a container.
2. Gel shot expansion times vary according to water temperature.
3. If you use cold water, please soak the gel shots for about 3 hours.
4. When using water that is 122° F (50° C), it will take about one hour for the gel shots to absorb water and grow.

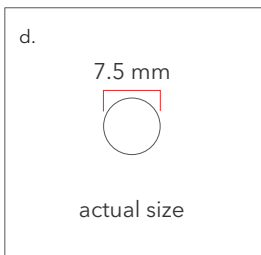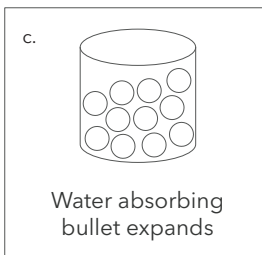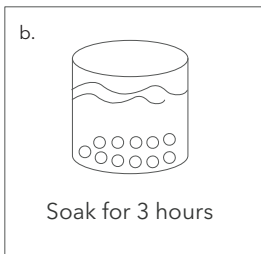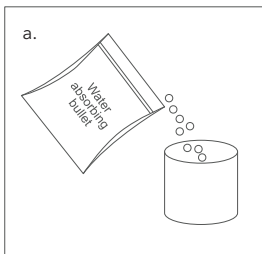



Installing the Battery

1. Unscrew and open the battery cover in the Dual-Shot Blaster's handle.
2. Connect the battery to the cable inside the Dual-Shot Blaster handle.
3. Fit the battery into the handle/battery compartment.
4. Close the battery-handle latch and twist the screw to lock.

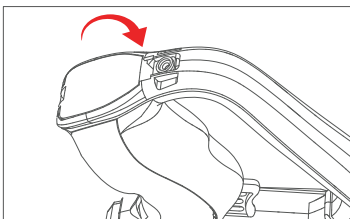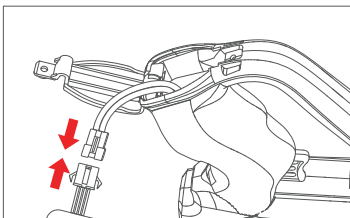
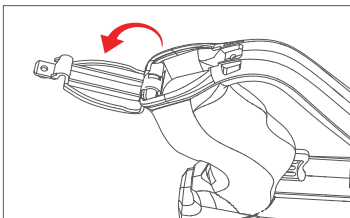


Installing the gel-shot bottle

1. Fit the bottle mount to the top of the Dual-Shot Blaster and making sure the holes align properly.

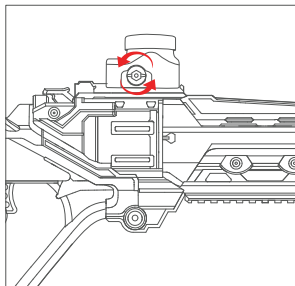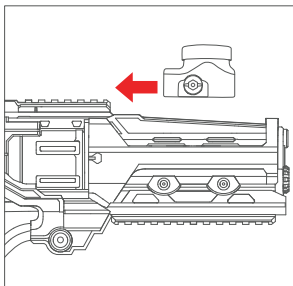


2. Fill the gel-shot bottle with the full-sized gel shots, and pour out any excess water from the bottle to avoid damaging the Dual-Shot Blaster.
3. Turn the Dual-Shot Blaster upside down and twist the gel-shot bottle to tighten it into the bottle mount.

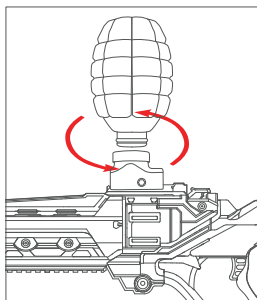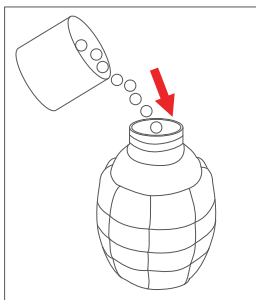


How to shoot with the Dual-Shot Blaster

1. Press on the power switch.

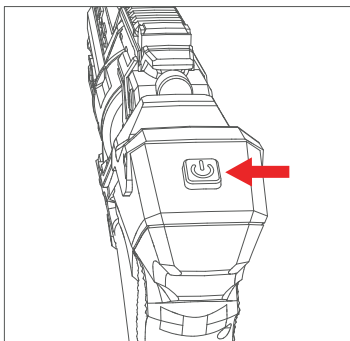


2. Pull the trigger once to fire a test shot.
3. Continuously pull the trigger to fire repeatedly.

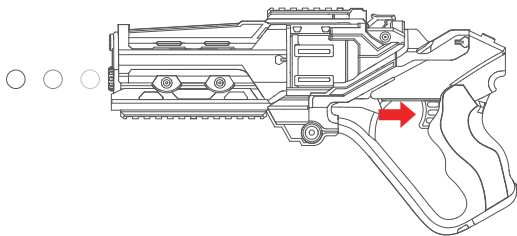

NOTE: Make sure there are no foam darts in the Dual-Shot Blaster before firing the gel-shot bullets.

How to shoot the foam darts

1. Load the foam darts from the front, one at a time.

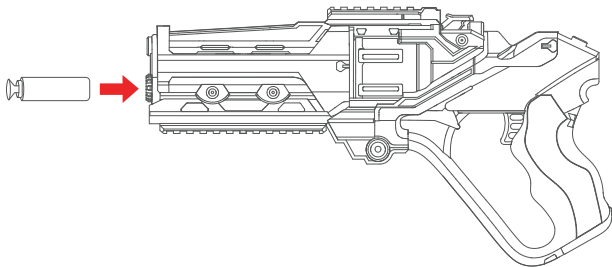

2. Pull the trigger once to shoot.

NOTE: Make sure there are no gel-shot bullets inside the barrel before shooting a foam dart.

Troubleshooting

Common Errors	Solution
The gel-shot bullets do not fire.	- Make sure the gel-shot bullets have expanded to full-size. - Make sure there are no gel-shot bullets goes into the barrel, shake the bottle gently. - Make sure the Dual-Shot Blaster battery pack is fully charged.
Firing is not smooth and consistent.	- Make sure the gel-shot bullets have expanded. - Make sure the Dual-Shot Blaster shooting at upright position. - Make sure the Dual-Shot Blaster battery pack is fully charged. - If the problem persists, please contact our customer service for assistance: contact@wasserstein-home.com

Specifications

Color:	Orange
Recommended age:	14 years and Up
Battery:	1 Lithium battery (included) 7.4V 550 mah
Feet per second:	FPS
Gel-shot bullets firing per second:	5-6 bullets
Shooting range:	Up to 49.2 ft
Battery life:	10 full minutes of continuous shooting
Charging Input/ Output:	5V 2A / 7.4V 1000mA
Charging time:	1.5-2 hrs
Weight:	12.9 oz
Size:	12.2 x 11.8 x 1.9 in

* Specifications are subject to change without notice.

* Battery life is subject to shooting usage and environmental factors.

Get More Support

Scan the QR code below or email us at contact@wasserstein-home.com



CONTACT US

DW **DARTWOOD**
a WASSERSTEIN brand

www.wasserstein-home.com

Made in China