

Instant Print Camera for Kids

USER MANUAL



In the Box



1 x instant
print camera



 
1 x 32GB
memory card



1 x micro USB cable



1 x lanyard

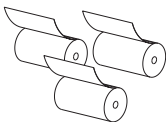


3 x rolls of print paper

Safety Information


- Read this manual carefully and keep it in a safe place for future reference.
- This camera contains small parts. To avoid the danger of choking or suffocation, keep away from small children.
- This camera is not suitable for children under 3 years old.
- Do not immerse the camera or any of its parts into water.
- Do not get close to a fire or heat source while using the camera.
- Do not disassemble or modify the battery without authorization.
- This product must be used under adult supervision.
- Only use the recommended parts with this camera.
- Fully charge the battery before storage.

 Introduction to Parts

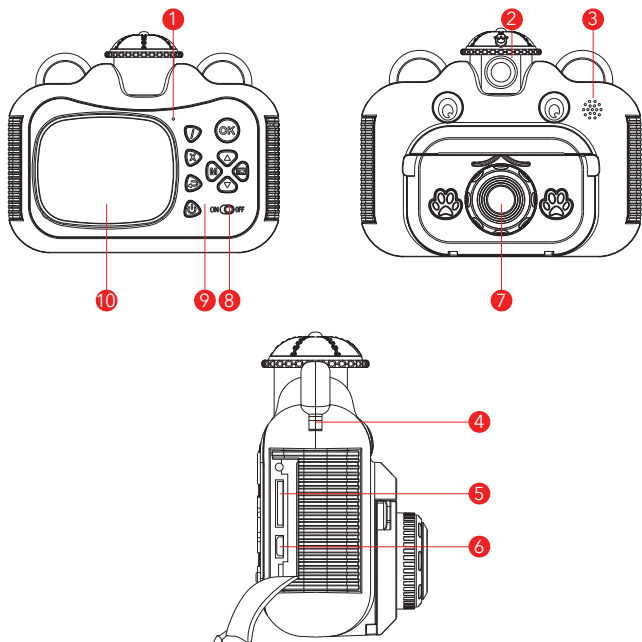

- | | |
|-----------------------------|------------------------|
| 1. microphone | 6. USB port |
| 2. rotatable camera lens | 7. print paper door |
| 3. speaker | 8. print on/off switch |
| 4. lanyard eyelets | 9. button panel |
| 5. SD card slot (32GB max.) | 10. screen |

 
Introduction to Buttons

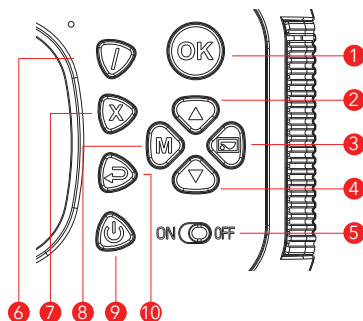


1. shutter button / confirm
2. up / zoom out
3. right / photo album
4. down / zoom in
5. print on / off switch
6. photo / video mode switch
7. delete
8. left / photo sticker moded
9. power
10. return

Before You Use

 
1. Remove the protective film on the screen, lens, and other packaging materials.
2. Insert the SD card into the slot. Charge the camera before first use.
Use only the provided cable with the camera.
(Note: do not use adapter output above 5V 2A)

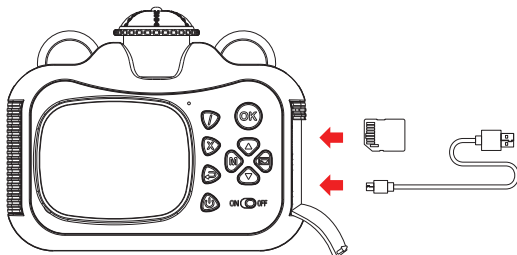

 3. Insert the print paper as shown. Make sure the paper outside faces up. It will not print in the opposite direction.

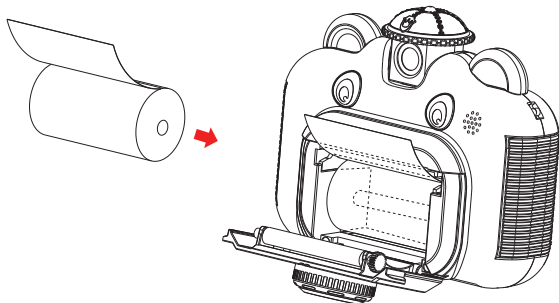

 4. Connect the lanyard to both sides of the camera. We recommended using the lanyard at all times when children are playing with the camera.

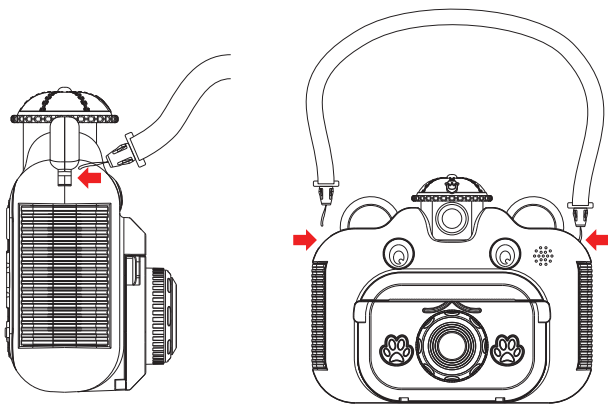

How to Use

Turn on / off and main menu

Press and hold  the button to turn the camera on/off. Press once to return to the main menu.

Take photos / videos

 
Press the  button to switch between photo/video mode. Then, press  the button to take photos / videos.

Printing

To print photos, flip on the print switch before taking photos. To print from the album, press the  button. Then click the  button and select print from the screen.


Take selfie

On the top of the camera, gently turn the lense 180 degrees, so it clicks into place and is facing behind the camera.

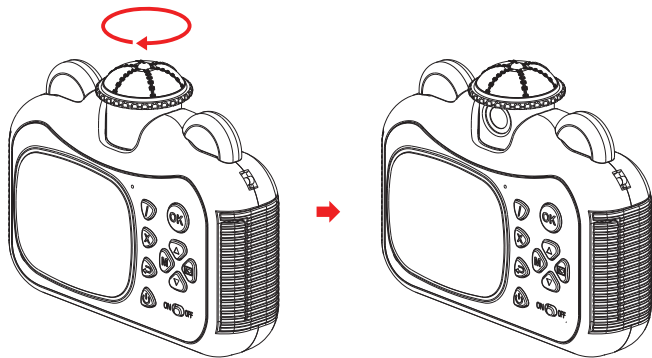

User cartoon frame

 Press the **(M)** button to use the frame. Use the up / down button to select a frame.

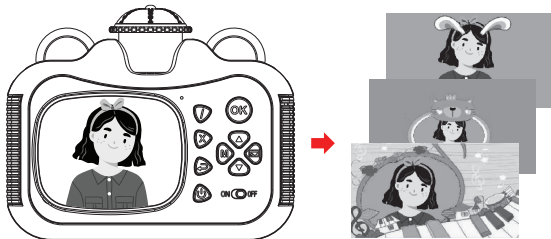

Settings

Press the **(⏻)** button to enter the main menu then select the setting icon to enter the menu.



Settings menu	
Language setting	select the system language
Resolution	adjust the resolution
Image quality	select the image size
Delay photo	set the shutter delay time
Cycle record	set the cycle of loop recording
Print shade	select the density of printing
Audio	turn the audio recording on/off
Date tag	turn time stamp on/off
Beep sound	turn beep sound on/off
Time setting	set the system date and time
Auto power-off	select the timer for auto power-off
Format	format your SD card and erase all data
Reset system	factory reset all settings

Tips

- After you turn on the camera, print 1 - 2 times to let the printer warm up.
- A picture with higher contrast (nearly black and white) will have better printing results.
- Only refill with thermal print paper size 2.25 x 1.2 in (57 x 30mm).

Specifications

Display Screen:	2.4 in LCD screen
Print Paper Size:	2.25 × 1.2 in
Picture Resolution:	1-5M, 8M, 10M, 12M
Video resolution:	720P / 1080P
Print Shade:	Low / Medium / High
Battery:	1,200 mAh lithium battery
Charging input:	DC 5V 2A
Charging time:	140 mins
Memory card:	Micro SD card 32 GB (Max)
Operating temperature:	23 °F to 104 °F
Size:	5.1 x 4.1 x 2.3 in
Weight:	0.58 lb

Get More Support

Scan the QR code below or email us at contact@wasserstein-home.com



CONTACT US



DARTWOOD

www.wasserstein-home.com

Made in China