

60 mm

KIDS' CAMCORDER CAMERA

User Manual




DW DARTWOOD

In the Box

- 1x DV Camera
- 1x Handle Strap
- 1x USB Cable
- 1x Lanyard
- 1x Manual
- 1x 32GB SD card




Introduction to Parts

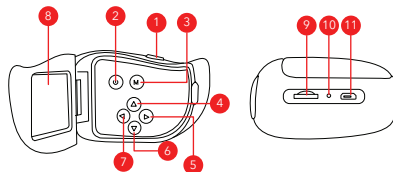

- | | |
|-------------------|-------------------|
| 1. Shutter Button | 7. Left |
| 2. Power Button | 8. Display |
| 3. Menu Button | 9. TF Card Slot |
| 4. Up | 10. Reset Button |
| 5. Right | 11. MicroUSB Port |
| 6. Down | |

Operation Instructions

Main menu

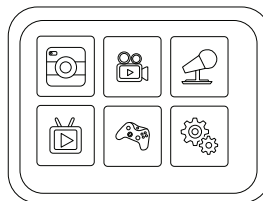

Power On/Off

Long press the Power button to turn on.
Long press the Power button to turn off.

Video Mode

Select the from the main menu to switch to video mode.
Press the shutter button to start recording a video.
Press again to stop recording.

Photo Mode

Select the from the main menu to switch to photo mode.
Press the shutter button to take a picture. A light will flash once indicating that the photo is complete.

Recording Mode

Select the from the main menu to switch to recording mode.
Press the shutter button to start recording.
A flashing red dot will be flashing on the screen indicating the recording is working. Press the shutter button to stop recording.

Playback Mode

Select the to switch to playback mode. The playback icon will be displayed in the upper right corner of the screen.
Press the up or down button to navigate. Press the shutter button to view or play the selected file.

Game Mode


Select the to switch to game mode. If you are done selecting a game, you can navigate with the directional buttons (up, down, left, right) and your action button is going to be the shutter button.

Settings Menu

Select the to switch to setting menu. Press the up and down button to navigate. Select the settings you need to change by pressing the shutter button. Press the shutter button to confirm the changes.

To exit, press the Menu button.

USB Mode

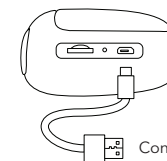

Connect the camera in to your PC to access the files on the camera.

Battery



Full Battery



Half Battery



Low Battery



Empty Battery

To charge the camera, use the USB cable supplied and connect to a power source, the blue charging indicator will flash while charging.

Specifications

Image Sensor:	GC0308
Display:	2.0inch color display
Camera Lens:	Fixed lens, 100 degrees
Storage:	Mini SD card, 32G maximum
Camera Format:	JPEG
Resolution:	720P: 1280x720
TFT Display:	2.0 inch screen (720x320)
Photo Resolution:	12m, 8m, 5m, 3m, 2m, 1.3m, VGA
Charge Voltage:	DC-5V
Frequency:	50HZ, 60HZ

Get More Support

Scan the QR code below or, email us at:
contact@wasserstein-home.com



SCAN ME

DW DARTWOOD

For more information, please visit:
www.wasserstein-home.com
Made in China