 


Mini Bubble Machine


USER MANUAL



In the Box

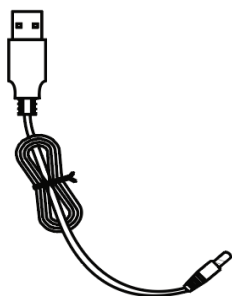


1 x USB cable

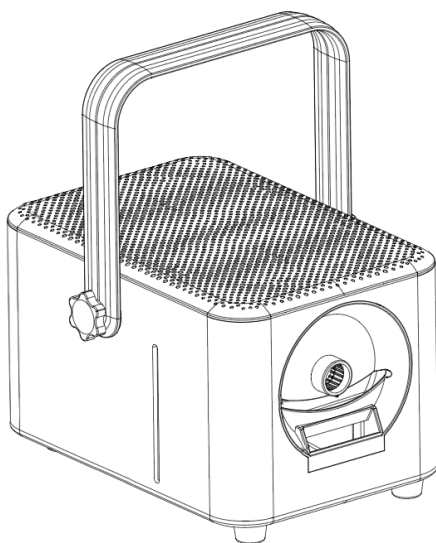

1 x mini bubble machine

Introduction to Parts

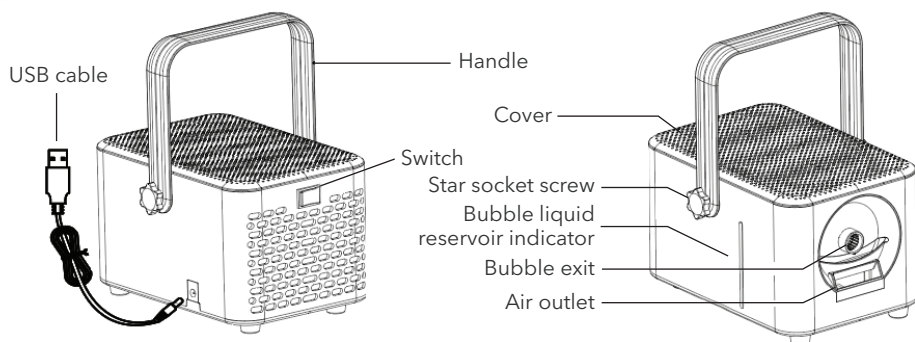


Note:

INDOOR: 5V/2A USB Power Adapter are required (not included)


OUTDOOR: Recommended to use a regular portable power bank (not included)

How to Add Bubble Liquid


1. Remove the top cover by sliding back and lifting up.

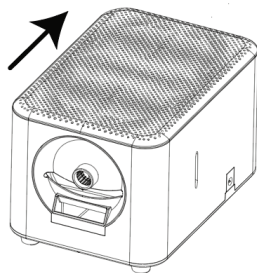

2. Pull out the plug and add the bubble liquid into the compartment.

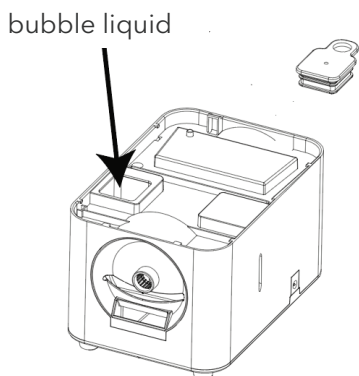


3. Reinsert the plug and slide the cover back on top.

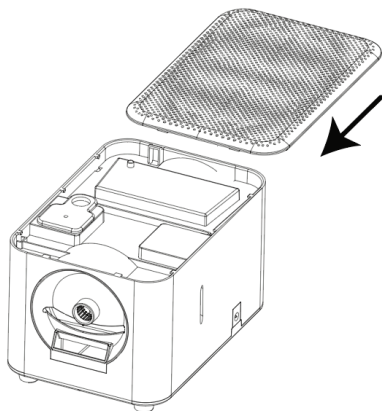

Power On/Off

Plug the USB cable into the machine and an adapter/outlet or power bank before use.

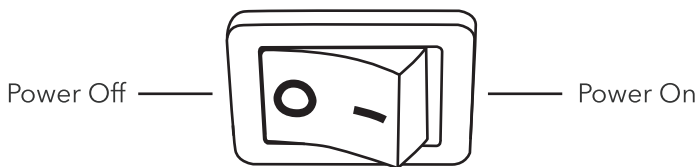

Guidelines

1. Do not overfill the bubble liquid.
2. Do not move, tilt, or turn over the bubble machine while it is on.
3. Do not use if machine has been broken or damaged in any way.

Specifications

Power input:	5V/2A
Power consumption:	10W
Control method:	Rocker switch
Environment temperature:	Room temperature
Product net weight:	2.1 lb
Noise:	75 dB
Product size:	7.8 x 5.3 x 4.5 in
Bubble liquid maximum capacity:	4.7 fl oz
Working hours:	2.5 hours
Bubbling time (When it is filled with bubble liquid (4.7 fl oz):	About 15 minutes

Get More Support

contact@wasserstein-home.com



CONTACT US



DW DARTWOOD

www.wasserstein-home.com

Made in China