

Mountable CD Player


USER MANUAL



DARTWOOD

a WASSERSTEIN brand

In the Box

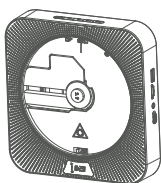


1 x mountable
CD player



1 x remote control




1 x wall mount plate

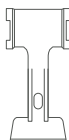

1 x desktop stand



1 x pack of screws




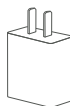


1 x usb adapter




1 x audio cable

Product Overview

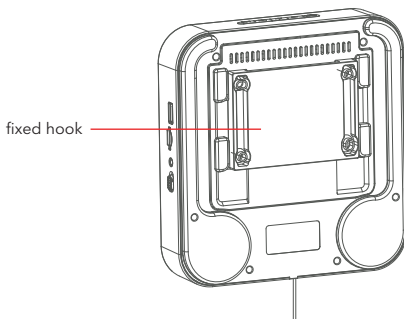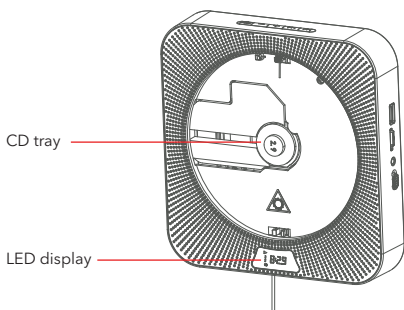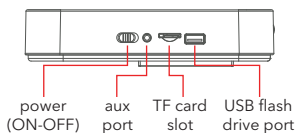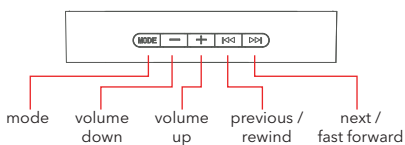


Remote Control

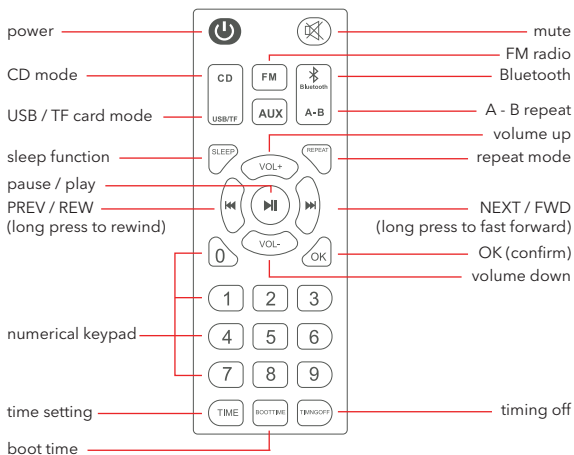


Instructions

Wall-mounted

1. Fix the wall-mounting plate on the wall with the included screws.

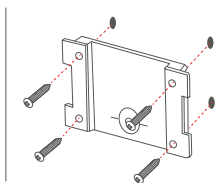


2. Hang the CD Player on the wall-mounting plate.

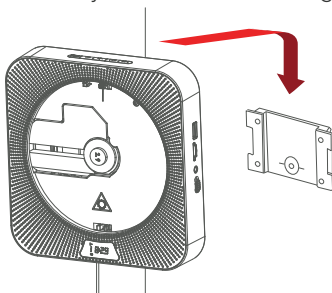

Desk stand

Simply mount the player on the desk stand.

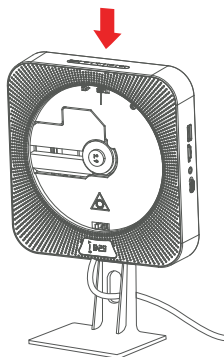

Quick Start

1. Remove the insulation sheet before using.
2. Plug in the USB cable to the adapter.
3. Plug the adapter into the power outlet.
(110 - 220 V AC, 50 / 60 Hz)
4. Insert a disc (format: CD, CD-R, CD-RW, MP3, WMA, WAV) into the CD player.
5. Switch the power button on the CD player to **"ON"**.
6. The display shows the status of reading the disc (DISC flashes). It will play music after the disc is rotated (5 - 10 seconds).
7. Press the **"MODE"** button or use the remote control to switch functions: **"CD"**, **"USB/TF"**, **"AUX"**, **"FM"**, and **"Bluetooth"**.
8. The standby button on the remote will show the time in display and it can be configured.
9. Switch the power button on the CD player to **"OFF"** to completely turn off the device.

Note: Switching off the power will reset the time.

Modes

The available modes include CD, USB & TF, FM, AUX, and Bluetooth; the display will light up the corresponding mode symbol when switching modes.

CD mode

- Press the mode button or the CD button on the remote to switch to CD mode; the Compact Disk will run automatically, the CD icon will appear on the screen.

Note: CD format support: CD, CD-R, CD-RW, MP3, WMA, WAV

USB/TF Card Mode

- Plug in a USB / TF Card to the CD Player USB or TF Card slot.
- Press the mode button or the USB / TF Card button on the remote control to switch to USB / TF mode; the device would automatically read files from the USB or TF Card.

FM Mode

- FM Radio Range: 87.5 MHz - 108.0 MHz
- Press the mode button or the "**FM**" button on the remote to switch to the "**FM mode**".
- Press the "**PREV / NEXT**" button again to enter the automatic search state, and it will automatically save radio program searches.

AUX Mode

- Press the mode button or the "**AUX**" button on the remote to switch to "**AUX mode**".
- Connect the CD Player to external Audio devices with the included 3.5mm male-to-male audio cable.

Note: Standard 3.5mm audio input/output port.

Bluetooth Mode

- Press the mode button or the "**Bluetooth**" button on the remote to switch to "**Bluetooth mode**", then the Player will be ready to pair other Bluetooth devices such as mobile phones, pads etc., after which you will hear a sound from the speaker, and the Bluetooth icon will appear on the screen.
- Activate the Bluetooth in your mobile phone and it will automatically search nearby Bluetooth devices to pair.
- Choose the device in your mobile phone Bluetooth device list to pair.

- Your mobile phone will be paired / connected to the Player in a few seconds.
- Play music on your mobile phone and the audio will be transmitted to the Player speaker through Bluetooth.

Repeat Function

- Press the repeat button on the remote to cycle between playback modes, available playback modes are: **"Repeat One"**, **"Repeat ALL"**.
- Upon pressing the repeat button for the initial time, the screen will display **"REP"**, indicating **"Repeat One"**.
- Subsequent pressing of the repeat button will display **"ALL"** on the screen, signifying **"Repeat ALL"**.

A-B Repeat Function

- The A-B Repeat function enables playback to a specific section repeatedly by setting the start point (A) and end point (B) for the section.
- Press **"A-B"** button on the remote to set the start point (A) while playing, which will then display **"A"** on the screen.
- Press **"A-B"** button on the remote to set the end point (B) while playing, which will then display **"B"** on the screen.
- Then the specified section from A to B will be played back repeatedly.
- To exit A-B repeat, simply press the **"A-B"** button once again, and the screen will display **"OFF"**.

Note: A-B Repeat function only works on **"CD, USB/TF mode"**.

Time setting

- Set the time, press the time setting button on the remote. This will cause the first digit on the display, **"00:00"**, to start blinking.
- Proceed to select your desired time in sequence and press the **"OK"** button to confirm your selection.

For example: set the time 07:30

- Press the **"Time Setting"** button on the remote.
- Select 0 on the numerical keypad and press the **"OK"** button.
- Select 7 on the numerical keypad and press the **"OK"** button.
- Select 3 on the numerical keypad and press the **"OK"** button.
- Select 0 on the numerical keypad and press the **"OK"** button, to finish.

Boot time

- Alarm setting: By pressing the "**Boot time**" button, the LED screen will display "**00:00**", which is the original alarm time that will be shown when resetting.
- Proceed to select your desired time and confirm each selection by pressing the "**OK**" button. Once you have finished setting the boot time, the LED display will show a "()" icon. If you wish to cancel the setting, simply long press "**0**".
- For more detailed instructions, please refer to the relevant paragraph in the time setting section.

Time off

- Alarm setting: To activate the timer off function, press the "**OFF**" Timer button.
- The LED screen will display "**00:00**", which is the original alarm time that will be shown when resetting.
- For more detailed instructions on how to set the timer, please refer to the relevant paragraph in the time setting section.

Sleep function

- Once you press the "**Sleep**" button, the sleep function is activated, causing the main display light to turn off.
- To resume the normal function, simply press the "**Sleep**" button again.

Troubleshooting

Malfunction	Possible reasons	Solution
Device not operational.	Device plug not fully inserted into power outlet.	Fully insert device plug into the power outlet.
Unable to play.	Disk not properly placed.	Keep cover side upwards and place the disk again.
	Compatibility issue.	If the issue persists, the disk may be incompatible. Replace it with a compatible disk.

No sound output.	Wrong operation.	Follow the manual instructions when operating the device.
	Volume too low.	Increase the volume by using the volume+ button.
Sound is stuck.	Disk or laser lenses get dirty.	Clean the disk or laser lenses.
	Disk got scratched or curved.	Replace the disk.
Remote does not work.	Insulation sheet is not removed from the battery slot.	Check if the insulation sheet is removed from the battery slot.
	The remote is out of power.	Check if the remote battery is out of power.
	The remote is too far from the CD player.	Make sure the remote is within a reasonable distance (within 19.69 ft) from the CD player.
Abnormal sound when disc is rotating.	Usage time of the disk may be too long, so the disk is not smooth.	Make sure the disc is not heavily scratched or damaged. Wipe the disc gently from the center radically out to the edge with a clean & soft cloth. If the issue persists, try using a new disc to determine if the problem is with the faulty disc.
	If there is a abnormal sound inside the earphone, it may be caused by scratching of the disc.	To prevent damage to the player, switch to a different disc and avoid using the scratched disc again.

Safety Information

- Never use chemicals, such as record sprays, anti-static sprays, benzene or thinners to clean the CD. These chemicals can damage the disc surface permanently.
- To avoid serious scratches on the CDs, keep them in their cases after each use. Scratches can cause the laser pick-up skip in the future play. Do not place stickers or write anything on the disc.
- Never touch the laser of the device. Always use the dust cover to prevent dust from accumulating on the laser.
- If the device is unable to scan discs properly, use a standard commercially available cleaner to clean the laser optics. Other cleaning methods may damage the laser optics.

Specifications

CD format support:	CD, CD-R, CD-RW, MP3, WMA, WAV
Input power:	110 - 220 V AC 50/60 Hz
Power supply:	DC 5 V / 2 A
Rated power:	8 W
Bluetooth:	5.0
Tuning range:	FM: 87.5 - 108 MHz
Weight:	1.1 lb
Dimensions:	7.0 x 6.7 x 1.5 in
Material:	ABS plastic

Get More Support

Scan the QR code below or email us at
contact@wasserstein-home.com



CONTACT US



DARTWOOD

a WASSERSTEIN brand

www.wasserstein-home.com

Made in China